

# ELECTRICAL SYSTEM

## SECTION **EL**

**When you read wiring diagrams:**

- Read GI section, "HOW TO READ WIRING DIAGRAMS".

**When you perform trouble diagnoses, read GI section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES" and "HOW TO PERFORM EFFICIENT DIAGNOSIS FOR AN ELECTRICAL INCIDENT".**

## CONTENTS

<b>PRECAUTIONS</b> .....	1	Trouble Diagnoses.....	36
Supplemental Restraint System (SRS) "AIR BAG" (4WD models).....	1	Construction .....	38
Supplemental Restraint System (SRS) "AIR BAG" (2WD models).....	1	Removal and Installation .....	39
<b>HARNESS CONNECTOR</b> .....	2	Disassembly.....	39
Description .....	2	Inspection.....	39
<b>STANDARDIZED RELAY</b> .....	3	Assembly.....	40
Description .....	3	Service Data and Specifications (SDS).....	41
<b>POWER SUPPLY ROUTING</b> .....	5	<b>COMBINATION SWITCH</b> .....	42
Schematic .....	5	Check .....	42
Wiring Diagram - POWER - .....	6	Replacement .....	43
Fuse .....	13	<b>HEADLAMP - Conventional Type -</b> .....	44
Fusible Link.....	13	Wiring Diagram - H/LAMP -/LHD Models.....	44
Circuit Breaker Inspection.....	13	Wiring Diagram - H/LAMP -/RHD Models .....	46
<b>GROUND DISTRIBUTION</b> .....	14	Trouble Diagnoses.....	48
<b>BATTERY</b> .....	18	Bulb Replacement.....	49
How to Handle Battery.....	18	Aiming Adjustment .....	49
Battery Test and Charging Chart.....	21	Low Beam .....	50
Service Data and Specifications (SDS).....	25	<b>HEADLAMP - Daytime Light System -</b> .....	51
<b>STARTING SYSTEM</b> .....	26	System Description .....	51
Wiring Diagram - START - .....	26	Schematic .....	53
Trouble Diagnoses.....	27	Wiring Diagram - DTRL - .....	54
Construction .....	28	Trouble Diagnoses.....	57
Removal and Installation .....	30	Bulb Replacement.....	57
Inspection.....	30	Aiming Adjustment .....	57
Assembly.....	32	<b>HEADLAMP - Dim-dip Lamp System -</b> .....	58
Service Data and Specifications (SDS).....	33	System Description .....	58
<b>CHARGING SYSTEM</b> .....	34	Schematic .....	58
Wiring Diagram - CHARGE -/Gasoline Engine ...	34	Wiring Diagram - DIMDIP - .....	59
Wiring Diagram - CHARGE -/Diesel Engine .....	35	Trouble Diagnoses.....	62
		Bulb Replacement.....	62
		Aiming Adjustment .....	62

<b>HEADLAMP - Headlamp Aiming Control</b> .....	63	Wiring Diagram - WIPER -/RHD Models with	
System Description .....	63	Intermittent .....	124
Wiring Diagram - H/AIM - .....	64	Trouble Diagnoses .....	126
<b>PARKING, LICENSE AND TAIL LAMPS</b> .....	66	Wiper Installation and Adjustment .....	127
Wiring Diagram - TAIL/L -/Except for LHD		Washer Nozzle Adjustment .....	128
Models for Europe .....	66	Washer Tube Layout .....	128
Wiring Diagram - TAIL/L -/LHD Models for		Wiper Linkage .....	129
Europe .....	68	<b>HEADLAMP WASHER</b> .....	130
<b>STOP LAMP</b> .....	70	Wiring Diagram - HLC - .....	130
Wiring Diagram - STOP/L - .....	70	Trouble Diagnoses .....	131
<b>BACK-UP LAMP</b> .....	71	Washer Tube Layout .....	131
Wiring Diagram - BACK/L - .....	71	Check Valve .....	131
<b>REAR FOG LAMP</b> .....	72	<b>HORN</b> .....	132
Wiring Diagram - R/FOG -/LHD Models .....	72	Wiring Diagram - HORN - .....	132
Wiring Diagram - R/FOG -/RHD Models .....	73	<b>CIGARETTE LIGHTER</b> .....	133
<b>TURN SIGNAL AND HAZARD WARNING</b>		Wiring Diagram - CIGAR - .....	133
<b>LAMPS</b> .....	74	<b>CLOCK</b> .....	134
Schematic .....	74	Wiring Diagram - CLOCK - .....	134
Wiring Diagram - TURN -/Except 4WD Models		<b>REAR WINDOW DEFOGGER</b> .....	135
for Europe .....	75	Wiring Diagram - DEF - .....	135
Wiring Diagram - TURN -/4WD Models for		Electrical Components Inspection .....	136
Europe .....	77	Filament Check .....	136
Trouble Diagnoses .....	80	Filament Repair .....	137
Combination Flasher Unit Check .....	80	<b>AUDIO</b> .....	138
<b>ILLUMINATION</b> .....	81	Wiring Diagram - AUDIO -/LHD Models Type-	
Wiring Diagram - ILL -/LHD Models .....	81	2 .....	138
Wiring Diagram - ILL -/RHD Models .....	83	Wiring Diagram - AUDIO -/LHD Models Type-	
<b>INTERIOR AND SPOT LAMPS</b> .....	85	3 .....	139
Wiring Diagram - INT/L - .....	85	Wiring Diagram - AUDIO -/RHD Models .....	141
Combination Meter .....	87	Trouble Diagnoses .....	142
Schematic .....	89	CATS (Code) System/For Europe RHD .....	143
Wiring Diagram - METER -/LHD Models .....	90	NATS Audio Link/For Europe LHD (KA24E) ....	144
Wiring Diagram - METER -/RHD Models .....	93	<b>AUDIO ANTENNA</b> .....	146
Unified Control Meter System Description .....	96	Manual Antenna .....	146
Meter/gauge Operation and Odo/Trip Meter		Power Antenna/Wiring Diagram - P/ANT - .....	147
Segment Check in Diagnosis Mode .....	96	Power Antenna .....	148
Flexible Print Circuit (FPC) .....	97	<b>POWER DOOR MIRROR</b> .....	150
Trouble Diagnoses .....	98	Wiring Diagram - MIRROR - .....	150
Electrical Components Inspection .....	103	<b>HEATED SEAT</b> .....	152
<b>WARNING LAMPS</b> .....	105	Wiring Diagram - H/SEAT - .....	152
Schematic .....	105	<b>POWER WINDOW</b> .....	154
Wiring Diagram - WARN -/LHD Models .....	106	System Description .....	154
Wiring Diagram - WARN -/RHD Models .....	111	Schematic .....	156
Electrical Components Inspection .....	116	Wiring Diagram - WINDOW -/LHD Models .....	157
<b>WARNING BUZZER</b> .....	117	Wiring Diagram - WINDOW -/RHD Models .....	161
Wiring diagram - BUZZER -/LHD Models for		Trouble Diagnoses .....	165
Europe .....	117	<b>POWER DOOR LOCK</b> .....	166
Wiring diagram - BUZZER -/RHD Models for		System Description .....	166
Europe .....	118	Wiring Diagram - D/LOCK - .....	167
Electrical Components Inspection .....	119	Trouble Diagnosis .....	169
<b>FRONT WIPER AND WASHER</b> .....	120	<b>MULTI-REMOTE CONTROL SYSTEM/FOR</b>	
System Description .....	120	<b>EUROPE</b> .....	173
Wiring Diagram - WIPER -/LHD Models with		System Description .....	173
Intermittent .....	122	Schematic .....	174

Wiring Diagram - MULTI -/LHD Models .....	175	<b>LOCATION OF ELECTRICAL UNITS</b> .....	217
Trouble Diagnoses.....	179	Engine Compartment.....	217
ID Code Entry Procedure .....	182	Passenger Compartment.....	218
<b>NATS (Nissan Anti-Theft System)/Gasoline</b>		<b>HARNES LAYOUT</b> .....	220
<b>engine for LHD models</b> .....	183	Outline.....	220
Component Parts and Harness Connector		How to Read Harness Layout .....	221
Location.....	183	Main Harness.....	222
System Description .....	183	Engine Room Harness.....	232
System Composition .....	184	Engine Control Harness.....	240
Wiring Diagram - NATS -.....	185	Engine Harness .....	242
CONSULT .....	186	Alternator Harness .....	244
Trouble Diagnoses.....	188	Instrument Harness.....	245
How to Replace NATS IMMU.....	197	Room Lamp Harness/LHD Models.....	246
<b>NATS (Nissan Anti-Theft System)/Diesel</b>		Room Lamp Harness/RHD Models .....	247
<b>engine</b> .....	198	Chassis Harness and Tail Harness.....	248
Component Parts and Harness Connector		Front Door Harness (LH side) .....	249
Location.....	198	Front Door Harness (RH side).....	250
System Description .....	199	Rear Door Harness.....	251
System Composition .....	199	<b>BULB SPECIFICATIONS</b> .....	252
Wiring Diagram - NATS -/LHD Models.....	200	Headlamp.....	252
Wiring Diagram - NATS -/RHD Models .....	201	Exterior Lamp.....	252
CONSULT .....	202	Interior Lamp.....	252
Trouble Diagnoses.....	205	<b>WIRING DIAGRAM CODES (CELL CODES)</b> .....	253

WIRING DIAGRAM REFERENCE CHART

COOLING FAN .....	LC SECTION
ECCS, IGNITION SYSTEM, QUICK-GLOW SYSTEM, FUEL HEATER SYSTEM ..	EC SECTION
ANTI-LOCK BRAKE SYSTEM .....	BR SECTION
SRS "AIR BAG" .....	RS SECTION
HEATER AND AIR CONDITIONER .....	HA SECTION

## PRECAUTIONS

---

### Supplemental Restraint System (SRS) “AIR BAG” (4WD models)

The Supplemental Restraint System “AIR BAG”, used along with a seat belt, helps to reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag module (located in the center of the steering wheel), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses are covered with yellow insulation either just before the harness connectors or for the complete harness, for easy identification.

### Supplemental Restraint System (SRS) “AIR BAG” (2WD models)

The Supplemental Restraint System “AIR BAG”, used along with a seat belt, helps to reduce the risk or severity of injury to the driver in a frontal collision. The Supplemental Restraint System consists of an air bag module (located in the center of the steering wheel), a diagnosis sensor unit, warning lamp and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- Do not use electrical test equipment on any circuit related to the SRS.



# HARNESS CONNECTOR

## Description


### HARNESS CONNECTOR

- All harness connectors have been modified to prevent accidental looseness or disconnection.
- The connector can be disconnected by pushing or lifting the locking section.

#### CAUTION:

Do not pull the harness when disconnecting the connector.

[Example]

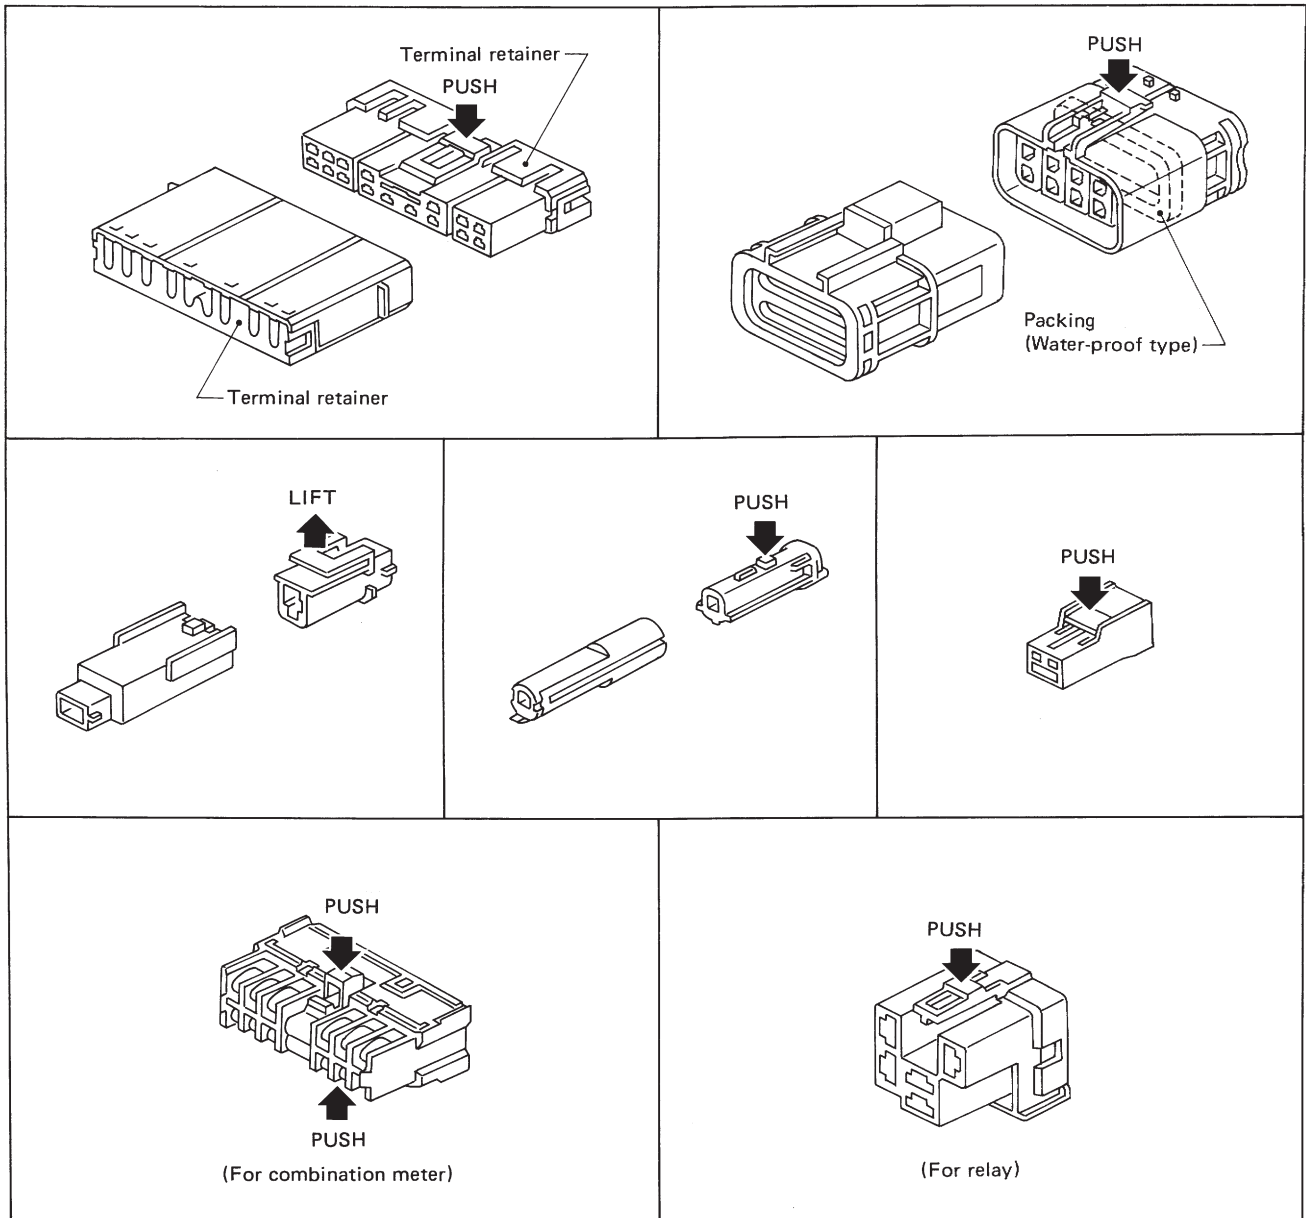


SEL769D

# STANDARDIZED RELAY

## Description

### NORMAL OPEN, NORMAL CLOSED AND MIXED TYPE RELAYS


Relays can mainly be divided into three types: normal open, normal closed and mixed type relays.

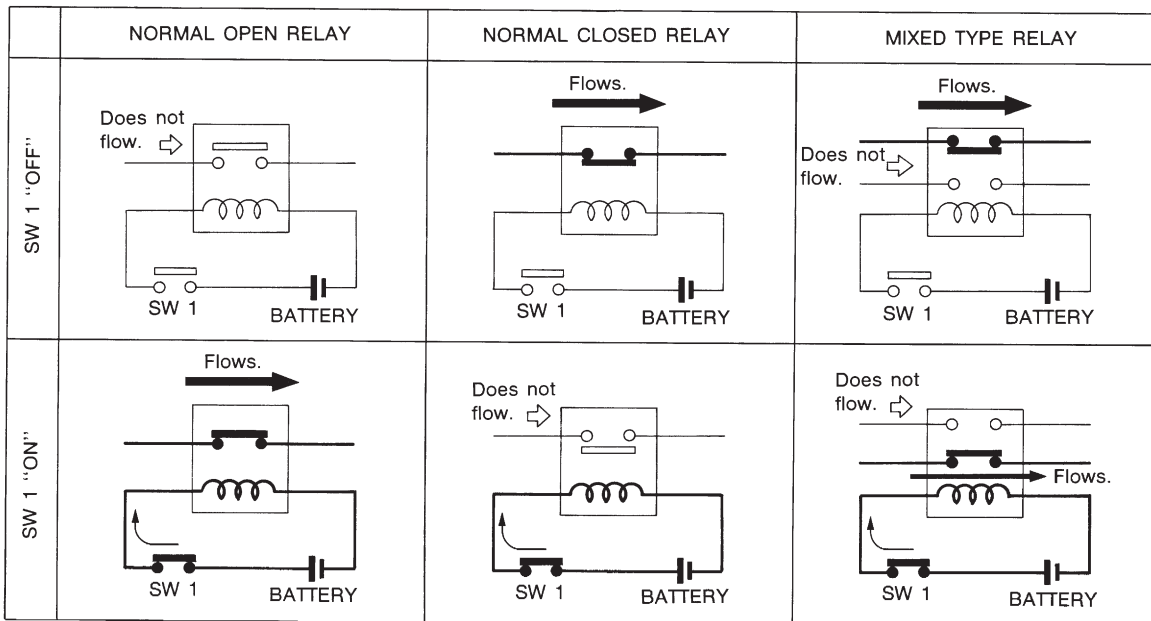

SEL881H

### TYPE OF STANDARDIZED RELAYS













1M ..... 1 Make      2M ..... 2 Make  
 1T ..... 1 Transfer      1M·1B ..... 1 Make 1 Break

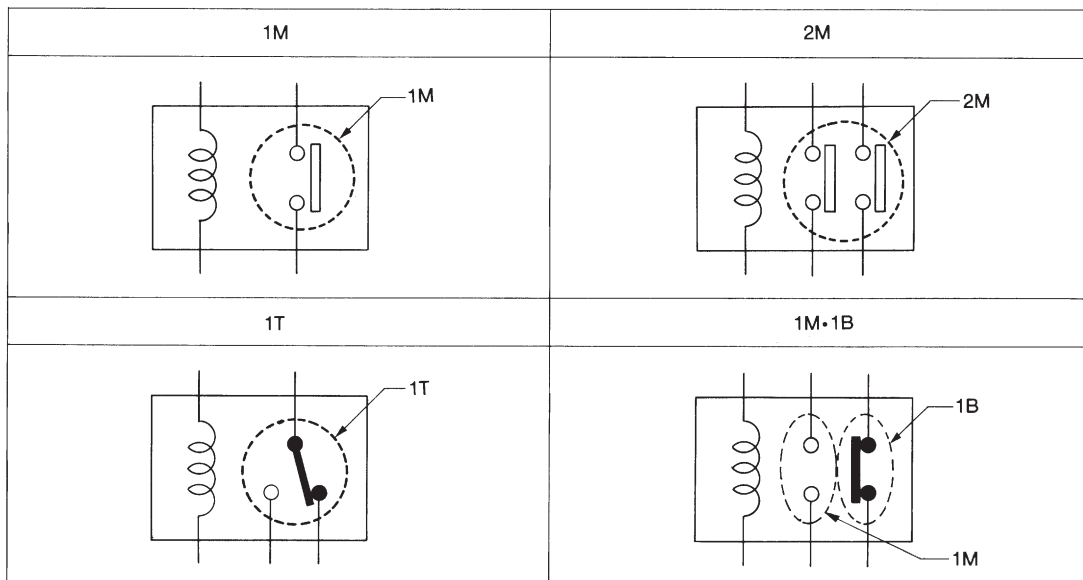

SEL882H

# STANDARDIZED RELAY

## Description (Cont'd)

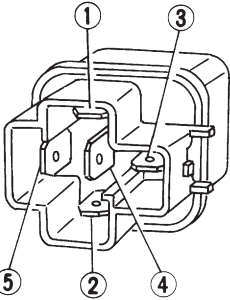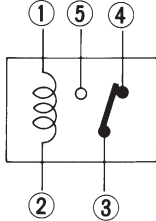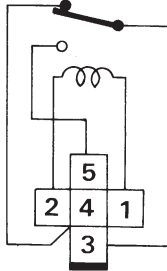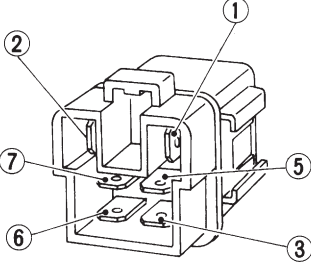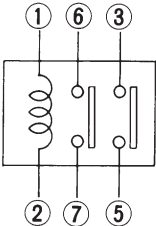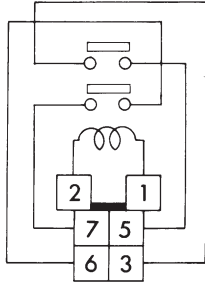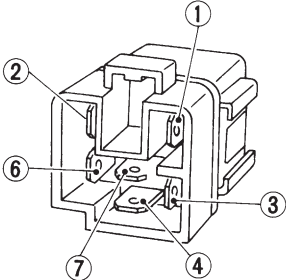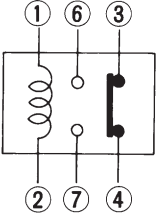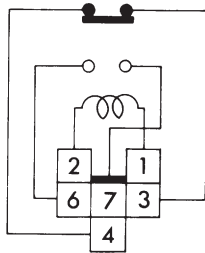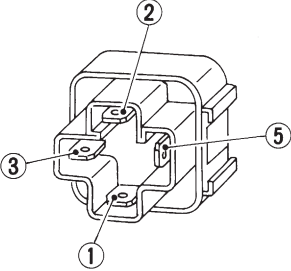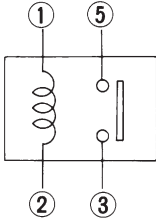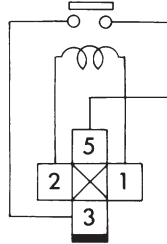Type	Outer view	Circuit	Connector symbol and connection	Case colour
1T				BLACK
2M				BROWN
1M B•1M				GRAY
1M				BLUE

The arrangement of terminal numbers on the actual relays may differ from those shown above.






# POWER SUPPLY ROUTING

## Wiring Diagram — POWER —

### BATTERY POWER SUPPLY — IGNITION SWITCH IN ANY POSITION

EL-POWER-01

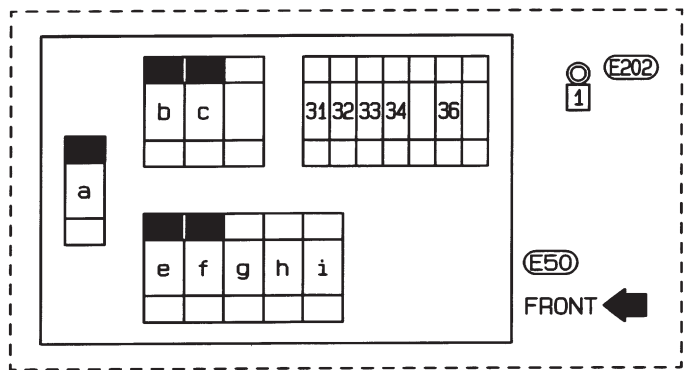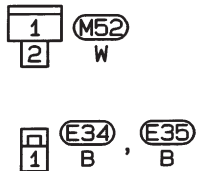
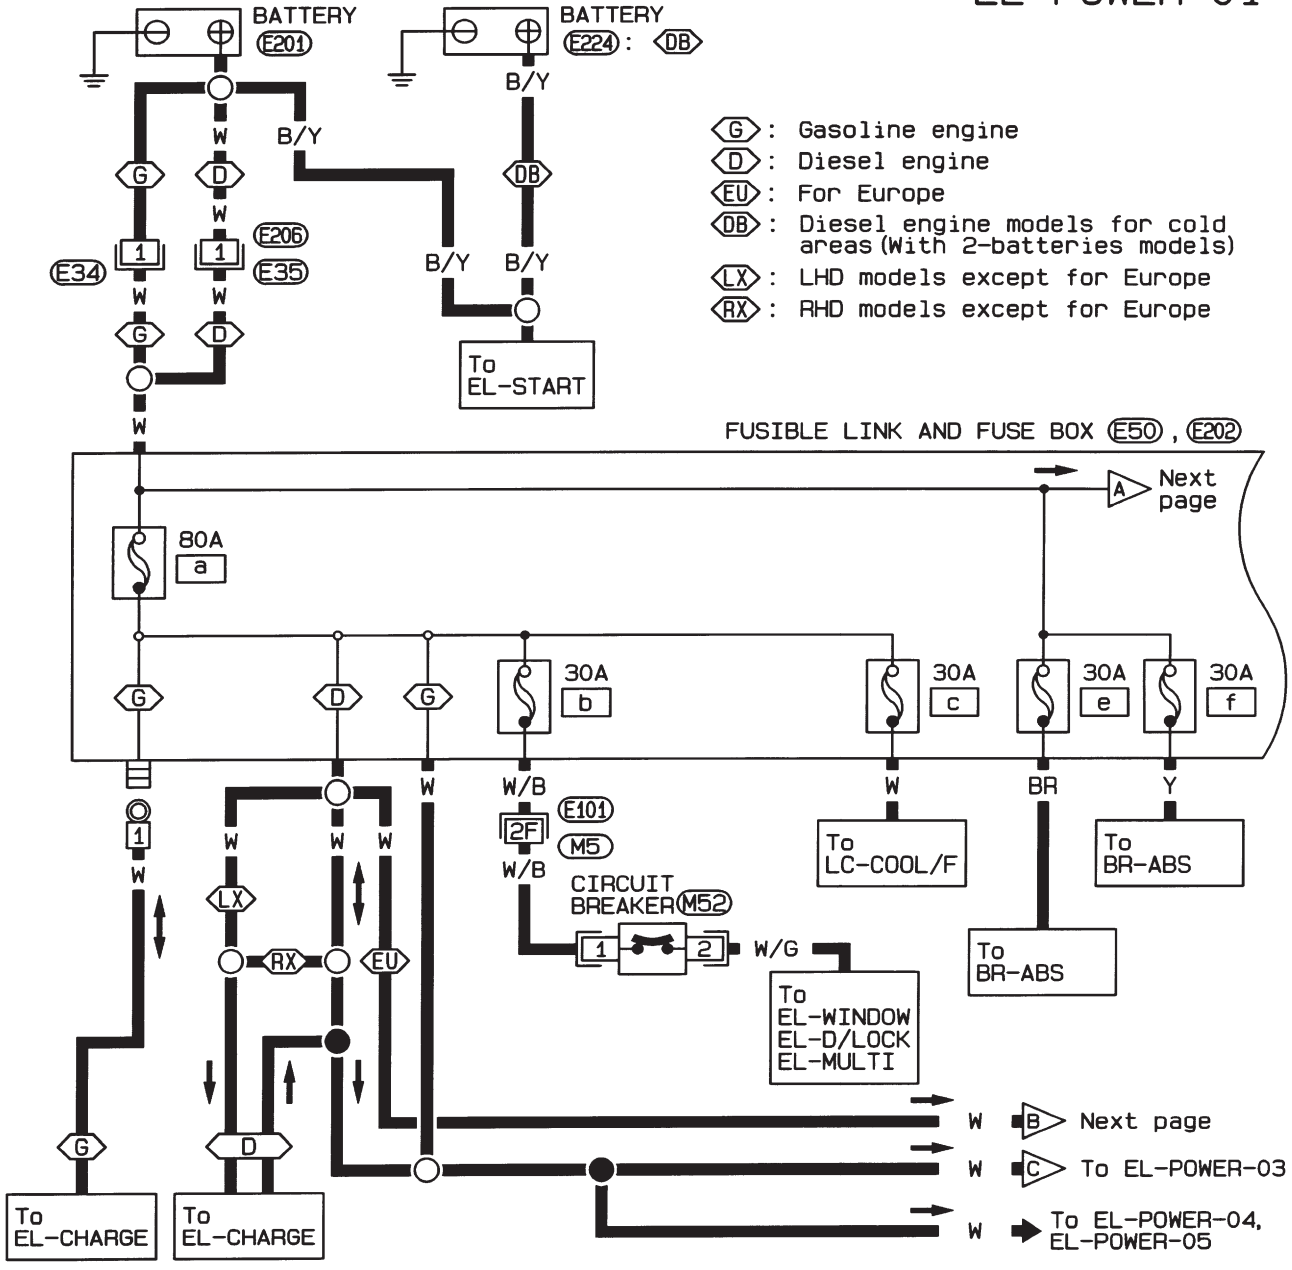


# POWER SUPPLY ROUTING

## Wiring Diagram — POWER — (Cont'd)

EL-POWER-02

- UL : LHD models for Europe
- UR : RHD models for Europe
- 05 : TD25 engine


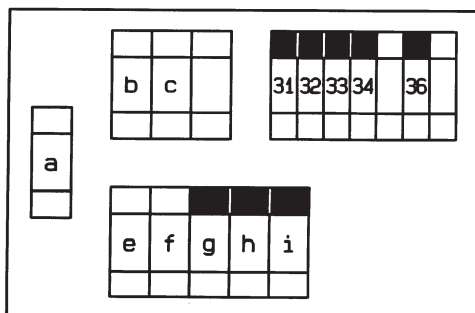
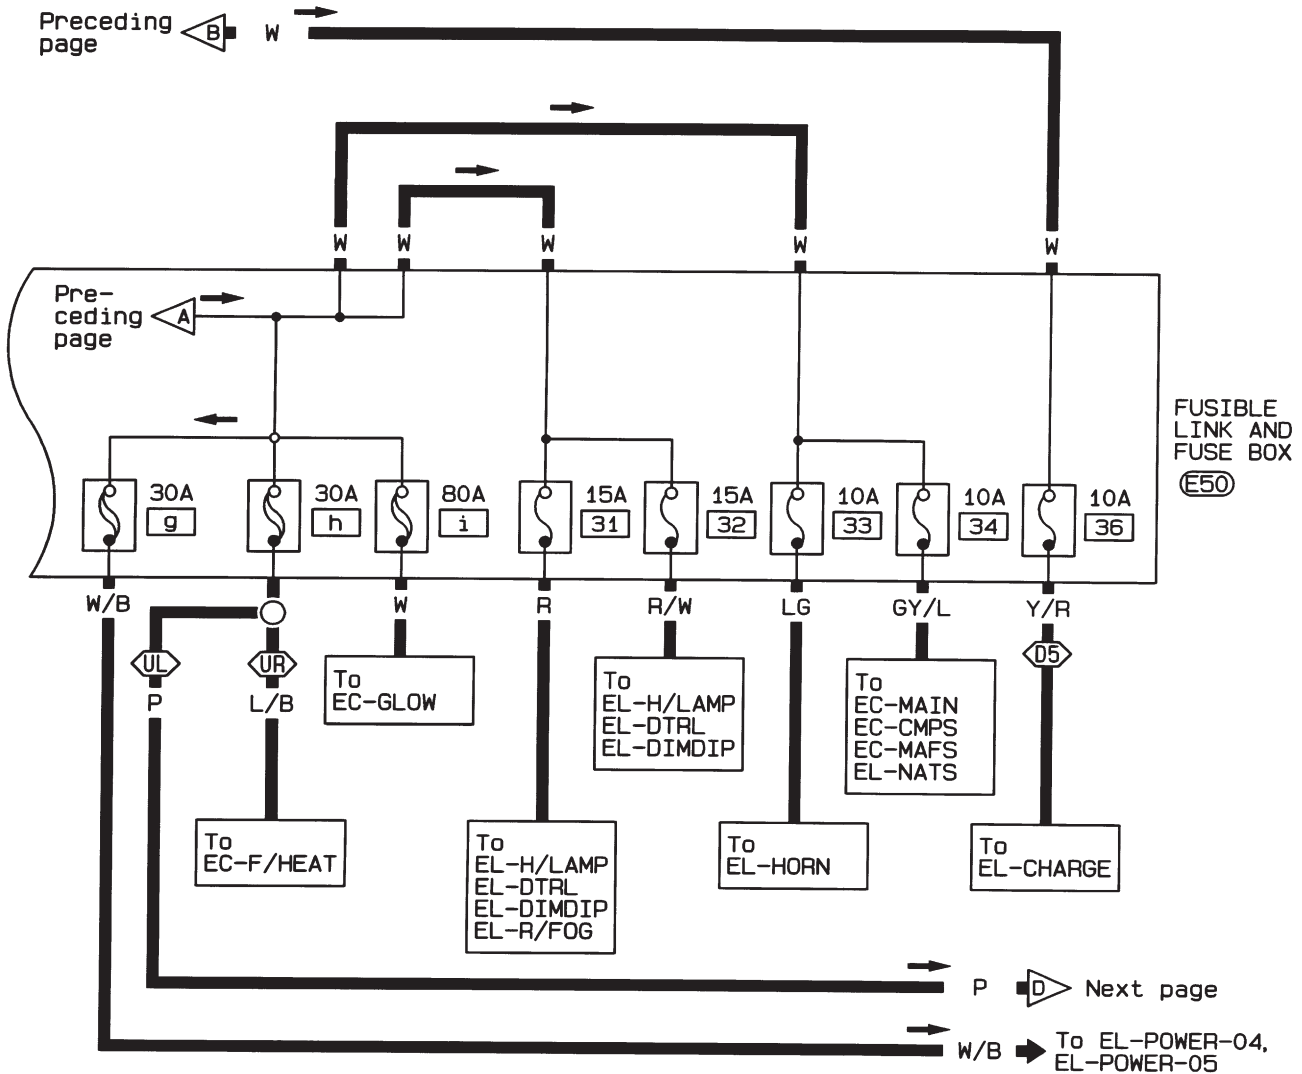


# POWER SUPPLY ROUTING

## Wiring Diagram — POWER — (Cont'd)

### BATTERY POWER SUPPLY — IGNITION SW. IN ANY POSITION

EL-POWER-03

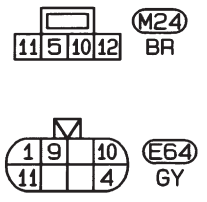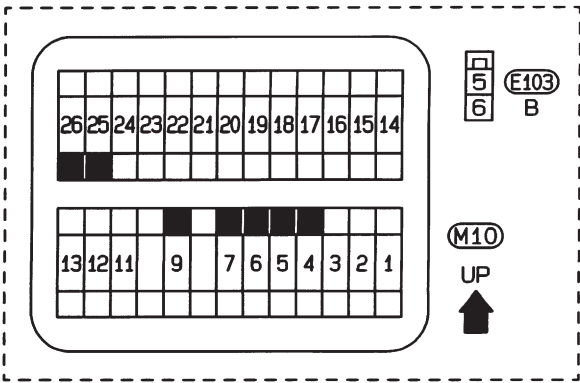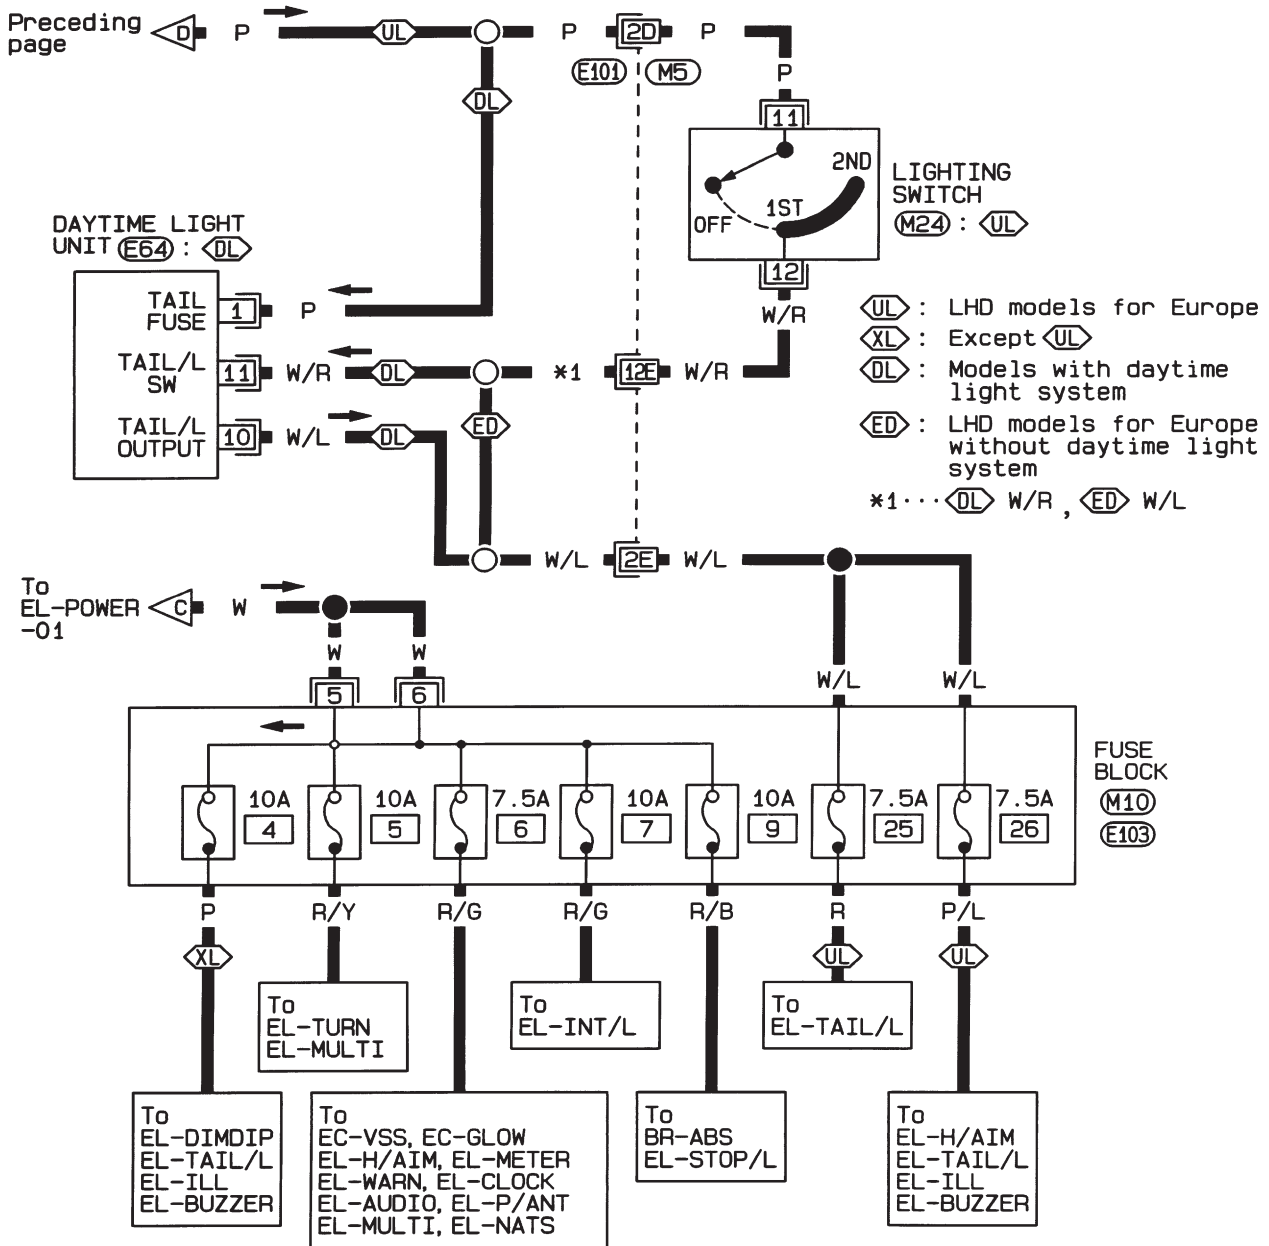

Refer to last page (Foldout page).



(M5), (E101)



# POWER SUPPLY ROUTING

## Wiring Diagram — POWER — (Cont'd)

### EL-POWER-04

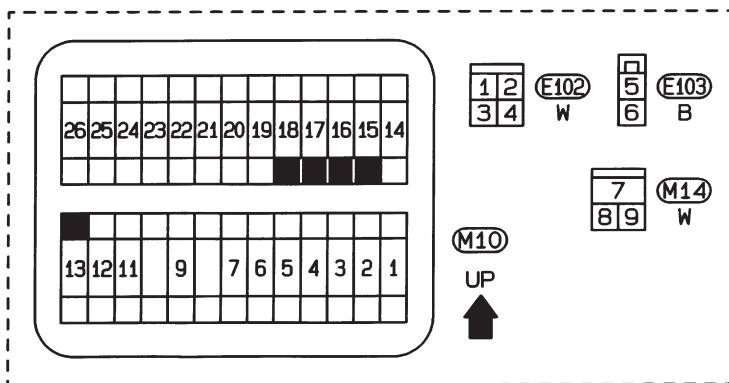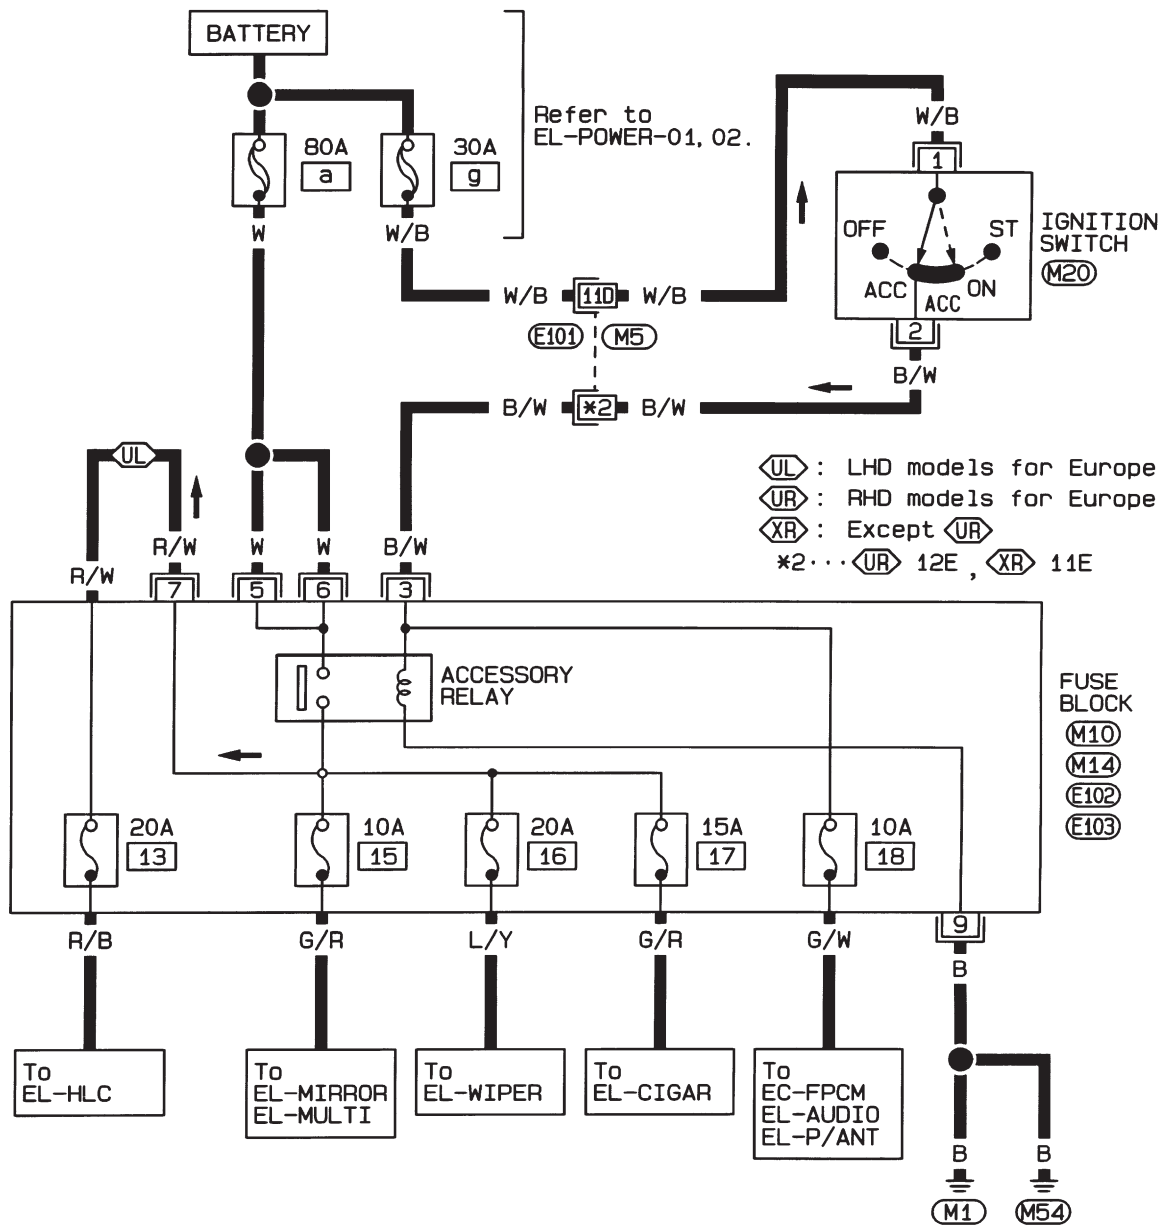

Refer to last page (Foldout page).




(M5), (E101)

# POWER SUPPLY ROUTING

## Wiring Diagram — POWER — (Cont'd)

ACCESSORY POWER SUPPLY — IGNITION SW. IN "ACC" OR "ON"

EL-POWER-05

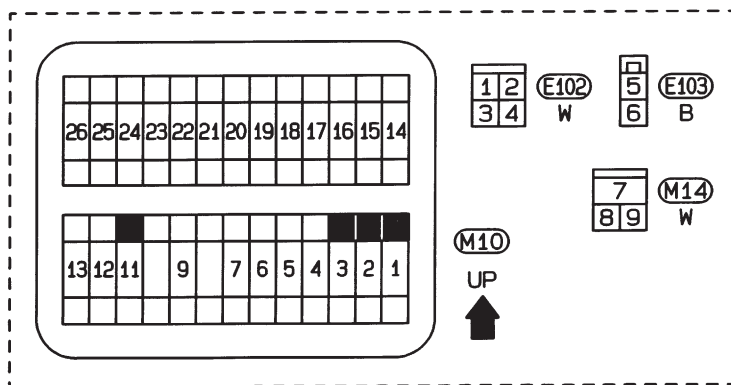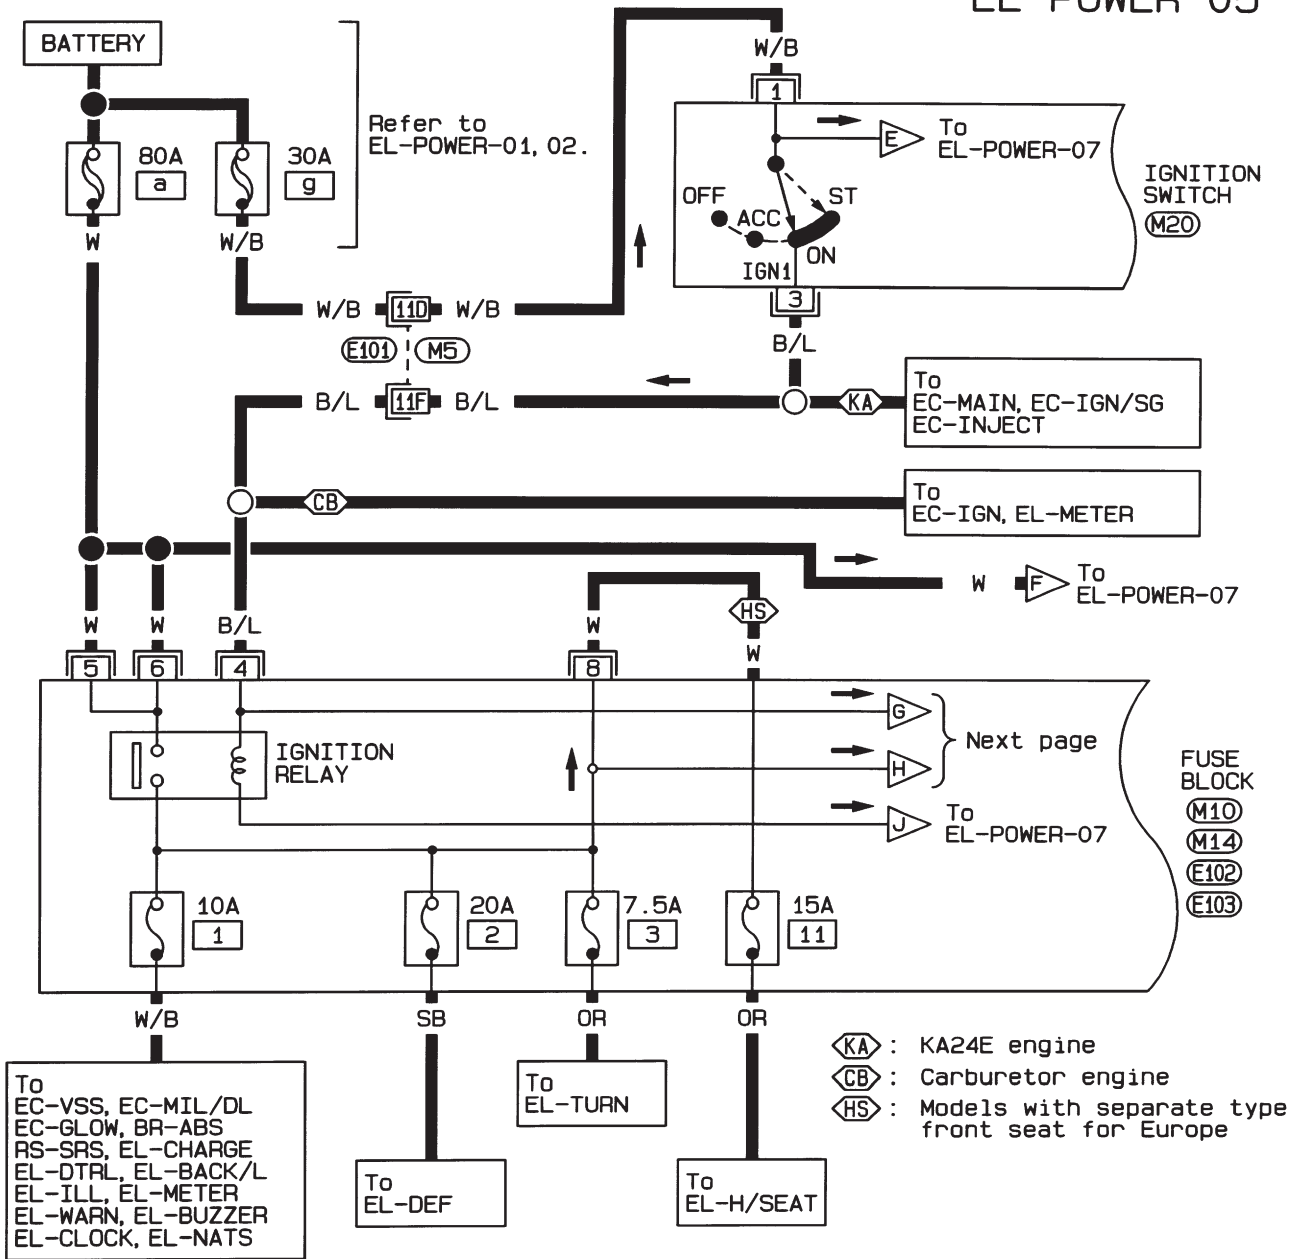

Refer to last page (Foldout page).

M5, E101



# POWER SUPPLY ROUTING

## Wiring Diagram — POWER — (Cont'd)

### IGNITION POWER SUPPLY — IGNITION SW. IN "ON" AND/OR "START"

EL-POWER-06

- D** : Diesel engine
- NA** : NA20S engine
- Z** : Z24S engine
- KA** : KA24E engine
- CB** : Carburetor engine
- AS** : Models with ABS
- PW** : Models with power window without ABS
- PN** : Models without ABS and power window
- 2A** : 2-wheel drive models with air bag
- 4A** : 4-wheel drive models with air bag
- \*3 : For Europe..... OR  
Except for Europe... **AS** OR , **PW** W/B , **PN** B/W
- \*4... **2A** 3A , **4A** 10A
- \*5... **NA** W/G , **Z** W/L
- \*6... **CB** 10A , **KA** 15A

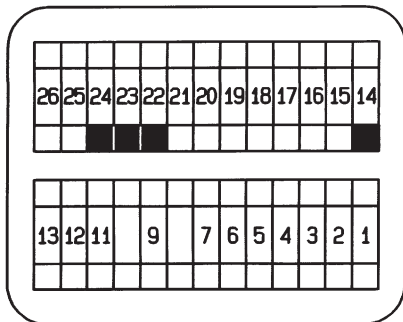
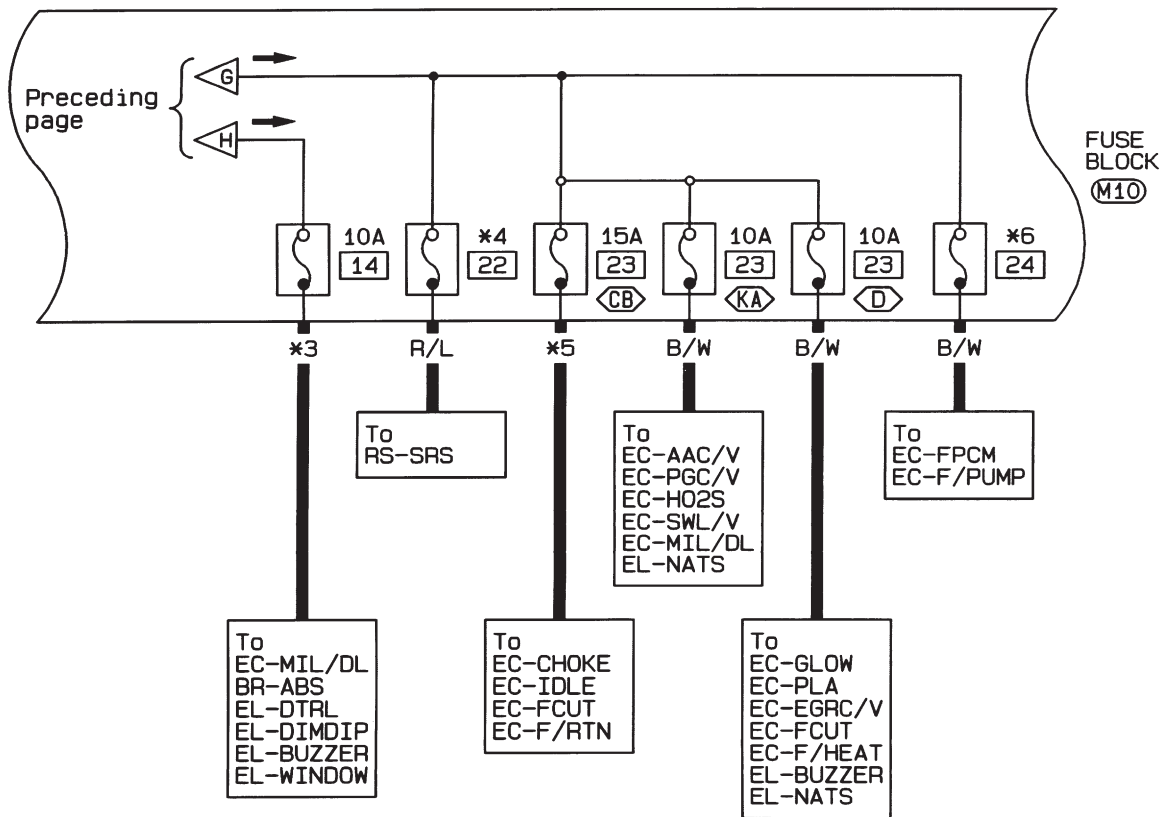


**(M10)**  
UP  
↑

# POWER SUPPLY ROUTING

## Wiring Diagram — POWER — (Cont'd)


EL-POWER-07

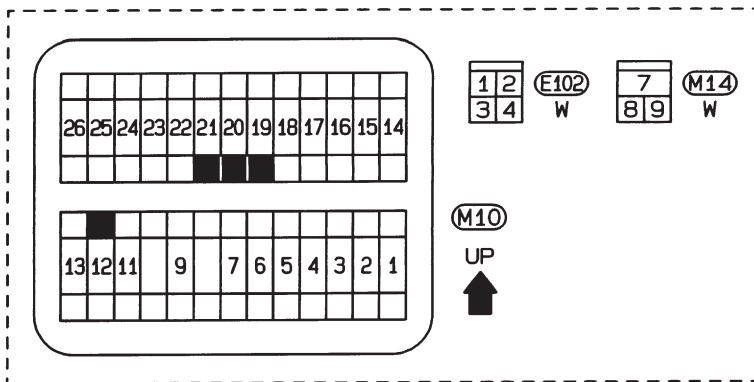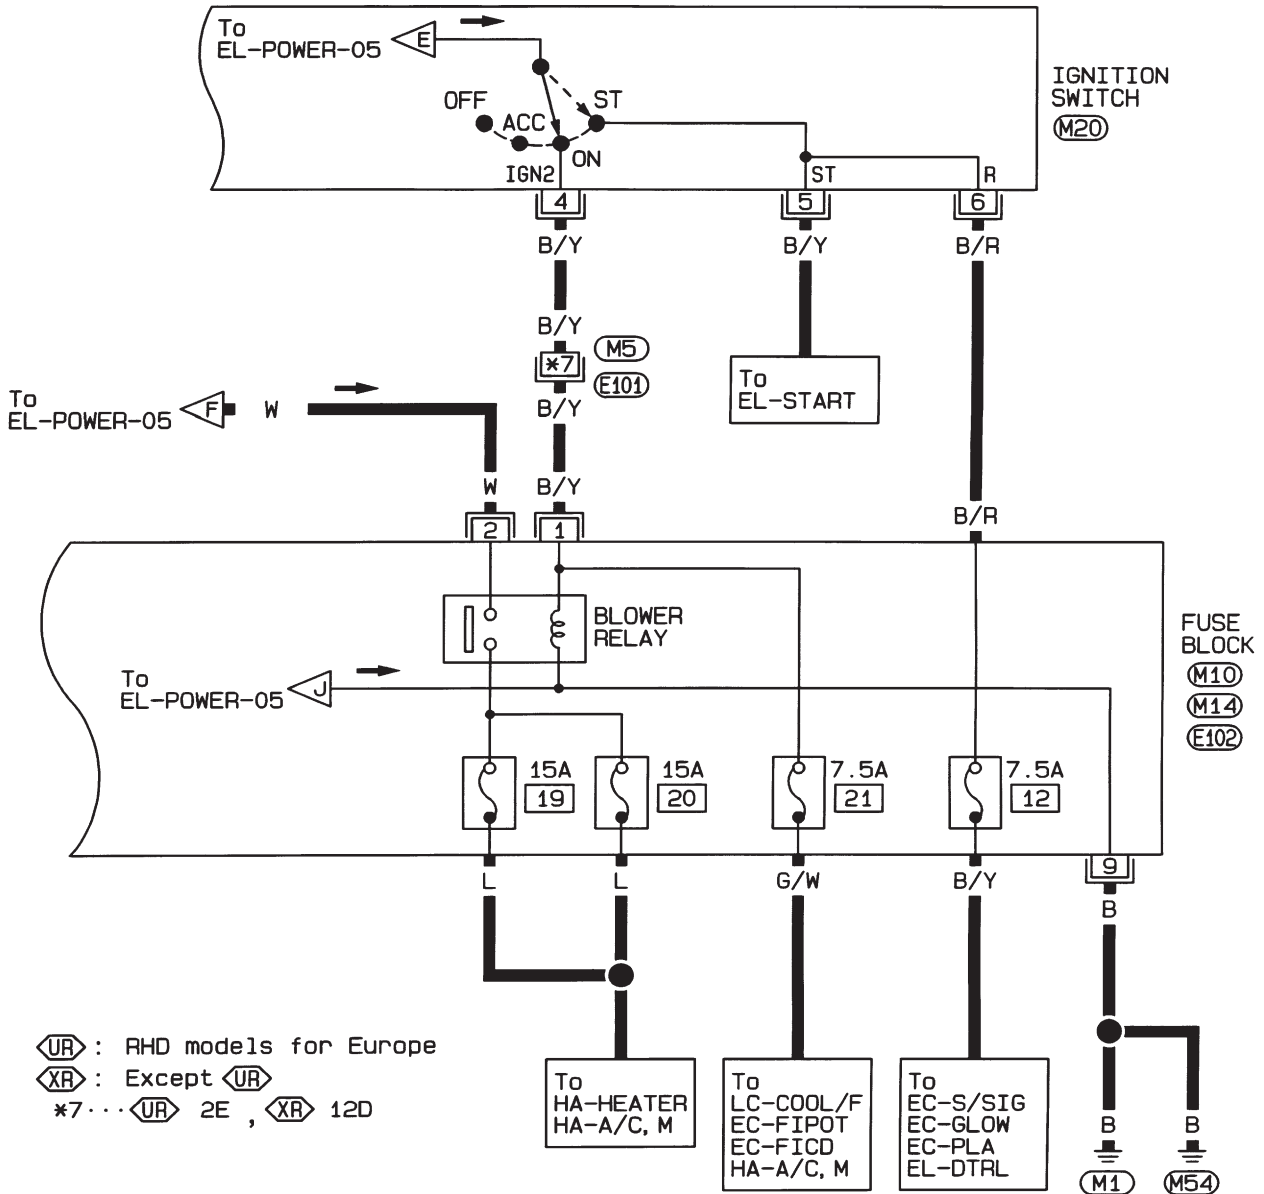

Refer to last page (Foldout page).


(M5), (E101)

# POWER SUPPLY ROUTING

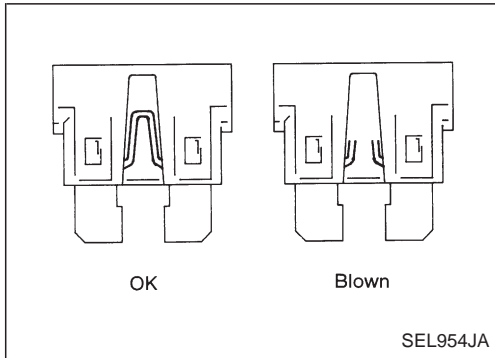

## Fuse

- If fuse is blown, be sure to eliminate cause of problem before installing new fuse.
- Use fuse of specified rating. Never use fuse of more than specified rating.
- Do not partially install fuse; always insert it into fuse holder properly.
- Remove fuse for "ELEC B" if vehicle is not used for a long period of time.

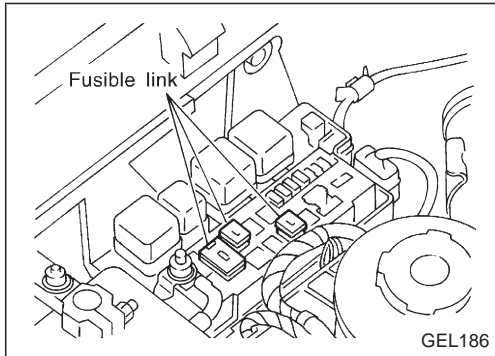


## Fusible Link

A melted fusible link can be detected either by visual inspection or by feeling with finger tip. If its condition is questionable, use circuit tester or test lamp.

### CAUTION:

- If fusible link should melt, it is possible that critical circuit (power supply or large current carrying circuit) is shorted. In such a case, carefully check and eliminate cause of problem.
- Never wrap outside of fusible link with vinyl tape. Important: Never let fusible link touch any other wiring harness, vinyl or rubber parts.

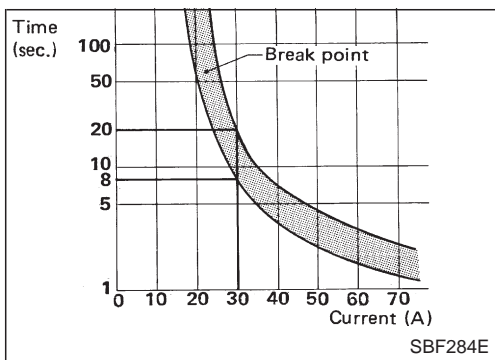

## Circuit Breaker Inspection

For example, when current is 30A, the circuit is broken within 8 to 20 seconds.

Circuit breakers are used in the following systems.

- Power window
- Power door lock
- Multi-remote control system

## GROUND DISTRIBUTION

EARTH	CONNECT TO	CONN. NO.	CELL CODE
M1/M54	ACCESSORY RELAY (In fuse block)	M14	EL-POWER
	AIR BAG DIAGNOSIS SENSOR UNIT (4WD models)	M110	RS-SRS
	ASHTRAY ILLUMINATION	M34	EL-ILL
	BLOWER RELAY (In fuse block)	M14	EL-POWER
	CHECK CONNECTOR (NA engine)	M12	EC-CHOKE
	CHECK CONNECTOR (Z engine)	M13	EC-CHOKE
	CIGARETTE LIGHTER SOCKET	M37	EL-CIGAR
	COMBINATION FLASHER UNIT	M15	EL-TURN
	DOOR LOCK TIMER	M51	EL-D/LOCK
	DOOR SWITCH DRIVER SIDE (For Europe)	M118	EL-BUZZER EL-MULTI
	ECM (ENGINE CONTROL MODULE)	M66	EC-GLOW EC-PLA EC-EGRC/V
	FAN SWITCH ILLUMINATION (Except for Europe and Australia)	M403	HA-HEATER HA-A/C,M EL-ILL
	FAN SWITCH ILLUMINATION (For Europe and Australia)	M40	HA-HEATER HA-A/C,M EL-ILL
	FAN SWITCH (Except for Europe and Australia)	M404	EC-FIPOT HA-HEATER HA-A/C,M
	FAN SWITCH (For Europe and Australia)	M39	HA-HEATER HA-A/C,M
	FRONT SEAT LH	M119	EL-H/SEAT
	FRONT SEAT RH	M122	EL-H/SEAT
	FRONT WIPER AMPLIFIER (RHD models without KA engine and LHD models)	M220	EL-WIPER
	FRONT WIPER AND WASHER SWITCH	M28	EL-WIPER
	FRONT WIPER MOTOR (RHD models without KA engine and LHD models)	M221	EL-WIPER
	FUEL FILTER SWITCH (LHD models with diesel engine)	M259	EL-WARN EL-BUZZER
	FUEL PUMP CONTROL MODULE	M22	EC-FPCM
	FUEL RETURN CONTROL SOLENOID VALVE (LHD models with NA engine)	M257	EC-F/RTN
	GLOW CONTROL UNIT (TD27 engine except for cold areas and QD engine)	M29	EC-GLOW EC-PLA
	GLOW CONTROL UNIT (TD27 engine for cold areas)	M30	EC-GLOW EC-PLA
	GLOW RELAY-1 (LHD models with diesel engine except for Europe)	M253	EC-GLOW
	GLOW RELAY-2 (TD27 engine for cold areas)	M256	EC-GLOW
	HAZARD SWITCH	M41	EL-TURN EL-ILL
	HEADLAMP WASHER SWITCH	M70	EL-ILL EL-HLC
	HEATED SEAT SWITCH LH	M602	EL-H/SEAT
	HEATED SEAT SWITCH RH	M603	EL-H/SEAT
	IACV-FICD SOLENOID VALVE (KA engine)	M203	EC-FICD HA-A/C,M
	IGNITION RELAY (In fuse block)	M14	EL-POWER
	MULTI-REMOTE CONTROL RELAY-3	M706	EL-MULTI
	MULTI-REMOTE CONTROL RELAY-4	M707	EL-MULTI
	MULTI-REMOTE CONTROL UNIT	M703	EL-MULTI
	POWER WINDOW RELAY	M9	EL-WINDOW
	REAR WINDOW DEFOGGER SWITCH	M42	EL-DEF
	SEAT BELT SWITCH	M109	EL-WARN
	SPIRAL CABLE (2WD models with air bag)	M26	RS-SRS
COMBINATION METER (4WD WARNING LAMP)	N6	EL-WARN	
COMBINATION METER (ABS WARNING LAMP)	N6	BR-ABS EL-WARN	

## GROUND DISTRIBUTION

EARTH	CONNECT TO	CONN. NO.	CELL CODE
M1/M54	COMBINATION METER (AIR BAG WARNING LAMP)	N5	RS-SRS EL-WARN
	COMBINATION METER (CLOCK ILLUMINATION)	N6	EL-ILL EL-CLOCK
	COMBINATION METER (DIGITAL CLOCK)	N6	EL-CLOCK
	COMBINATION METER (FUEL GAUGE)	N5	EL-METER
	COMBINATION METER (HIGH BEAM INDICATOR)	N5	EL-H/LAMP EL-DTRL EL-DIMDIP
	COMBINATION METER (METER ILLUMINATION)	N6	EL-ILL
	COMBINATION METER (ODO/TRIP METER ILLUMINATION)	N6	EL-ILL
	COMBINATION METER (REAR FOG LAMP INDICATOR)	N6	EL-R/FOG
	COMBINATION METER (TURN LH INDICATOR)	N6	EL-TURN
	COMBINATION METER (TURN RH INDICATOR)	N6	EL-TURN
	COMBINATION METER (UNIFIED METER CONTROL UNIT)	N5	EC-VSS EC-GLOW EL-METER
	COMBINATION METER (WATER TEMP. GAUGE)	N5	EL-METER
	DOOR MIRROR REMOTE CONTROL SWITCH	N3	EL-MIRROR
	FRONT WIPER AMPLIFIER (RHD models with KA engine)	F20	EL-WIPER
	FRONT WIPER MOTOR (RHD models with KA engine)	F21	EL-WIPER
	HEADLAMP AIMING SWITCH	N7	EL-H/AIM
	INTERIOR LAMP (Single cab and King cab)	R4	EL-INT/L
	SPOT LAMP	R3	EL-INT/L
	FUEL TANK GAUGE UNIT (With electric fuel pump)	C3	EC-FPCM EC-F/PUMP EL-METER EL-WARN
	FUEL TANK GAUGE UNIT (With mechanical fuel pump)	C4	EL-METER EL-WARN
	LICENSE PLATE LAMP LH (With step bumper)	T7	EL-TAIL/L
	LICENSE PLATE LAMP LH (Without step bumper)	T6	EL-TAIL/L
	LICENSE PLATE LAMP RH (With step bumper)	T3	EL-TAIL/L
	LICENSE PLATE LAMP RH (Without step bumper)	T5	EL-TAIL/L
	REAR COMBINATION LAMP LH (BACK-UP) (A-chassis models, and except for Europe, Australia and China)	T8	EL-BACK/L
	REAR COMBINATION LAMP LH (BACK-UP) (For Europe, Australia and China except A-chassis models)	T9	EL-BACK/L
	REAR COMBINATION LAMP LH (REAR FOG) (LHD models except A-chassis)	T9	EL-R/FOG
	REAR COMBINATION LAMP LH (TAIL AND STOP) (A-chassis models, and except for Europe, Australia and China)	T8	EL-TAIL/L EL-STOP/L
	REAR COMBINATION LAMP LH (TAIL AND STOP) (For Europe, Australia and China except A-chassis models)	T9	EL-TAIL/L EL-STOP/L
	REAR COMBINATION LAMP LH (TURN SIGNAL) (A-chassis models, and except for Europe, Australia and China)	T8	EL-TURN
	REAR COMBINATION LAMP LH (TURN SIGNAL) (For Europe, Australia and China except A-chassis models)	T9	EL-TURN
	REAR COMBINATION LAMP RH (BACK-UP) (A-chassis models, and except for Europe, Australia and China)	T1	EL-BACK/L
	REAR COMBINATION LAMP RH (BACK-UP) (For Europe, Australia and China except A-chassis models)	T2	EL-BACK/L



## GROUND DISTRIBUTION

EARTH	CONNECT TO	CONN. NO.	CELL CODE
M1/M54	REAR COMBINATION LAMP RH (REAR FOG) (RHD models except A-chassis)	T2	EL-R/FOG
	REAR COMBINATION LAMP RH (TAIL AND STOP) (A-chassis models, and except for Europe, Australia and China)	T1	EL-TAIL/L EL-STOP/L
	REAR COMBINATION LAMP RH (TAIL AND STOP) (For Europe, Australia and China except A-chassis models)	T2	EL-TAIL/L EL-STOP/L
	REAR COMBINATION LAMP RH (TURN SIGNAL) (A-chassis models, and except for Europe, Australia and China)	T1	EL-TURN
	REAR COMBINATION LAMP RH (TURN SIGNAL) (For Europe, Australia and China except A-chassis models)	T2	EL-TURN
	REAR FOG LAMP LH (LHD A-chassis models)	T12	EL-R/FOG
	REAR FOG LAMP RH (RHD A-chassis models)	T10	EL-R/FOG
	DOOR LOCK ACTUATOR DRIVER SIDE (Unlock sensor)	D10	EL-MULTI
	LOCK KNOB SWITCH	D8	EL-D/LOCK
	POWER WINDOW MAIN SWITCH (Double cab)	D5	EL-WINDOW EL-D/LOCK
	POWER WINDOW MAIN SWITCH (Single cab and King cab)	D6	EL-WINDOW EL-D/LOCK
M33/M207 (LHD models with KA engine)	CONDENSER	M210	EC-IGN/SG
	DISTRIBUTOR (POWER TRANSISTOR)	M214	EC-IGN/SG
	ECM (ECCS CONTROL MODULE)	M32	EC-MAIN
M208 (LHD models with KA engine)	DATA LINK CONNECTOR FOR CONSULT	M11	EC-MIL/DL
	DISTRIBUTOR (CAMSHAFT POSITION SENSOR)	M214	EC-CMPS
	ECM (ECCS CONTROL MODULE)	M32	EC-MAIN
	NATS IMMU	M68	EL-NATS
	SHIELD WIRE (CAMSHAFT POSITION SENSOR)	M214	EC-CMPS
	SHIELD WIRE (MASS AIR FLOW SENSOR)	M204	EC-MAFS
	SHIELD WIRE (THROTTLE POSITION SENSOR)	M302	EC-TPS
E6/E39	SHIELD WIRE (HEATED OXYGEN SENSOR)	E3	EC-HO2S
	NATS IMMU (Diesel engine)	M69	EL-NATS
	ABS ACTUATOR AND ELECTRIC UNIT	E4	BR-ABS
	BRAKE FLUID LEVEL SWITCH	E2	EL-WARN
	COOLING FAN MOTOR	E24	LC-COOL/F
	DAYTIME LIGHT UNIT	E64	EL-DTRL
	DIM-DIP LAMP UNIT	E67	EL-DIMDIP
	FRONT COMBINATION LAMP LH (PARKING) (Except for Europe, Australia and China)	E11	EL-TAIL/L
	FRONT COMBINATION LAMP LH (PARKING) (For Europe, Australia and China)	E12	EL-TAIL/L
	FRONT COMBINATION LAMP LH (TURN SIGNAL) (Except for Europe, Australia and China)	E11	EL-TURN
	FRONT COMBINATION LAMP LH (TURN SIGNAL) (For Europe, Australia and China)	E12	EL-TURN
	FRONT COMBINATION LAMP RH (PARKING) (Except for Europe, Australia and China)	E27	EL-TAIL/L
	FRONT COMBINATION LAMP RH (PARKING) (For Europe, Australia and China)	E28	EL-TAIL/L
	FRONT COMBINATION LAMP RH (TURN SIGNAL) (Except for Europe, Australia and China)	E27	EL-TURN
	FRONT COMBINATION LAMP RH (TURN SIGNAL) (For Europe, Australia and China)	E28	EL-TURN
	FUEL FILTER (FUEL HEATER)	E56	EC-F/HEAT
	FUEL FILTER SWITCH (RHD models with diesel engine)	E5	EL-WARN EL-BUZZER
FUEL RETURN CONTROL SOLENOID VALVE (RHD models with NA engine)	E40	EC-F/RTN	

## GROUND DISTRIBUTION




EARTH	CONNECT TO	CONN. NO.	CELL CODE	
E6/E39	GLOW RELAY (RHD models with diesel engine except for Europe)	E44	EC-GLOW	
	HEADLAMP AIMING MOTOR LH	E57	EL-H/AIM	
	HEADLAMP AIMING MOTOR RH	E60	EL-H/AIM	
	HEADLAMP LH	E13	EL-H/LAMP EL-DTRL	
	HEADLAMP RH	E26	EL-H/LAMP EL-DTRL EL-DIMDIP	
	HEADLAMP WASHER AMPLIFIER	E65	EL-HLC	
	IACV-FICD SOLENOID VALVE (Diesel engine)	E37	HA-A/C,M	
	ISC-FI POT CONTROL SOLENOID VALVE	E37	EC-FIPOT HA-A/C,M	
	POWER ANTENNA	E46	EL-P/ANT	
	SHIELD WIRE (FRONT WHEEL SENSOR LH)	E15	BR-ABS	
	SHIELD WIRE (FRONT WHEEL SENSOR RH)	E31	BR-ABS	
	SIDE TURN SIGNAL LAMP LH	E1	EL-TURN	
	SIDE TURN SIGNAL LAMP RH	E45	EL-TURN	
	THERMOSWITCH	E18	LC-COOL/F	
	TRIPLE-PRESSURE SWITCH	E25	LC-COOL/F	
	VACUUM CONTROL SOLENOID VALVE	E20	EC-IDLE	
	ALTERNATOR (Gasoline engine)	E211	EC-CHOKE EC-FPCM EL-CHARGE EL-WARN	
	NEUTRAL POSITION SWITCH	E220	EC-PNP/SW	
	POWER STEERING OIL PRESSURE SWITCH (RHD 2WD models with KA engine and LHD models)	E208	EC-PST/SW	
	POWER STEERING OIL PRESSURE SWITCH (RHD 4WD models with KA engine)	E207	EC-PST/SW	
F7/F52 (RHD models with KA engine)	CONDENSER	F10	EC-IGN/SG	
	DISTRIBUTOR (POWER TRANSISTOR)	F14	EC-IGN/SG	
	ECM (ECCS CONTROL MODULE)	F51	EC-MAIN	
	F8 (RHD models with KA engine)	DATA LINK CONNECTOR FOR CONSULT	M11	EC-MIL/DL
		DISTRIBUTOR (CAMSHAFT POSITION SENSOR)	F14	EC-CMPS
ECM (ECCS CONTROL MODULE)		F51	EC-MAIN	
SHIELD WIRE (CAMSHAFT POSITION SENSOR)		F14	EC-CMPS	
SHIELD WIRE (MASS AIR FLOW SENSOR)		F4	EC-MAFS	
SHIELD WIRE (THROTTLE POSITION SENSOR)	F102	EC-TPS		
A1 (Diesel engine)	ALTERNATOR	A7	EC-GLOW EL-CHARGE EL-WARN	
	ENGINE COOLANT TEMPERATURE SENSOR (Except for Europe)	A11	EC-GLOW	
R54	REAR WINDOW DEFOGGER	R53	EL-DEF	

# BATTERY

## CAUTION:

If it becomes necessary to start the engine with a booster battery and jumper cables,

- a. Use a 12-volt booster battery.
- b. After connecting battery cables, ensure that they are tightly clamped to battery terminals for good contact.
- c. Never add distilled water through the hole used to check specific gravity.

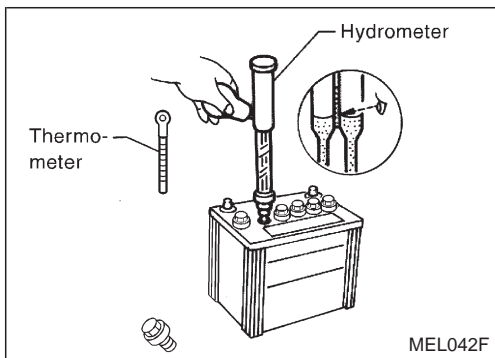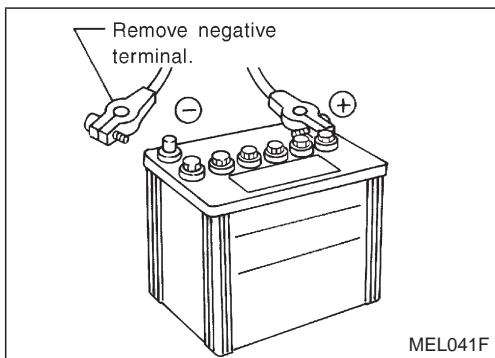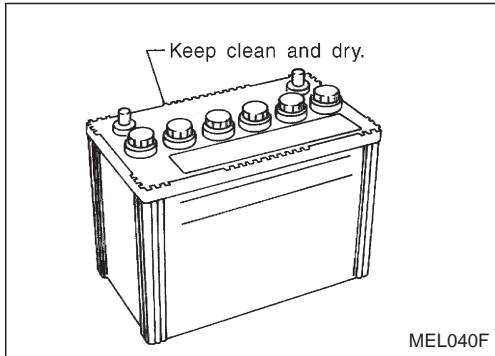

## How to Handle Battery

### METHODS OF PREVENTING OVER-DISCHARGE

The following precautions must be taken to prevent over-discharging a battery.

- The battery surface (particularly its top) should always be kept clean and dry.
- The terminal connections should be clean and tight.
- At every routine maintenance, check the electrolyte level. This also applies to batteries designated as “low maintenance” and “maintenance-free”.
- When the vehicle is not going to be used over a long period of time, disconnect the negative battery terminal.

- Check the charge condition of the battery. Periodically check the specific gravity of the electrolyte. Keep a close check on charge condition to prevent over-discharge.

### CHECKING ELECTROLYTE LEVEL



#### WARNING:

Do not allow battery fluid to come in contact with skin, eyes, fabrics, or painted surfaces. After touching a battery, do not touch or rub your eyes until you have thoroughly washed your hands. If acid contacts eyes, skin or clothing, immediately flush with water for 15 minutes and seek medical attention.

# BATTERY

## How to Handle Battery (Cont'd)

- Remove the cell plug using a suitable tool.
- Add distilled water up to the MAX level.

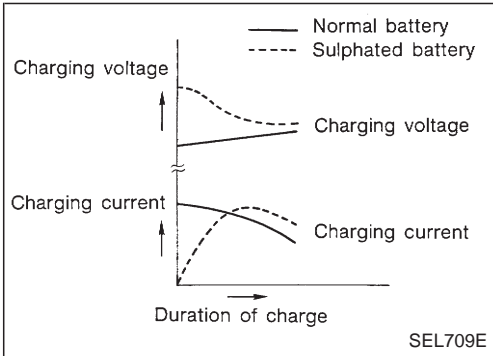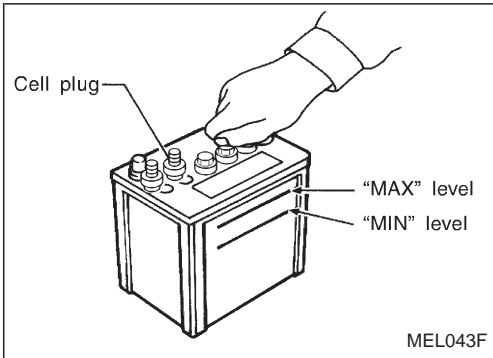


## SULPHATION

A battery will be completely discharged if it is left unattended for a long time and the specific gravity will become less than 1.100. This may result in sulphation on the cell plates.

To determine if a battery has been "sulphated", note its voltage and current when charging it. As shown in the figure, less current and higher voltage are observed in the initial stage of charging sulphated batteries.

A sulphated battery may sometimes be brought back into service by means of a long, slow charge, 12 hours or more, followed by a battery capacity test.

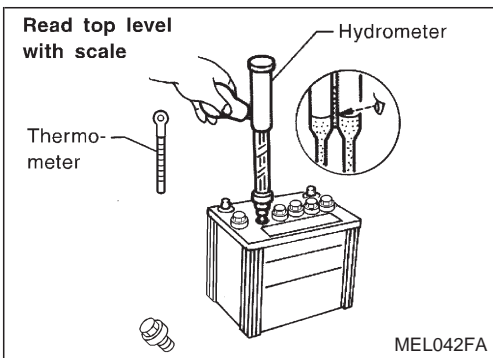

## SPECIFIC GRAVITY CHECK

1. Read hydrometer and thermometer indications at eye level.


# BATTERY

## How to Handle Battery (Cont'd)

2. Convert into specific gravity at 20°C (68°F).

Example:

- When electrolyte temperature is 35°C (95°F) and specific gravity of electrolyte is 1.230, converted specific gravity at 20°C (68°F) is 1.240.
- When electrolyte temperature is 0°C (32°F) and specific gravity of electrolyte is 1.210, converted specific gravity at 20°C (68°F) is 1.196.

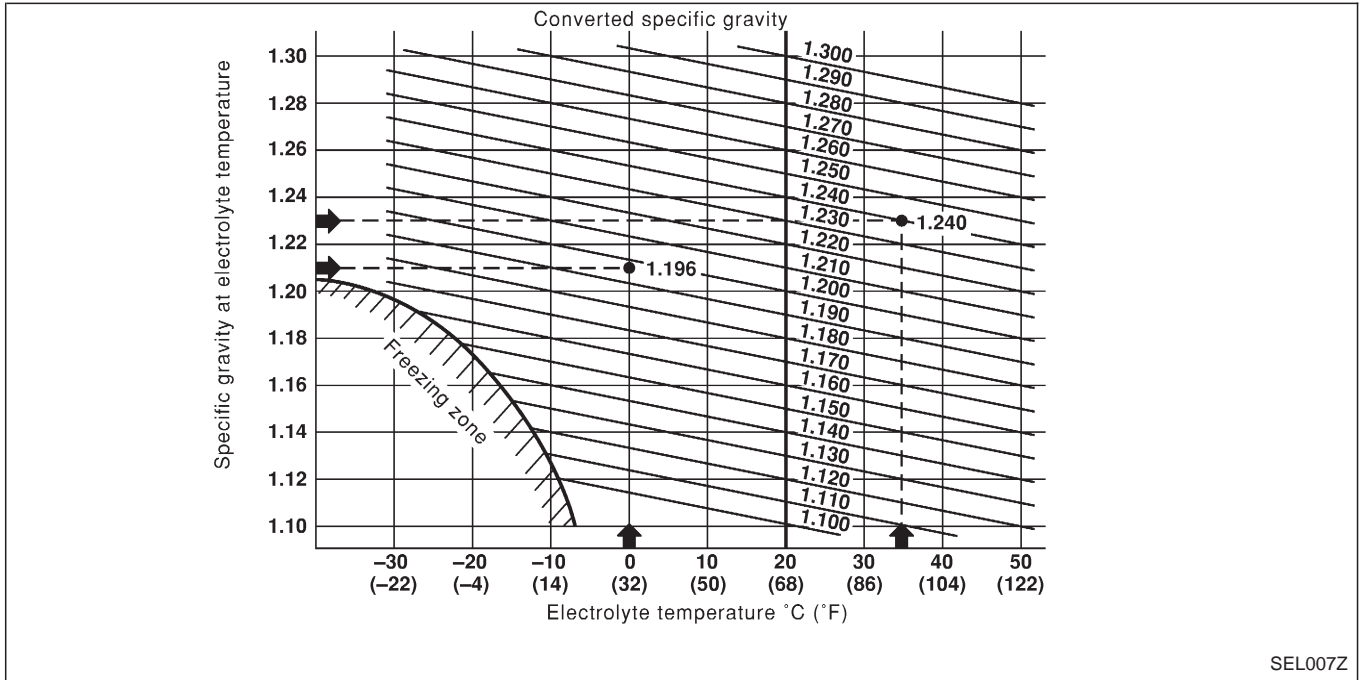


SEL007Z

# BATTERY

## Battery Test and Charging Chart

Chart I

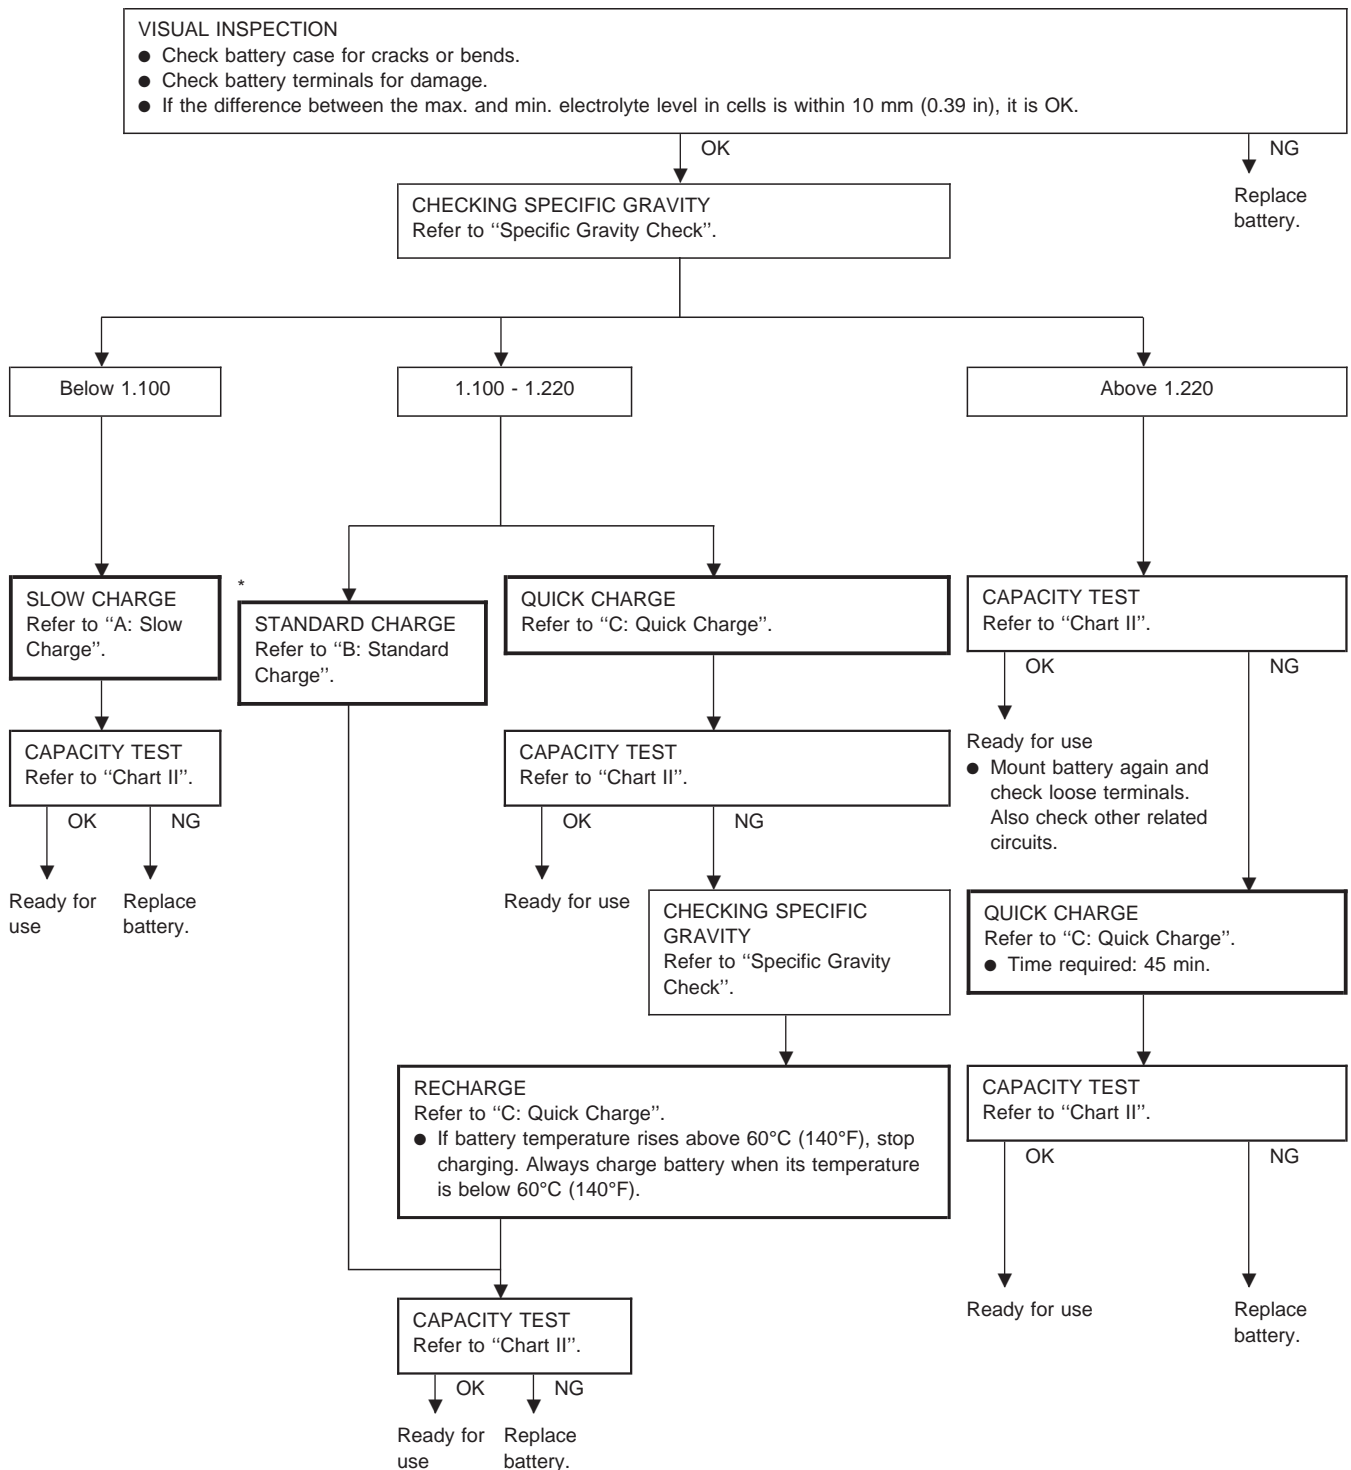


\* "STANDARD CHARGE" is recommended if the vehicle is in storage after charging.

# BATTERY

## Battery Test and Charging Chart (Cont'd)


Chart II

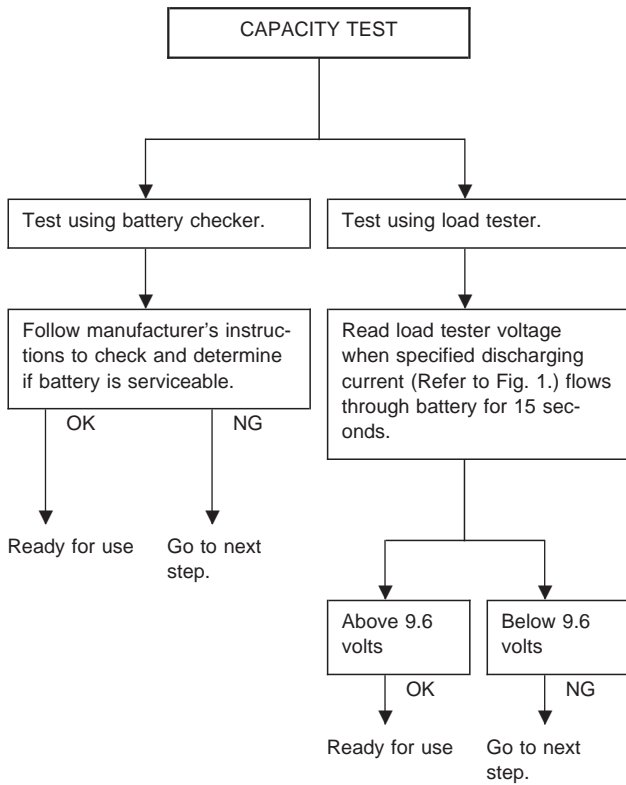

- Check battery type and determine the specified current using the following table.

Fig. 1 DISCHARGING CURRENT  
(Load Tester)

Type	Current (A)
28B19R(L)	90
34B19R(L)	99
46B24R(L)	135
55B24R(L)	135
50D23R(L)	150
55D23R(L)	180
65D26R(L)	195
80D26R(L)	195
75D31R(L)	210
95D31R(L)	240
115D31R(L)	240
95E41R(L)	300
130E41R(L)	330

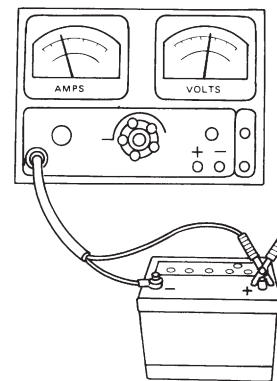

SEL008Z



# BATTERY

## Battery Test and Charging Chart (Cont'd)

### A: SLOW CHARGE

Determine initial charging current from specific gravity referring to Fig. 2.

- Charge battery.
- Check charging voltage 30 minutes after starting the battery charge.

12 to 15 volts

OK

Continue to charge for 12 hours.

CHECKING SPECIFIC GRAVITY  
Refer to "Specific Gravity Check".

Conduct additional charge as per Fig. 3, if necessary.

Go to "CAPACITY TEST".

Below 12 volts or above 15 volts

NG


Replace battery.

Fig. 2 INITIAL CHARGING CURRENT SETTING (Slow charge)

CON- VERTED SPECIFIC GRAVITY	BATTERY TYPE												
	28B19R(L)	34B19R(L)	46B24R(L)	55B24R(L)	50D23R(L)	55D23R(L)	65D26R(L)	80D26R(L)	75D31R(L)	95D31R(L)	115D31R(L)	95E41R(L)	130E41R(L)
Below 1.100	4.0 (A)	5.0 (A)	7.0 (A)	8.0 (A)	9.0 (A)	10.0 (A)	14.0 (A)						

- Check battery type and determine the specified current using the table shown above.
- After starting charging, adjustment of charging current is not necessary.

Fig. 3 ADDITIONAL CHARGE (Slow charge)

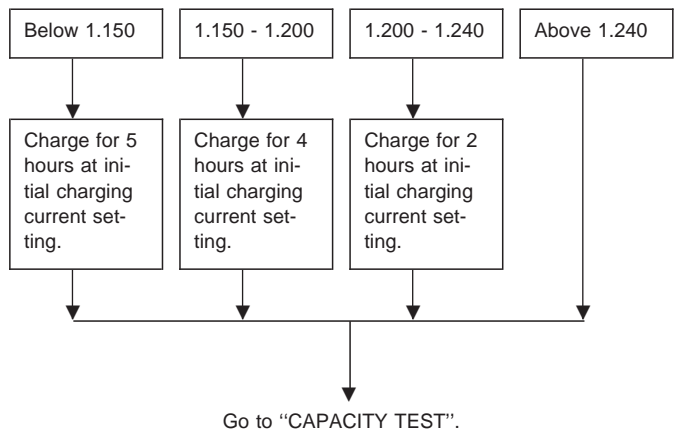

### CAUTION:

- Set charging current to value specified in Fig. 2. If charger is not capable of producing specified current value, set its charging current as close to that value as possible.
- Keep battery away from open flame while it is being charged.
- When connecting charger, connect leads first, then turn on charger. Do not turn on charger first, as this may cause a spark.
- If battery temperature rises above 60°C (140°F), stop charging. Always charge battery when its temperature is below 60°C (140°F).

# BATTERY

## Battery Test and Charging Chart (Cont'd)

### B: STANDARD CHARGE


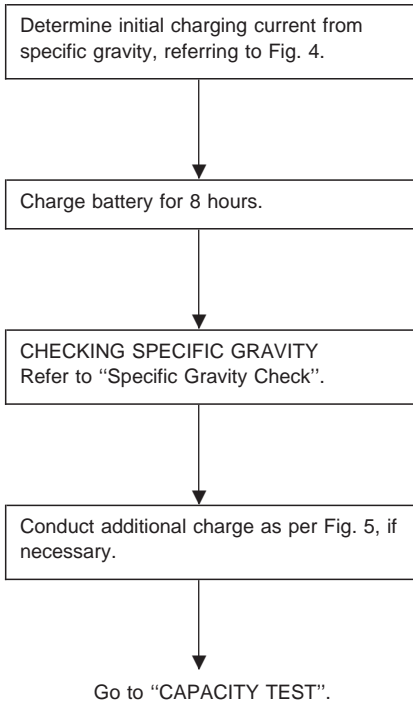


Fig. 4 INITIAL CHARGING CURRENT SETTING  
(Standard charge)

CON- VERTED SPECIFIC GRAVITY	BATTERY TYPE												
	28B19R(L)	34B19R(L)	46B24R(L)	55B24R(L)	50D23R(L)	55D23R(L)	65D26R(L)	80D26R(L)	75D31R(L)	95D31R(L)	115D31R(L)	95E41R(L)	130E41R(L)
1.100 - 1.130	4.0 (A)		5.0 (A)		6.0 (A)		7.0 (A)		8.0 (A)		9.0 (A)		13.0 (A)
1.130 - 1.160	3.0 (A)		4.0 (A)		5.0 (A)		6.0 (A)		7.0 (A)		8.0 (A)		11.0 (A)
1.160 - 1.190	2.0 (A)		3.0 (A)		4.0 (A)		5.0 (A)		6.0 (A)		7.0 (A)		9.0 (A)
1.190 - 1.220	2.0 (A)		2.0 (A)		3.0 (A)		4.0 (A)		5.0 (A)		5.0 (A)		7.0 (A)

- Check battery type and determine the specified current using the table shown above.
- After starting charging, adjustment of charging current is not necessary.

Fig. 5 ADDITIONAL CHARGE (Standard charge)

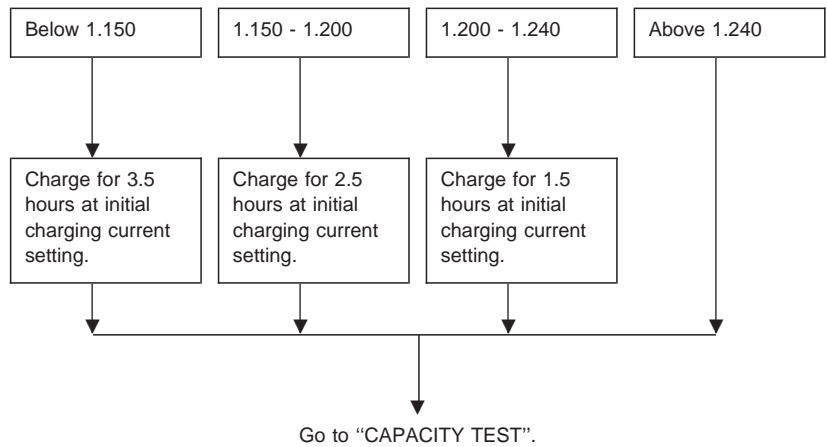

### CAUTION:

- Do not use standard charge method on a battery whose specific gravity is less than 1.100.
- Set charging current to value specified in Fig. 4. If charger is not capable of producing specified current value, set its charging current as close to that value as possible.
- Keep battery away from open flame while it is being charged.
- When connecting charger, connect leads first, then turn on charger. Do not turn on charger first, as this may cause a spark.
- If battery temperature rises above 60°C (140°F), stop charging. Always charge battery when its temperature is below 60°C (140°F).

# BATTERY

## Battery Test and Charging Chart (Cont'd)

C: QUICK CHARGE

Determine initial charging current setting and charging time from specific gravity, referring to Fig. 6.

Charge battery.

Go to "CAPACITY TEST".

Fig. 6 INITIAL CHARGING CURRENT SETTING AND CHARGING TIME (Quick charge)

BATTERY TYPE		28B19R(L) 34B19R(L)	46B24R(L) 55B24R(L) 50D23R(L)	55D23R(L) 65D26R(L) 80D26R(L)	75D31R(L) 95D31R(L) 115D31R(L)	95E41R(L) 130E41R(L)
CURRENT [A]		10 (A)	15 (A)	20 (A)	30 (A)	40 (A)
CONVERTED SPECIFIC GRAVITY	1.100 - 1.130	2.5 hours				
	1.130 - 1.160	2.0 hours				
	1.160 - 1.190	1.5 hours				
	1.190 - 1.220	1.0 hours				
	Above 1.220	0.75 hours (45 min.)				

- Check battery type and determine the specified current using the table shown above.
- After starting charging, adjustment of charging current is not necessary.

### CAUTION:

- Do not use quick charge method on a battery whose specific gravity is less than 1.100.
- Set initial charging current to value specified in Fig. 6. If charger is not capable of producing specified current value, set its charging current as close to that value as possible.
- Keep battery away from open flame while it is being charged.
- When connecting charger, connect leads first, then turn on charger. Do not turn on charger first, as this may cause a spark.
- Be careful of a rise in battery temperature because a large current flow is required during quick-charge operation.  
If battery temperature rises above 60°C (140°F), stop charging. Always charge battery when its temperature is below 60°C (140°F).
- Do not exceed the charging time specified in Fig. 6, because charging battery over the charging time can cause deterioration of the battery.



## Service Data and Specifications (SDS)

Applied model		Europe		
		KA24	TD25	
		Standard		Option
Type		55D23R	95D31R	80D26L, 80D26R
Capacity	V-AH	12-48	12-64	12-55

# STARTING SYSTEM

## Wiring Diagram — START —

EL-START-01

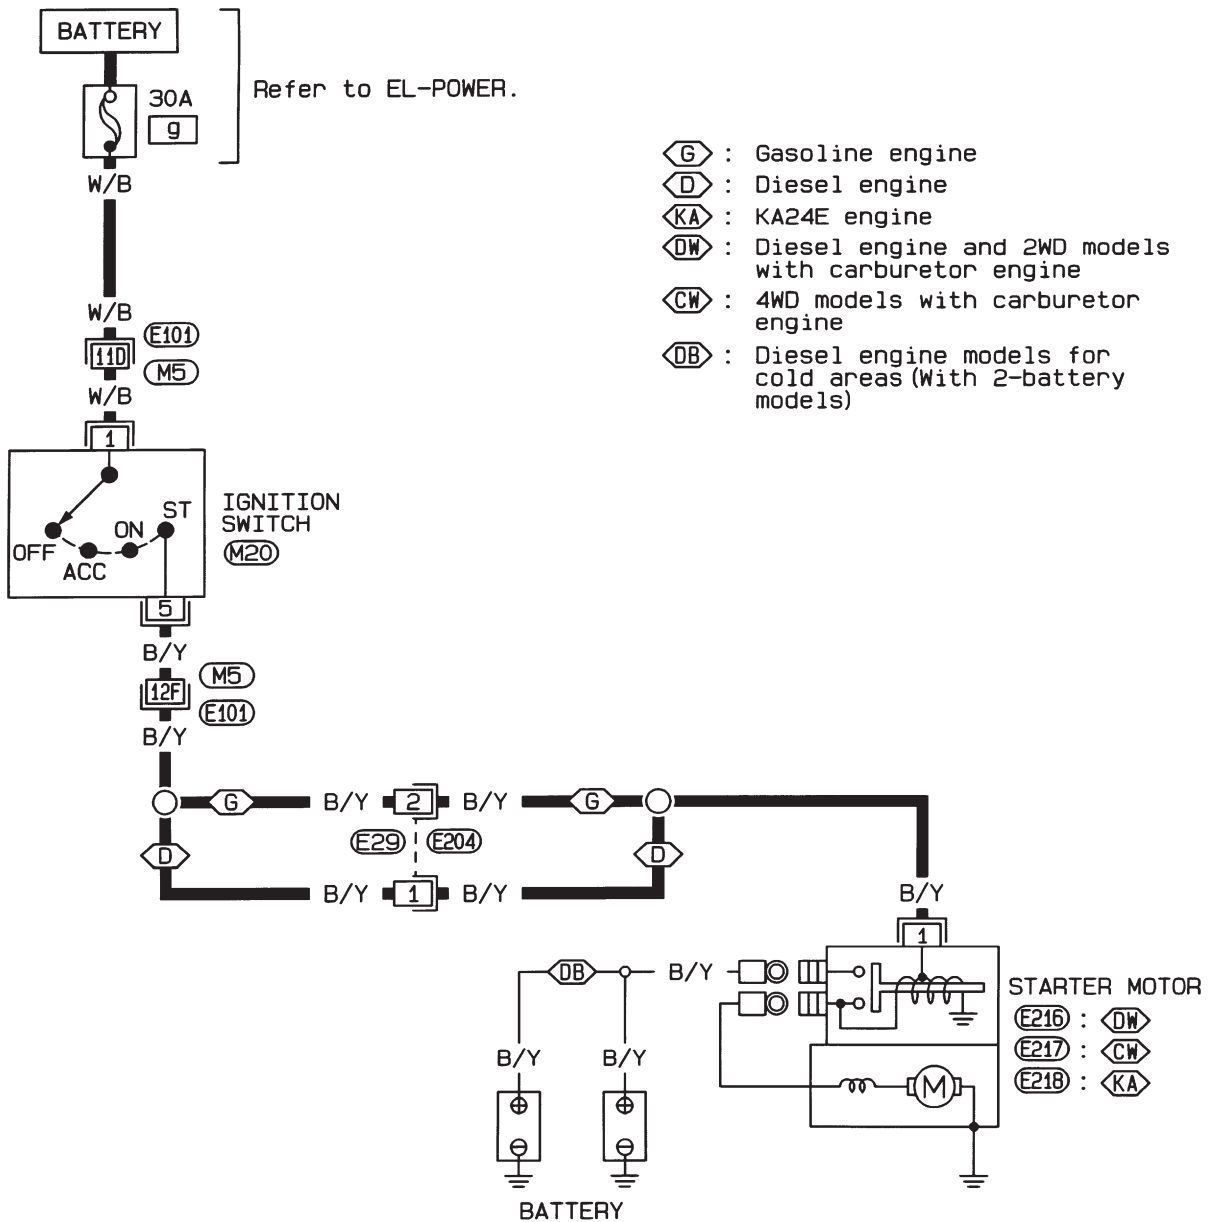


Refer to last page (Foldout page).

M5, E101

# STARTING SYSTEM

## Trouble Diagnoses


If any abnormality is found, immediately disconnect battery negative terminal.

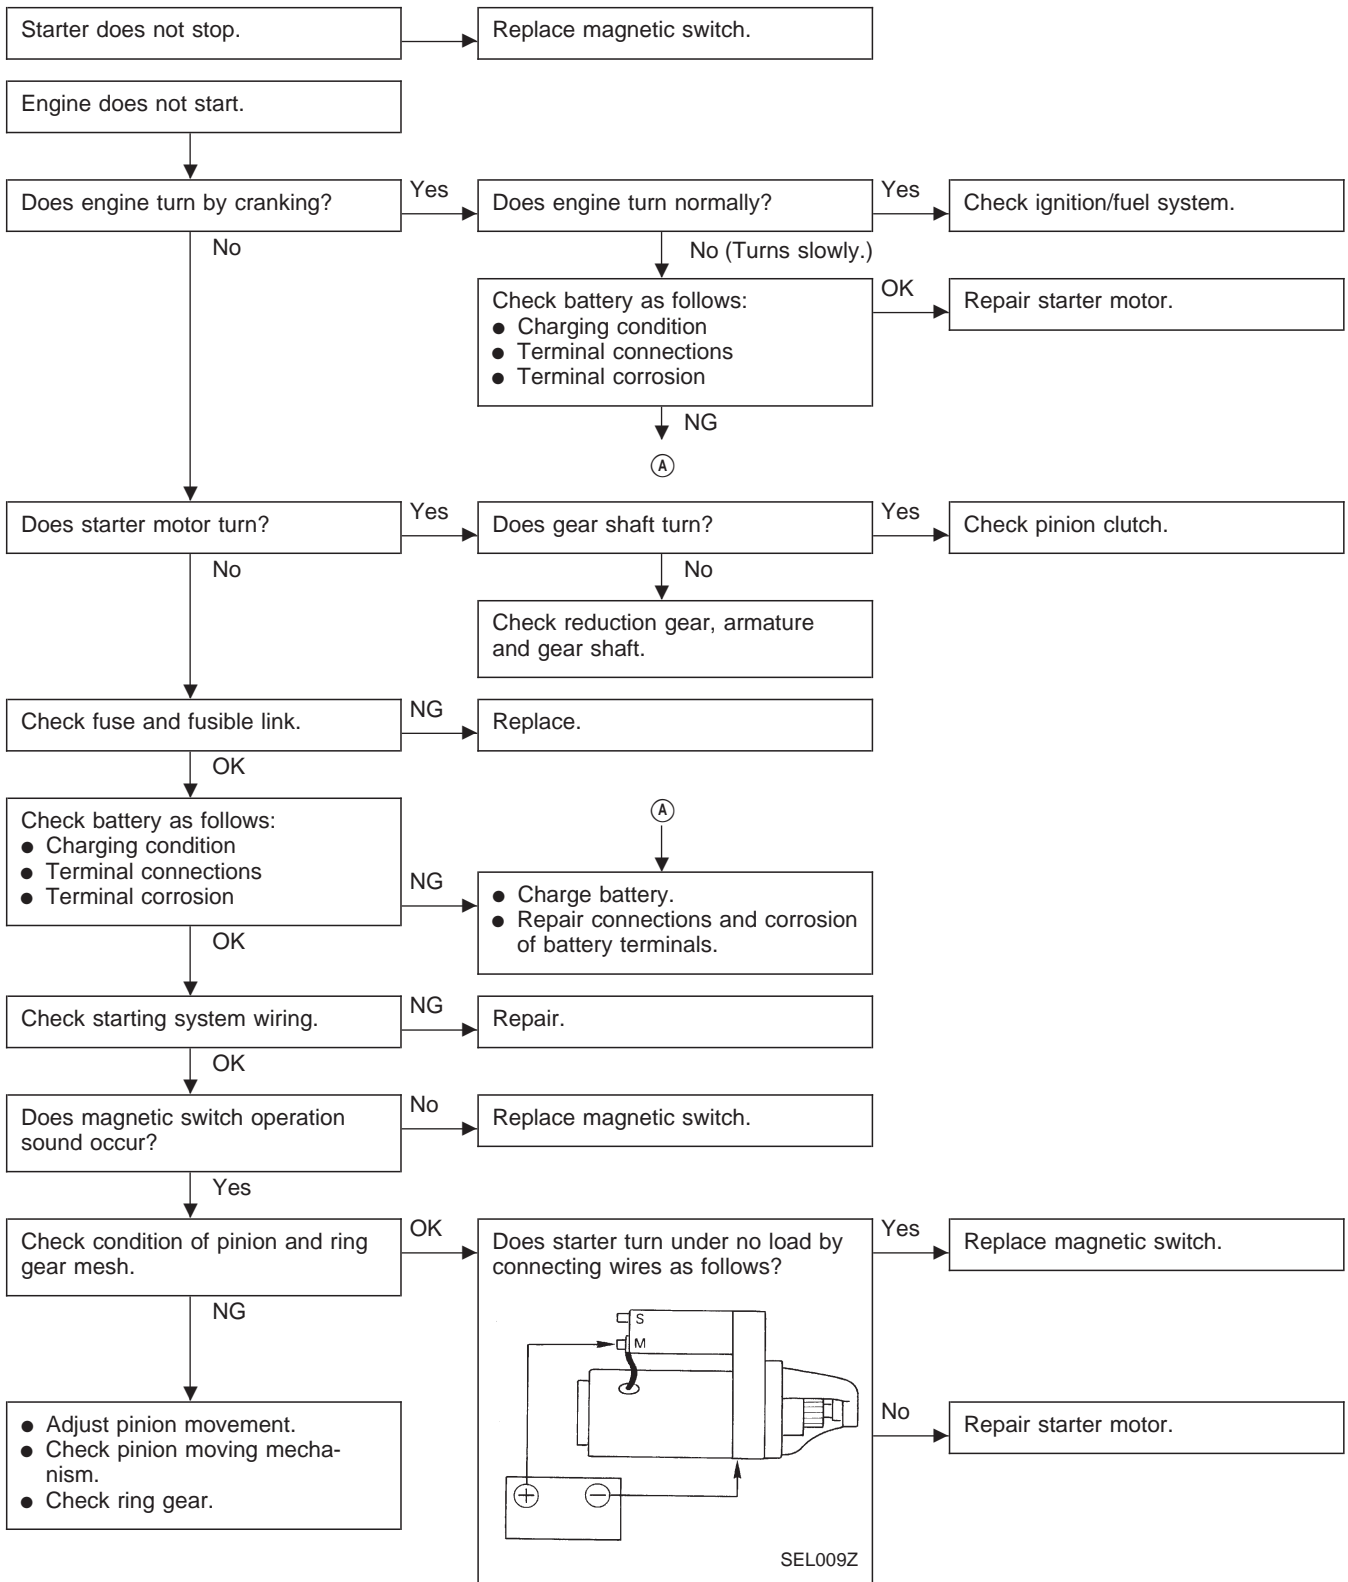

# STARTING SYSTEM


## Construction

SEC. 233  
M3T70381

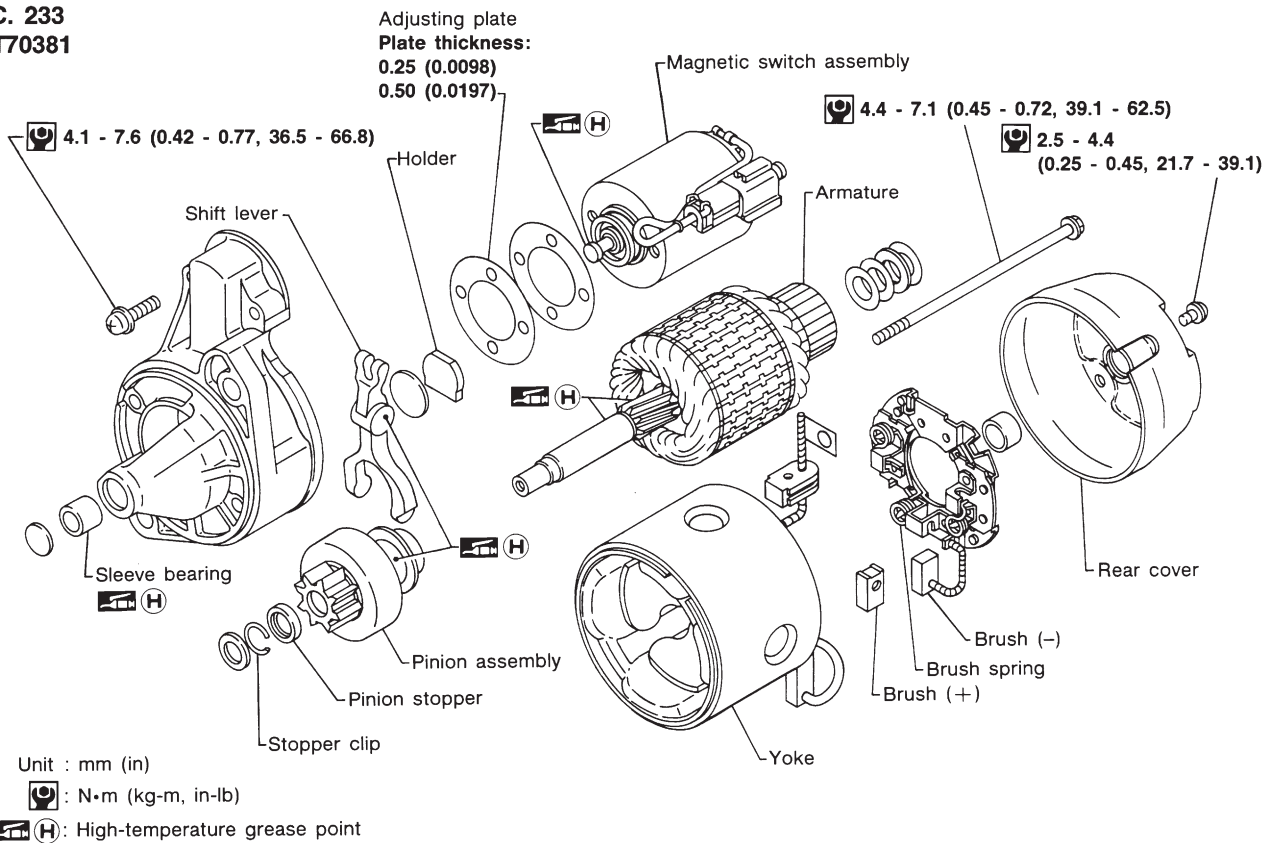

MEL673EA

SEC. 233  
M3T29482D

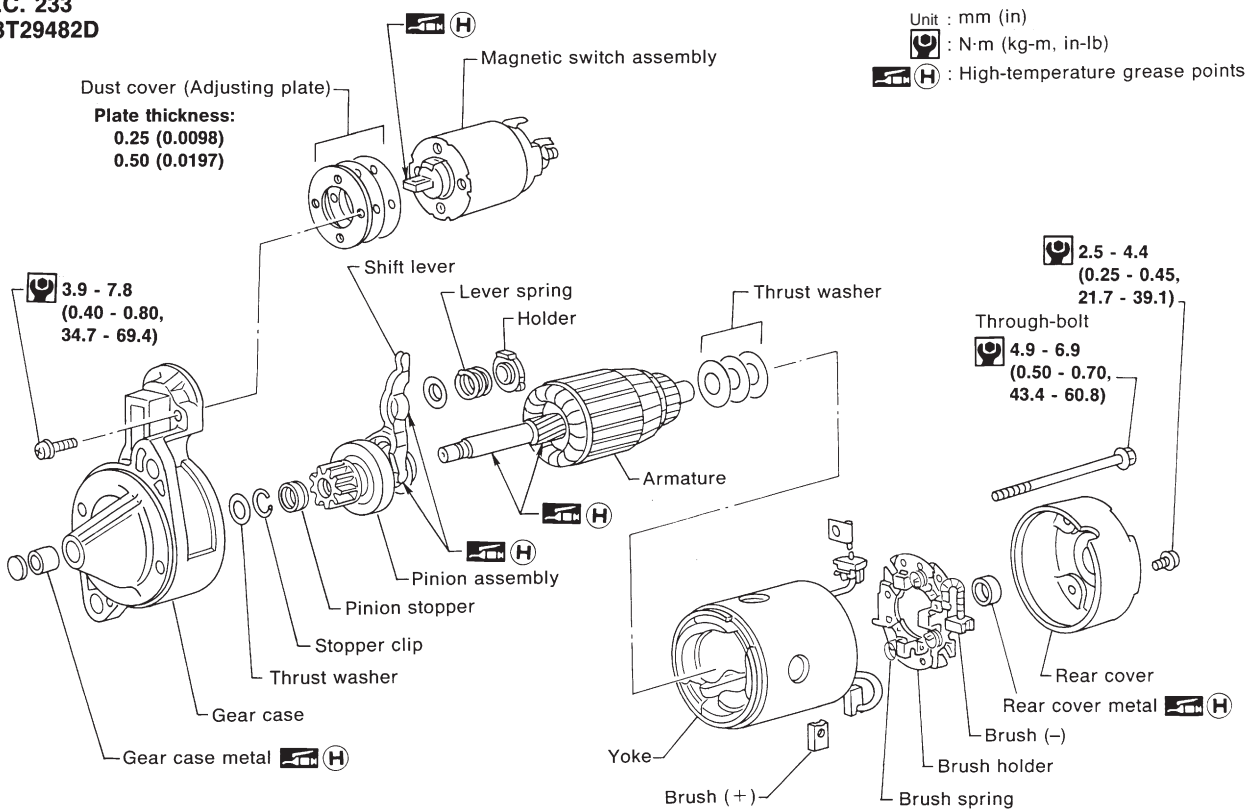


SEL600JA

# STARTING SYSTEM

## Construction (Cont'd)

**SEC. 233**  
**S13-327**

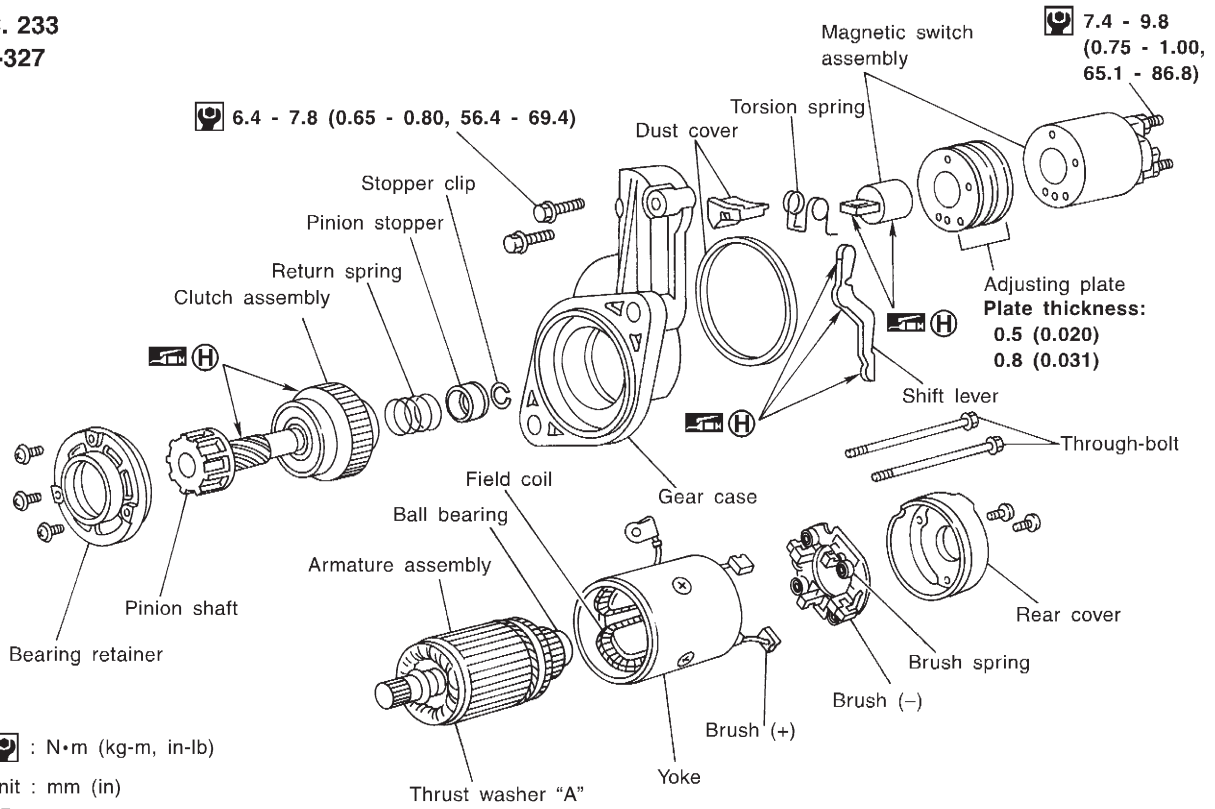

: N·m (kg-m, in-lb)


Unit : mm (in)

: High-temperature grease points


MEL440H



# STARTING SYSTEM

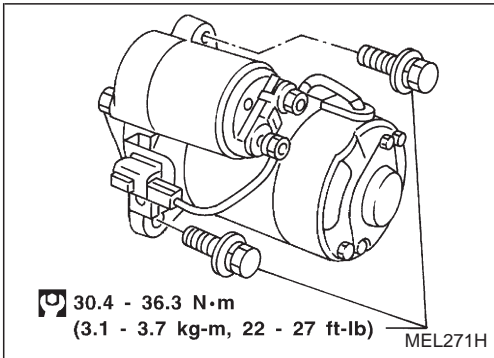


## Removal and Installation

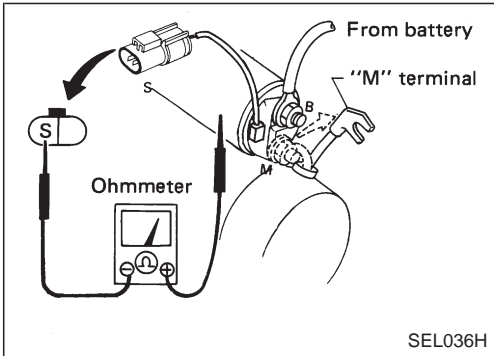


## Inspection

### MAGNETIC SWITCH CHECK

- Before starting to check, disconnect battery ground cable.
- Disconnect "M" terminal of starter motor.
- 1. Continuity test (between "S" terminal and switch body).
- No continuity ... Replace.

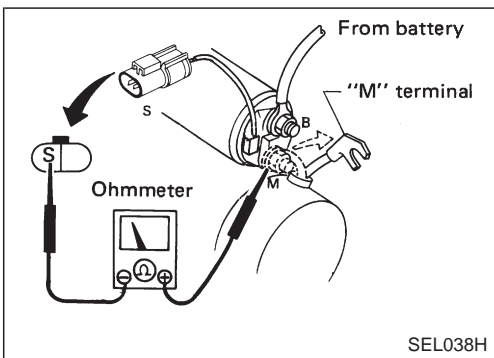

- 2. Continuity test (between "S" terminal and "M" terminal).
- No continuity ... Replace.

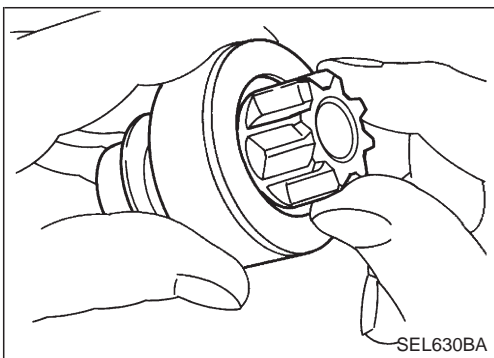

### PINION/CLUTCH CHECK

1. Inspect pinion teeth.
  - Replace pinion if teeth are worn or damaged. (Also check condition of ring gear teeth.)
2. Inspect reduction gear teeth (If equipped).
  - Replace reduction gear if teeth are worn or damaged. (Also check condition of armature shaft gear teeth.)
3. Check to see if pinion locks in one direction and rotates smoothly in the opposite direction.
  - If it locks or rotates in both directions, or unusual resistance is evident. ... Replace.

### BRUSH CHECK


#### Brush

Check wear of brush.

**Wear limit length:**

**Refer to SDS, EL-33.**

- Excessive wear ... Replace.

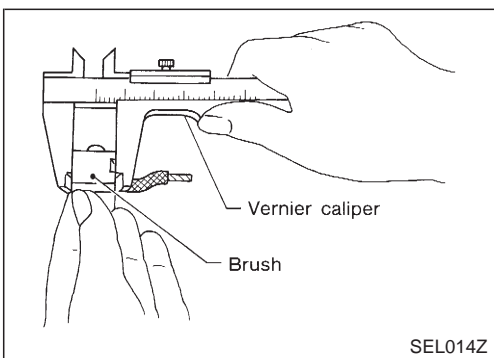

## STARTING SYSTEM

### Inspection (Cont'd)


#### Brush spring pressure

Check brush spring pressure with brush spring detached from brush.

#### Spring pressure (with new brush):

Refer to SDS, EL-33.

- Not within the specified values ... Replace.

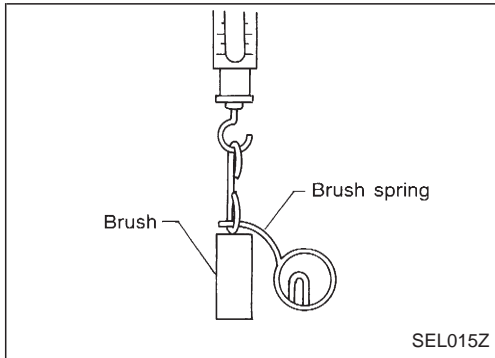


#### Brush holder

1. Perform insulation test between brush holder (positive side) and its base (negative side).

- Continuity exists. ... Replace.

2. Check brush to see if it moves smoothly.

- If brush holder is bent, replace it; if sliding surface is dirty, clean.

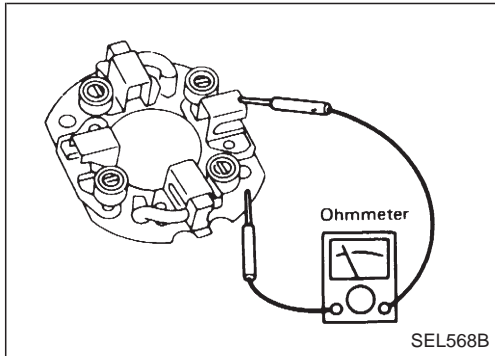


#### YOKE CHECK

Magnet is secured to yoke by bonding agent. Check magnet to see that it is secured to yoke and for any cracks. Replace malfunctioning parts as an assembly.

#### CAUTION:

**Do not clamp yoke in a vice or strike it with a hammer.**

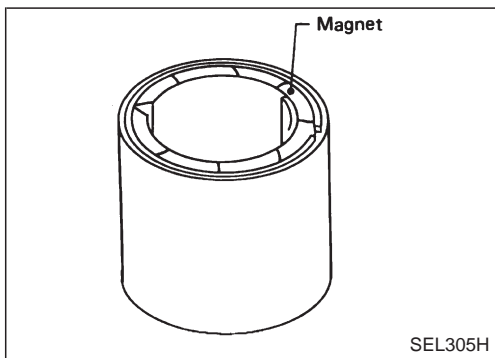


#### ARMATURE CHECK

1. Continuity test (between two segments side by side).

- No continuity ... Replace.


2. Insulation test (between each commutator bar and shaft).

- Continuity exists. ... Replace.

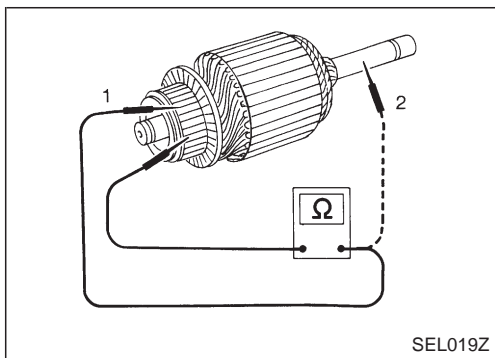


3. Check commutator surface.

- Rough ... Sand lightly with No. 500 - 600 emery paper.

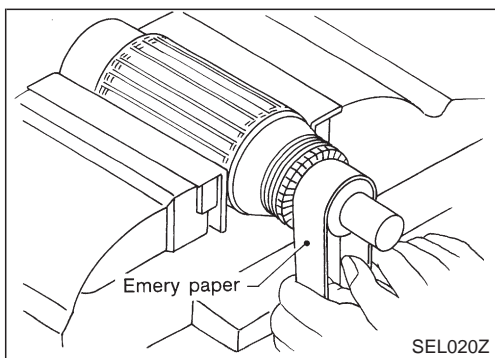

## STARTING SYSTEM

### Inspection (Cont'd)

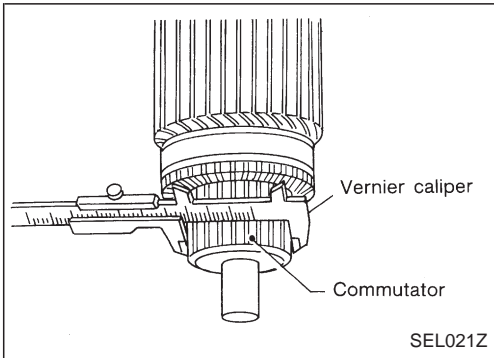


4. Check diameter of commutator.

**Commutator minimum diameter:**

**Refer to SDS, EL-33.**

- Less than specified value ... Replace.

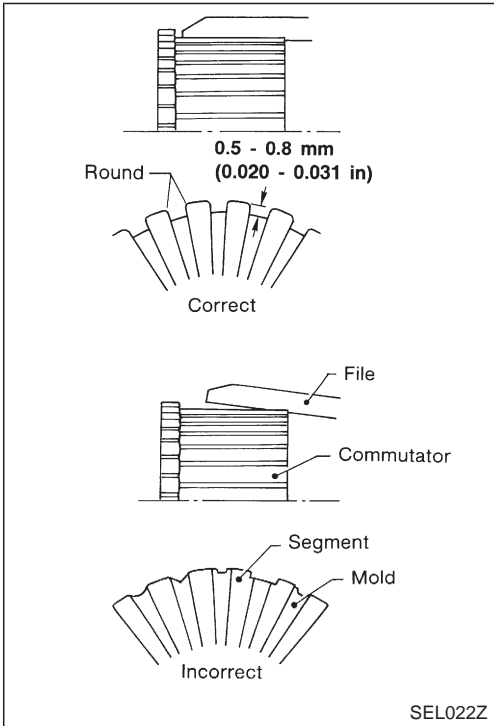


5. Check depth of insulating mold from commutator surface.

- Less than 0.2 mm (0.008 in) ... Undercut to 0.5 to 0.8 mm (0.020 to 0.031 in)

### Assembly

Apply high-temperature grease to lubricate the bearing, gears and frictional surface when assembling the starter. Carefully observe the following instructions.

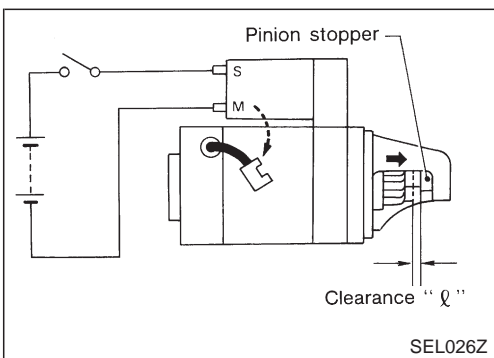

### PINION PROTRUSION LENGTH ADJUSTMENT

#### Clearance "l"

With pinion driven out by magnetic switch, push pinion back to remove slack and measure clearance "l" between the front edge of the pinion and the pinion stopper.

**Clearance "l":**

**Refer to SDS, EL-33.**

## STARTING SYSTEM



### Assembly (Cont'd)

#### Movement "ℓ"

Compare movement "ℓ" in height of pinion when it is pushed out with magnetic switch energized and when it is pulled out by hand until it touches stopper.

#### Movement "ℓ":

Refer to SDS, EL-33.

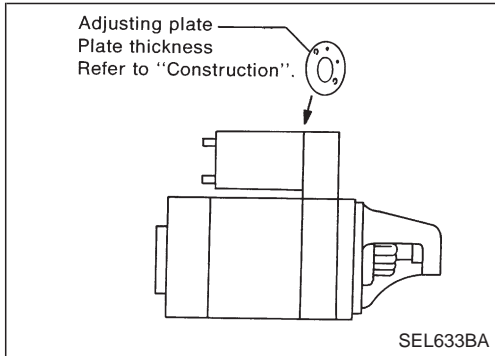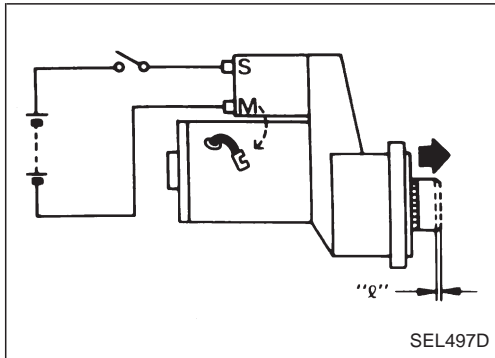

- Not in the specified value ... Adjust by adjusting plate.

### Service Data and Specifications (SDS)

#### STARTER

Type	M3T70381		M3T29482D	S13-327
	MITSUBISHI			HITACHI
	Non-reduction			Reduction
Applied model	2WD		4WD	2WD
	KA24			TD25
	Standard			Standard
System voltage	V	12		
No-load				
Terminal voltage	V	11.5		11.0
Current	A	Less than 60		Less than 160
Revolution	rpm	More than 6,500		More than 4,000
Minimum diameter of commutator	mm (in)	31.4 (1.236)		35.5 (1.398)
Minimum length of brush	mm (in)	11.5 (0.453)		9.0 (0.354)
Brush spring tension	N (kg, lb)	13.7 - 25.5 (1.4 - 2.6, 3.1 - 5.7)		—
Clearance between bearing metal and armature shaft	mm (in)	—	Less than 0.2 (0.008)	—
Clearance "ℓ" between pinion front edge and pinion stopper	mm (in)	0.5 - 2.0 (0.020 - 0.079)		—
Movement "ℓ" in height of pinion assembly	mm (in)	—		0.3 - 1.5 (0.012 - 0.059)






# CHARGING SYSTEM

## Trouble Diagnoses

Before conducting an alternator test, make sure that the battery is fully charged. A 30-volt voltmeter and suitable test probes are necessary for the test. The alternator can be checked easily by referring to the Inspection Table.

- Before starting, inspect the fusible link.
- Use fully charged battery.

### GASOLINE ENGINE MODELS

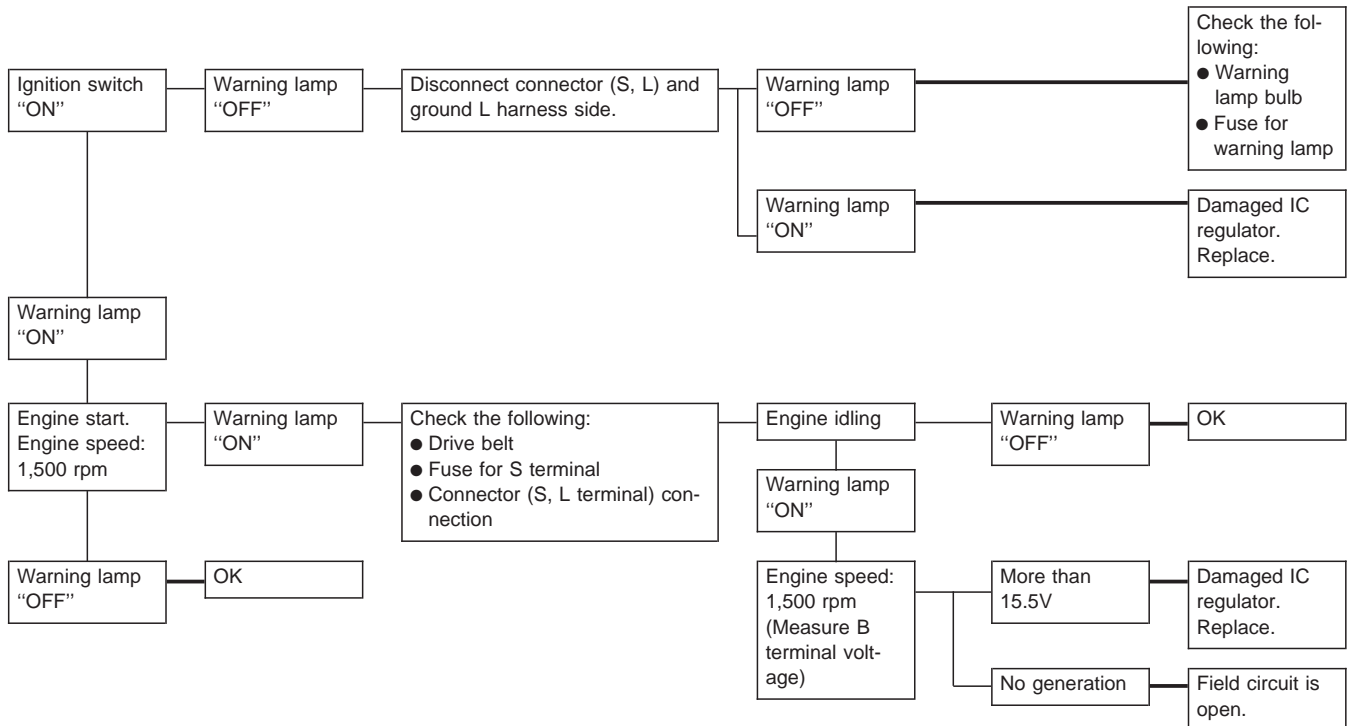

Warning lamp: "CHARGE" warning lamp in combination meter

#### Note:

- If the inspection result is OK even though the charging system is malfunctioning, check the B terminal connection. (Check the tightening torque.)
- When field circuit is open, check condition of rotor coil, rotor slip ring and brush. If necessary, replace faulty parts with new ones.

#### Malfunction indicator


The IC regulator warning function activates to illuminate "CHARGE" warning lamp, if any of the following symptoms occur while alternator is operating:

- Field circuit is open.
- Excessive voltage is produced.

# CHARGING SYSTEM

## Trouble Diagnoses (Cont'd)

### DIESEL ENGINE MODELS

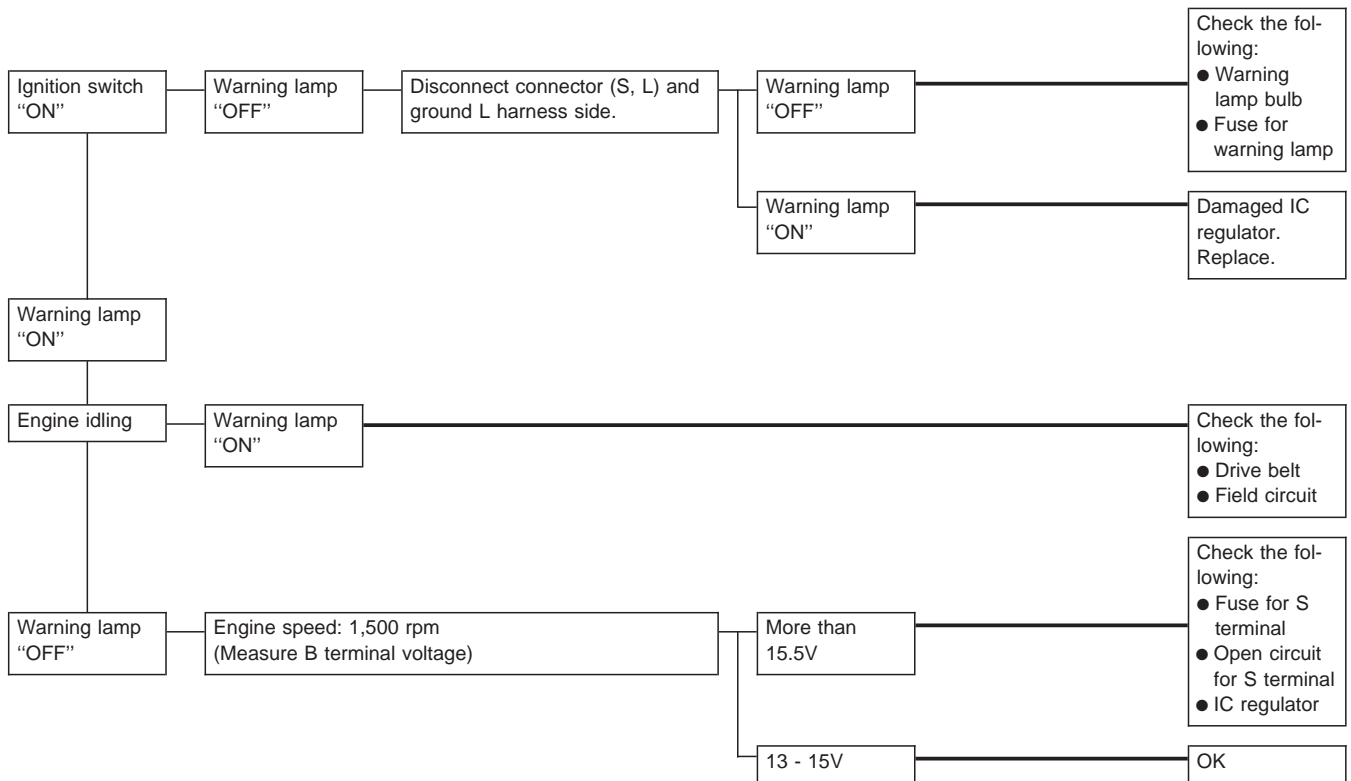

Warning lamp: "CHARGE" warning lamp in combination meter

#### Note:


- If the inspection result is OK even though the charging system is malfunctioning, check the B terminal connection (check the tightening torque).
- When field circuit is open, check condition of rotor coil, rotor slip ring and brush. If necessary, replace faulty parts with new ones.



# CHARGING SYSTEM


## Construction

### SEC. 231 LR160-727C

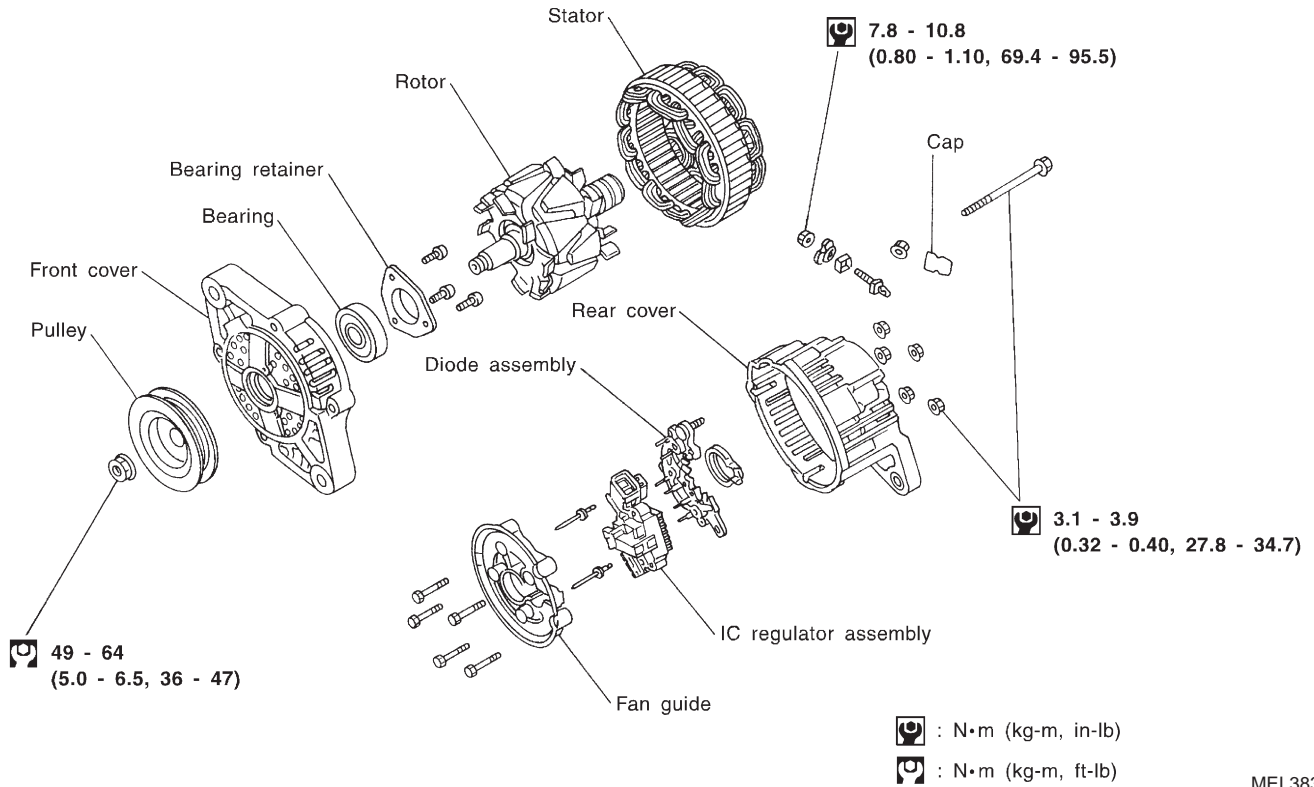


MEL3831

### SEC. 231 LR160-728C

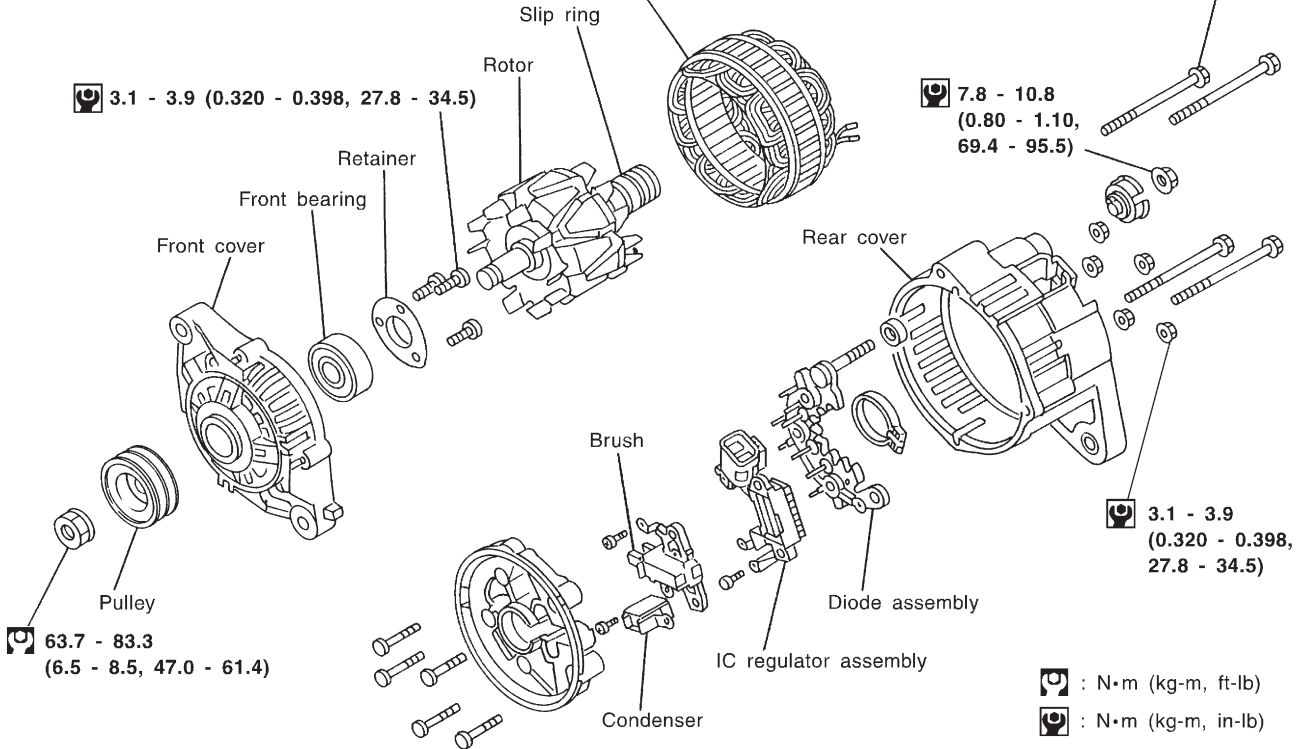

MEL443HA


# CHARGING SYSTEM

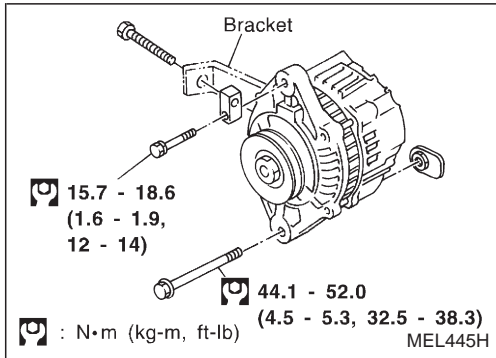

## Removal and Installation

### CAUTION:

- Start service operation after removing the negative terminal from the battery.
- Also remove the undercover, if equipped, before servicing.

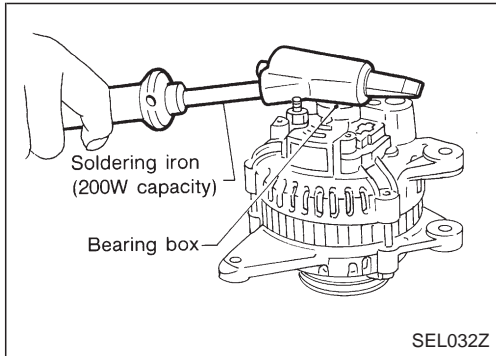

## Disassembly

### REAR COVER

#### CAUTION:


Rear cover may be hard to remove because a ring is used to lock outer race of rear bearing. To facilitate removal of rear cover, heat just bearing box section with a 200W soldering iron.

Do not use a heat gun, as it can damage diode assembly.

### REAR BEARING

#### CAUTION:

- Do not reuse rear bearing after removal. Replace with a new one.
- Do not lubricate rear bearing outer race.

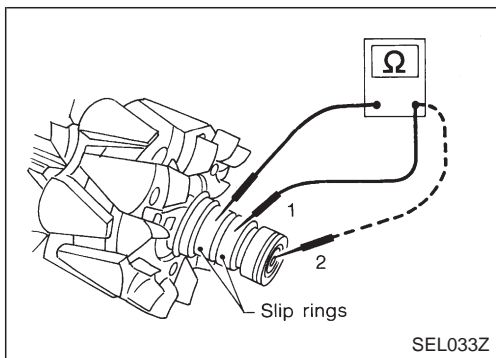

## Inspection

### ROTOR CHECK

#### 1. Resistance test

**Resistance: Refer to SDS, EL-41.**

- Not within the specified values ... Replace rotor.

#### 2. Insulator test

- Continuity exists. ... Replace rotor.

#### 3. Check slip ring for wear.

**Slip ring minimum outer diameter:**

**Refer to SDS, EL-41.**


- Not within the specified values ... Replace rotor.

## CHARGING SYSTEM

### Inspection (Cont'd)


#### BRUSH CHECK

1. Check smooth movement of brush.
  - Not smooth ... Check brush holder and clean.
2. Check brush for wear.
  - Replace brush if it is worn down to the limit line.

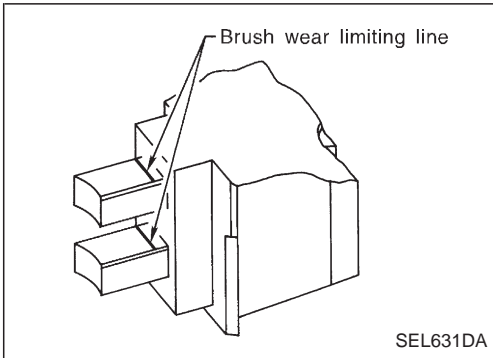


#### STATOR CHECK

1. Continuity test
  - No continuity ... Replace stator.

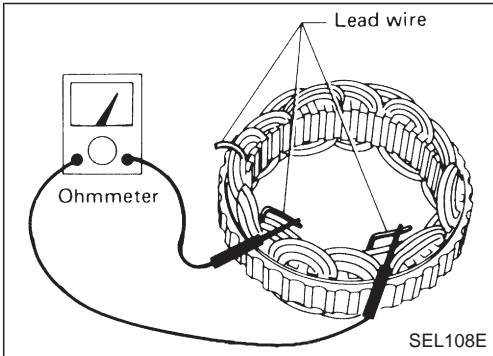

2. Ground test
  - Continuity exists. ... Replace stator.

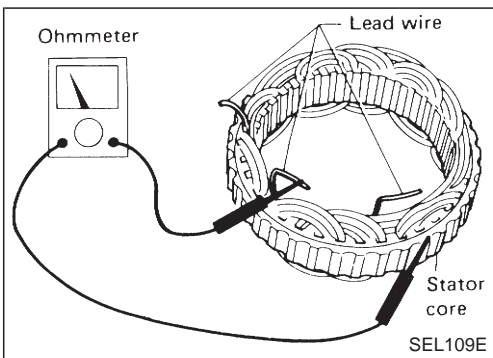


### Assembly

#### RING FITTING IN REAR BEARING

- Fix ring into groove in rear bearing so that it is as close to the adjacent area as possible.


#### CAUTION:

**Do not reuse rear bearing after removal.**

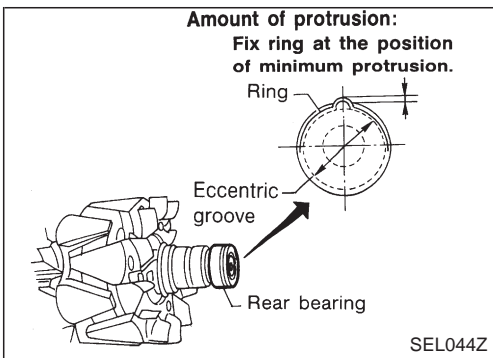


#### REAR COVER INSTALLATION

1. Fit brush assembly, diode assembly, regulator assembly and stator.
2. Push brushes up with fingers and install them to rotor.  
**Take care not to damage slip ring sliding surface.**

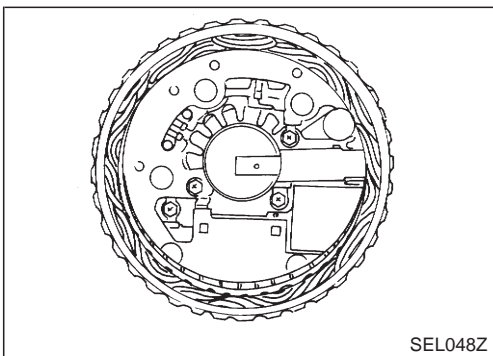

## CHARGING SYSTEM Assembly (Cont'd)

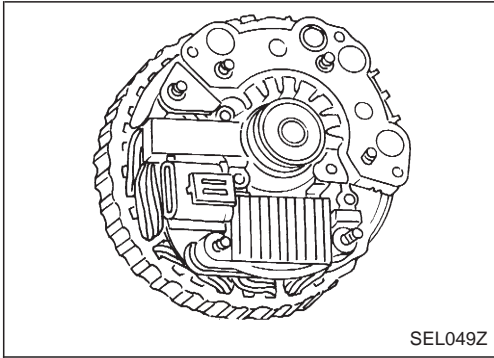

### Service Data and Specifications (SDS)


#### ALTERNATOR

Type	LR160-727C		LR160-728C	
	HITACHI			
Applied model	KA24		TD25	
Nominal rating	V-A	12-60		
Ground polarity	Negative			
Minimum revolution under no-load (When 13.5V is applied)	rpm	Less than 1,000		
Hot output current	A/rpm	More than 17/1,300 More than 48/2,500 More than 57/5,000 (When 13.5V is applied)		
Regulated output voltage	V	14.1 - 14.7		
Minimum length of brush	mm (in)	6.0 (0.236)		
Brush spring pressure	N (g, oz)	1.0 - 3.4 (102 - 350, 3.60 - 12.34)		
Slip ring minimum outer diameter	mm (in)	26.0 (1.024)		
Rotor (Field coil) resistance	Ω	2.58		

# COMBINATION SWITCH

## Check

FOR EUROPE AND LHD MODELS

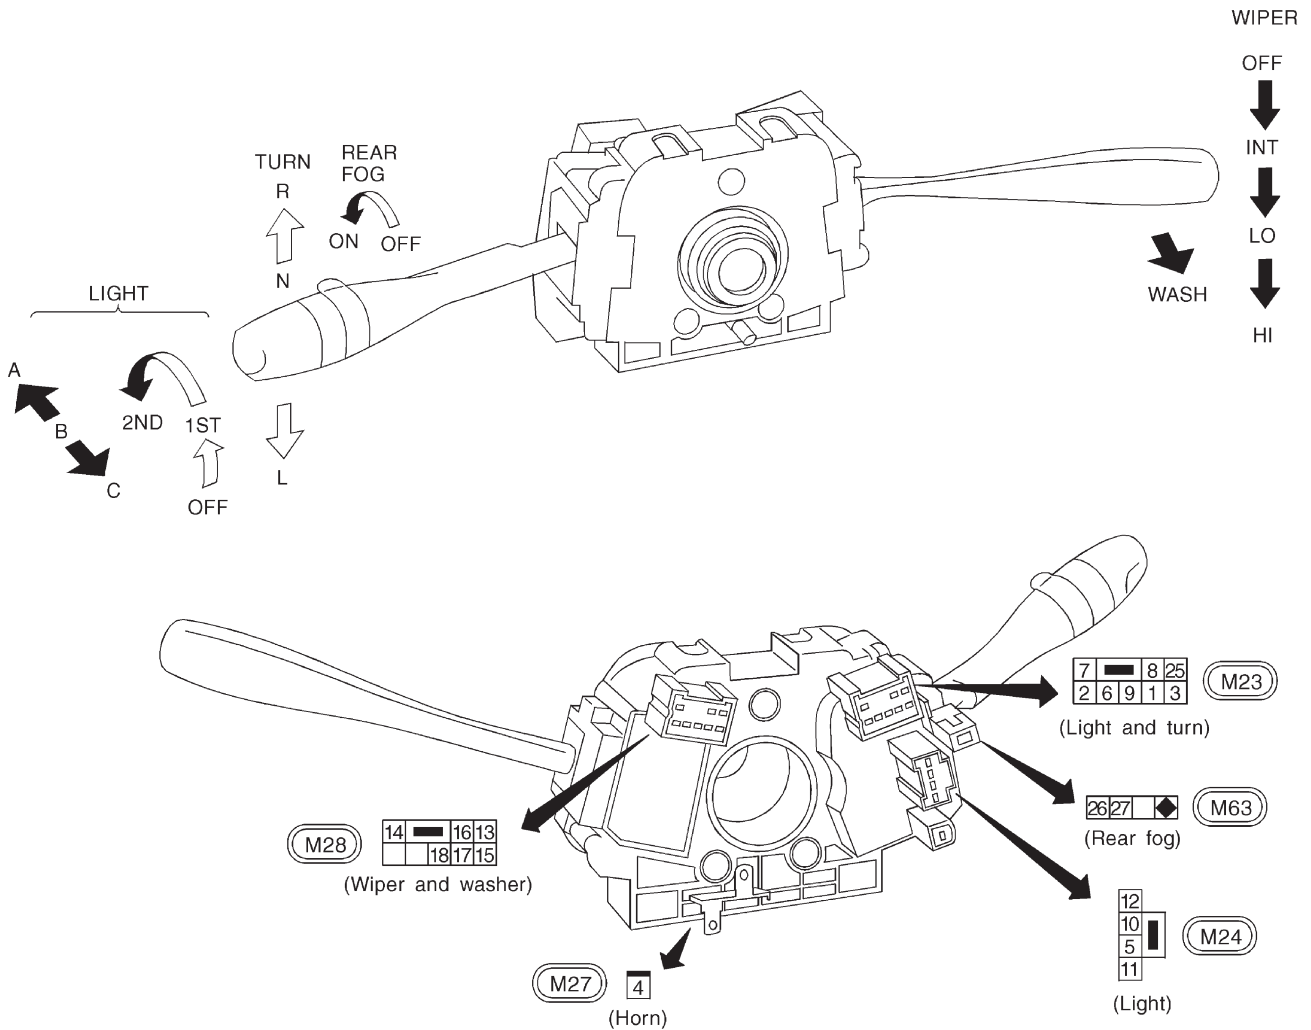

LIGHTING SWITCH

	OFF			1ST			2ND		
	A	B	C	A	B	C	A	B	C
5									
6			○						
7									
8			○						
9									
10									
11									
12									
25									

WIPER AND WASHER SWITCH (With intermittent)

	OFF	INT	LO	HI	WASH
13	○				
14	○	○			
15		○			
16					
17		○	○	○	○
18					○

WIPER AND WASHER SWITCH (Without intermittent)

	OFF	LO	HI	WASH
13	○			
14	○	○		
15				
16				
17		○	○	○
18				○


TURN SIGNAL LAMP SWITCH

	L	N	R
1	○		
2			○
3	○		




REAR FOG LAMP SWITCH

	OFF	ON
26		○
27		○

HORN SWITCH (Without air bag)



## COMBINATION SWITCH

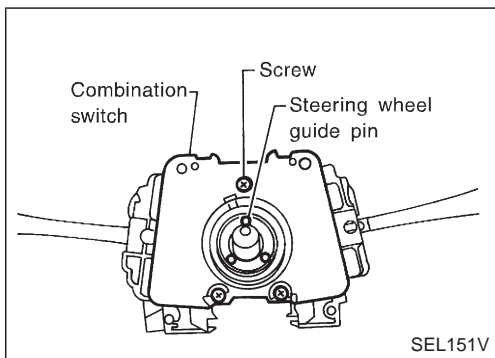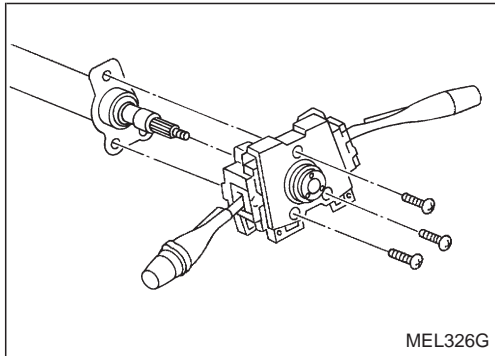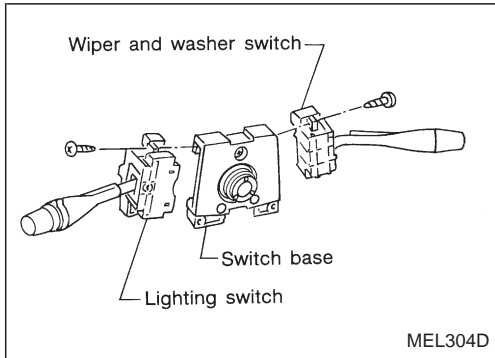

### Replacement


For removal and installation of spiral cable, refer to RS section [“Installation — Air Bag Module and Spiral Cable”, “SUPPLEMENTAL RESTRAINT SYSTEM (SRS)”].

- Each switch can be replaced without removing combination switch base.
- To remove combination switch base, remove base attaching screw.
- Before installing the steering wheel, align the steering wheel guide pins with the screws which secure the combination switch as shown in the left figure.

# HEADLAMP — Conventional Type —

## Wiring Diagram — H/LAMP —/LHD Models

EL-H/LAMP-01

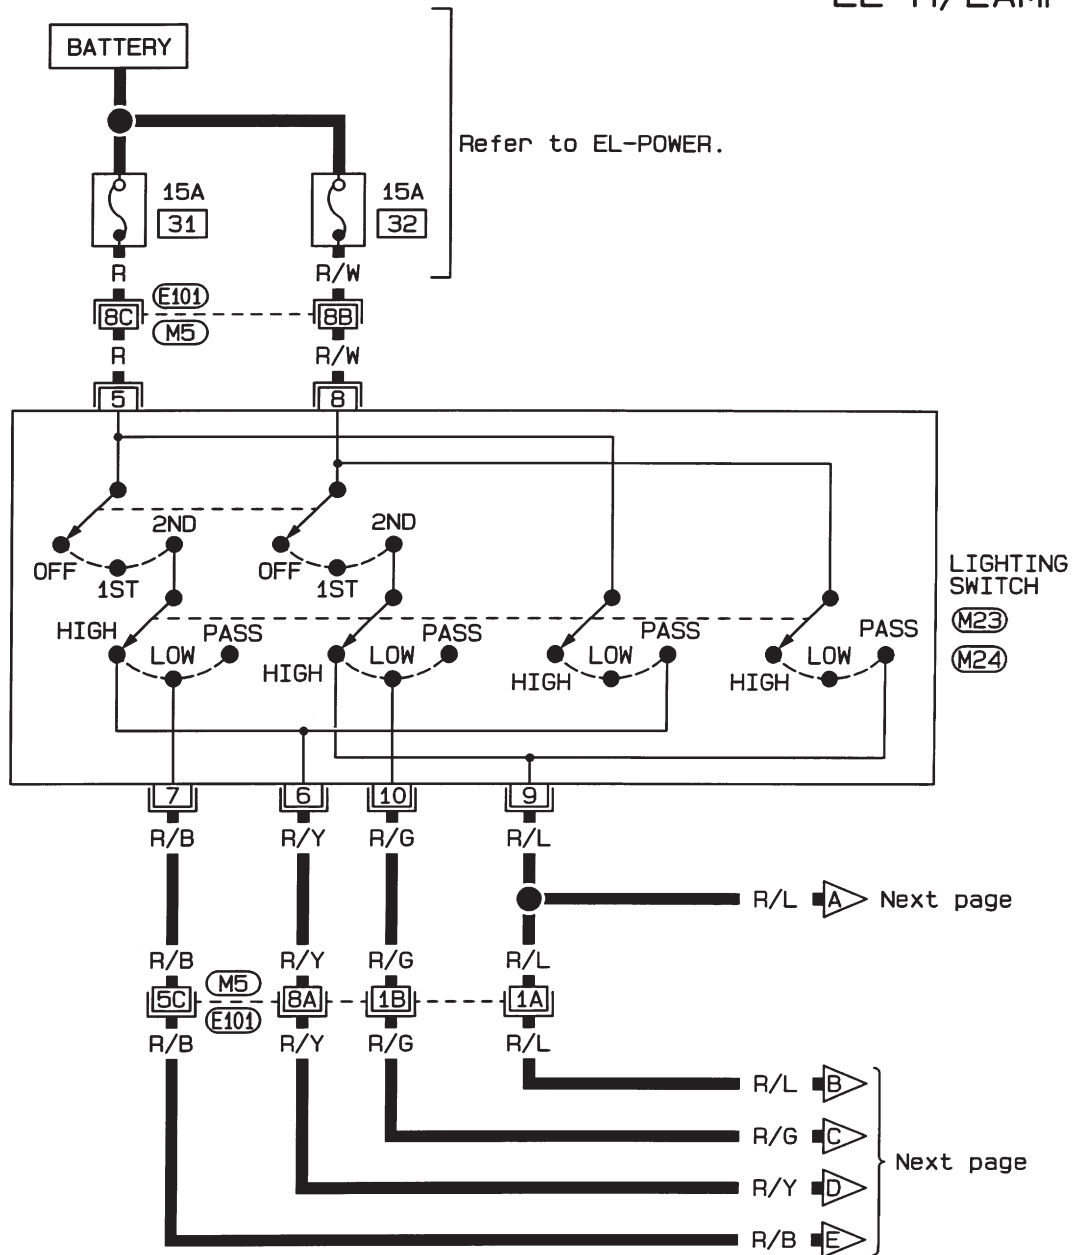

Refer to last page (Foldout page).

(M5), (E101)

# HEADLAMP — Conventional Type —

## Wiring Diagram — H/LAMP —/LHD Models (Cont'd)


EL-H/LAMP-02

◊UM◊ : For the Middle East and Europe

◊XU◊ : Except ◊UM◊

\*1... ◊UM◊ 18, ◊XU◊ 17

\*2... ◊UM◊ 17, ◊XU◊ 16

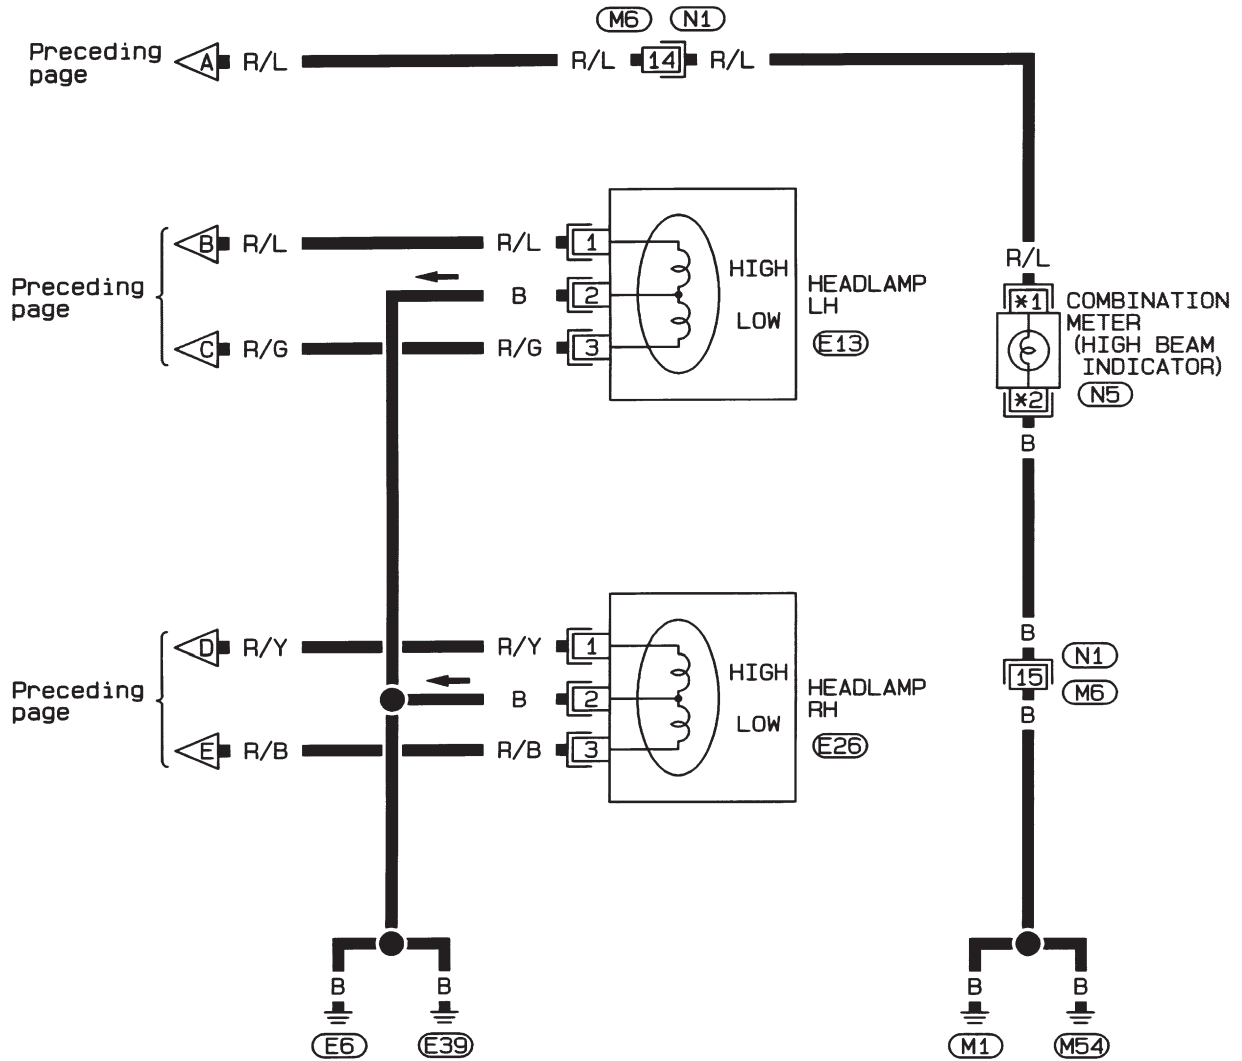

1	2	3	4	5	6	7	8	9	10	N1				
11	12	13	14	15	16	17	18	19	20	21	22	23	24	W

26	25	24	23	22	21	20	N5		
19	18	17	16	15	14	13	12	11	W


3	E13	E26	
1	2	B	B



# HEADLAMP — Conventional Type —

## Wiring Diagram — H/LAMP —/RHD Models

EL-H/LAMP-03

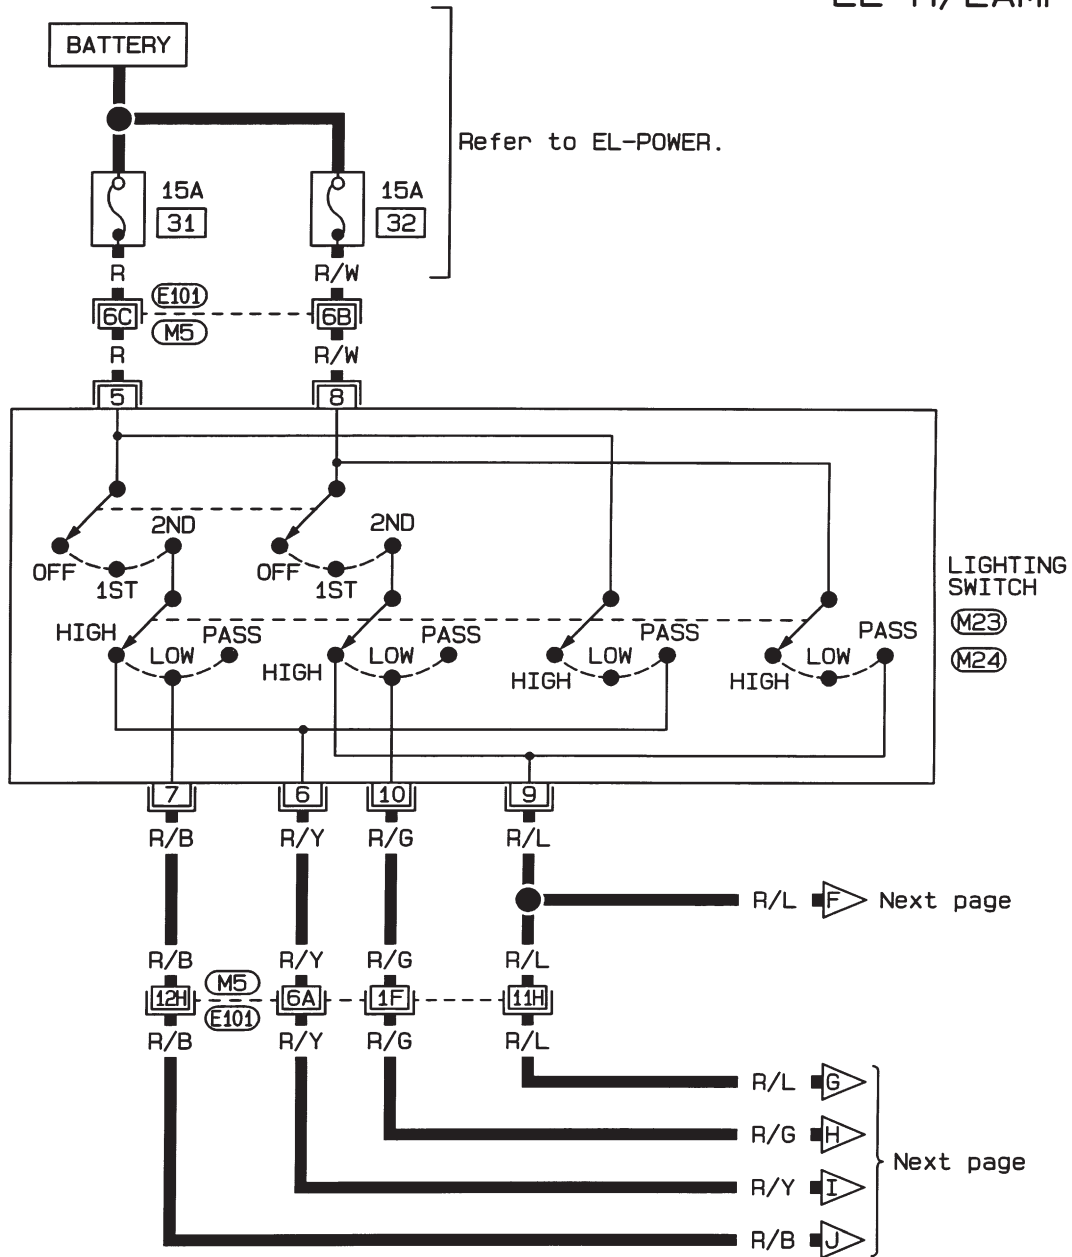


Refer to last page (Foldout page).

M5, E101

# HEADLAMP — Conventional Type —

## Wiring Diagram — H/LAMP —/RHD Models (Cont'd)

EL-H/LAMP-04

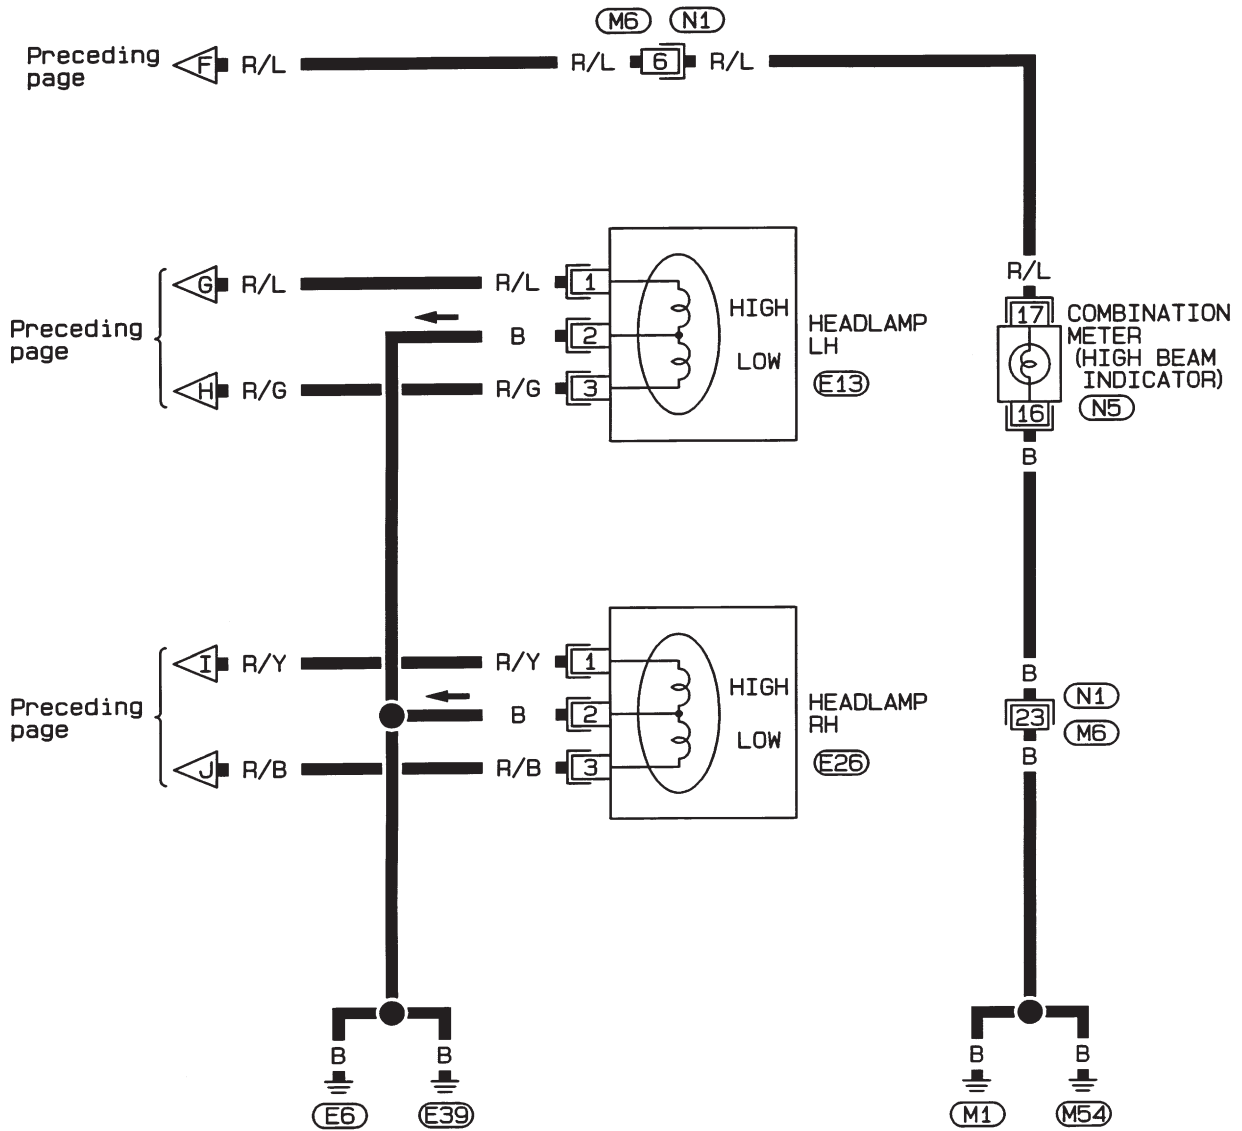


## HEADLAMP — Conventional Type —

### Trouble Diagnoses

Symptom	Possible cause	Repair order
LH headlamps do not operate.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Grounds (E6) and (E39)</li> <li>3. 15A fuse</li> <li>4. Lighting switch</li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check grounds (E6) and (E39).</li> <li>3. Check 15A fuse (No. 32), located in fusible link and fuse box). Verify battery positive voltage is present at terminal (8) of lighting switch.</li> <li>4. Check lighting switch.</li> </ol>
RH headlamps do not operate.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Grounds (E6) and (E39)</li> <li>3. 15A fuse</li> <li>4. Lighting switch</li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check grounds (E6) and (E39).</li> <li>3. Check 15A fuse (No. 31), located in fusible link and fuse box). Verify battery positive voltage is present at terminal (5) of lighting switch.</li> <li>4. Check lighting switch.</li> </ol>
LH high beams do not operate, but LH low beam operates.	<ol style="list-style-type: none"> <li>1. Bulbs</li> <li>2. Open in LH high beams circuit</li> <li>3. Lighting switch</li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulbs.</li> <li>2. Check R/L wire between lighting switch and LH headlamps for an open circuit.</li> <li>3. Check lighting switch.</li> </ol>
LH low beam does not operate, but LH high beam operates.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Open in LH low beam circuit</li> <li>3. Lighting switch</li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check R/G wire between lighting switch and LH headlamp for an open circuit.</li> <li>3. Check lighting switch.</li> </ol>
RH high beams do not operate, but RH low beam operates.	<ol style="list-style-type: none"> <li>1. Bulbs</li> <li>2. Open in RH high beams circuit</li> <li>3. Lighting switch</li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulbs.</li> <li>2. Check R/Y wire between lighting switch and RH headlamps for an open circuit.</li> <li>3. Check lighting switch.</li> </ol>
RH low beam does not operate, but RH high beam operates.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Open in RH low beam circuit</li> <li>3. Lighting switch</li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check R/B wire between lighting switch and RH headlamp for an open circuit.</li> <li>3. Check lighting switch.</li> </ol>
High beam indicator does not work.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Grounds (M1) and (M54)</li> <li>3. Open in high beam circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulb in combination meter.</li> <li>2. Check grounds (M1) and (M54).</li> <li>3. Check R/L wire between lighting switch and combination meter for an open circuit.</li> </ol>

## HEADLAMP — Conventional Type —

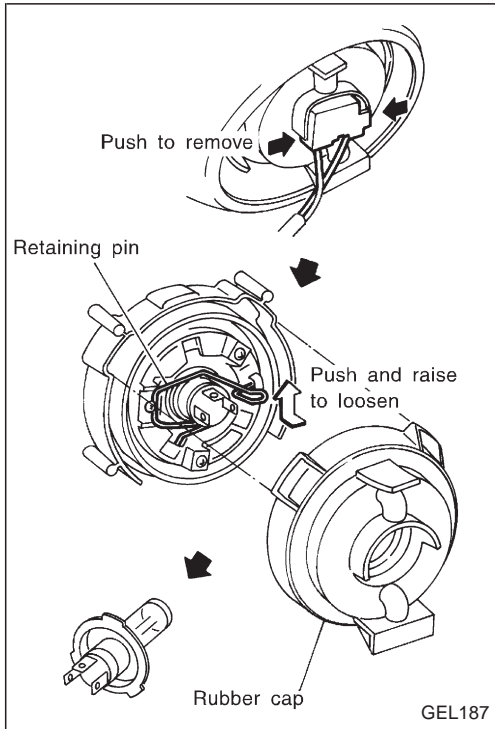

### Bulb Replacement

The headlamp is a semi-sealed beam type which uses a replaceable halogen bulb. The bulb can be replaced from the engine compartment side without removing the headlamp body.

- **Grasp only the plastic base when handling the bulb. Never touch the glass envelope.**

1. Disconnect the battery cable.
2. Disconnect the harness connector from the back side of the bulb.
3. Pull off the rubber cap.
4. Push and raise retaining pin to loosen it.
5. Remove the headlamp bulb carefully. Do not shake or rotate the bulb when removing it.
6. Install in the reverse order of removal.

#### CAUTION:

**Do not leave headlamp reflector without bulb for a long period of time. Dust, moisture, smoke, etc. entering headlamp body may affect the performance of the headlamp. Remove headlamp bulb from the headlamp reflector just before a replacement bulb is installed.**


### Aiming Adjustment

When performing headlamp aiming adjustment, use an aiming machine, aiming wall screen or headlamp tester. Aimers should be in good repair, calibrated and operated in accordance with respective operation manuals.

If any aimer is not available, aiming adjustment can be done as follows:

**For details, refer to the regulations in your own country.**


- a. **Keep all tires inflated to correct pressures.**
- b. **Place vehicle and tester on one and same flat surface.**
- c. **See that there is no-load in vehicle (coolant, engine oil filled up to correct level and full fuel tank) other than the driver (or equivalent weight placed in driver's position).**

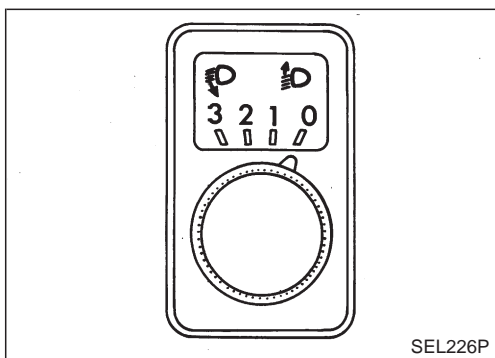

#### CAUTION:


**Be sure aiming switch is set to "0" when performing aiming adjustment on vehicles equipped with headlamp aiming control.**

## HEADLAMP — Conventional Type —

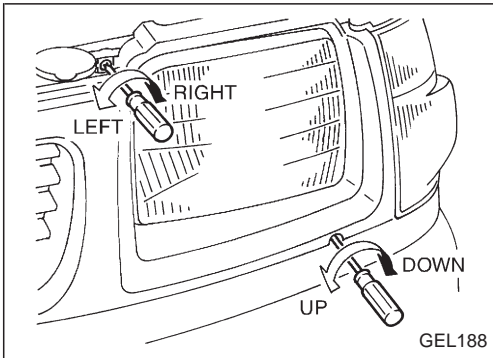

### Low Beam

1. Turn headlamp low beam on.
  2. Use adjusting screws to perform aiming adjustment.
- **First tighten the adjusting screw all the way and then make adjustment by loosening the screw.**

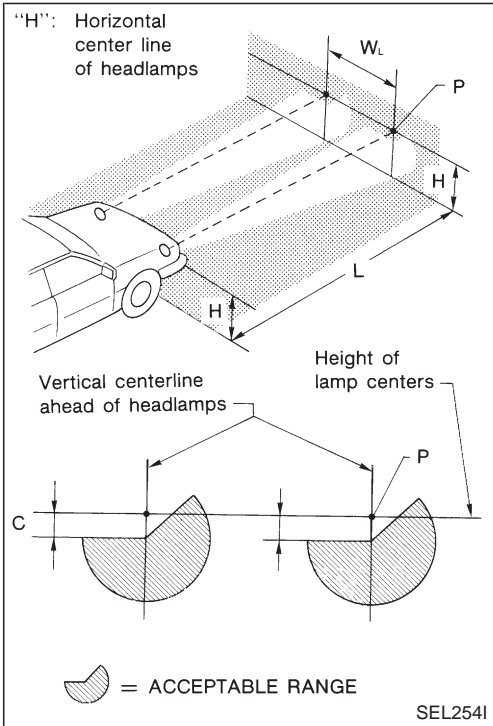

- **Adjust headlamps so that main axis of light is parallel to center line of body and is aligned with point P shown in illustration.**
- **Figure to the left shows headlamp aiming pattern for driving on right side of road; for driving on left side of road, aiming pattern is reversed.**
- **Dotted lines in illustration show center of headlamp.**

- "H": Horizontal center line of headlamps
- "W<sub>L</sub>": Distance between each headlamp center
- "L": 5,000 mm (196.85 in)
- "C": 65 mm (2.56 in)

# HEADLAMP — Daytime Light System —

## System Description

### OPERATION

Headlamp system on vehicles for North Europe contains a daytime light system. The unit operates to illuminate headlamps low beam, parking, tail, license lamps and illuminations automatically in the following conditions.

- The engine is running with lighting switch in OFF position.


When the any of following conditions exists, the daytime light operation will be canceled.

- Ignition switch is in any position other than ON
- Engine is stopped
- Lighting switch is turned to 1st or 2nd position.

If the daytime light system is canceled, lighting switch operations are the same as for conventional light system.

### DAYTIME LIGHT IS OPERATING

(With engine running and lighting switch in OFF position)

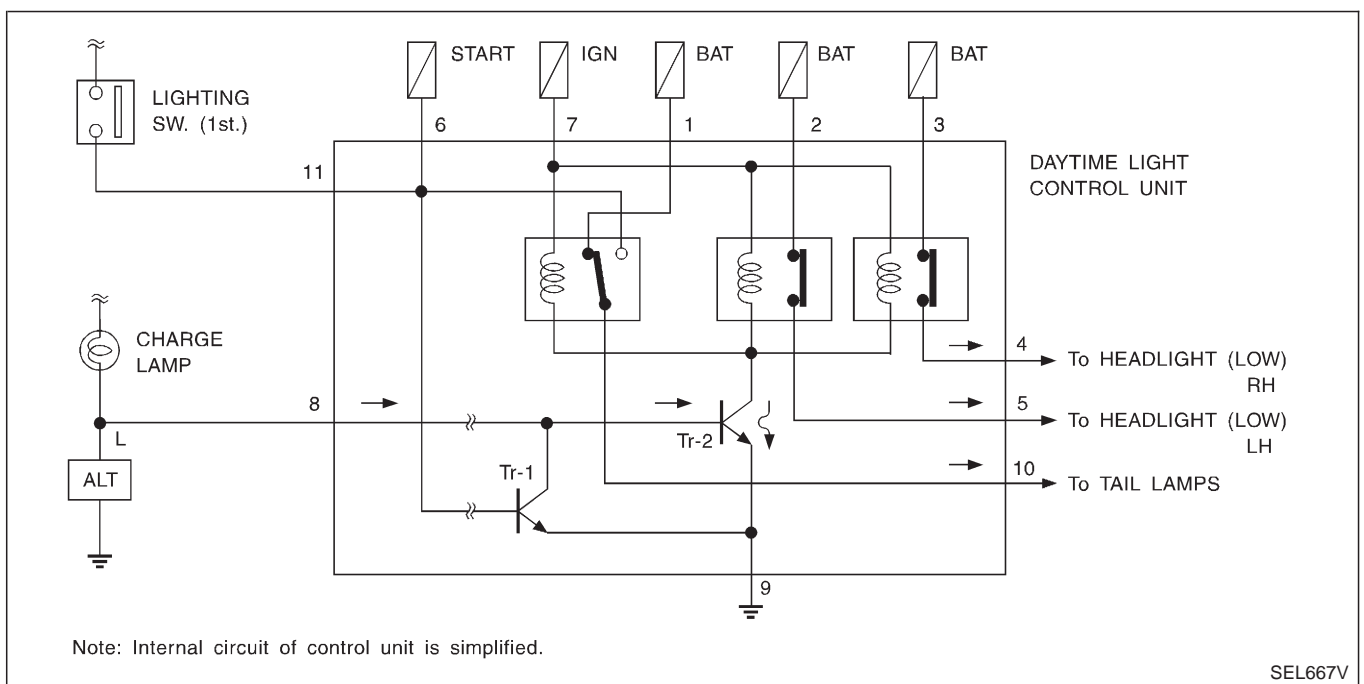

With engine running, power is supplied


- from alternator terminal L
- through daytime light control unit terminal ⑧
- to base of transistor-2 in the daytime light control unit.

The transistor-2 supplies ground path to all relays. Then the relays energize to illuminate lamps.

## HEADLAMP — Daytime Light System — System Description (Cont'd)

### DAYTIME LIGHT IS CANCELED

(Lighting switch in 1st or 2nd position or ignition switch in START position)

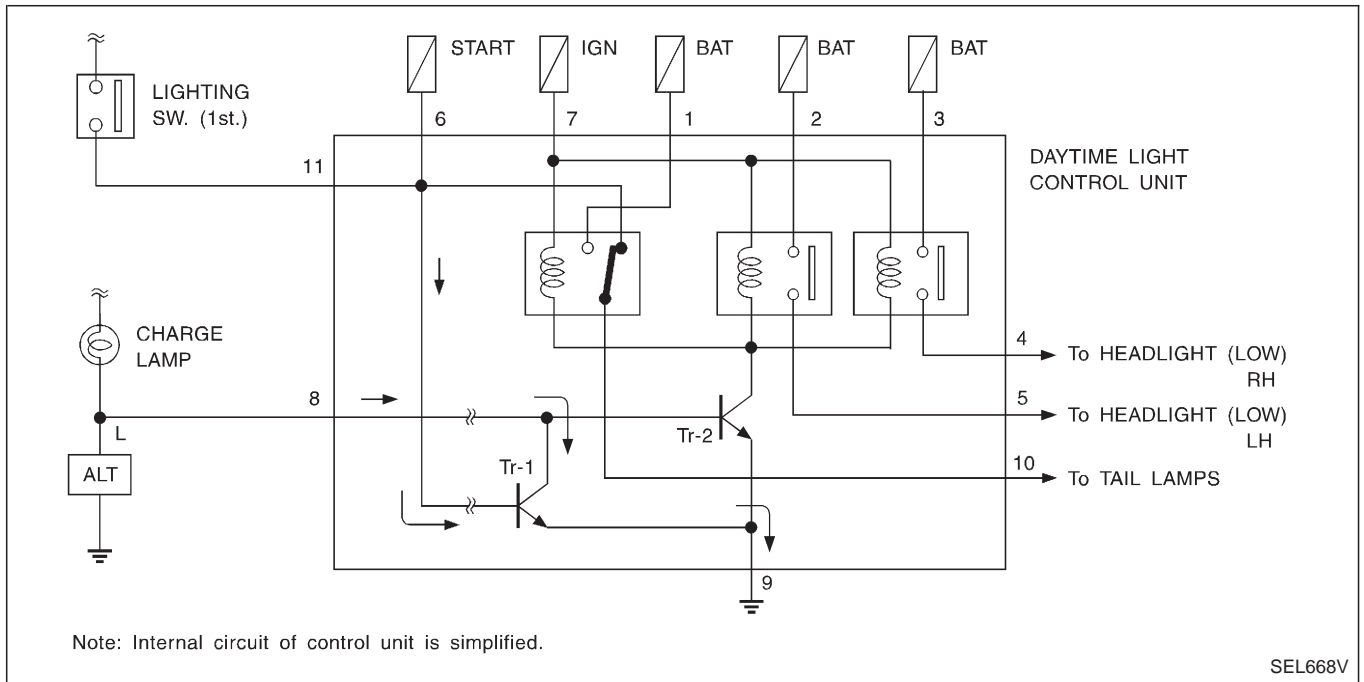

- Ignition switch is in START position
- Lighting switch is in 1st or 2nd position.


When one of the above conditions exists, power is supplied

- to base of the transistor-1 in daytime light control unit
- through daytime light control unit terminal ⑪ or ⑥.

And then, power supply path to the base transistor-2 is interrupted to cancel daytime light operation.

# HEADLAMP — Daytime Light System —

## Schematic



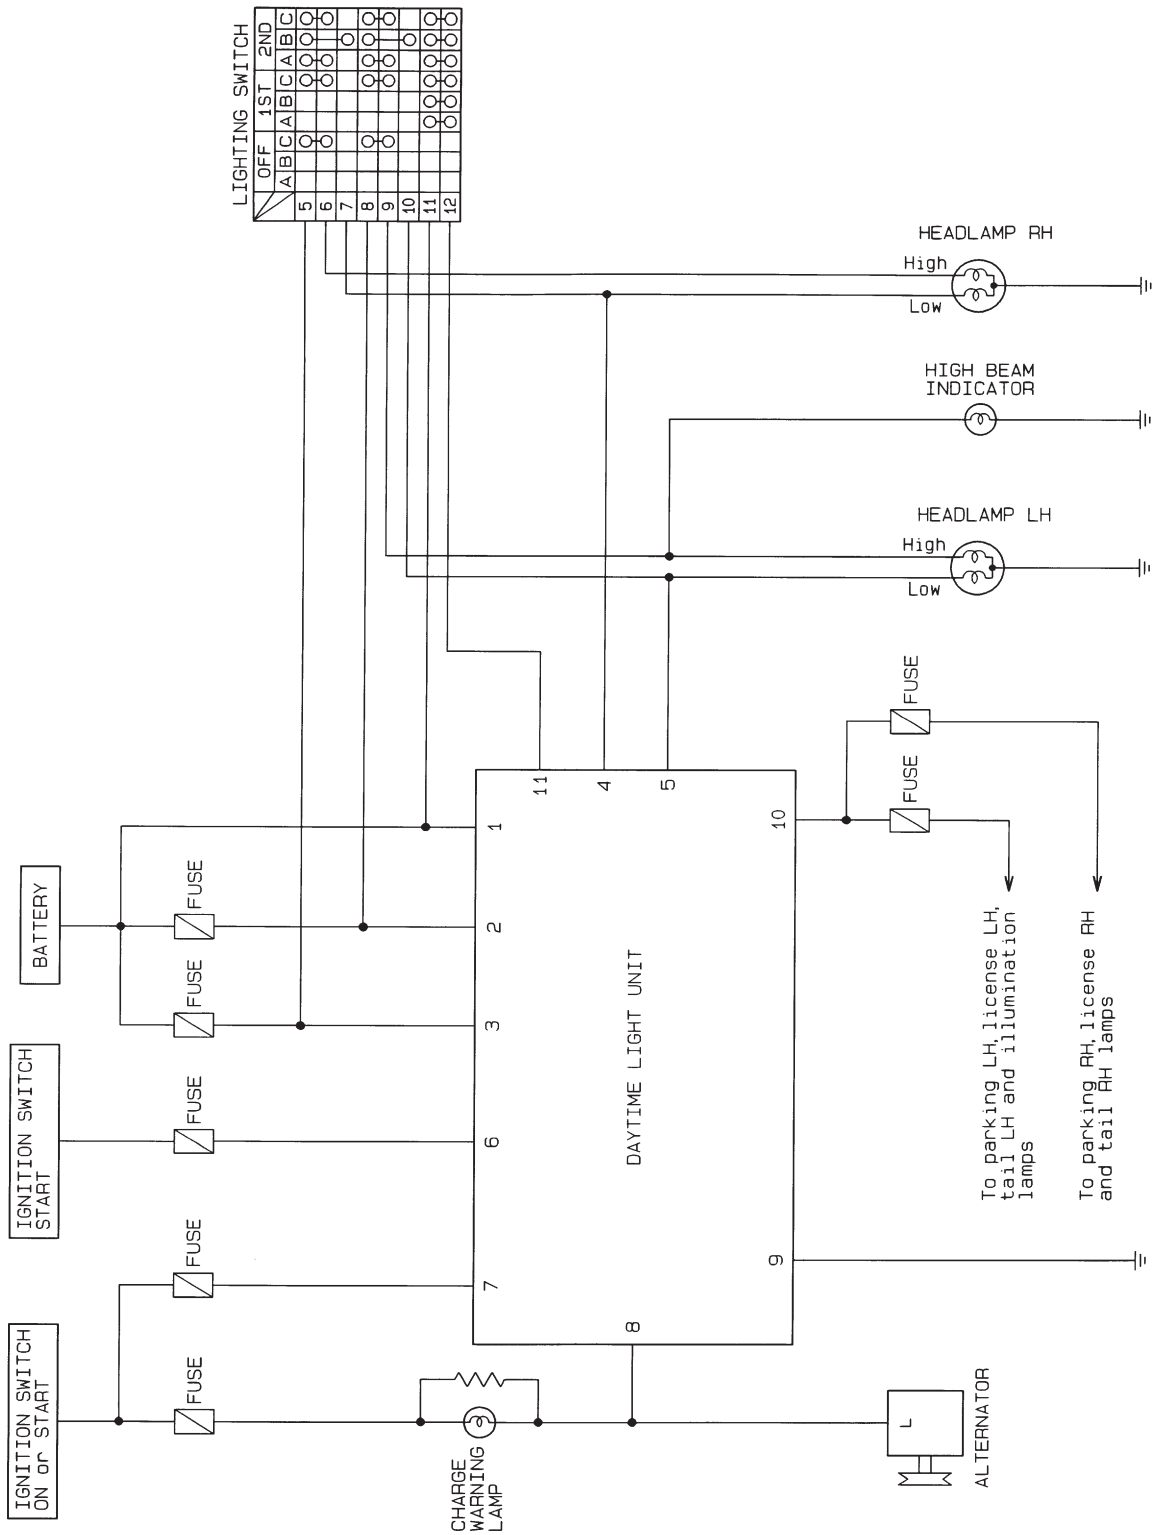




# HEADLAMP — Daytime Light System —

## Wiring Diagram — DTRL —

EL-DTRL-01

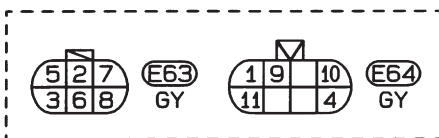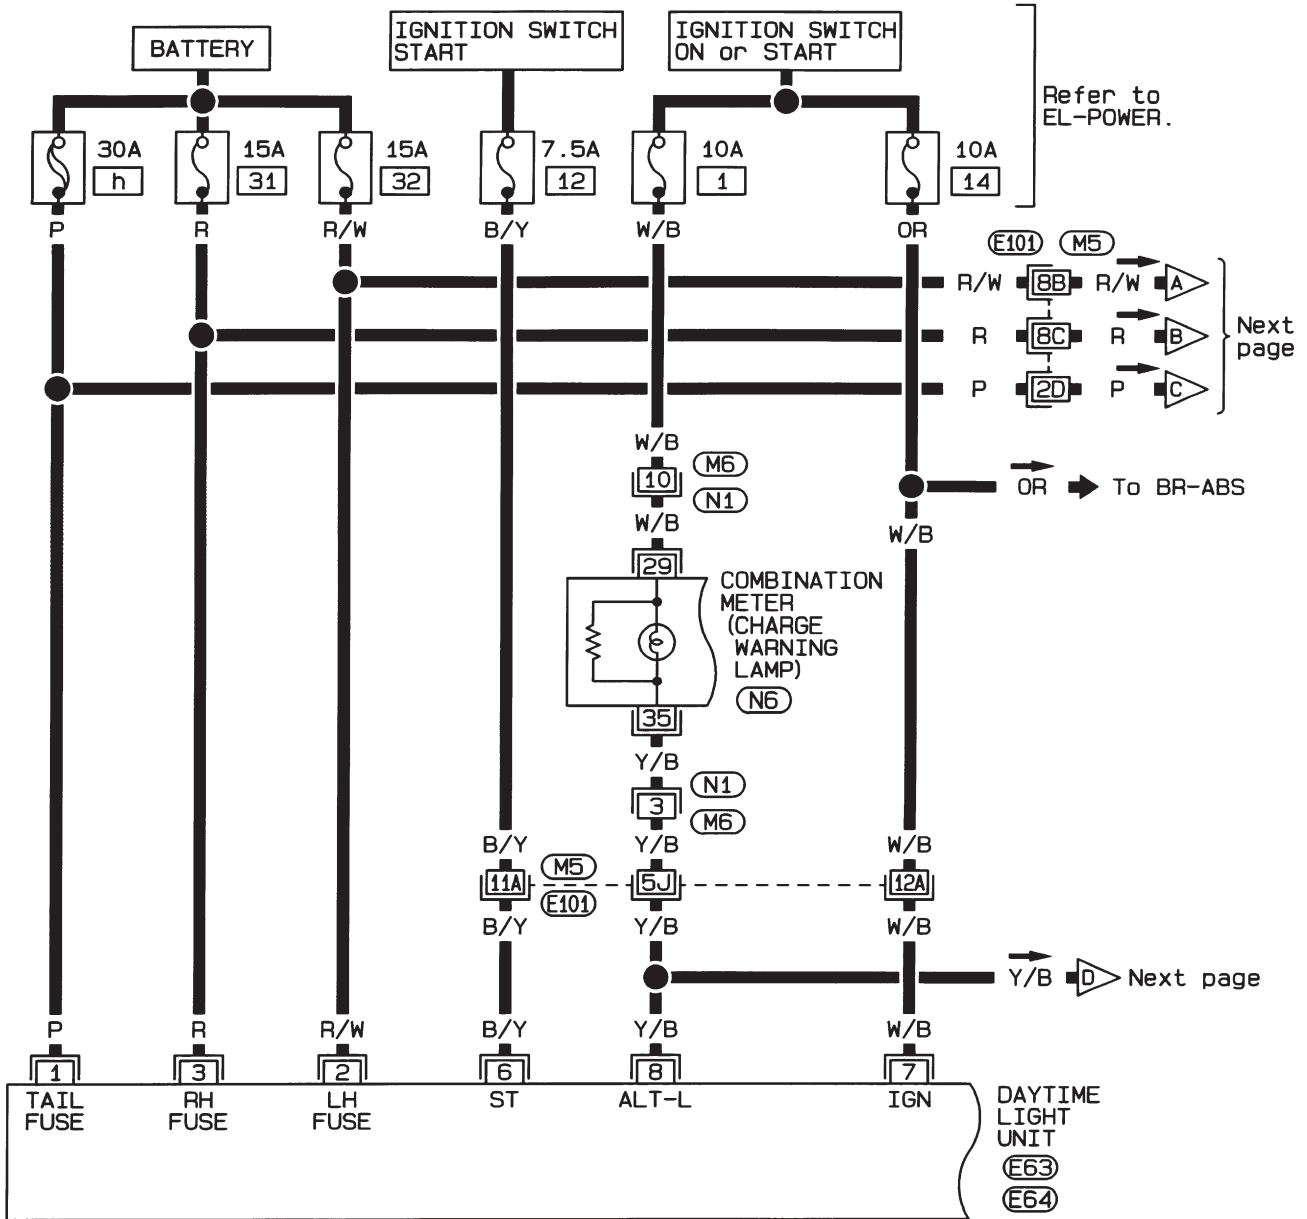





Refer to last page (Foldout page).

(M5), (E101)

# HEADLAMP — Daytime Light System —

## Wiring Diagram — DTRL — (Cont'd)

EL-DTRL-02

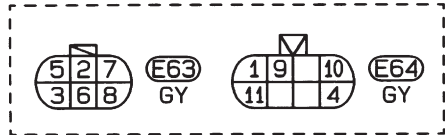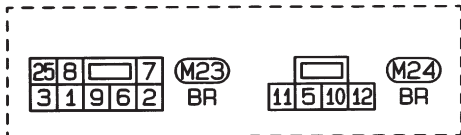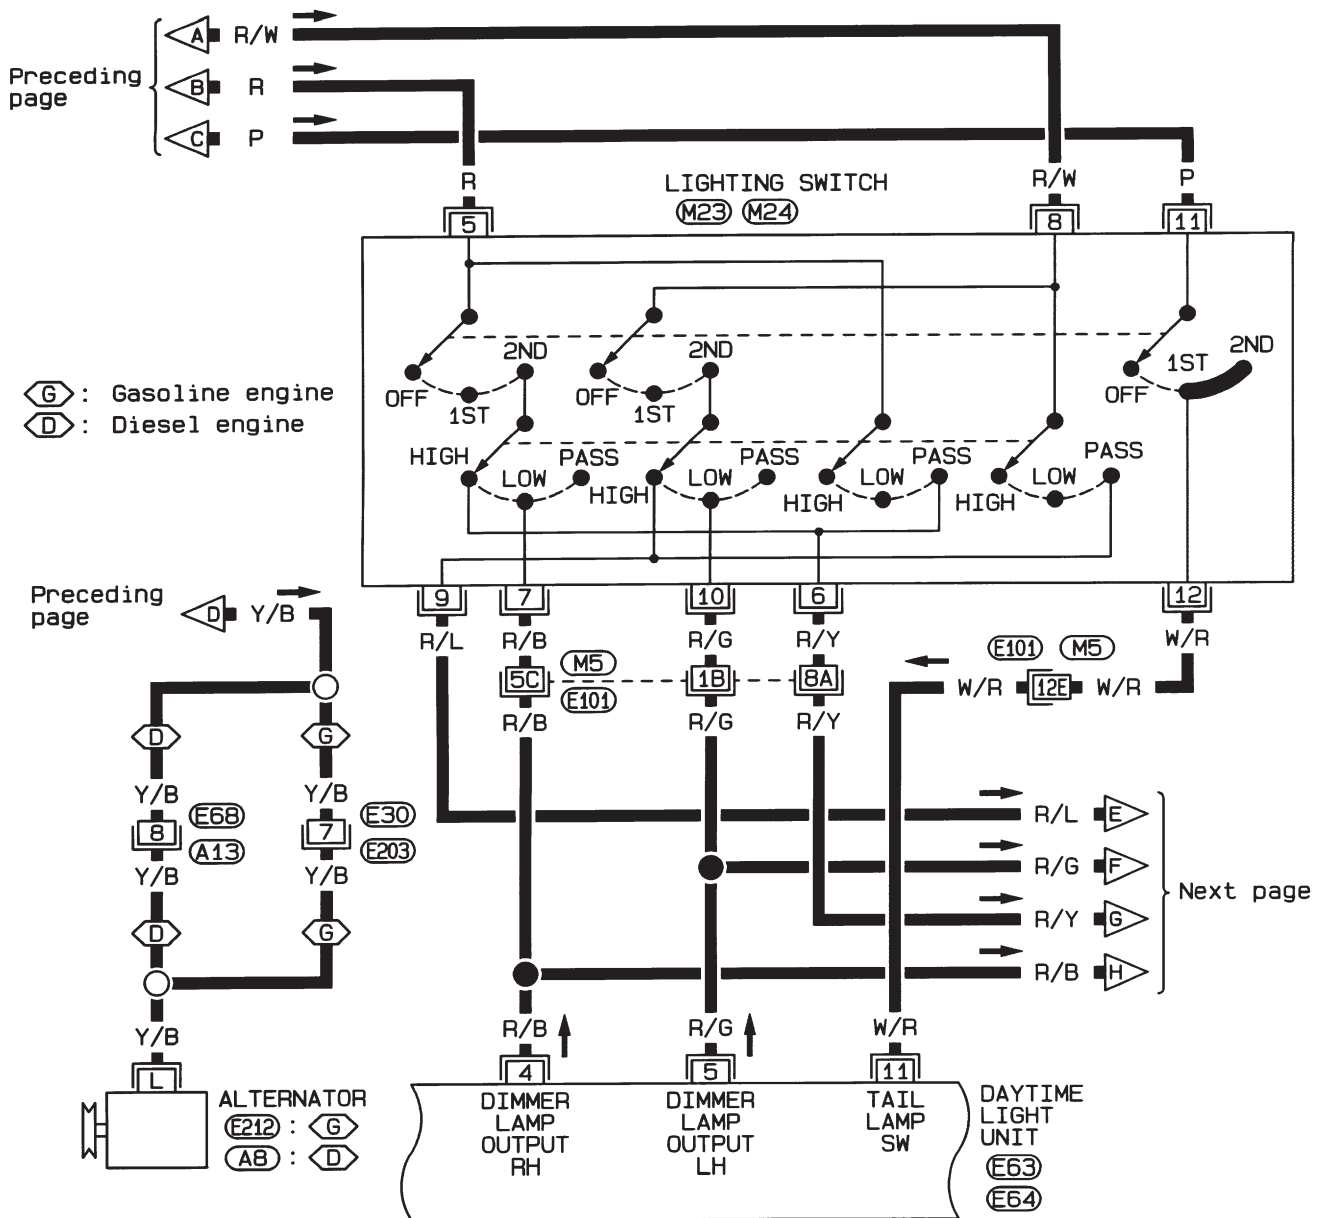


Refer to last page (Foldout page).

(M5), (E101)

# HEADLAMP — Daytime Light System —

## Wiring Diagram — DTRL — (Cont'd)

EL-DTRL-03

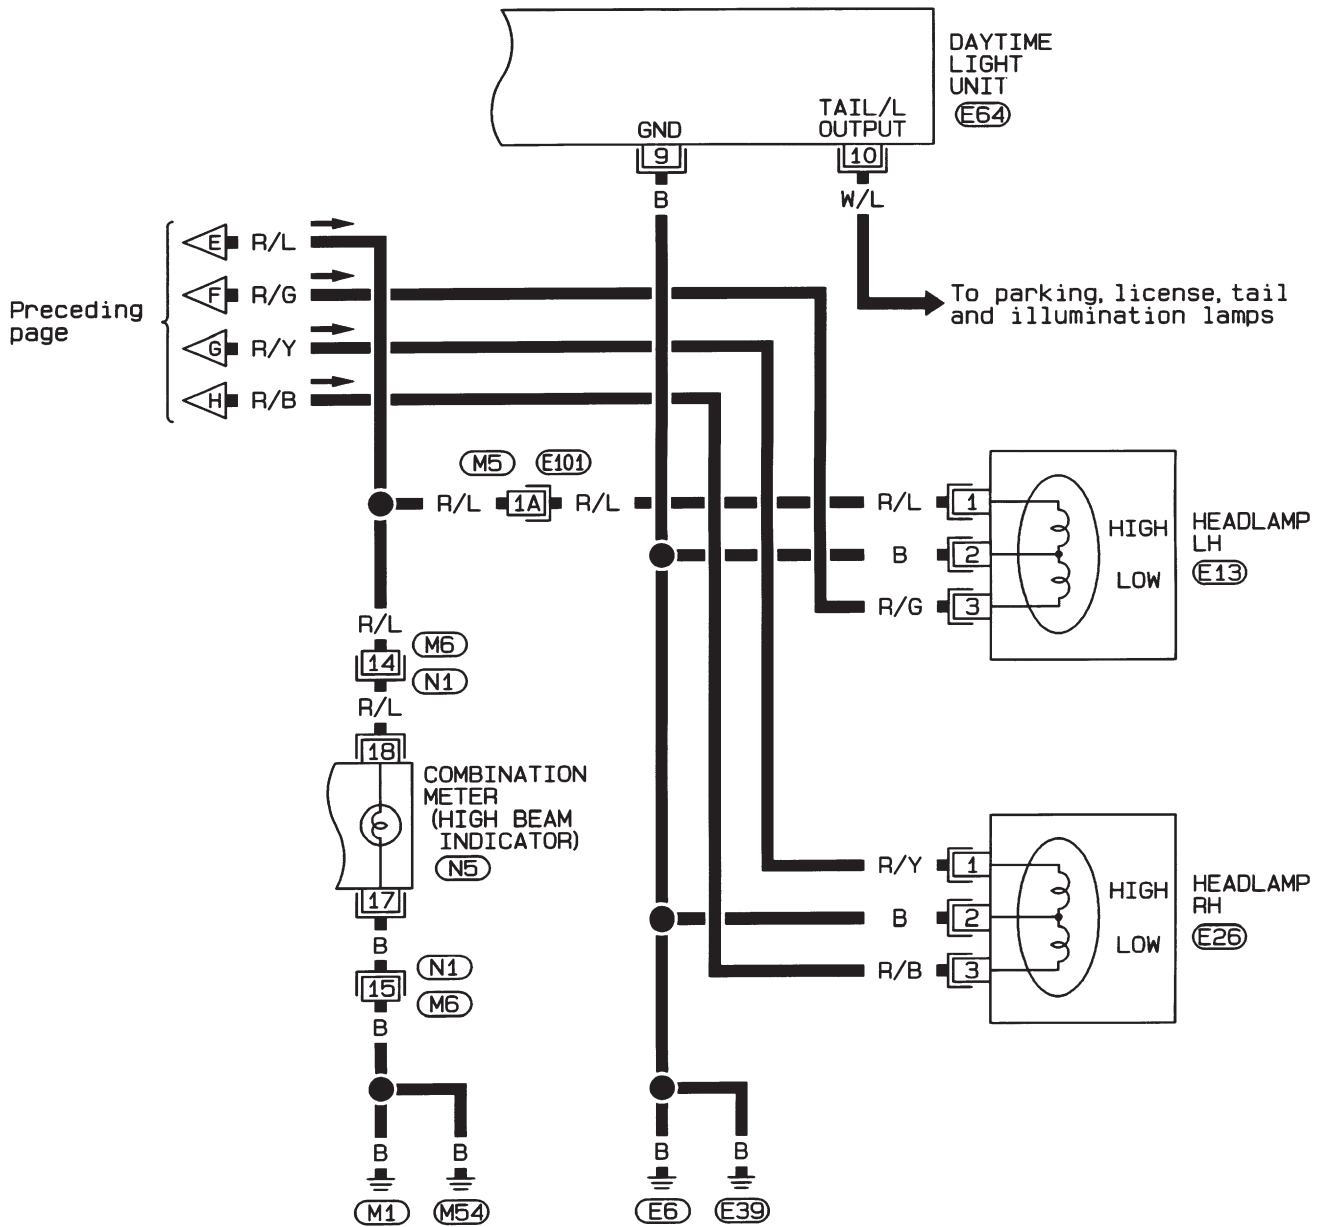

Refer to last page (Foldout page).

(M5), (E101)

# HEADLAMP — Daytime Light System —

## Trouble Diagnoses

**DAYTIME LIGHT CONTROL UNIT INSPECTION TABLE**

Terminal No.	Connections	INPUT (I)/ OUTPUT (O)	Operated condition		Voltage (V) (Approximate values)
1	Power source for illumination & tail lamp	—	—		12
2	Power source for headlamp LH	—	—		12
3	Power source for headlamp RH	—	—		12
4	Headlamp RH	O	ON (daytime light operating*)		12
			OFF		0
5	Headlamp LH	O	ON (daytime light operating*)		12
			OFF		0
6	Start signal	I	Ignition switch	START	12
				ON, ACC or OFF	0
7	Power source	—	Ignition switch	ON or START	12
				ACC or OFF	0
8	Alternator "L" terminal	I	Engine	Running	12
				Stopped	0
9	Ground	—	—		—
10	Illumination & tail lamp	O	ON (daytime light operating*)		12
			OFF		0
11	Lighting switch	I	1ST-2ND position		12
			OFF		0

\*: Daytime light operating: Lighting switch in "OFF" position with engine running.

### Bulb Replacement

Refer to "HEADLAMP" (EL-49).

### Aiming Adjustment

Refer to "HEADLAMP" (EL-49).


# HEADLAMP — Dim-dip Lamp System —

## System Description

Headlamp system on RHD vehicles for Europe contains a dim-dip lamp system. The unit operates both headlamp low beams at half illumination in the following conditions.

- Lighting switch is turned to 1st, with ignition switch in ON position. In other conditions, the dim-dip lamp is canceled and lighting switch operations are the same as in conventional light systems.

## Schematic

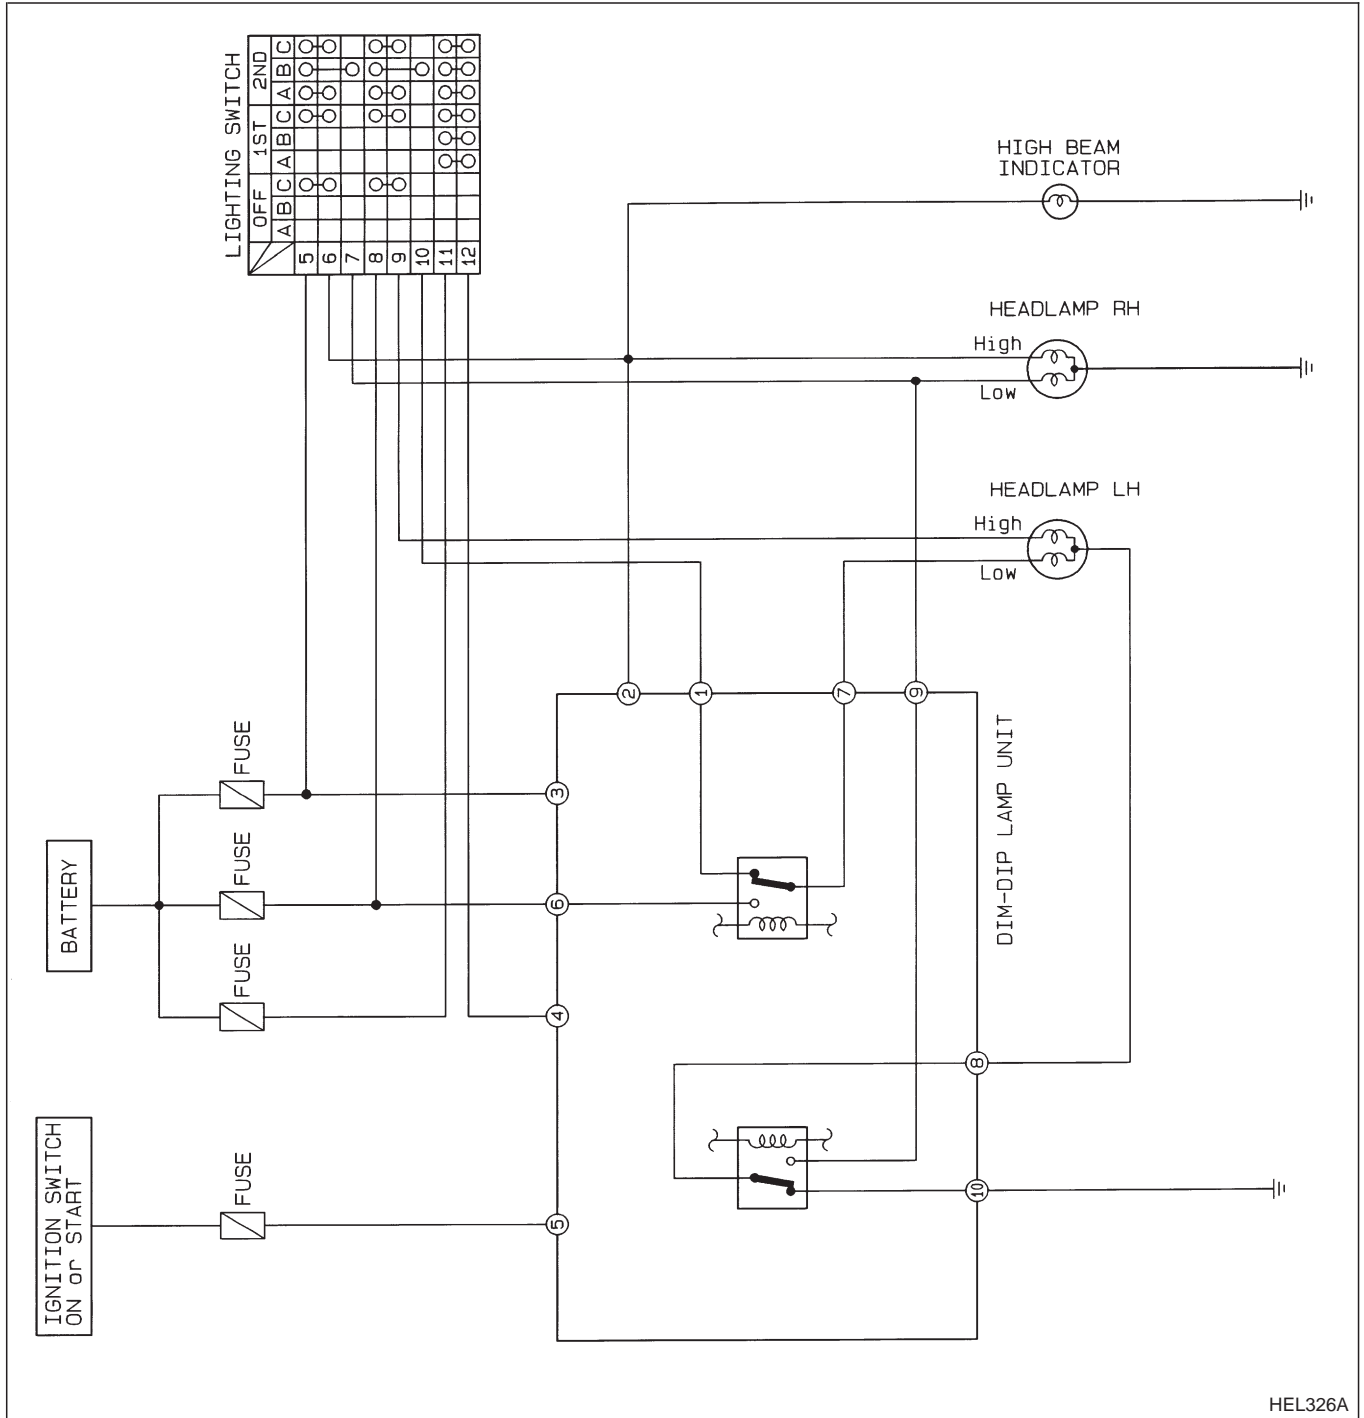


HEL326A

# HEADLAMP — Dim-dip Lamp System —

## Wiring Diagram — DIMDIP —

EL-DIMDIP-01

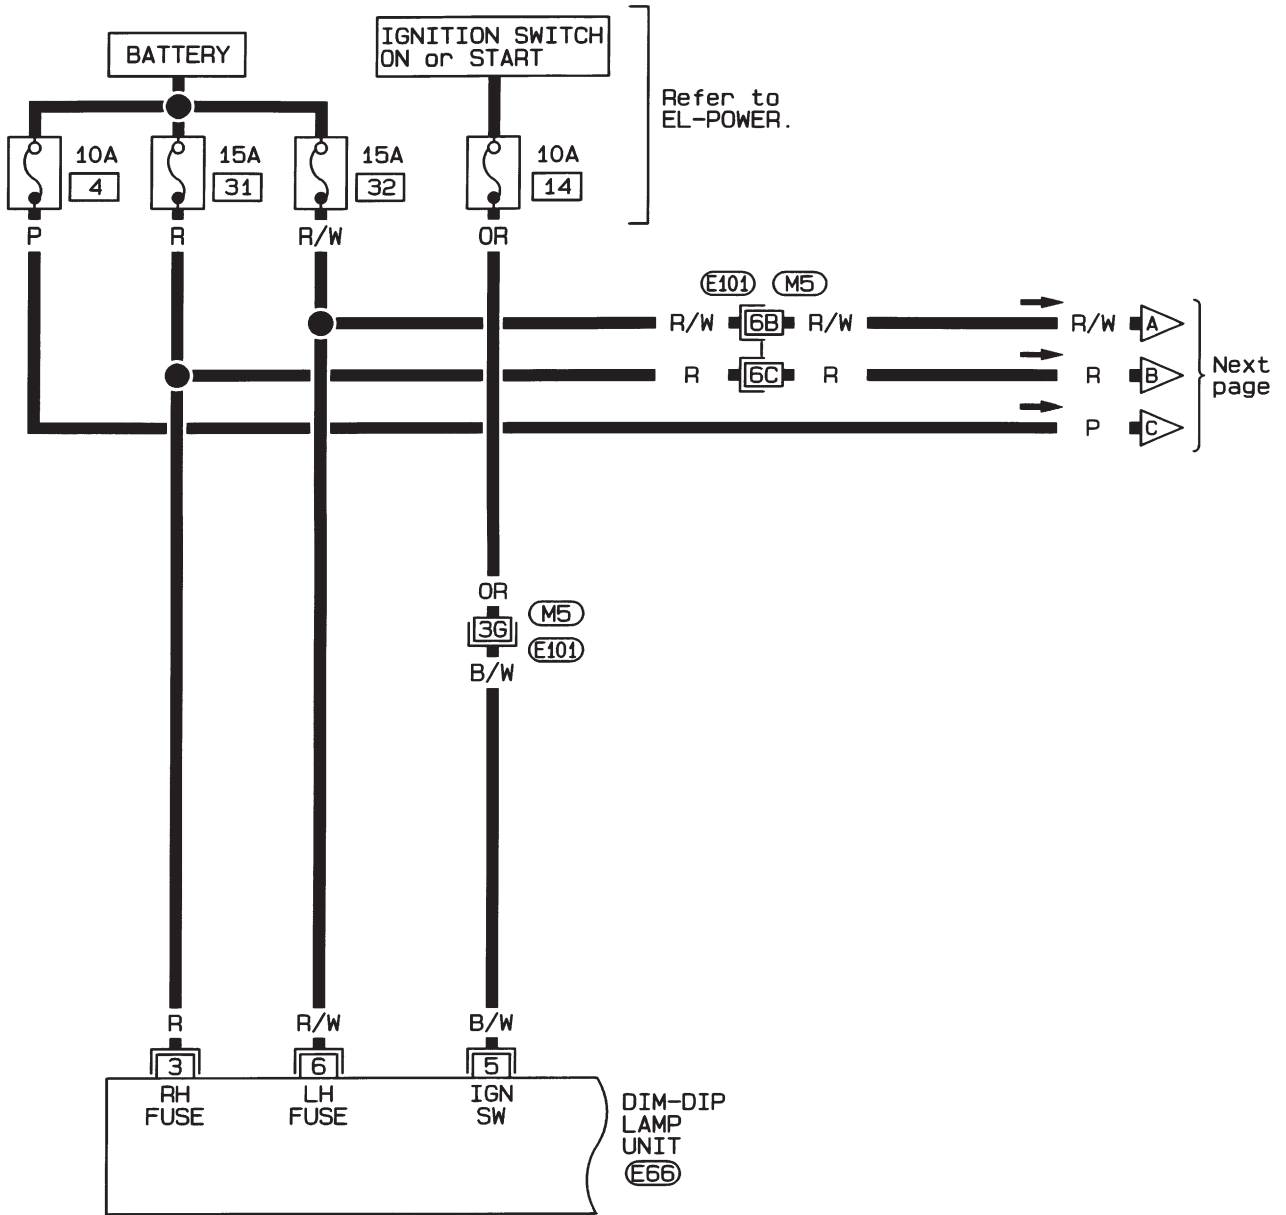

8	7	6	(E66)
2	5	3	GY




Refer to last page (Foldout page).

(M5), (E101)

# HEADLAMP — Dim-dip Lamp System —

## Wiring Diagram — DIMDIP — (Cont'd)

EL-DIMDIP-02

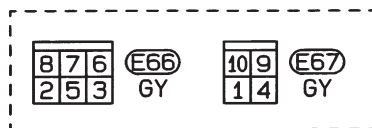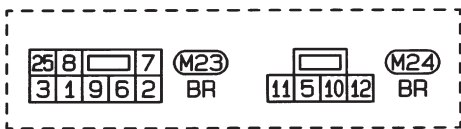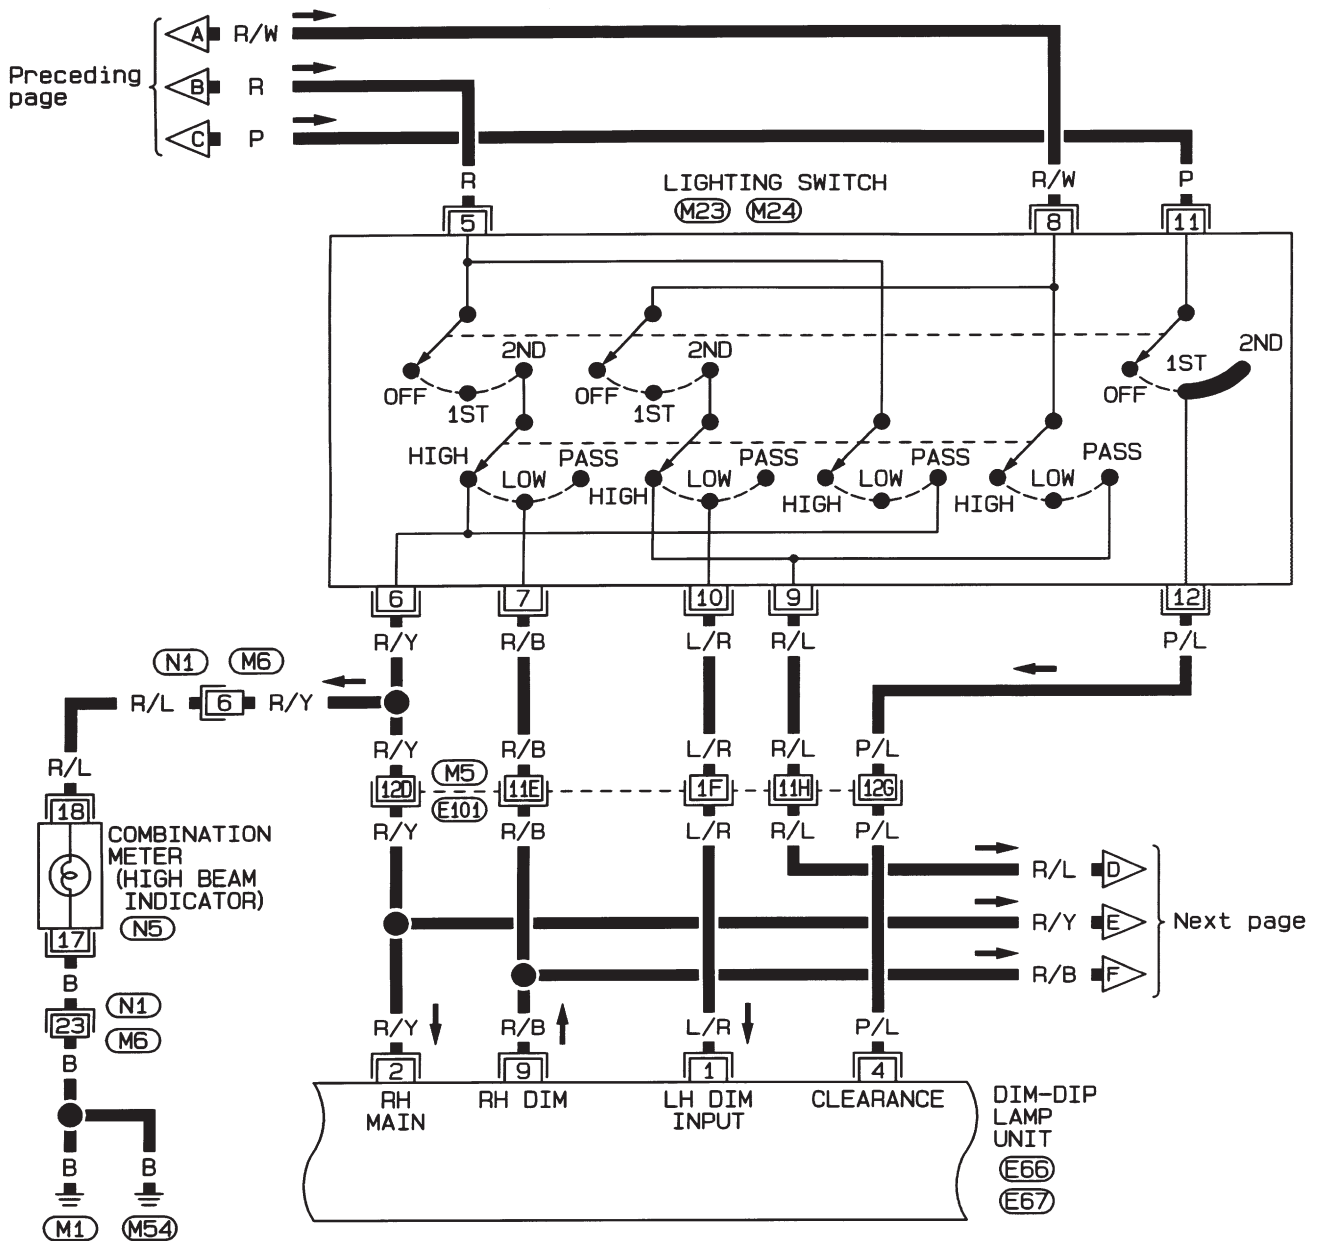



Refer to last page (Foldout page).

(M5), (E101)

# HEADLAMP — Dim-dip Lamp System —

## Wiring Diagram — DIMDIP — (Cont'd)

EL-DIMDIP-03

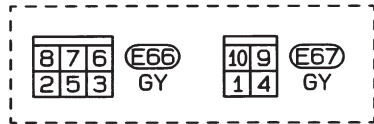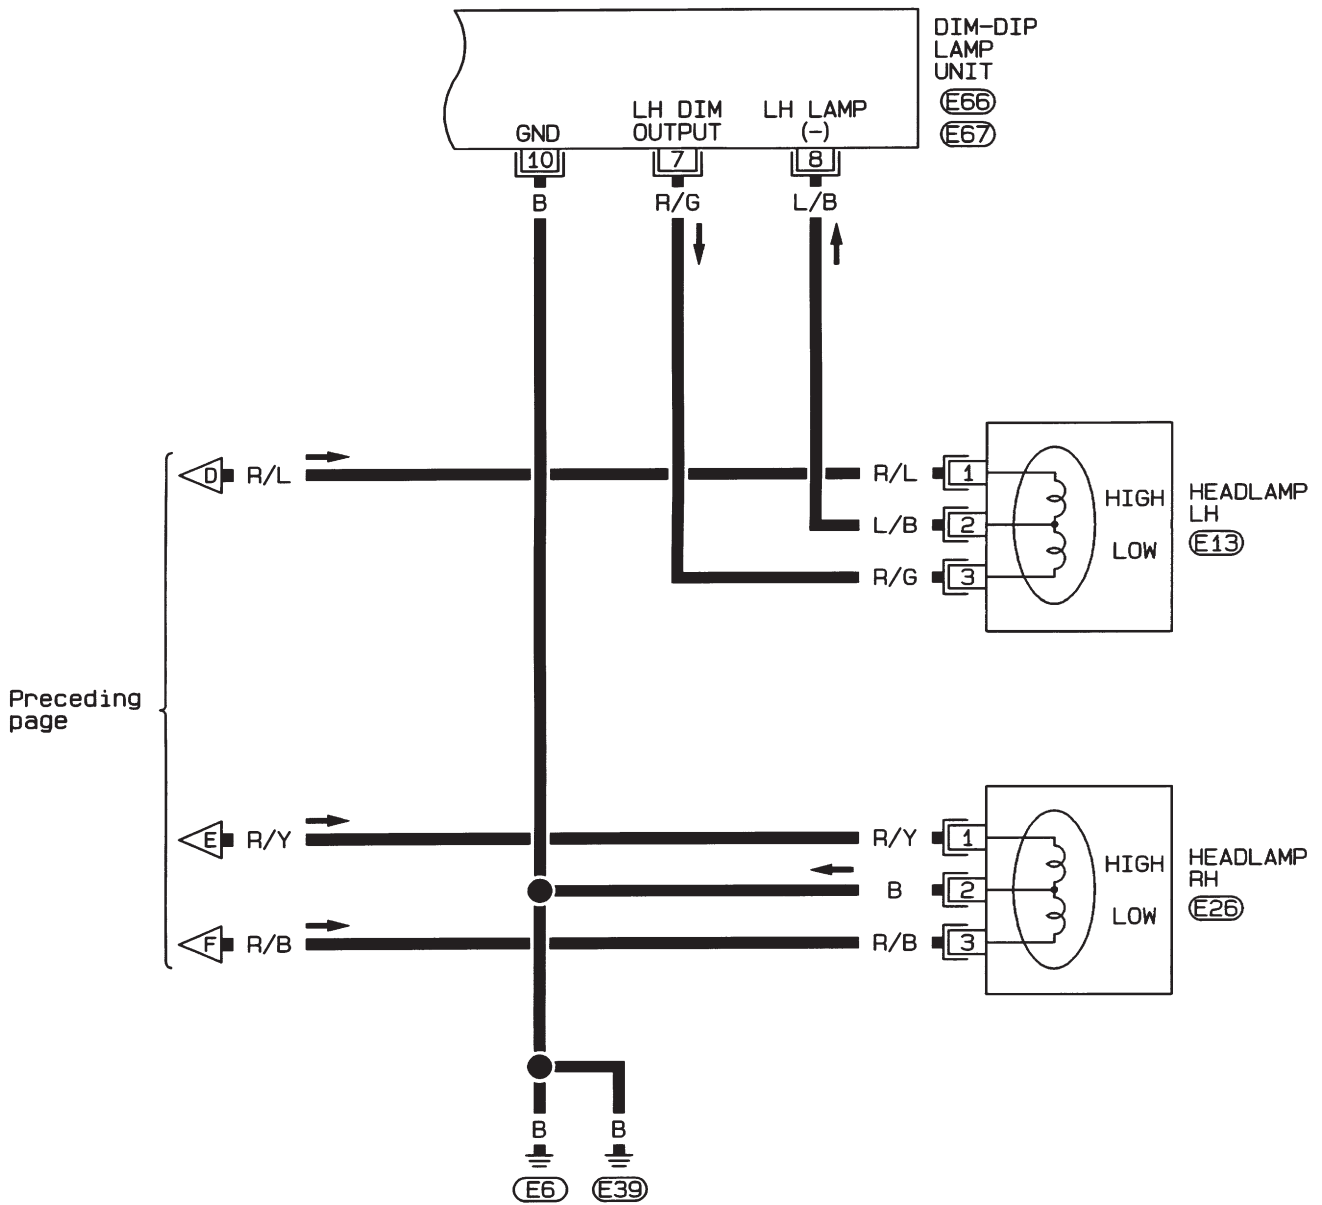



# HEADLAMP — Dim-dip Lamp System —

## Trouble Diagnoses

### DIM-DIP LAMP CONTROL UNIT INSPECTION TABLE

Terminal No.	Connections	INPUT (I)/ OUTPUT (O)	Operated condition		Voltage (V) (Approximate values)	
1	Lighting switch (Low beam)	I	Lighting switch	Low beam ON	12	
				Other	0	
2	Lighting switch (High beam)	I	Lighting switch	High beam ON	12	
				Other	0	
3	Power source	—	—		12	
4	Lighting switch	I	1ST-2ND position		12	
			OFF		0	
5	Ignition on signal	I	Ignition switch	ON or START	12	
				ACC or OFF	0	
6	Power source for head- lamp LH	—	—		12	
7	Headlamp LH	O	Lighting switch	Low beam ON	12	
				Other	Dim-dip lamp operating	12
					Dim-dip lamp off	0
8	LH headlamp ground	—	ON (dim-dip lamp operating*)		6	
			OFF		0	
9	Headlamp RH	O	Lighting switch	High beam ON	12	
				Other	Dim-dip lamp operating	6
					Dim-dip lamp off	0
10	Ground	—	—		—	

\*: Dim-dip lamp operating: Lighting switch in "1st." position with ignition switch ON.


### Bulb Replacement

Refer to "HEADLAMP" (EL-49).

### Aiming Adjustment

Refer to "HEADLAMP" (EL-49).

# HEADLAMP — Headlamp Aiming Control —

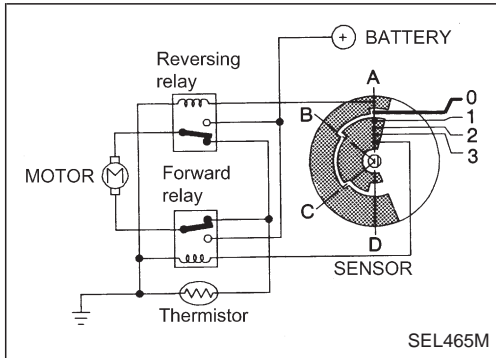


## System Description

### CIRCUIT OPERATION

#### [Example]


#### Aiming switch “0”

- When the aiming switch is set to “0”, the motor will not start. This is because the power terminals are positioned at the nonconductive section of the sensor’s rotary unit.

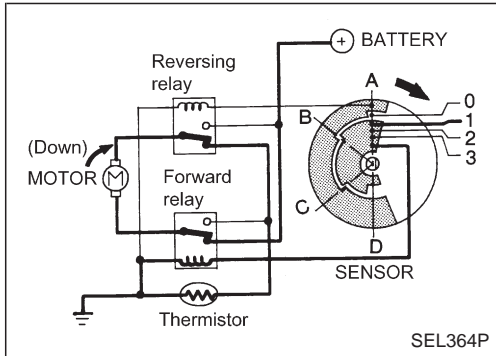

#### Aiming switch “0” → “1”

- When the aiming switch is moved from “0” to “1”, the sensor’s conductive section activates the relay. Power is supplied through the relay to the motor. The headlamps will then move in the “DOWN” direction.
- The motor continues to rotate while the rotary unit of the sensor moves from point A to point B.
- The power terminals will then be positioned at the nonconductive section, disconnecting the power to the motor. The motor will then stop.

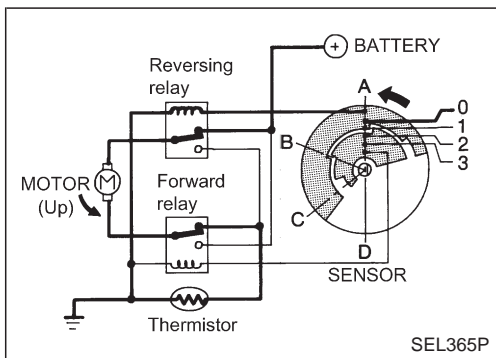


#### Aiming switch “1” → “0”

- When the aiming switch is moved from “1” to “0”, the sensor’s conductive section activates the relay. Power is supplied through the relay to the motor. The motor will rotate to move the headlamps in the “UP” direction.
- When the rotary unit of the sensor moves from point B to point A, the motor will stop.

# HEADLAMP — Headlamp Aiming Control —

## Wiring Diagram — H/AIM —

EL-H/AIM-01

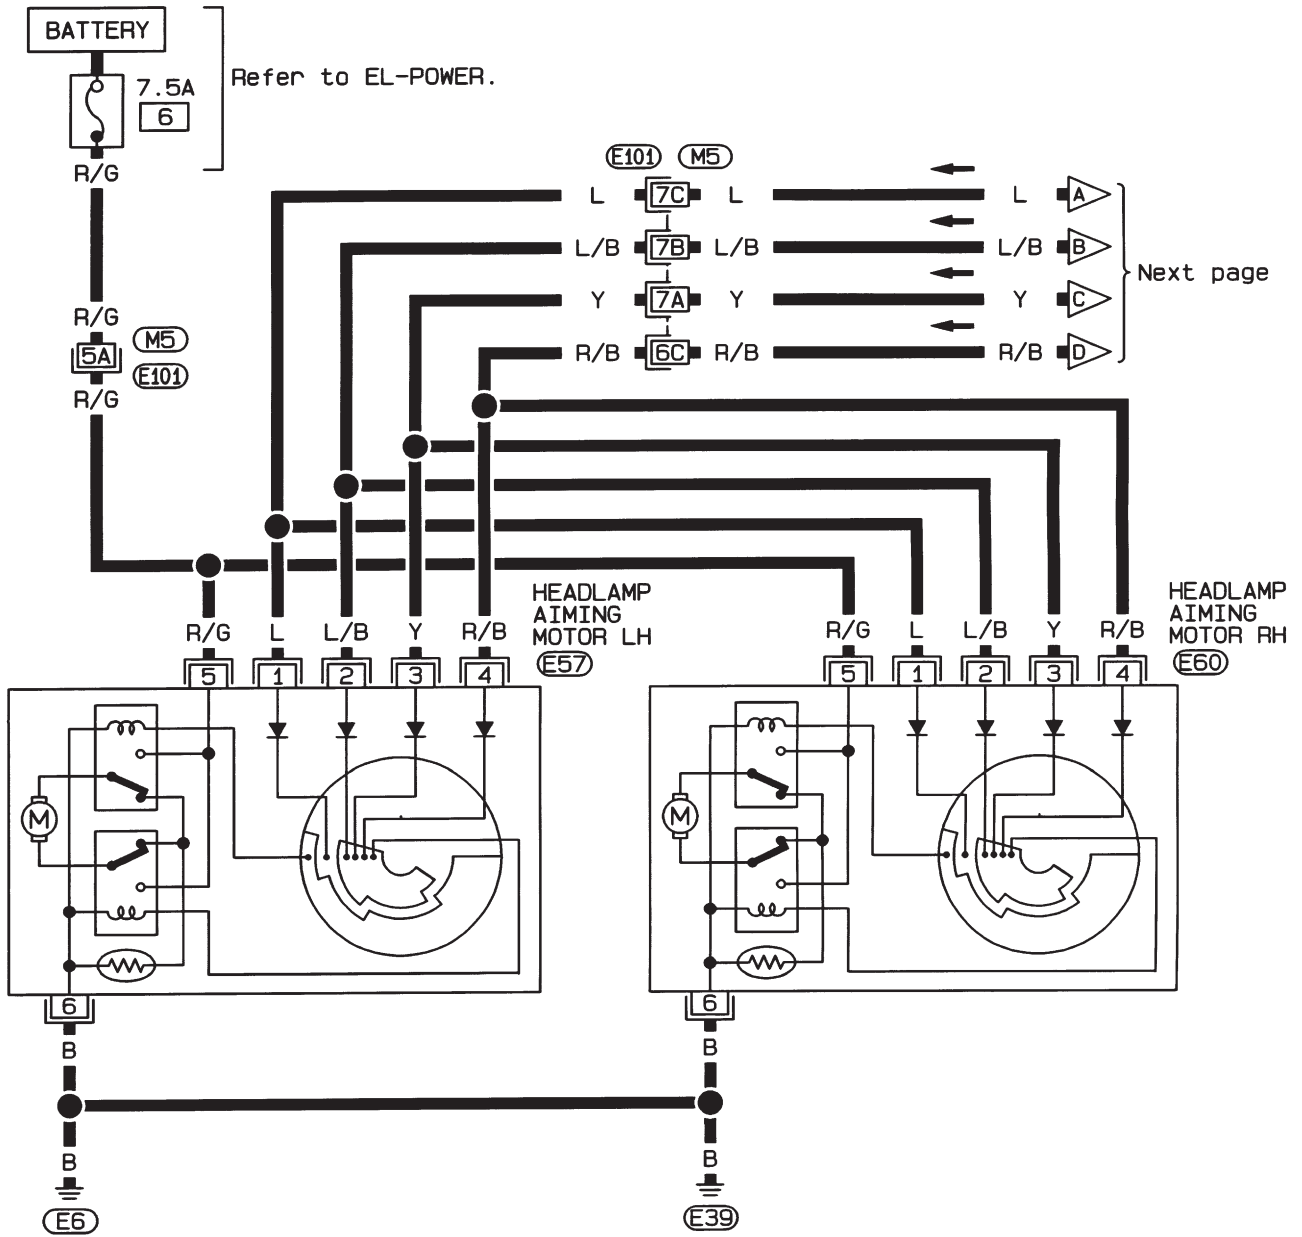



Refer to last page (Foldout page).

(M5), (E101)

# HEADLAMP — Headlamp Aiming Control —

## Wiring Diagram — H/AIM — (Cont'd)

EL-H/AIM-02

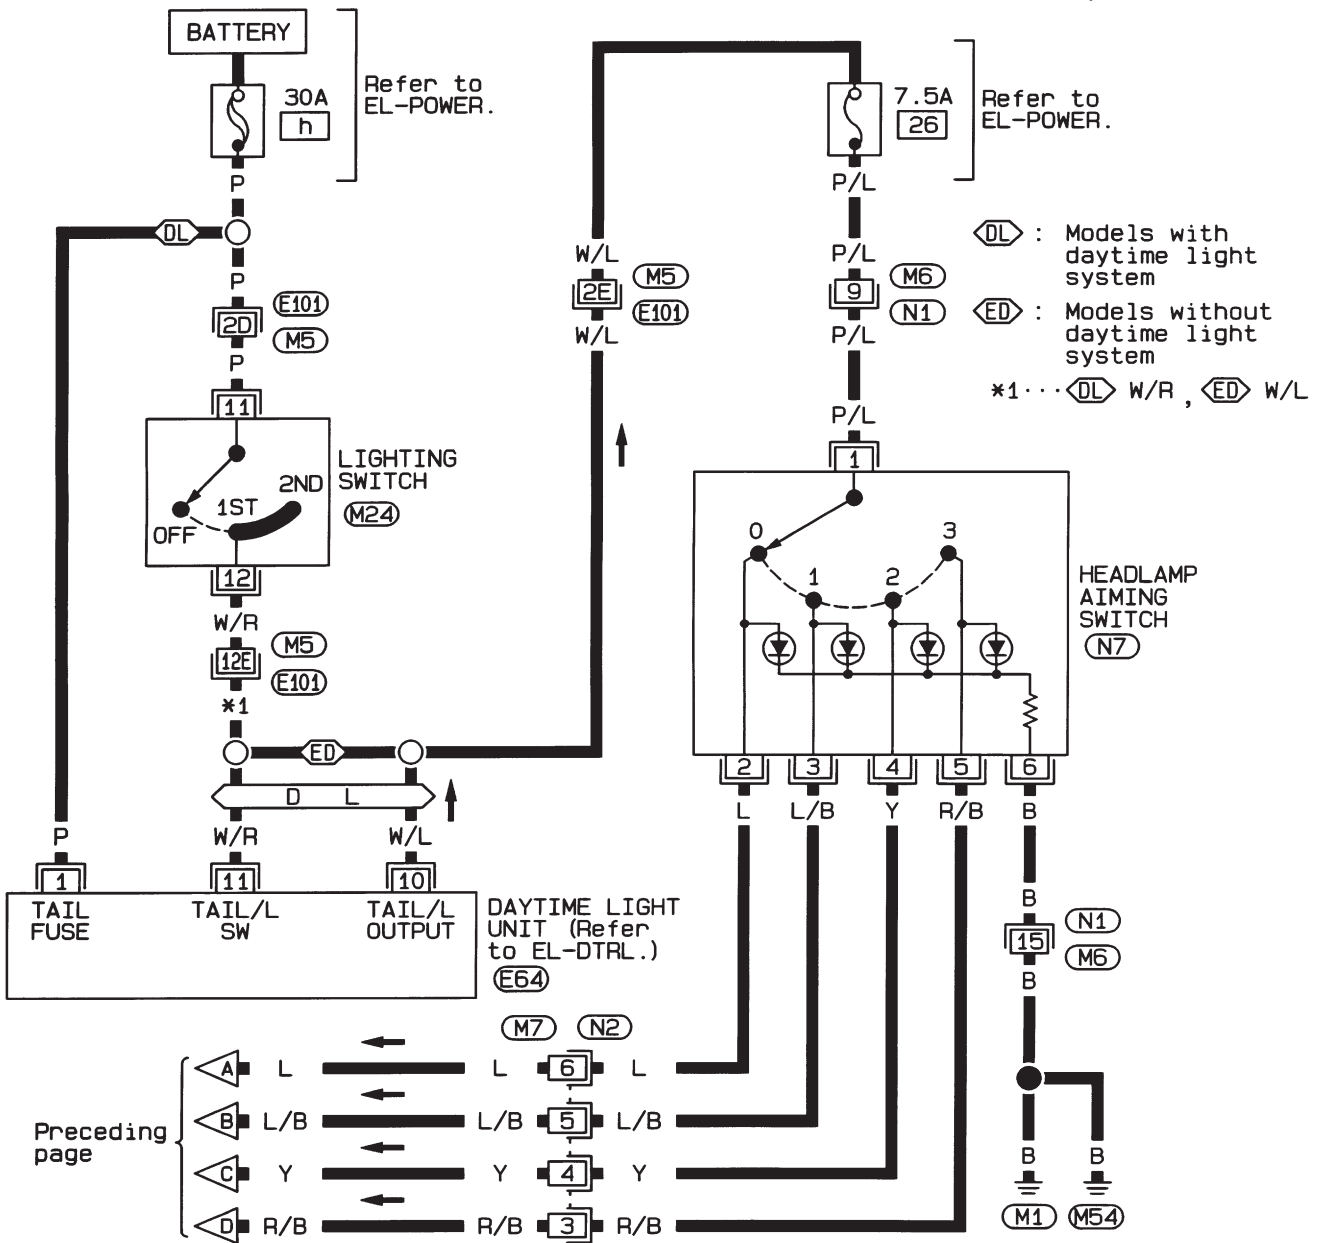



Refer to last page (Foldout page).

**M5**, **E101**

# PARKING, LICENSE AND TAIL LAMPS

## Wiring Diagram — TAIL/L —/Except for LHD Models for Europe


EL-TAIL/L-01

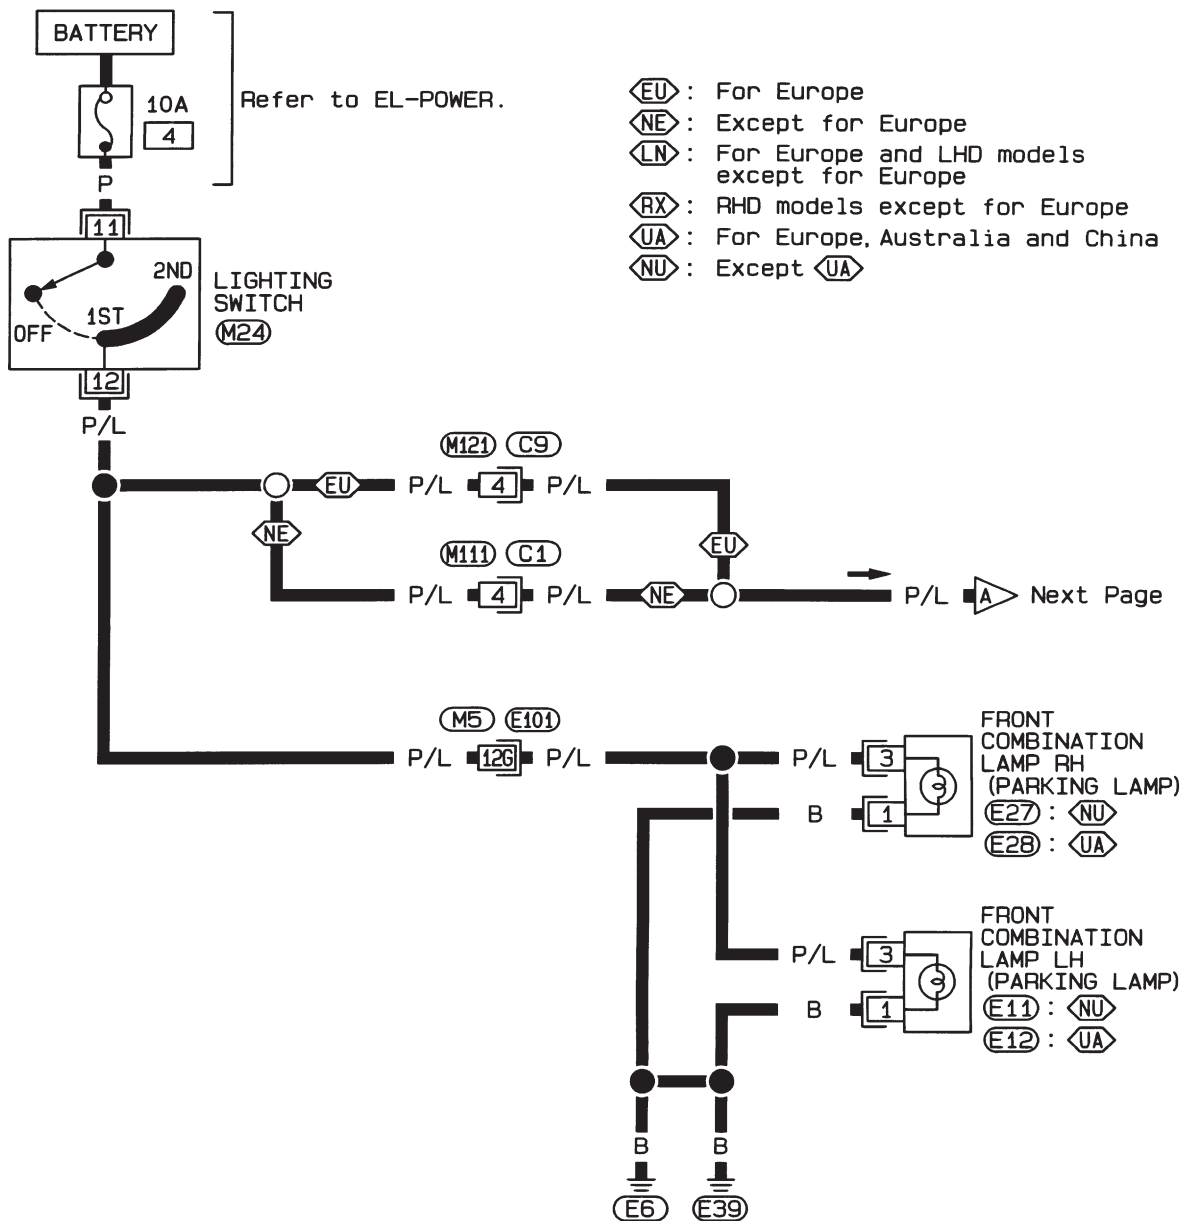

(1) (2) (3) (E11), (E12), (E27), (E28)  
GY, BR, GY, BR

Refer to last page (Foldout page).



(M5), (E101)



# PARKING, LICENSE AND TAIL LAMPS

## Wiring Diagram — TAIL/L —/Except for LHD Models for Europe (Cont'd)



EL-TAIL/L-02

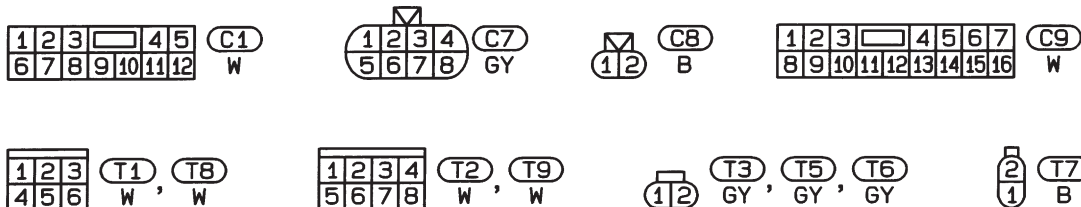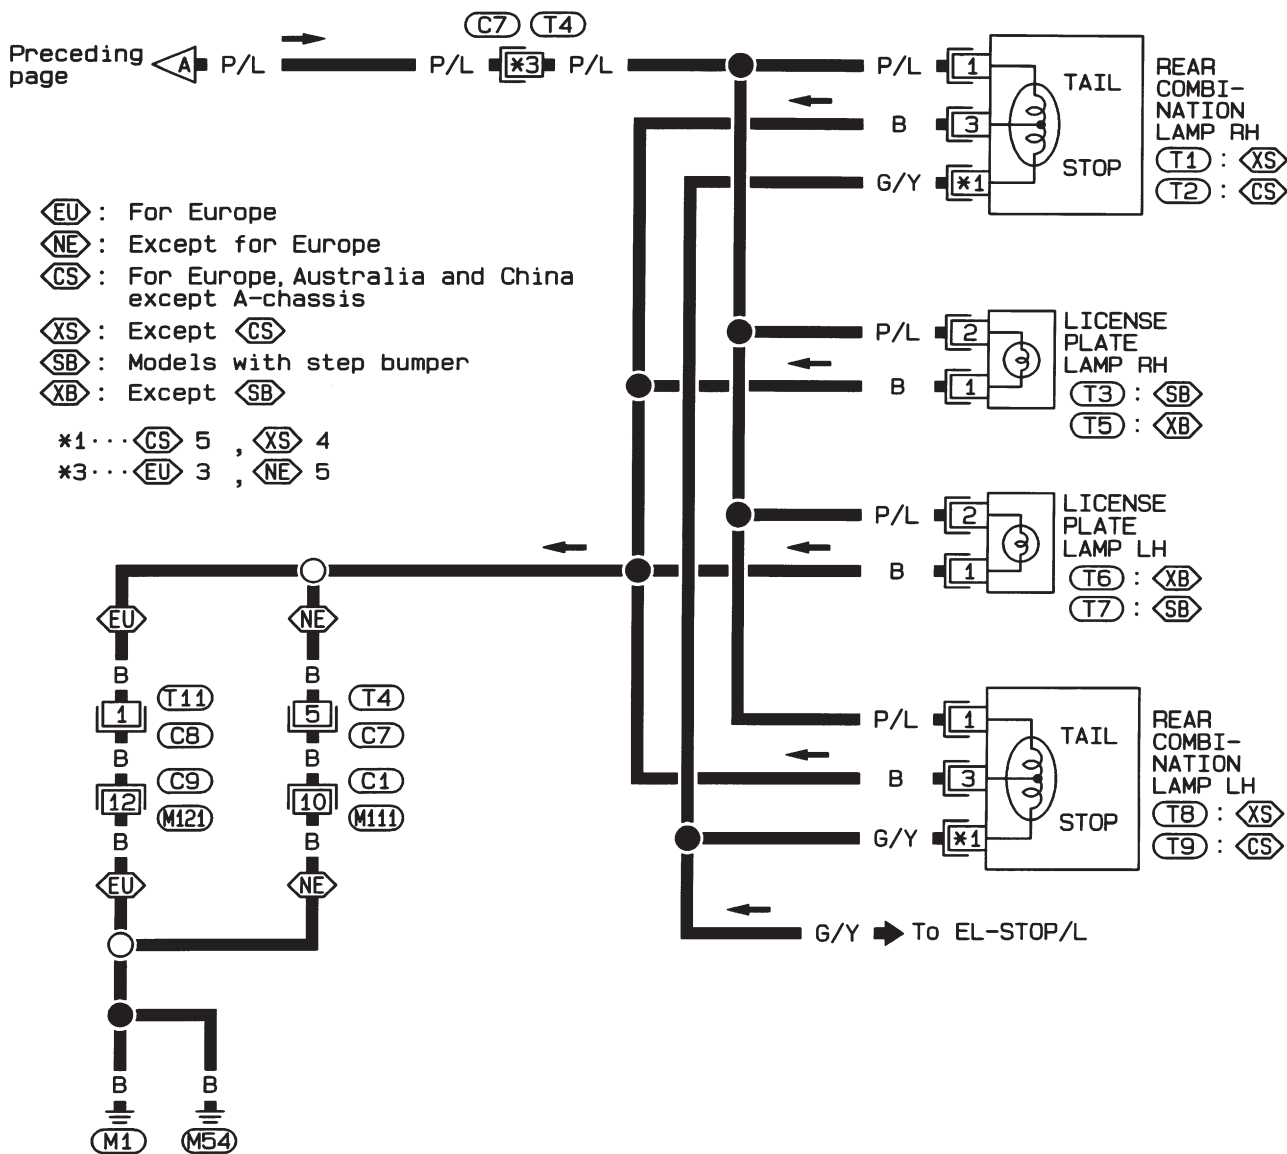

# PARKING, LICENSE AND TAIL LAMPS

## Wiring Diagram — TAIL/L —/LHD Models for Europe

EL-TAIL/L-03

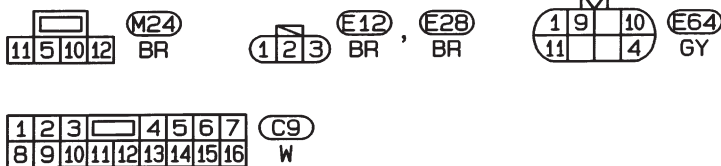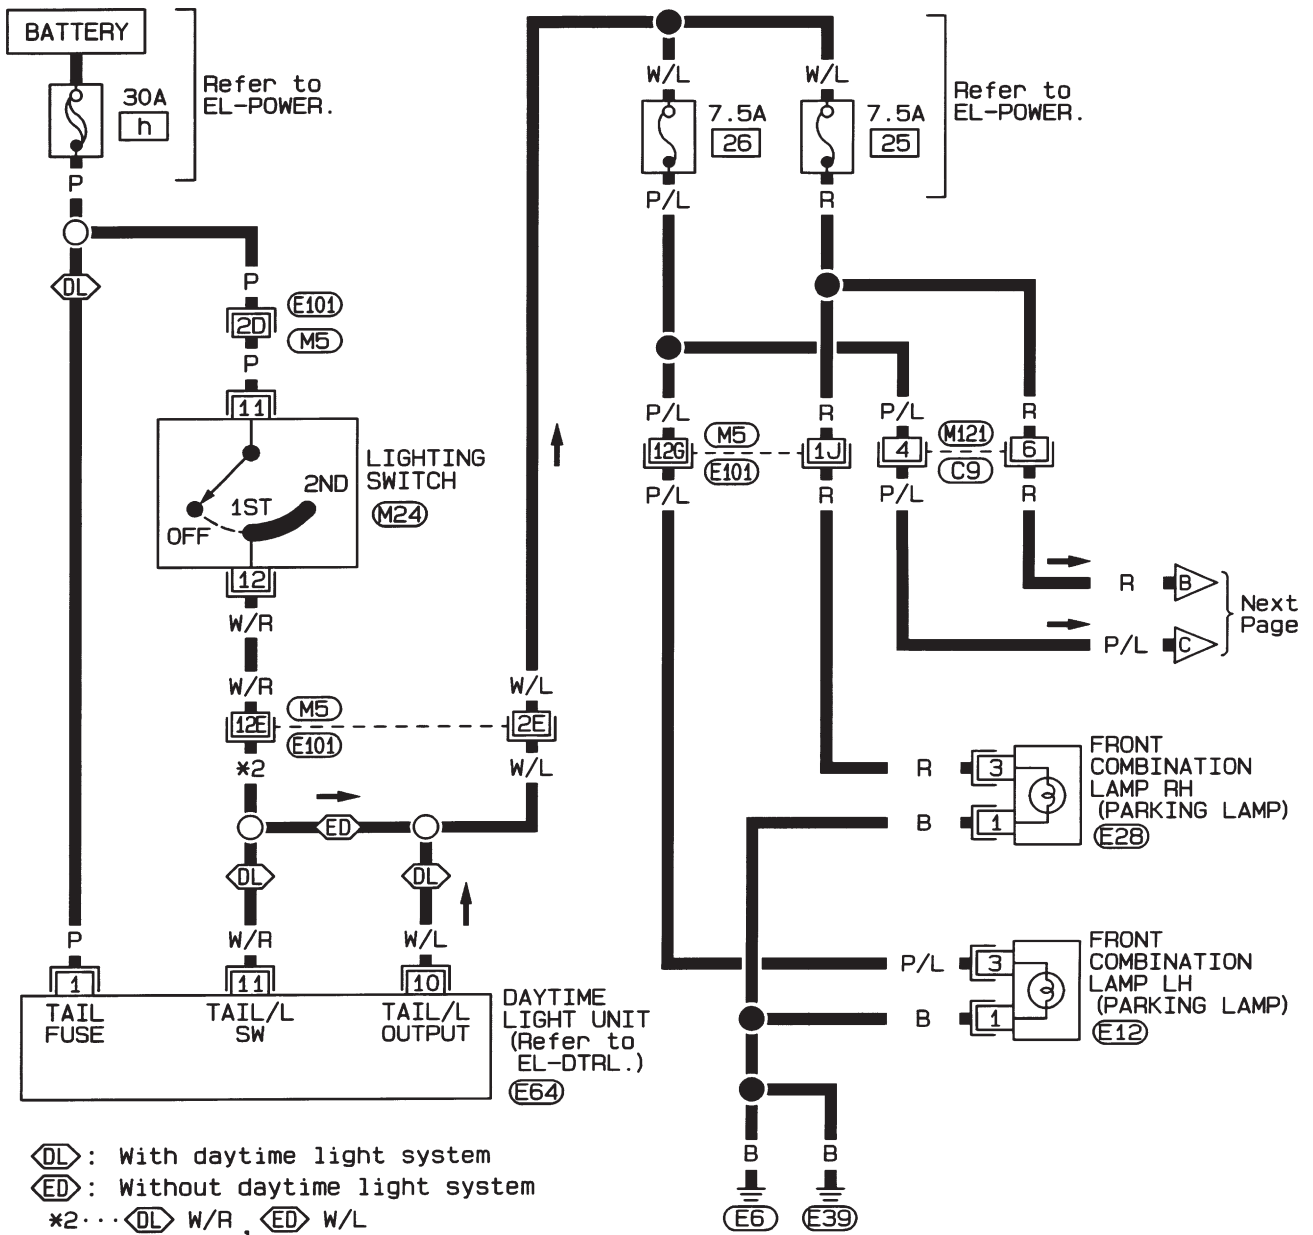



Refer to last page (Foldout page).

M5, E101

# PARKING, LICENSE AND TAIL LAMPS

## Wiring Diagram — TAIL/L —/LHD Models for Europe (Cont'd)

### EL-TAIL/L-04

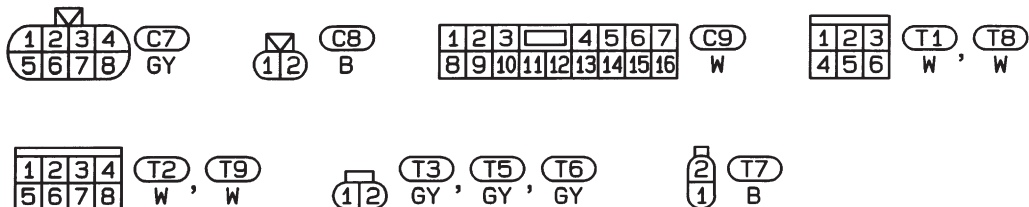
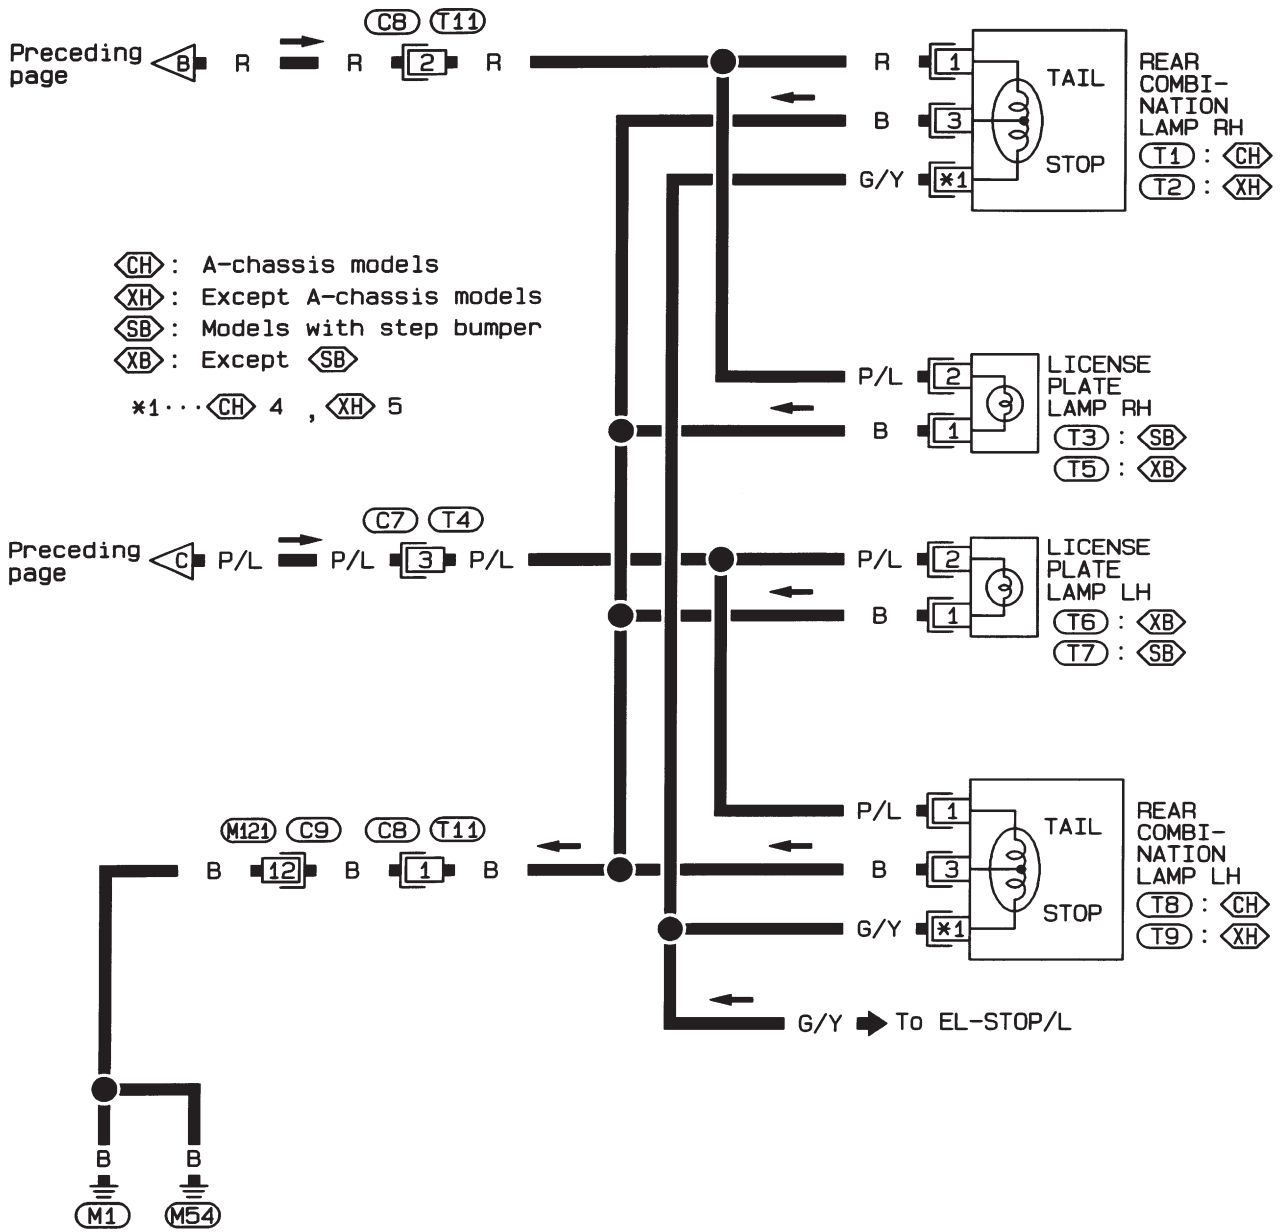




# STOP LAMP

## Wiring Diagram — STOP/L —



EL-STOP/L-02

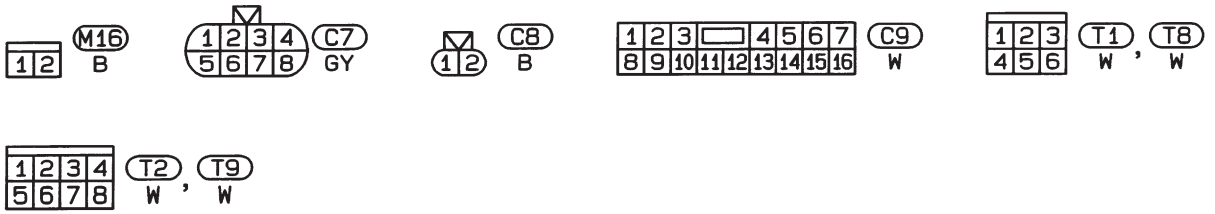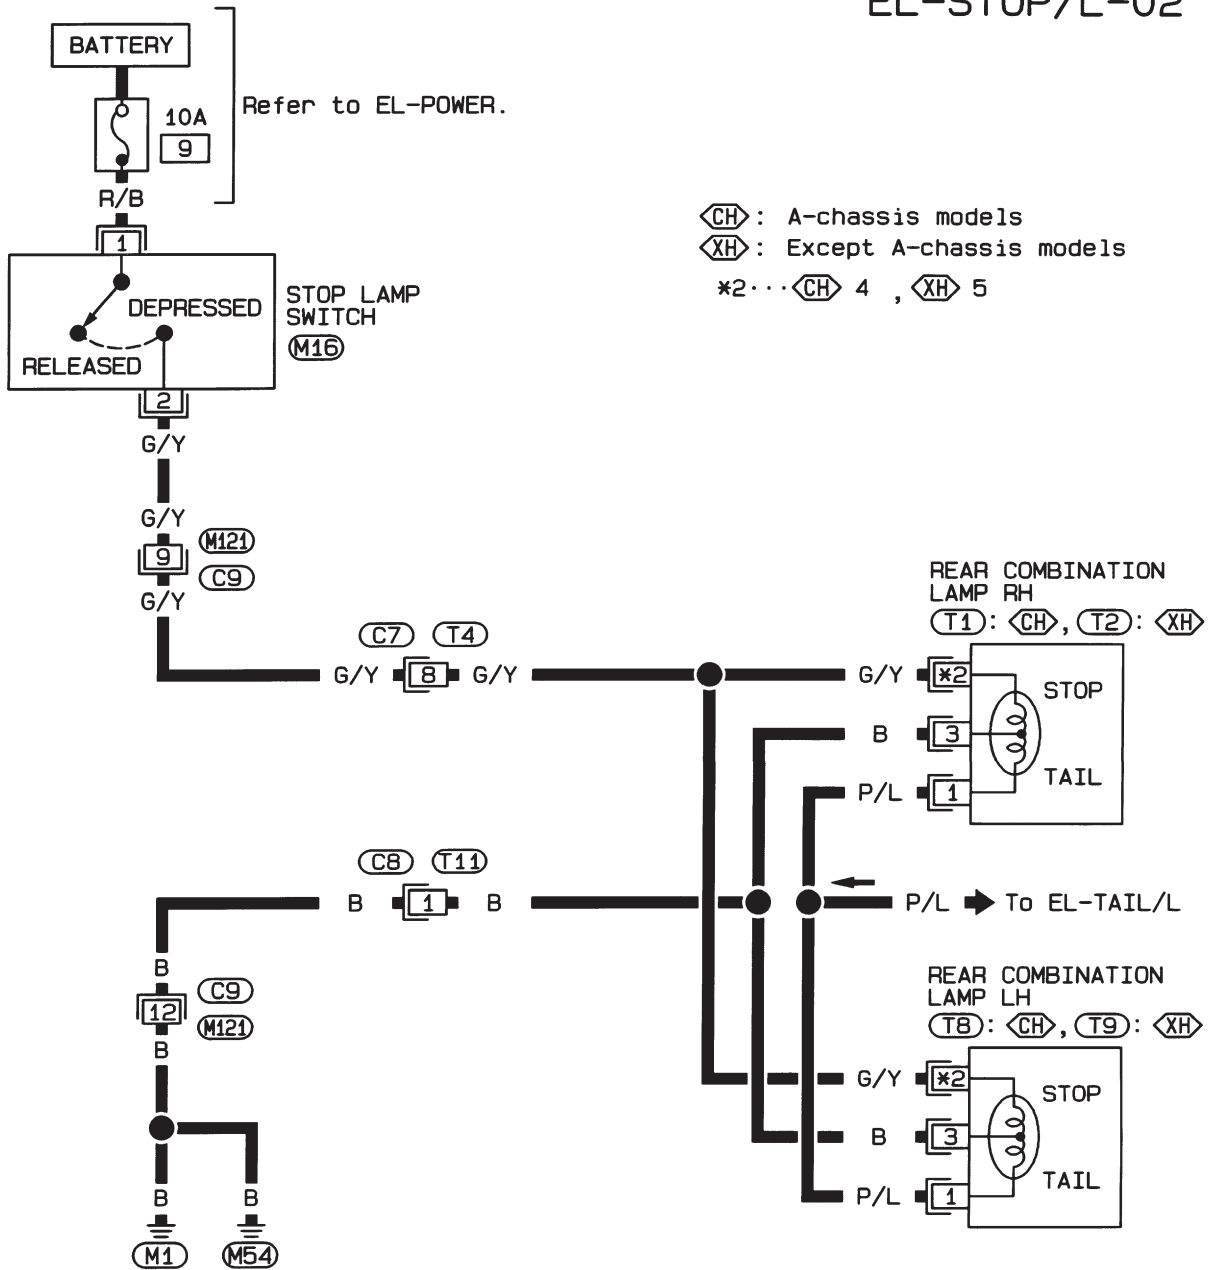

# BACK-UP LAMP

## Wiring Diagram — BACK/L —

EL-BACK/L-02

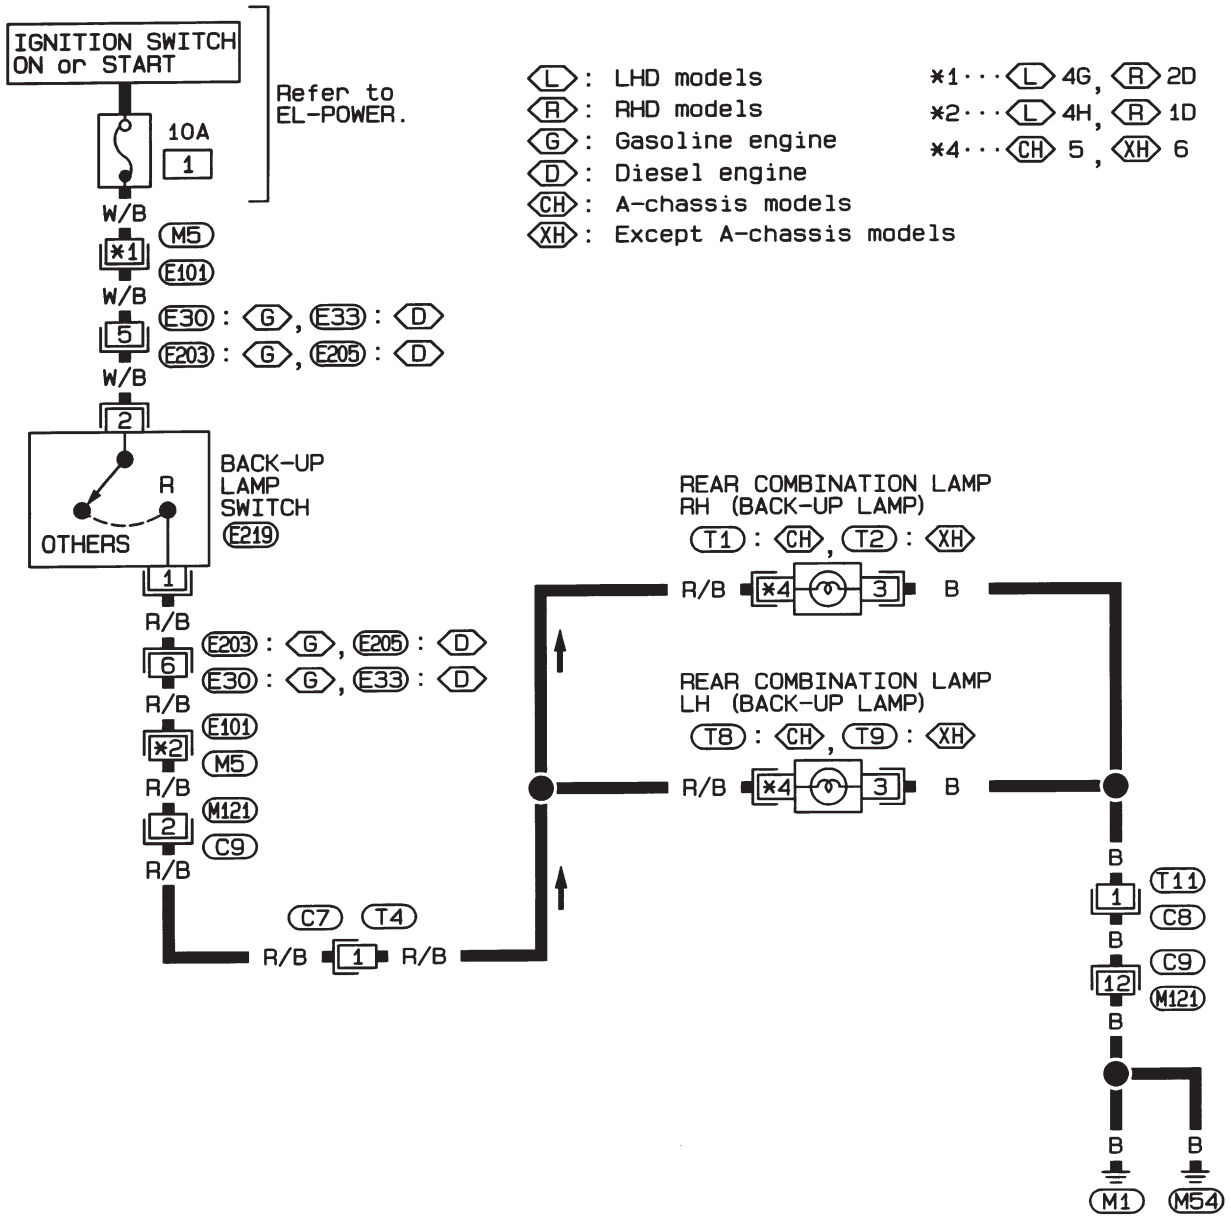



Refer to last page (Foldout page).

(M5), (E101)

# REAR FOG LAMP

## Wiring Diagram — R/FOG —/LHD Models

EL-R/FOG-01

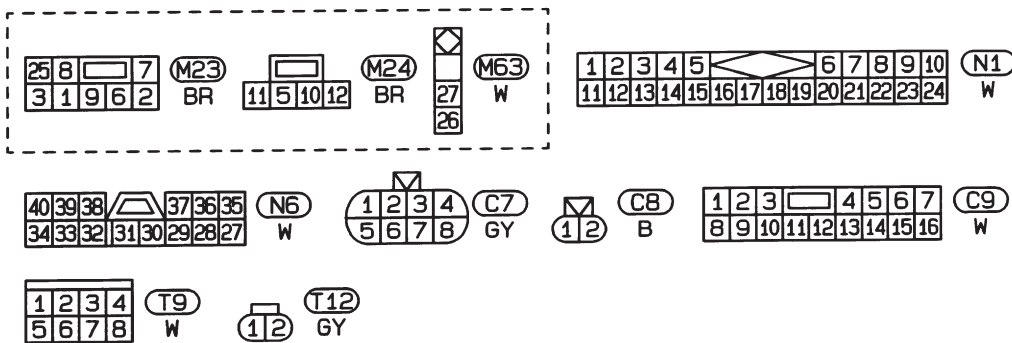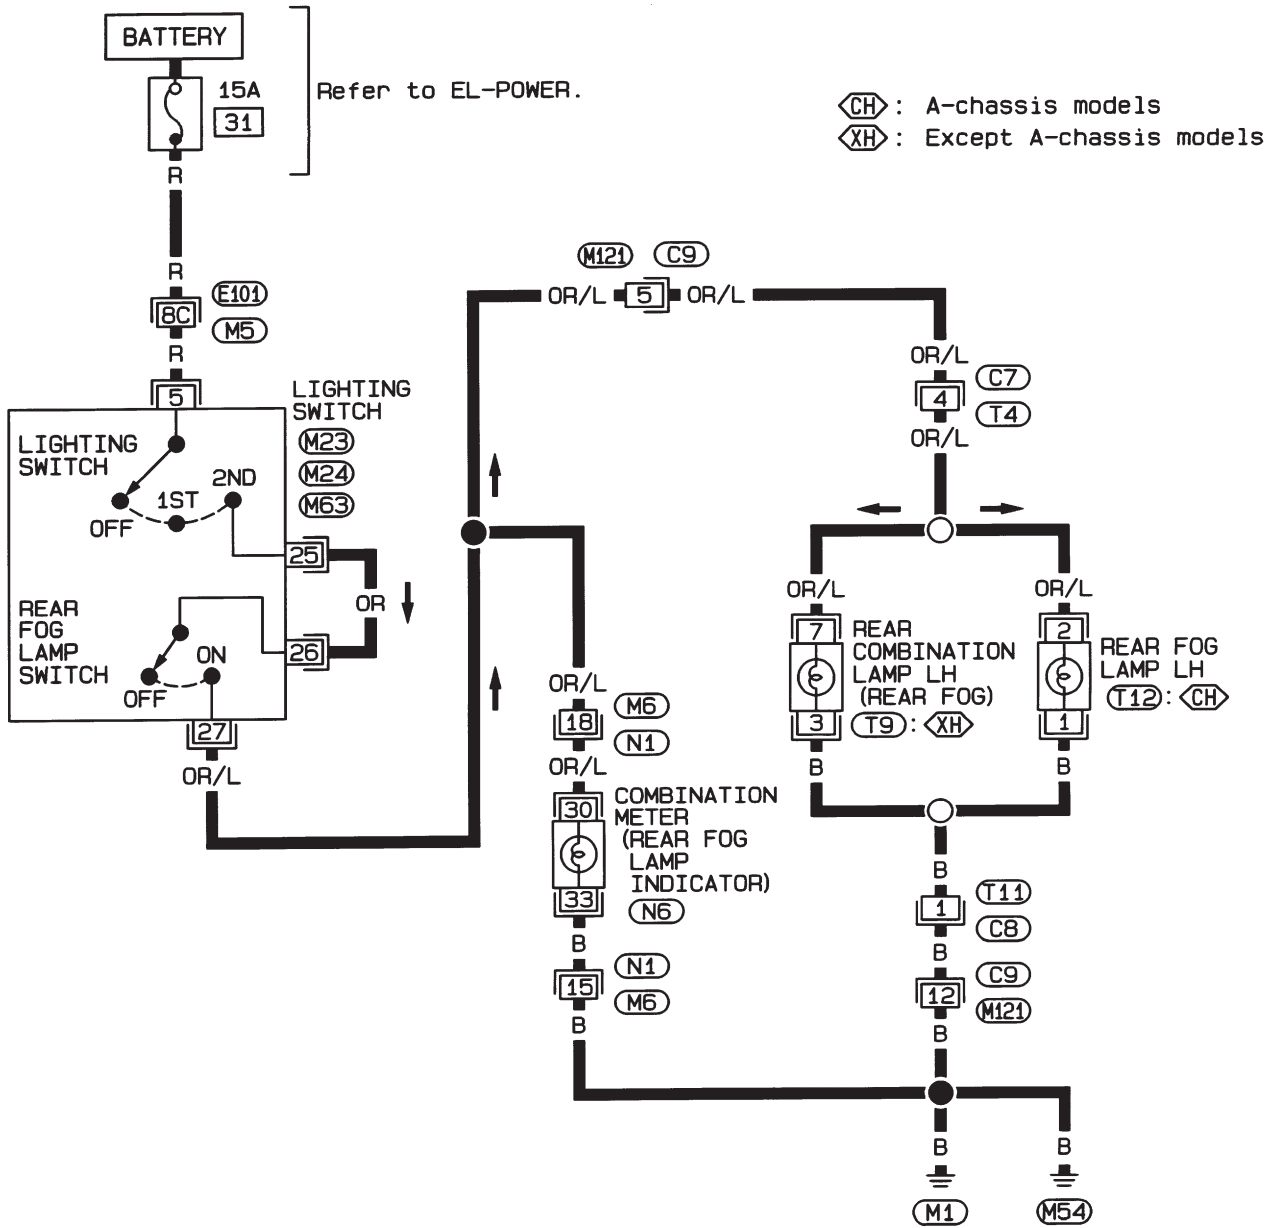



Refer to last page (Foldout page).

M5, E101

# REAR FOG LAMP

## Wiring Diagram — R/FOG —/RHD Models

EL-R/FOG-02

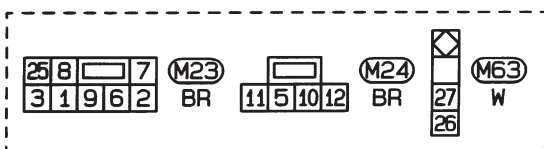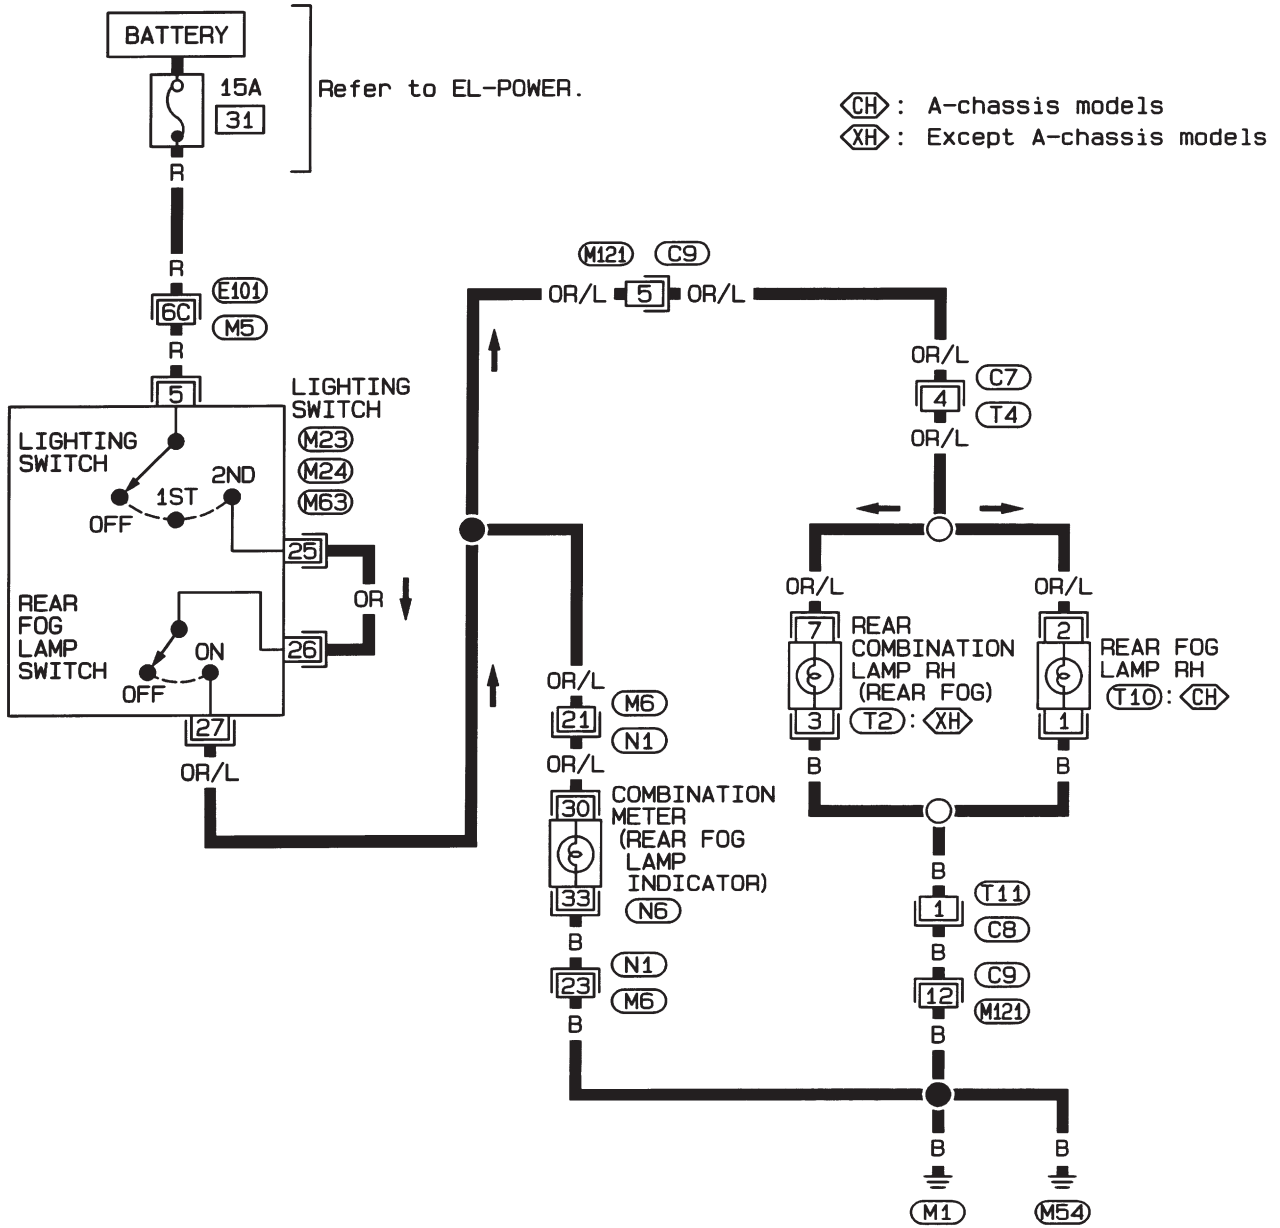


Refer to last page (Foldout page).

ⓄM5, ⓄE101



# TURN SIGNAL AND HAZARD WARNING LAMPS


## Schematic

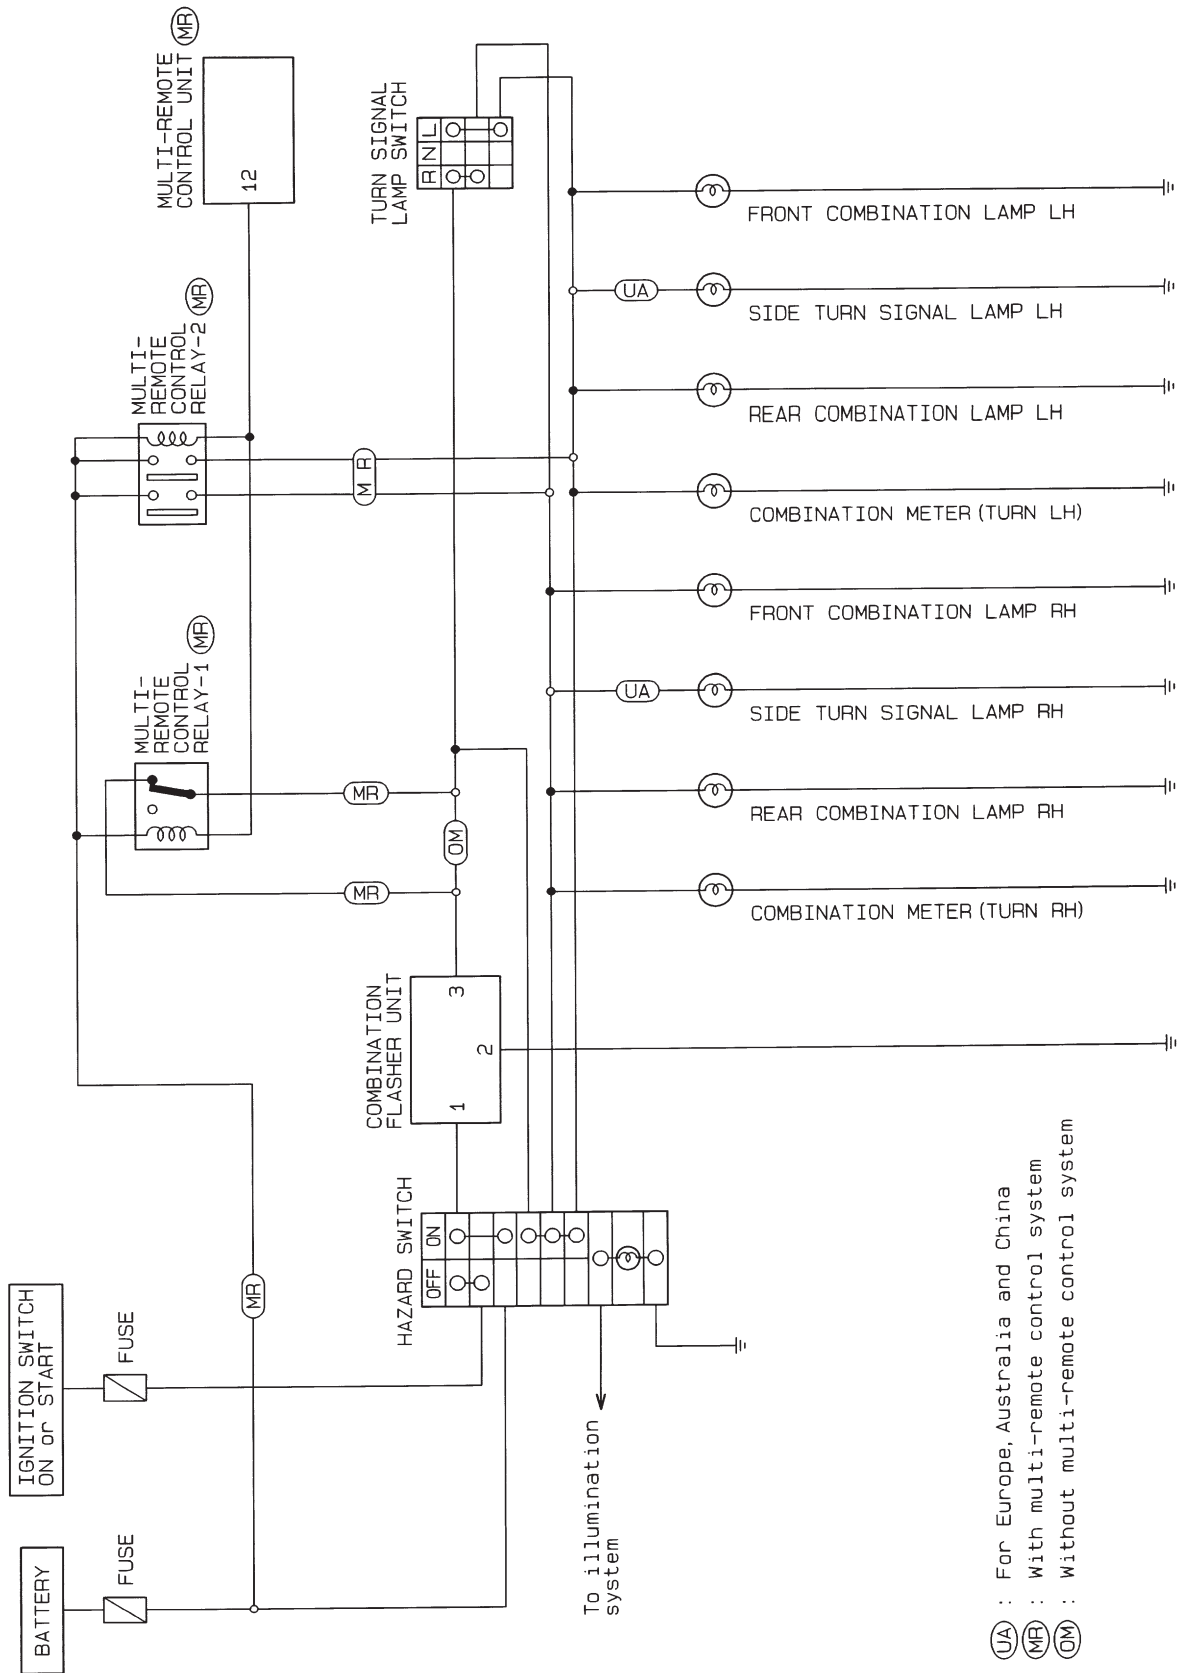


# TURN SIGNAL AND HAZARD WARNING LAMPS

## Wiring Diagram — TURN —/Except 4WD Models for Europe

EL-TURN-01

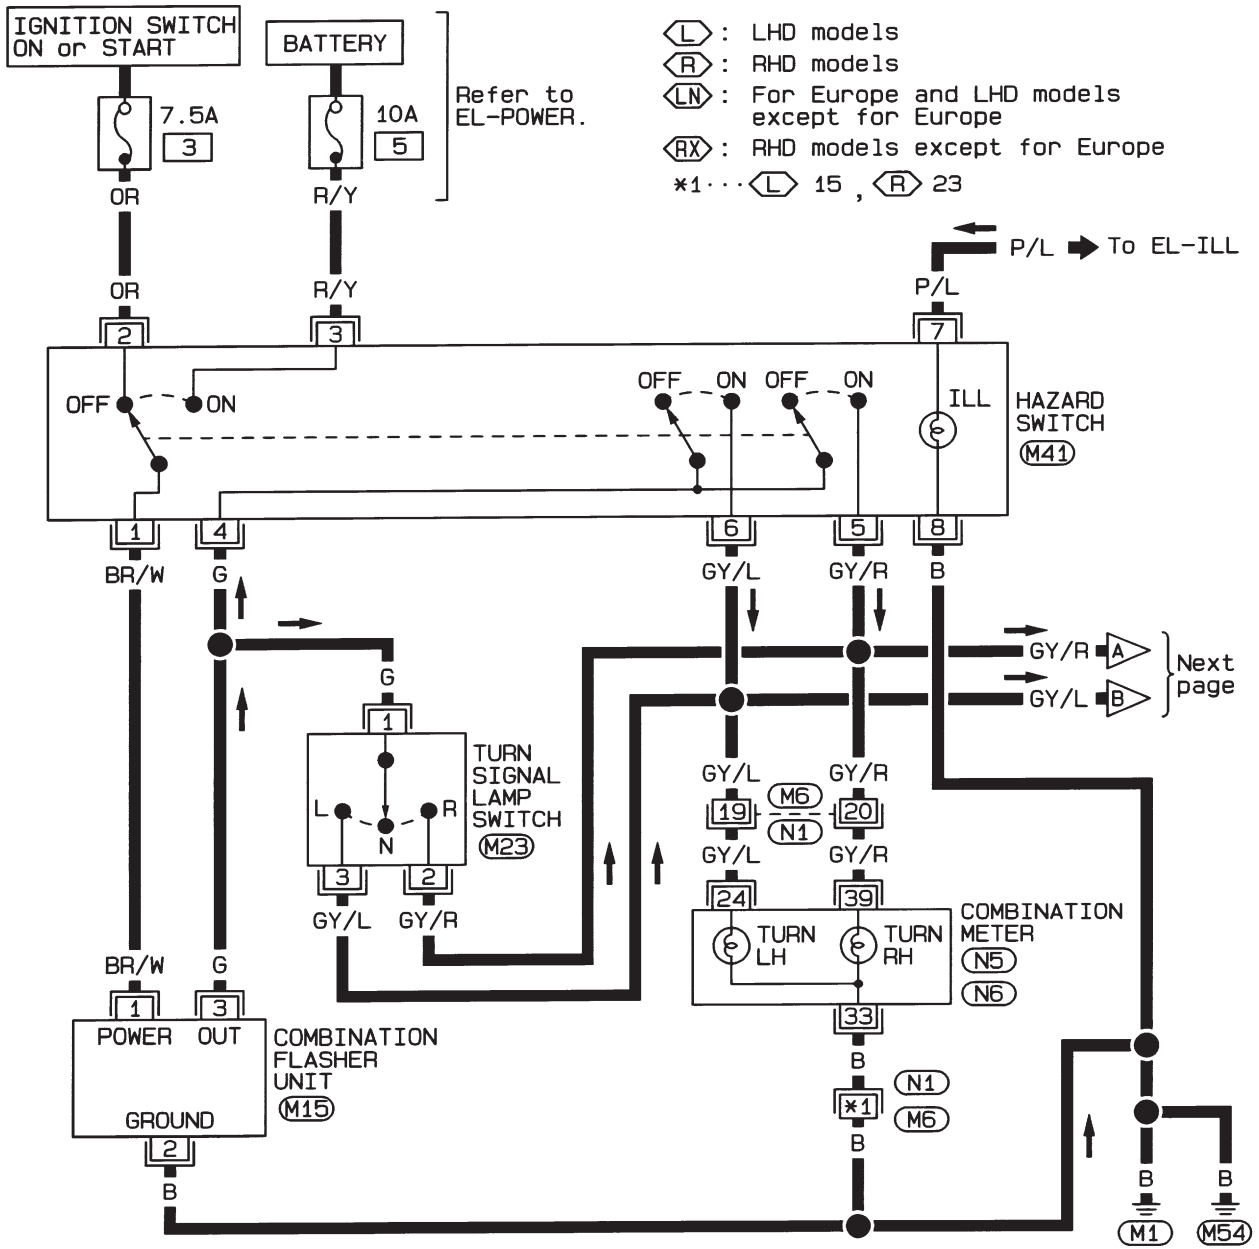



- ◁ L : LHD models
- ◁ R : RHD models
- ◁ LN : For Europe and LHD models except for Europe
- ◁ RX : RHD models except for Europe
- \*1... ◁ L 15 , ◁ R 23

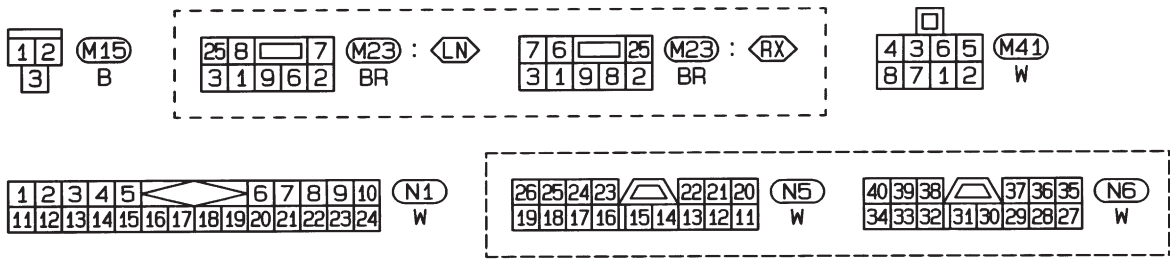

# TURN SIGNAL AND HAZARD WARNING LAMPS

## Wiring Diagram — TURN —/Except 4WD Models for Europe (Cont'd)

EL-TURN-02

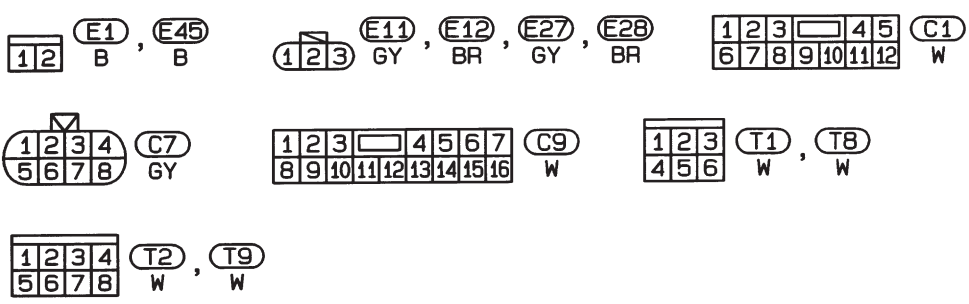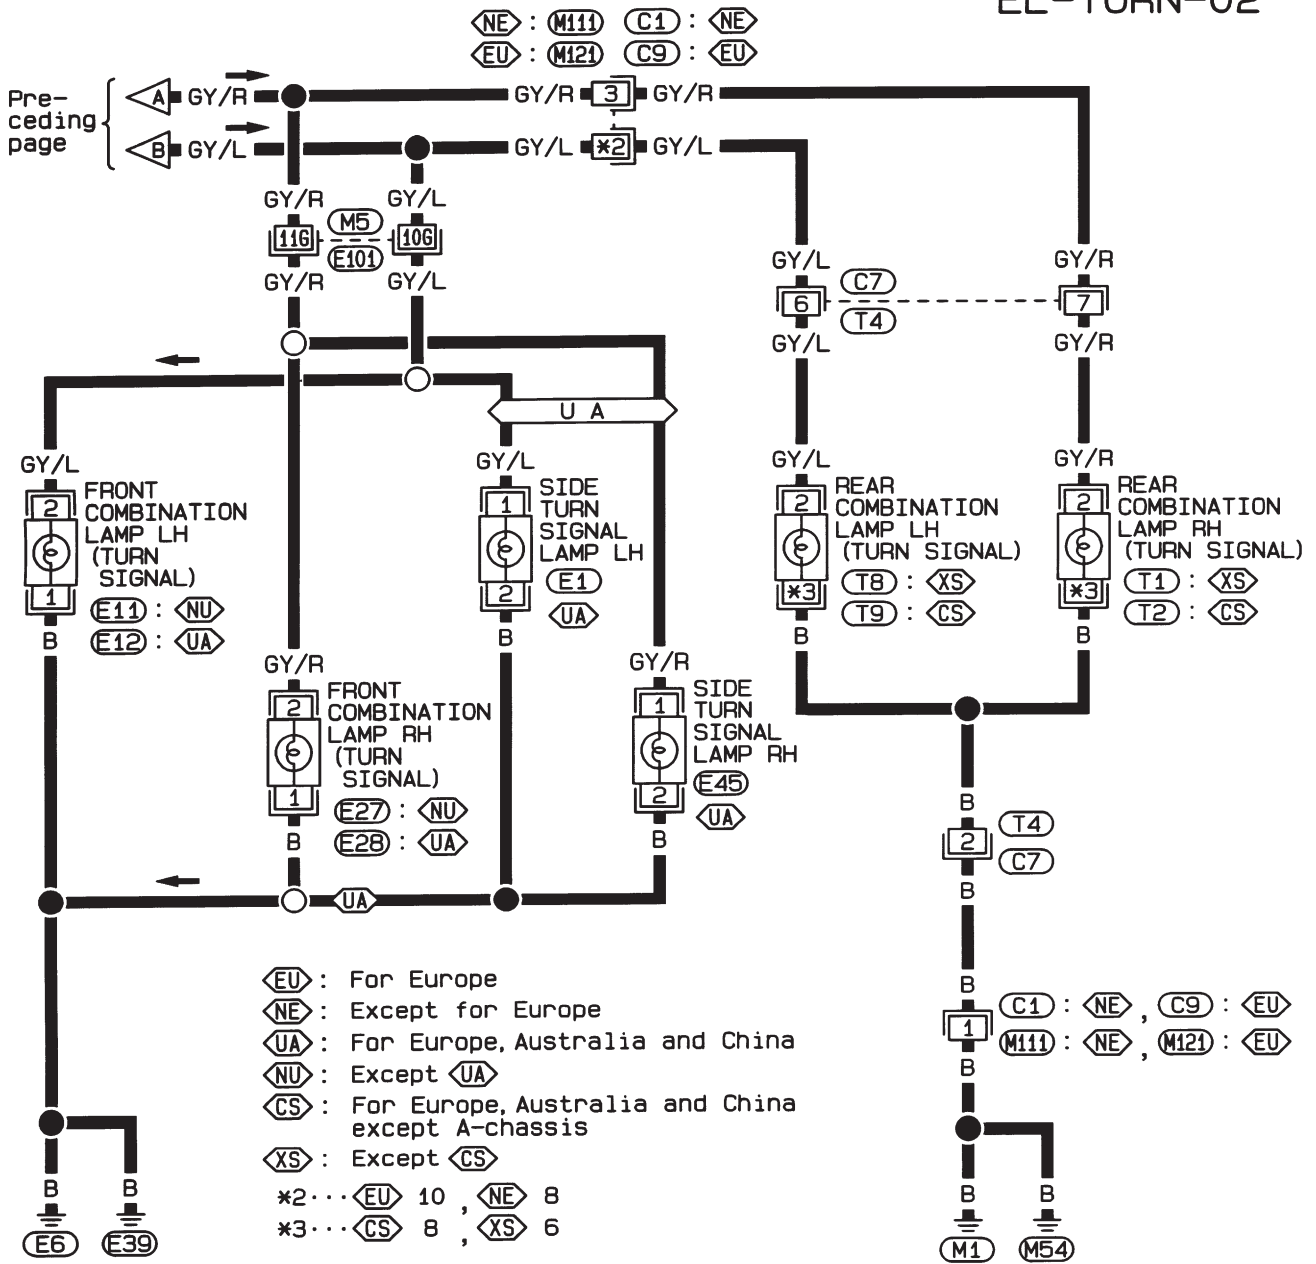

Refer to last page (Foldout page).




(M5, E101)

# TURN SIGNAL AND HAZARD WARNING LAMPS

## Wiring Diagram — TURN —/4WD Models for Europe

**NOTE:** For Single cab models with air bag, refer to “Wiring Diagram — TURN —/Except 4WD Models for Europe”.

EL-TURN-03

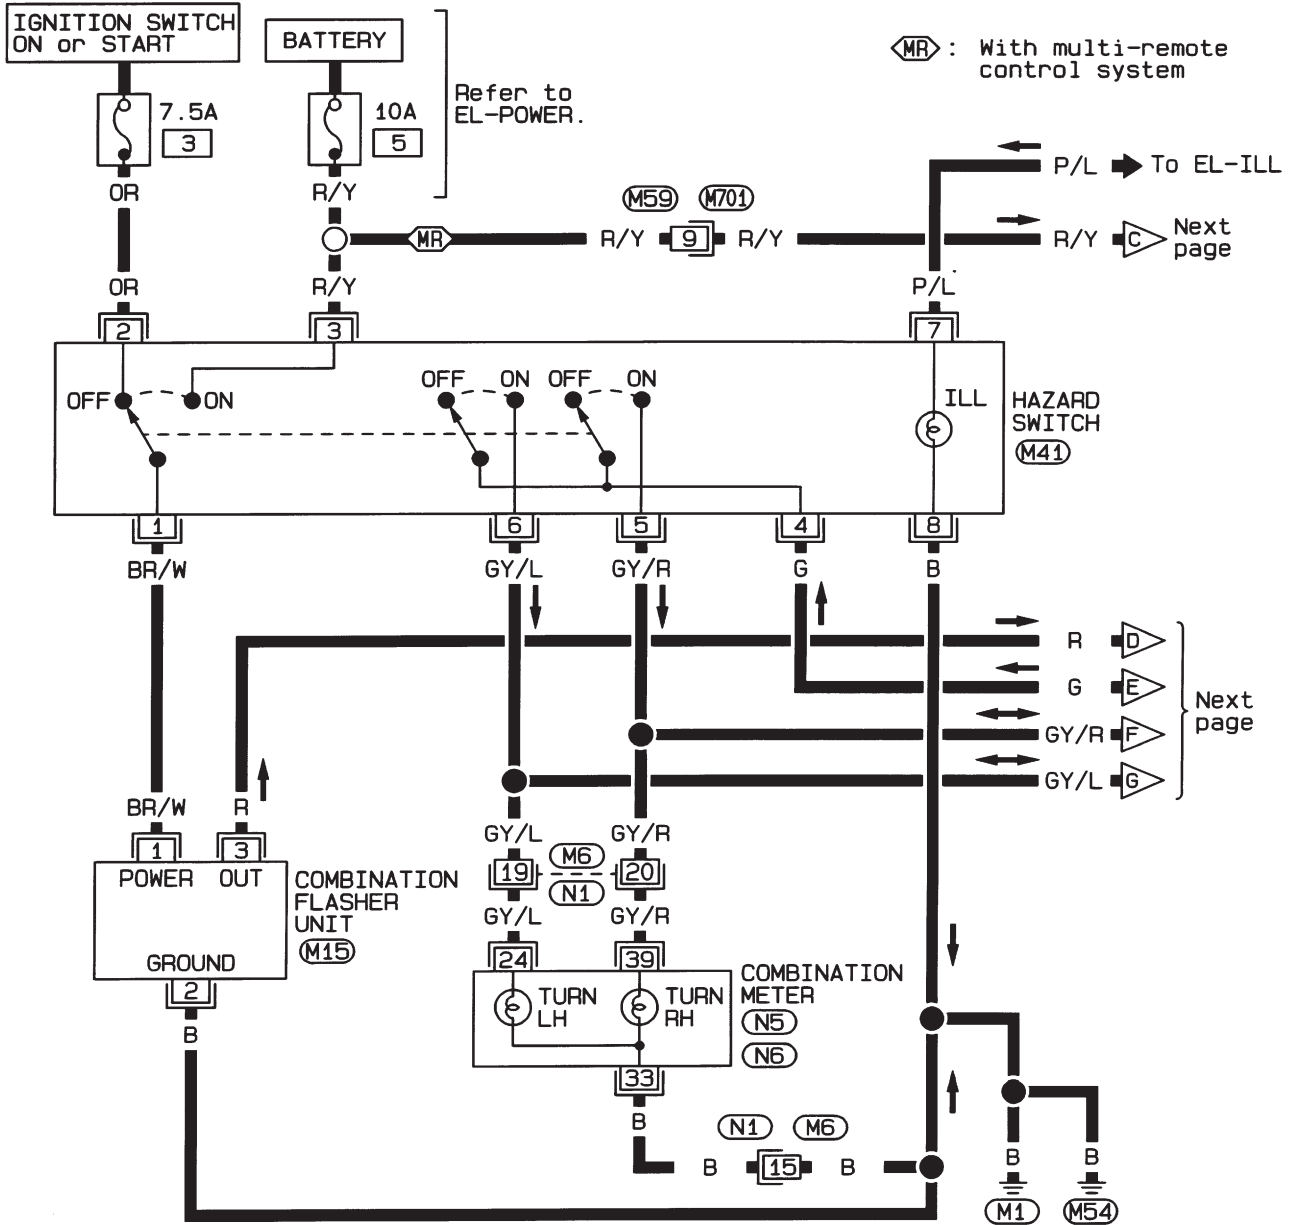





HEL341A



# TURN SIGNAL AND HAZARD WARNING LAMPS

## Wiring Diagram — TURN —/4WD Models for Europe (Cont'd)

EL-TURN-04

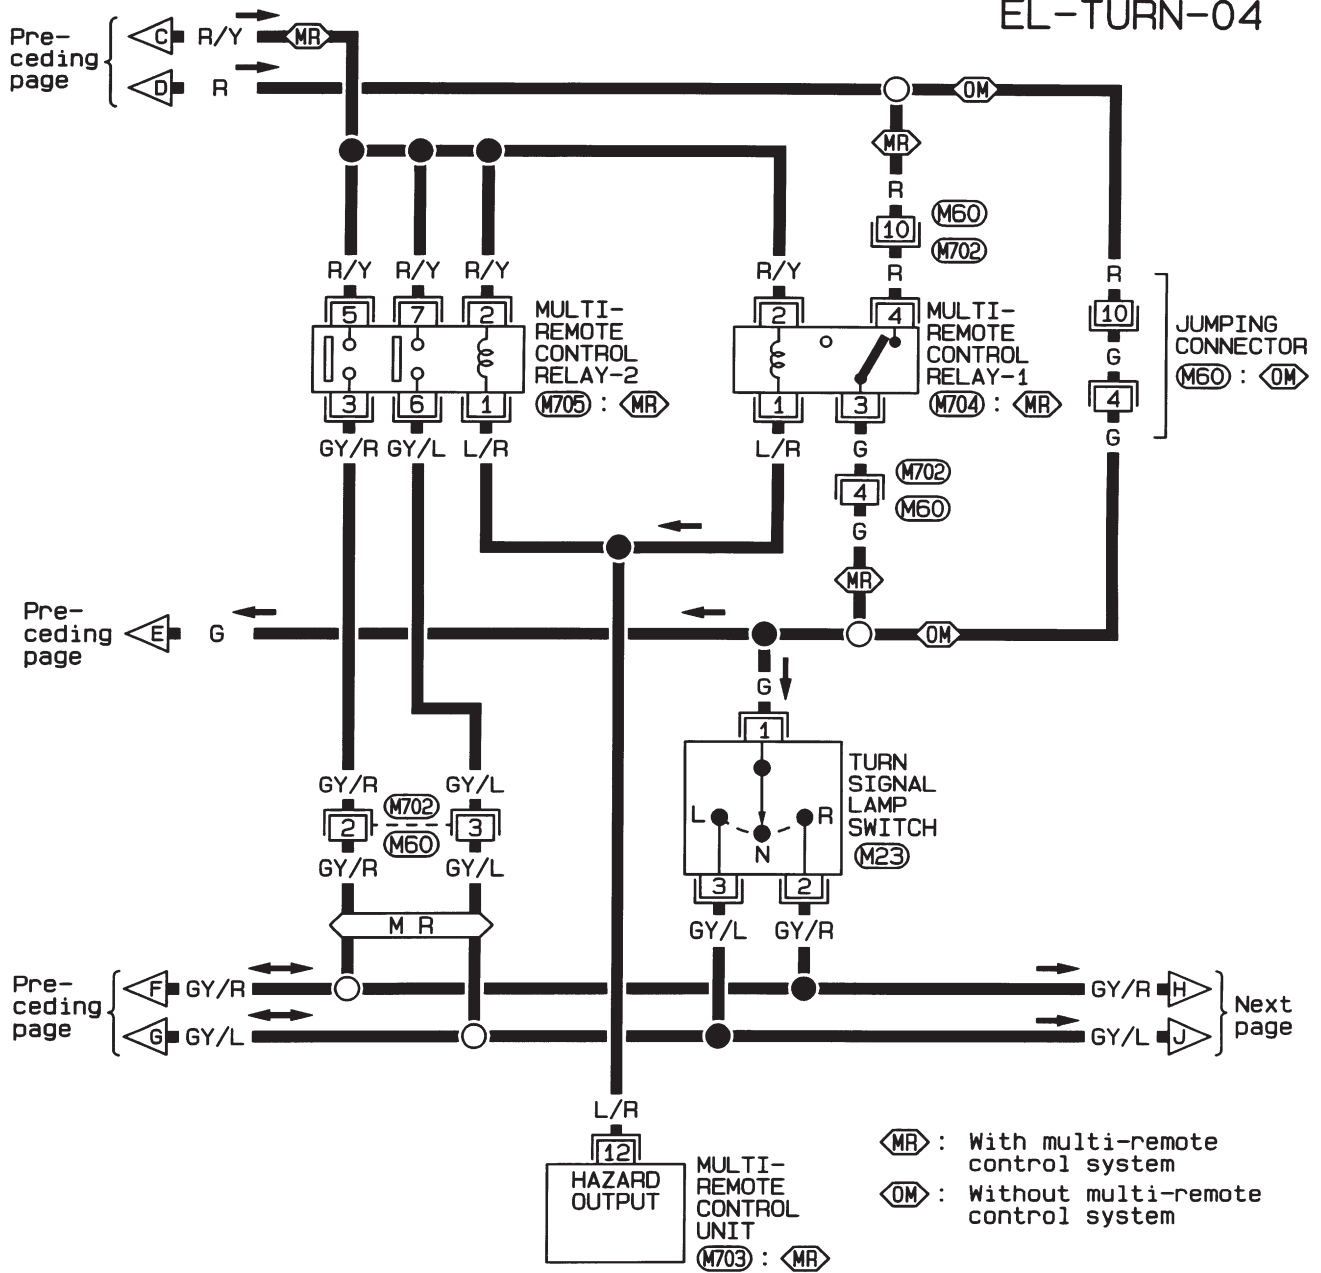




# TURN SIGNAL AND HAZARD WARNING LAMPS

## Trouble Diagnoses

Symptom	Possible cause	Repair order
Turn signal and hazard warning lamps do not operate.	<ol style="list-style-type: none"> <li>1. Hazard switch</li> <li>2. Combination flasher unit</li> <li>3. Open in combination flasher unit circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check hazard switch.</li> <li>2. Refer to combination flasher unit check.</li> <li>3. Check wiring to combination flasher unit for open circuit.</li> </ol>
Turn signal lamps do not operate but hazard warning lamps operate.	<ol style="list-style-type: none"> <li>1. 7.5A fuse</li> <li>2. Hazard switch</li> <li>3. Turn signal switch</li> <li>4. Open in turn signal switch circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check 7.5A fuse (No. <b>3</b>), located in fuse block). Turn ignition switch ON and verify battery positive voltage is present at terminal <b>2</b> of hazard switch.</li> <li>2. Check hazard switch.</li> <li>3. Check turn signal switch.</li> <li>4. Check G wire between combination flasher unit and turn signal switch for open circuit.</li> </ol>
Hazard warning lamps do not operate but turn signal lamps operate.	<ol style="list-style-type: none"> <li>1. 10A fuse</li> <li>2. Hazard switch</li> <li>3. Open in hazard switch circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check 10A fuse (No. <b>5</b>), located in fuse block). Verify battery positive voltage is present at terminal <b>3</b> of hazard switch.</li> <li>2. Check hazard switch.</li> <li>3. Check G wire between combination flasher unit and hazard switch for open circuit.</li> </ol>
Front or side turn signal lamp LH or RH does not operate.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Grounds <b>E6</b> and <b>E39</b></li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check grounds <b>E6</b> and <b>E39</b>.</li> </ol>
Rear turn signal lamp LH or RH does not operate.	<ol style="list-style-type: none"> <li>1. Bulb</li> <li>2. Grounds <b>M1</b> and <b>M54</b></li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulb.</li> <li>2. Check grounds <b>M1</b> and <b>M54</b>.</li> </ol>
LH and RH turn indicators do not operate.	<ol style="list-style-type: none"> <li>1. Ground</li> </ol>	<ol style="list-style-type: none"> <li>1. Check grounds <b>M1</b> and <b>M54</b>.</li> </ol>
LH or RH turn indicator does not operate.	<ol style="list-style-type: none"> <li>1. Bulb</li> </ol>	<ol style="list-style-type: none"> <li>1. Check bulb in combination meter.</li> </ol>

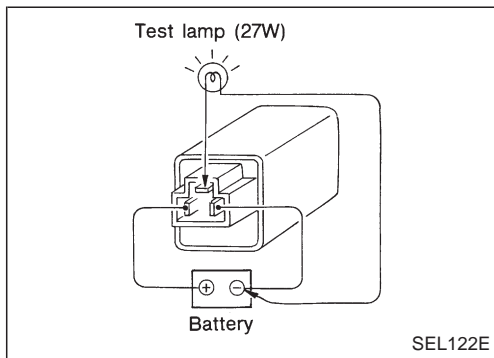



### Combination Flasher Unit Check

- Before checking, ensure that bulbs meet specifications.
- Connect a battery and test lamp to the combination flasher unit, as shown. Combination flasher unit is properly functioning if it blinks when power is supplied to the circuit.

# ILLUMINATION

## Wiring Diagram — ILL —/LHD Models

EL-ILL-01

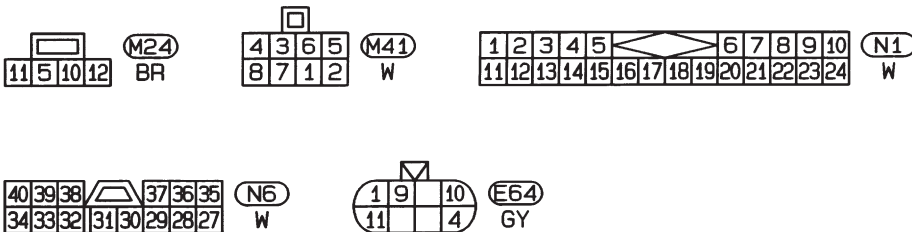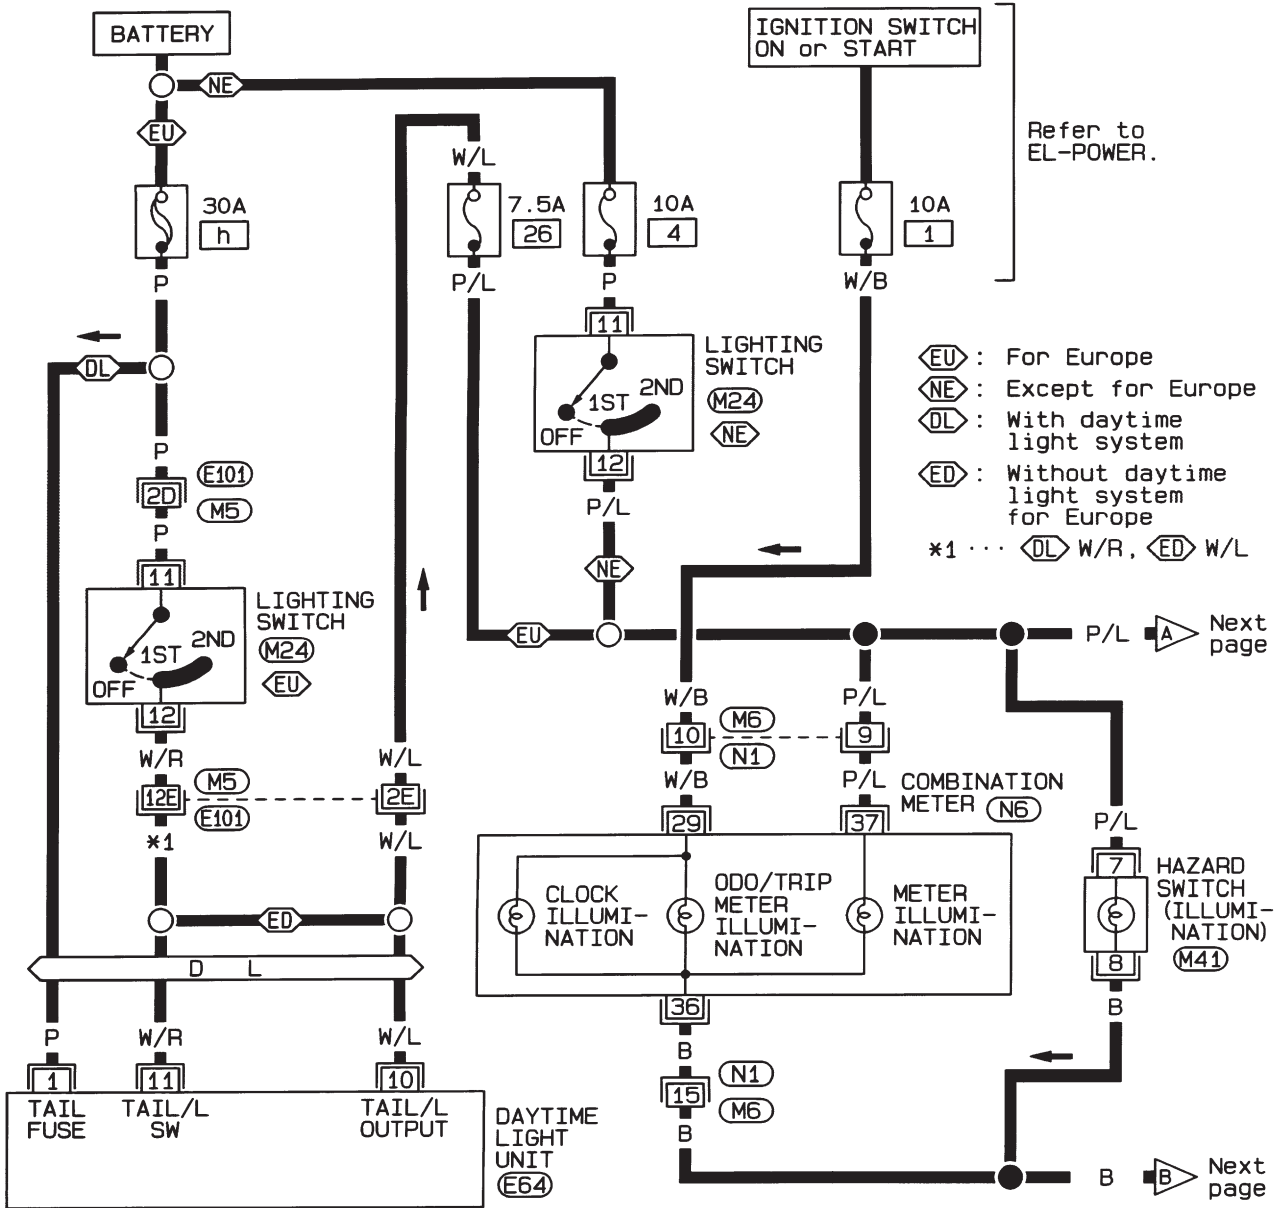

Refer to last page (Foldout page).




(M5), (E101)

# ILLUMINATION

## Wiring Diagram — ILL —/LHD Models (Cont'd)

EL-ILL-02




- ◊EU : For Europe
- ◊NE : Except for Europe
- ◊WC : Models with CD deck
- ◊AM : Models without CD deck  
(1-speaker radio except for Europe)
- ◊FM : Models without CD deck  
(For Europe and with 2 or 4-speakers  
radio except for Europe)
- ◊SG : GL and S-GL grade for the Middle East

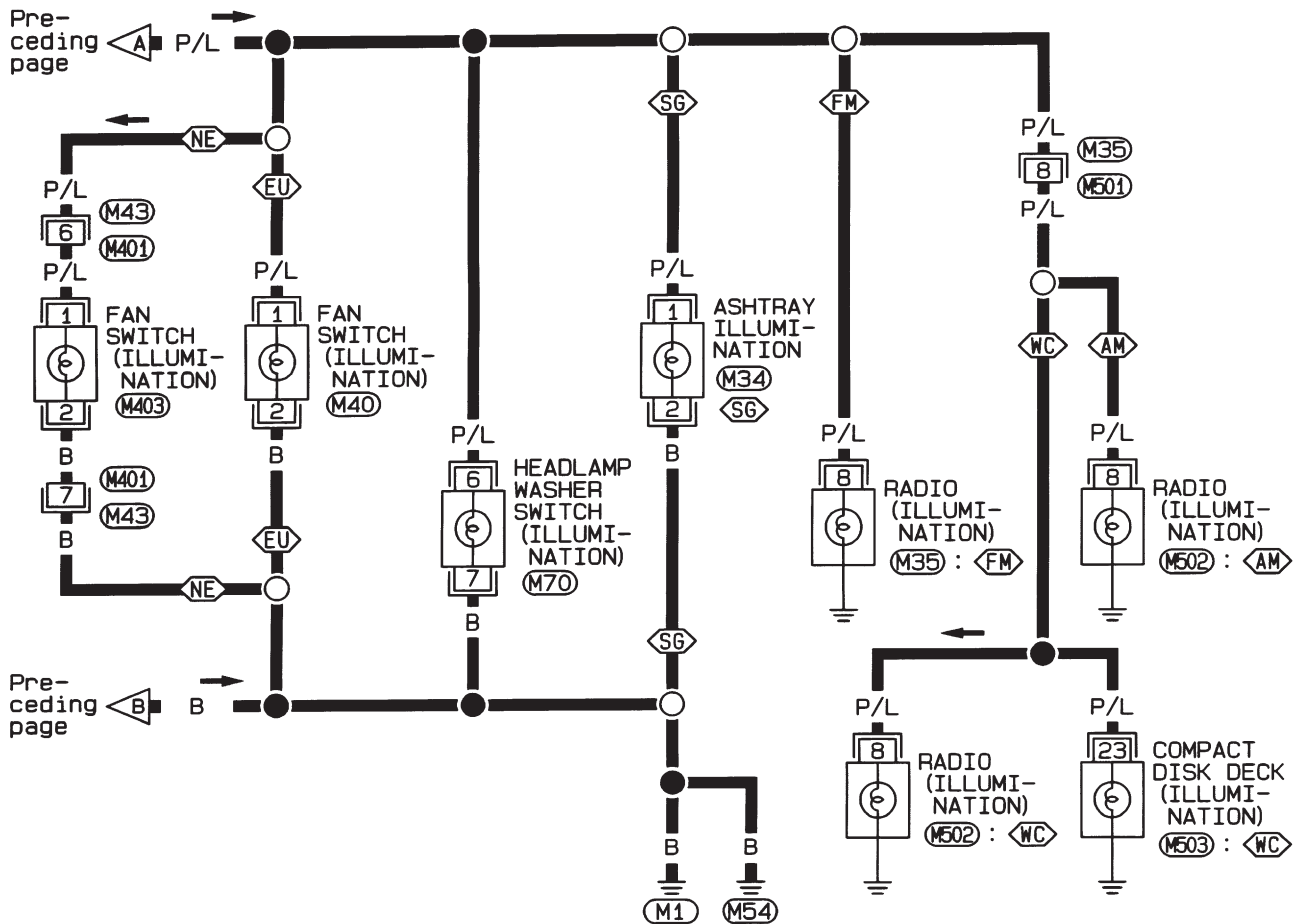

# ILLUMINATION

## Wiring Diagram — ILL —/RHD Models



EL-ILL-03

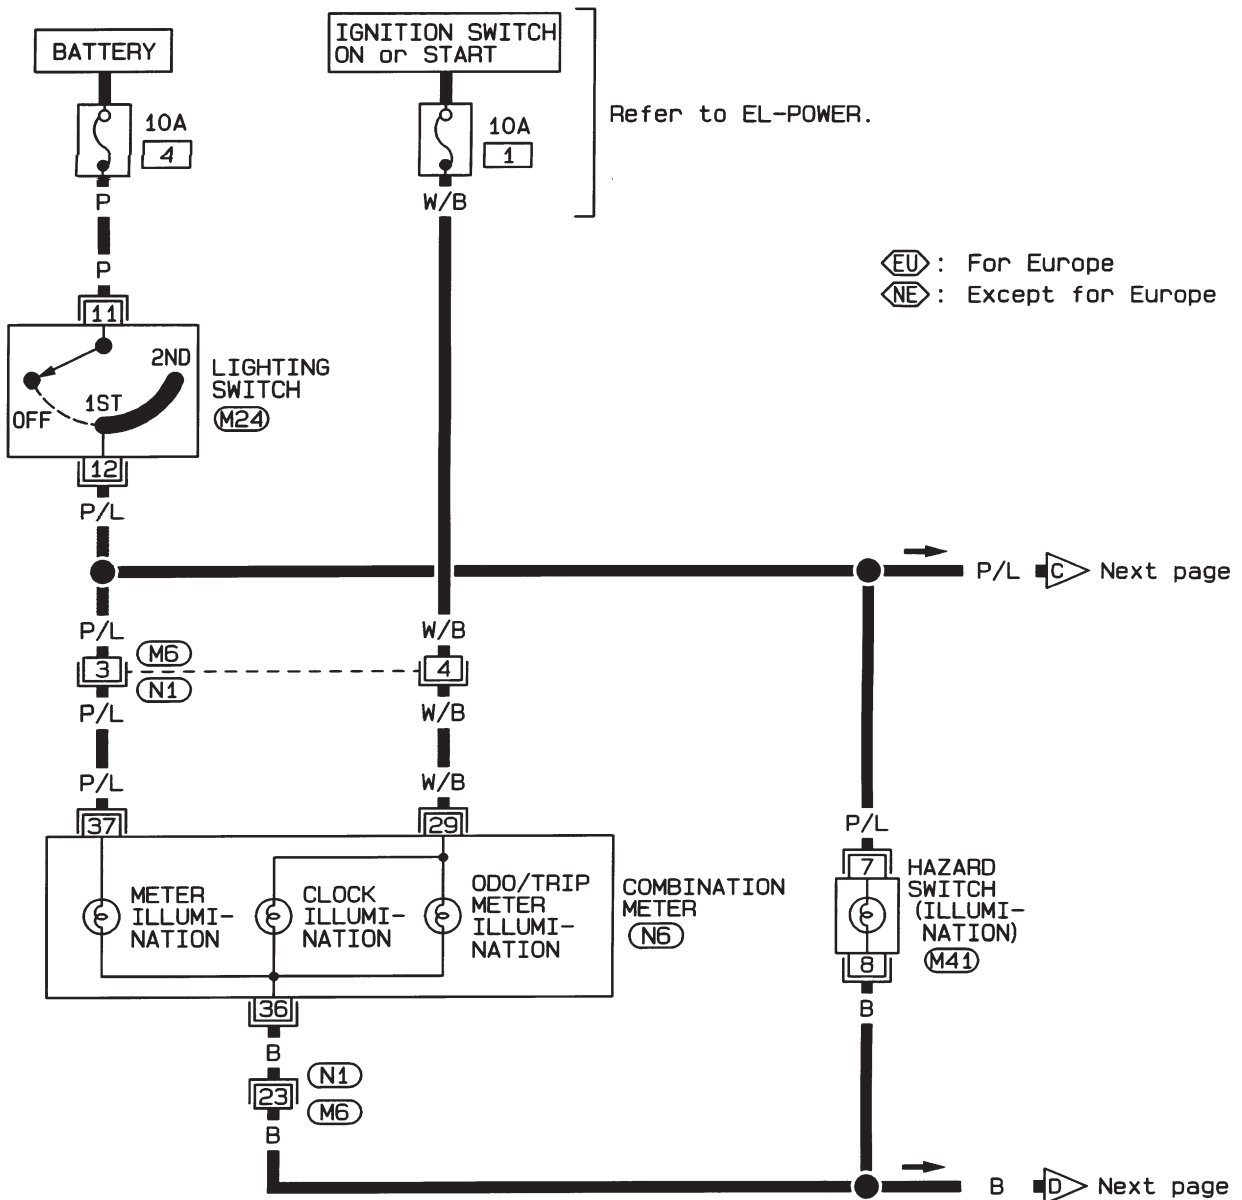

# ILLUMINATION

## Wiring Diagram — ILL —/RHD Models (Cont'd)




EL-ILL-04

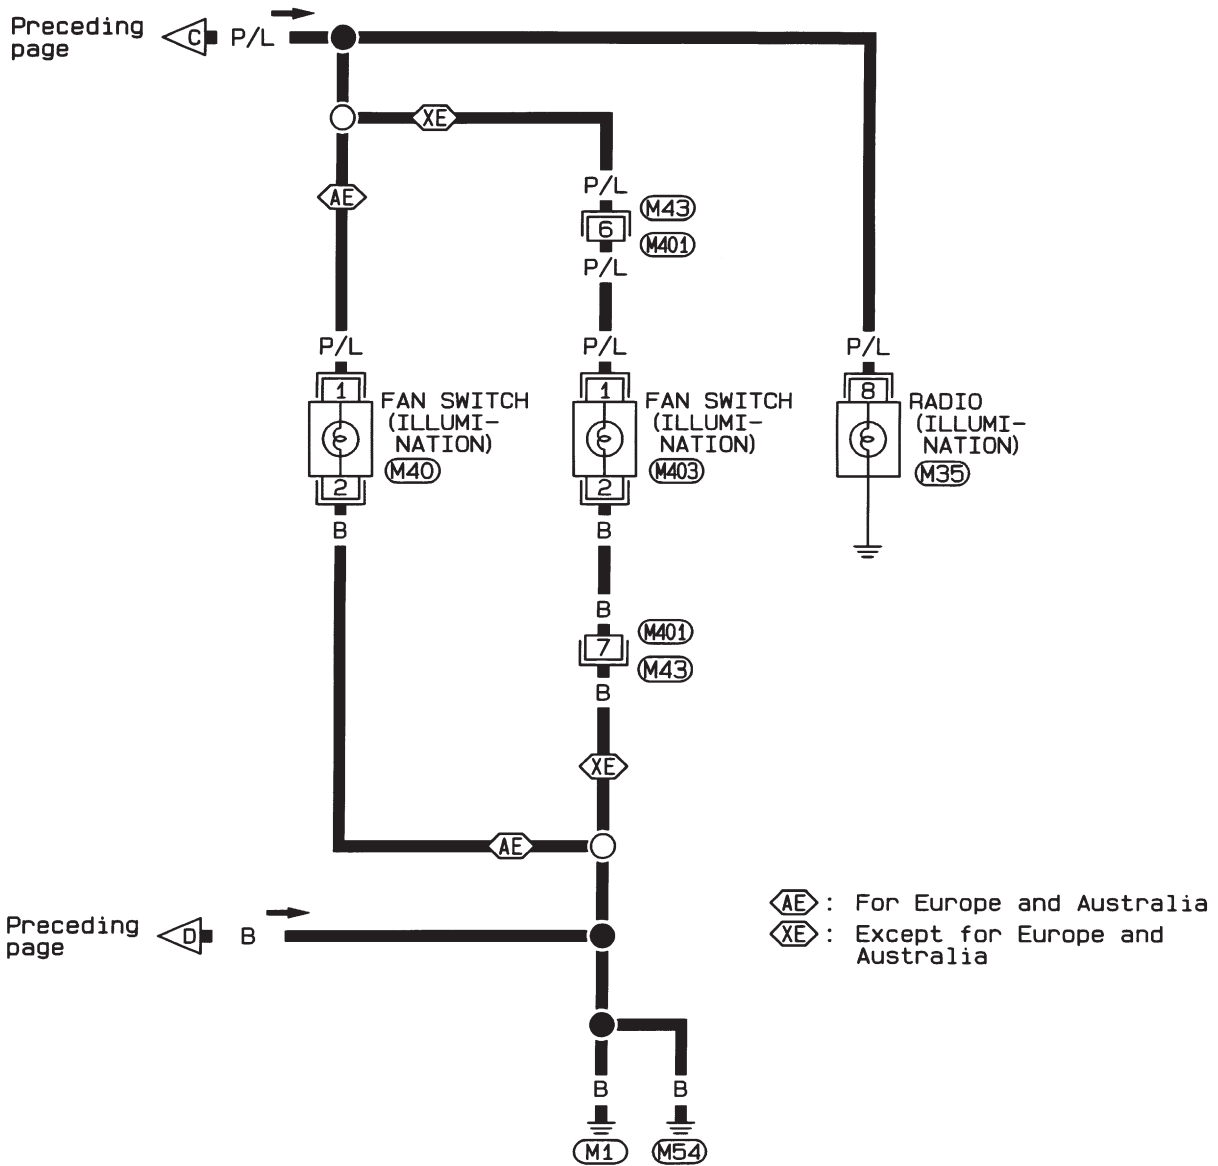

# INTERIOR AND SPOT LAMPS

## Wiring Diagram — INT/L —

EL-INT/L-01

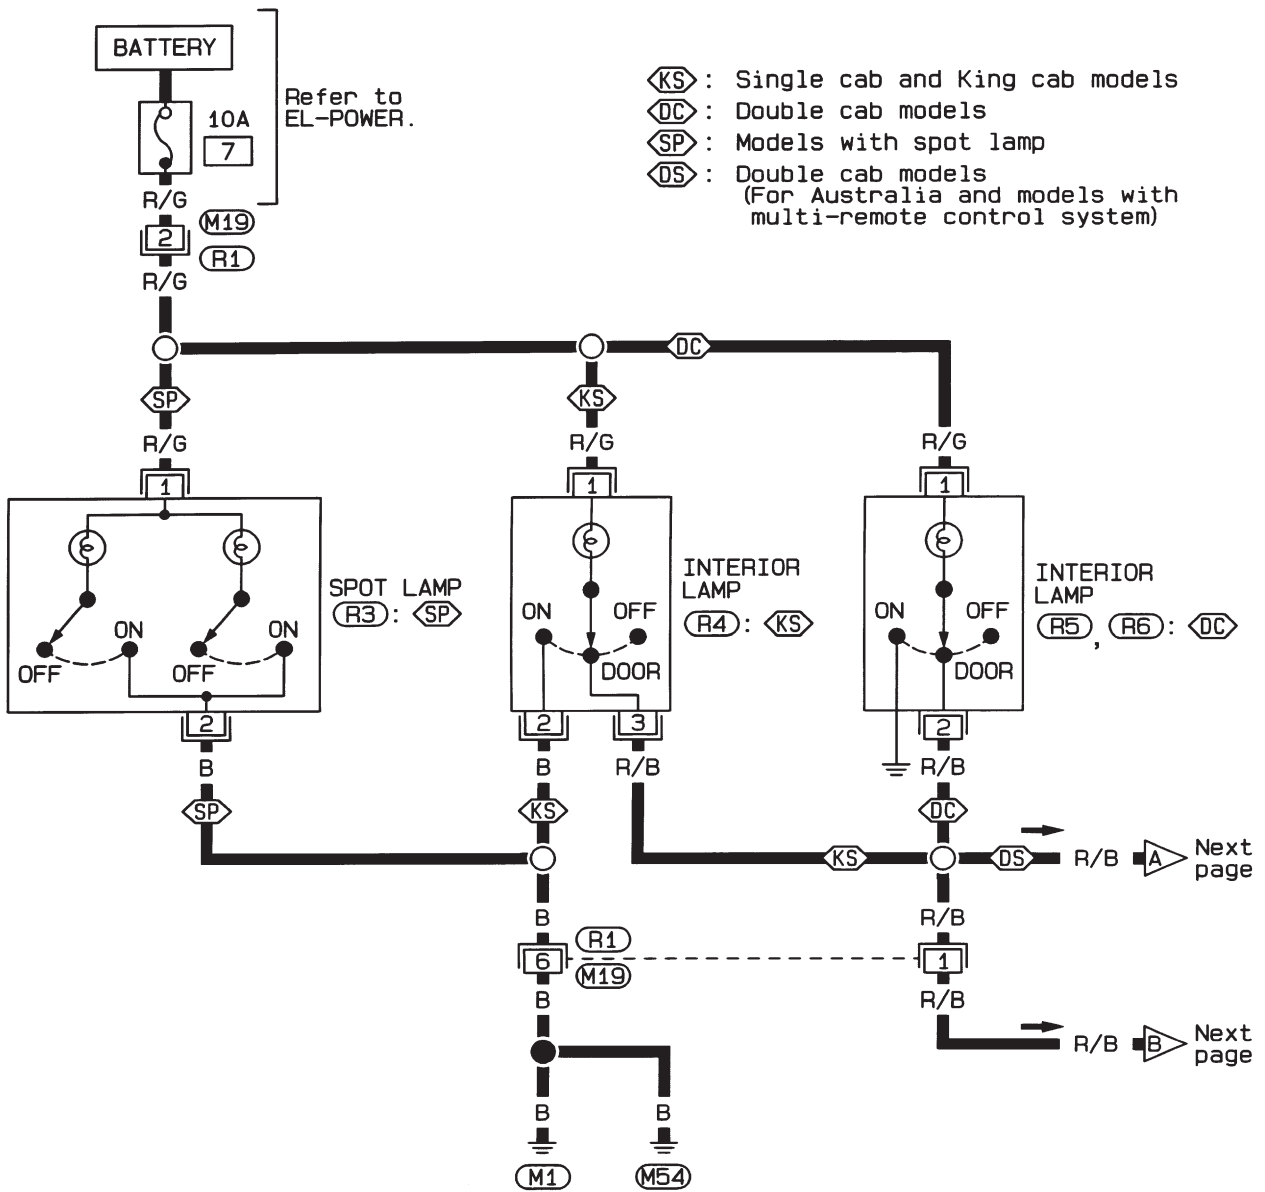




# INTERIOR AND SPOT LAMPS

## Wiring Diagram — INT/L — (Cont'd)

EL-INT/L-02

- ⓔⓤ : For Europe
- Ⓝⓔ : Except for Europe
- ⓐⓓ : For Australia and models with multi-remote control system
- ⓓⓈ : Double cab models (For Australia and models with multi-remote control system)

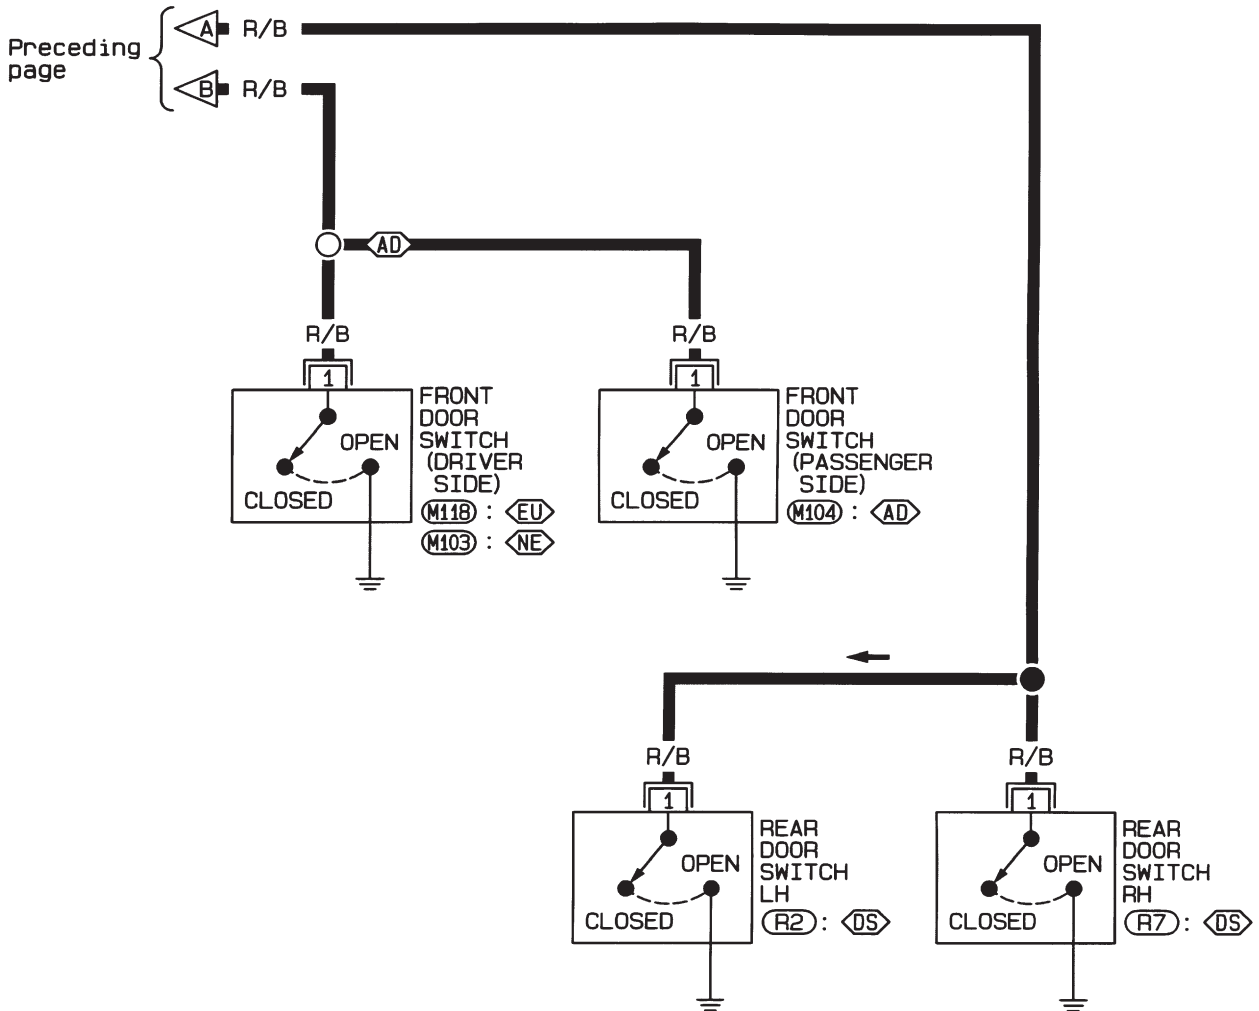



1 (M103) B, (M104) B, (R2) B, (R7) B

1 2 (M118) B  
3

# INTERIOR AND SPOT LAMPS

## Combination Meter



FOR EUROPE AND THE MIDDLE EAST (With tachometer)

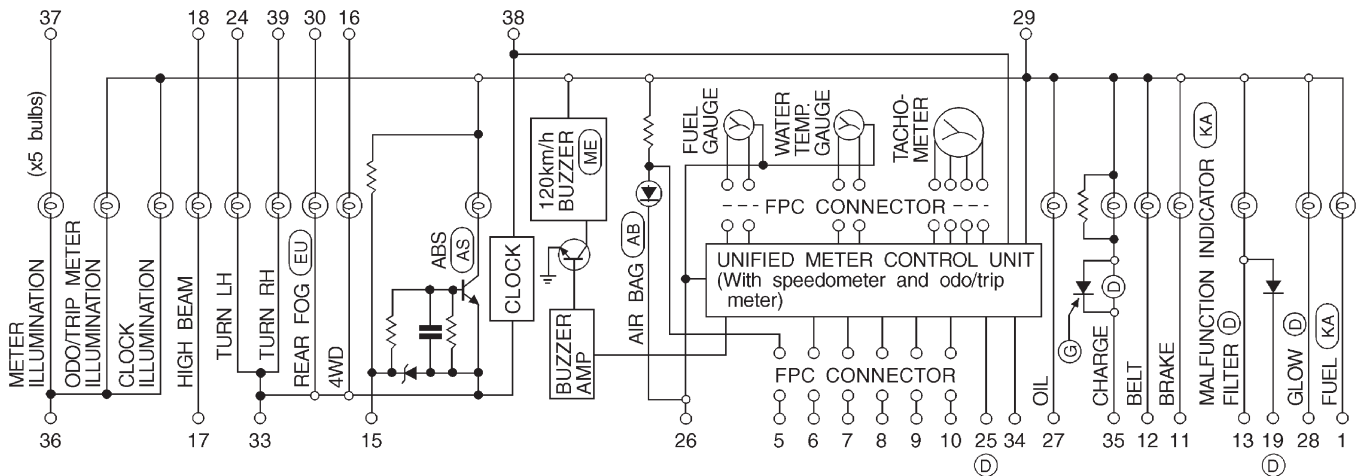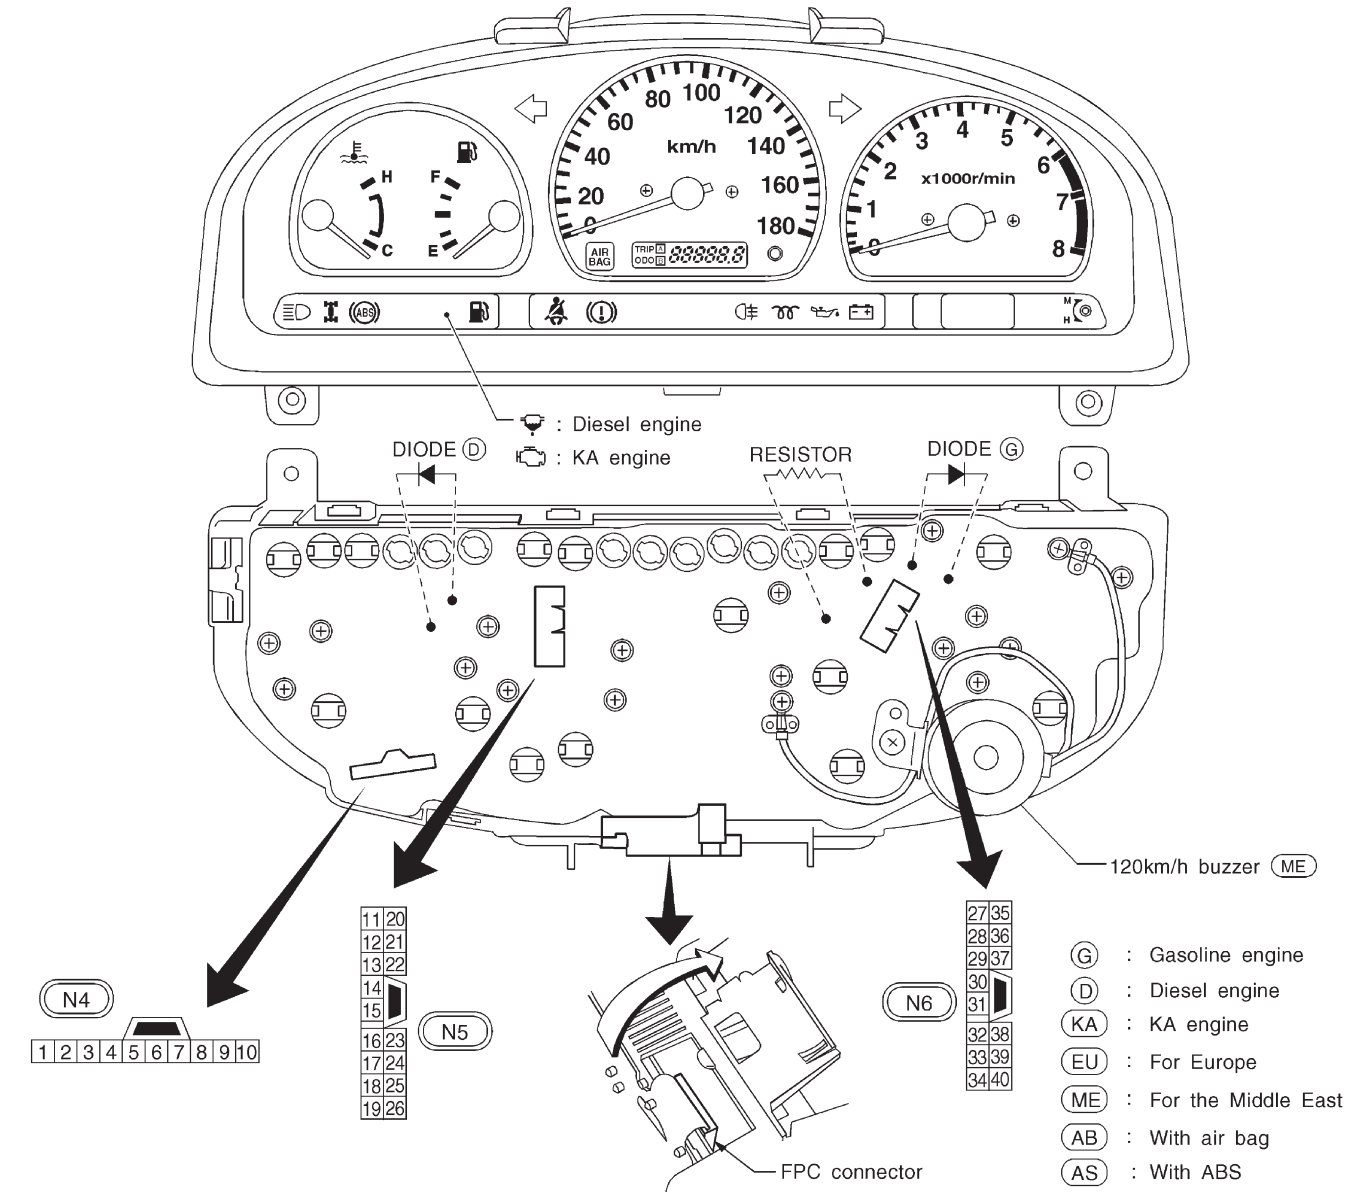


# INTERIOR AND SPOT LAMPS

## Combination Meter (Cont'd)

FOR EUROPE AND THE MIDDLE EAST (Without tachometer)

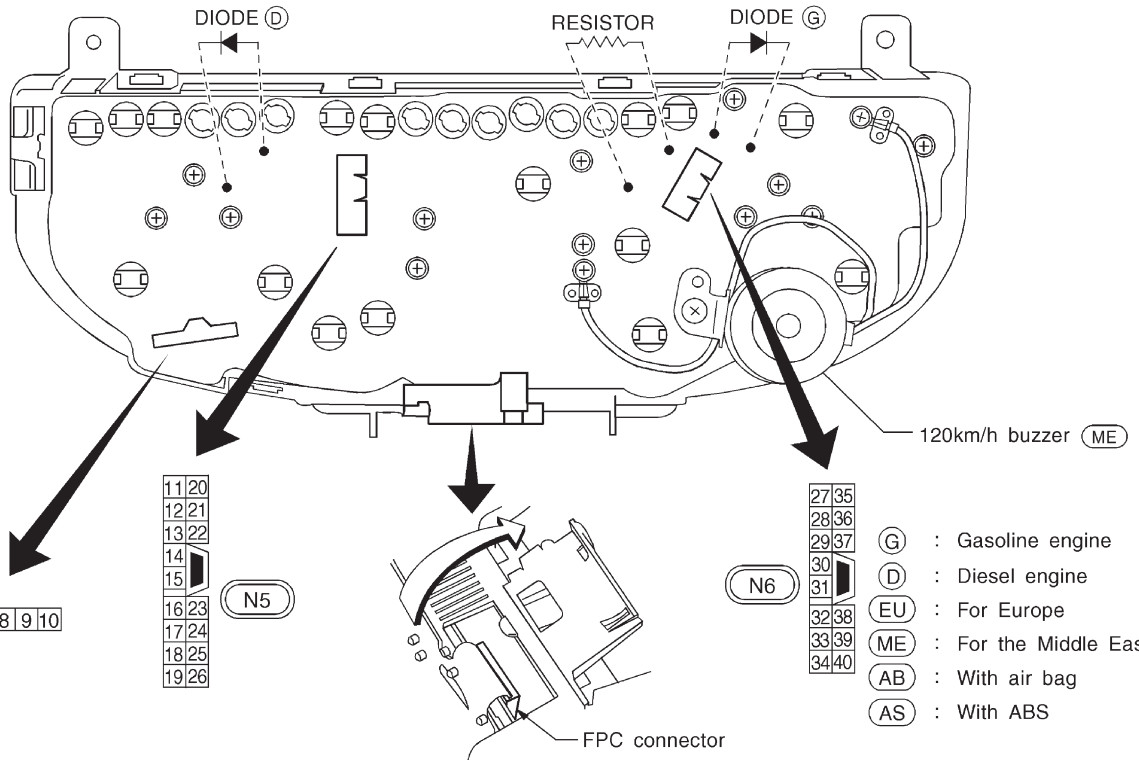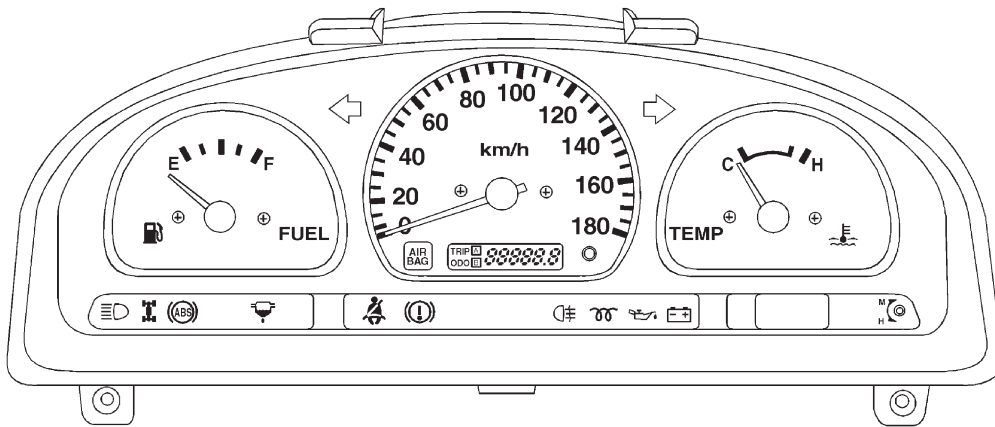


- (G) : Gasoline engine
- (D) : Diesel engine
- (EU) : For Europe
- (ME) : For the Middle East
- (AB) : With air bag
- (AS) : With ABS

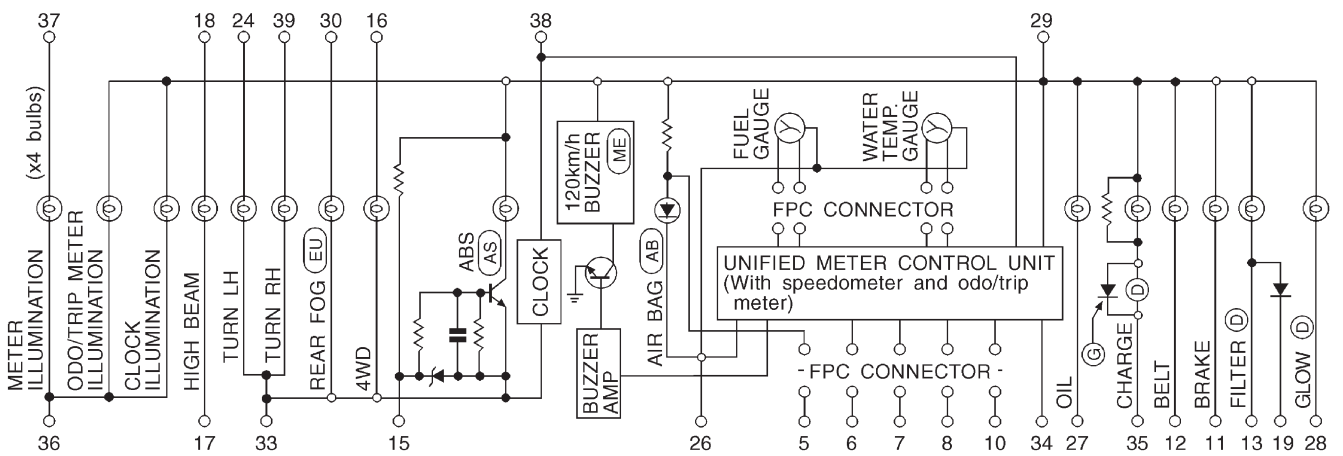

HEL351A

# INTERIOR AND SPOT LAMPS



## Schematic

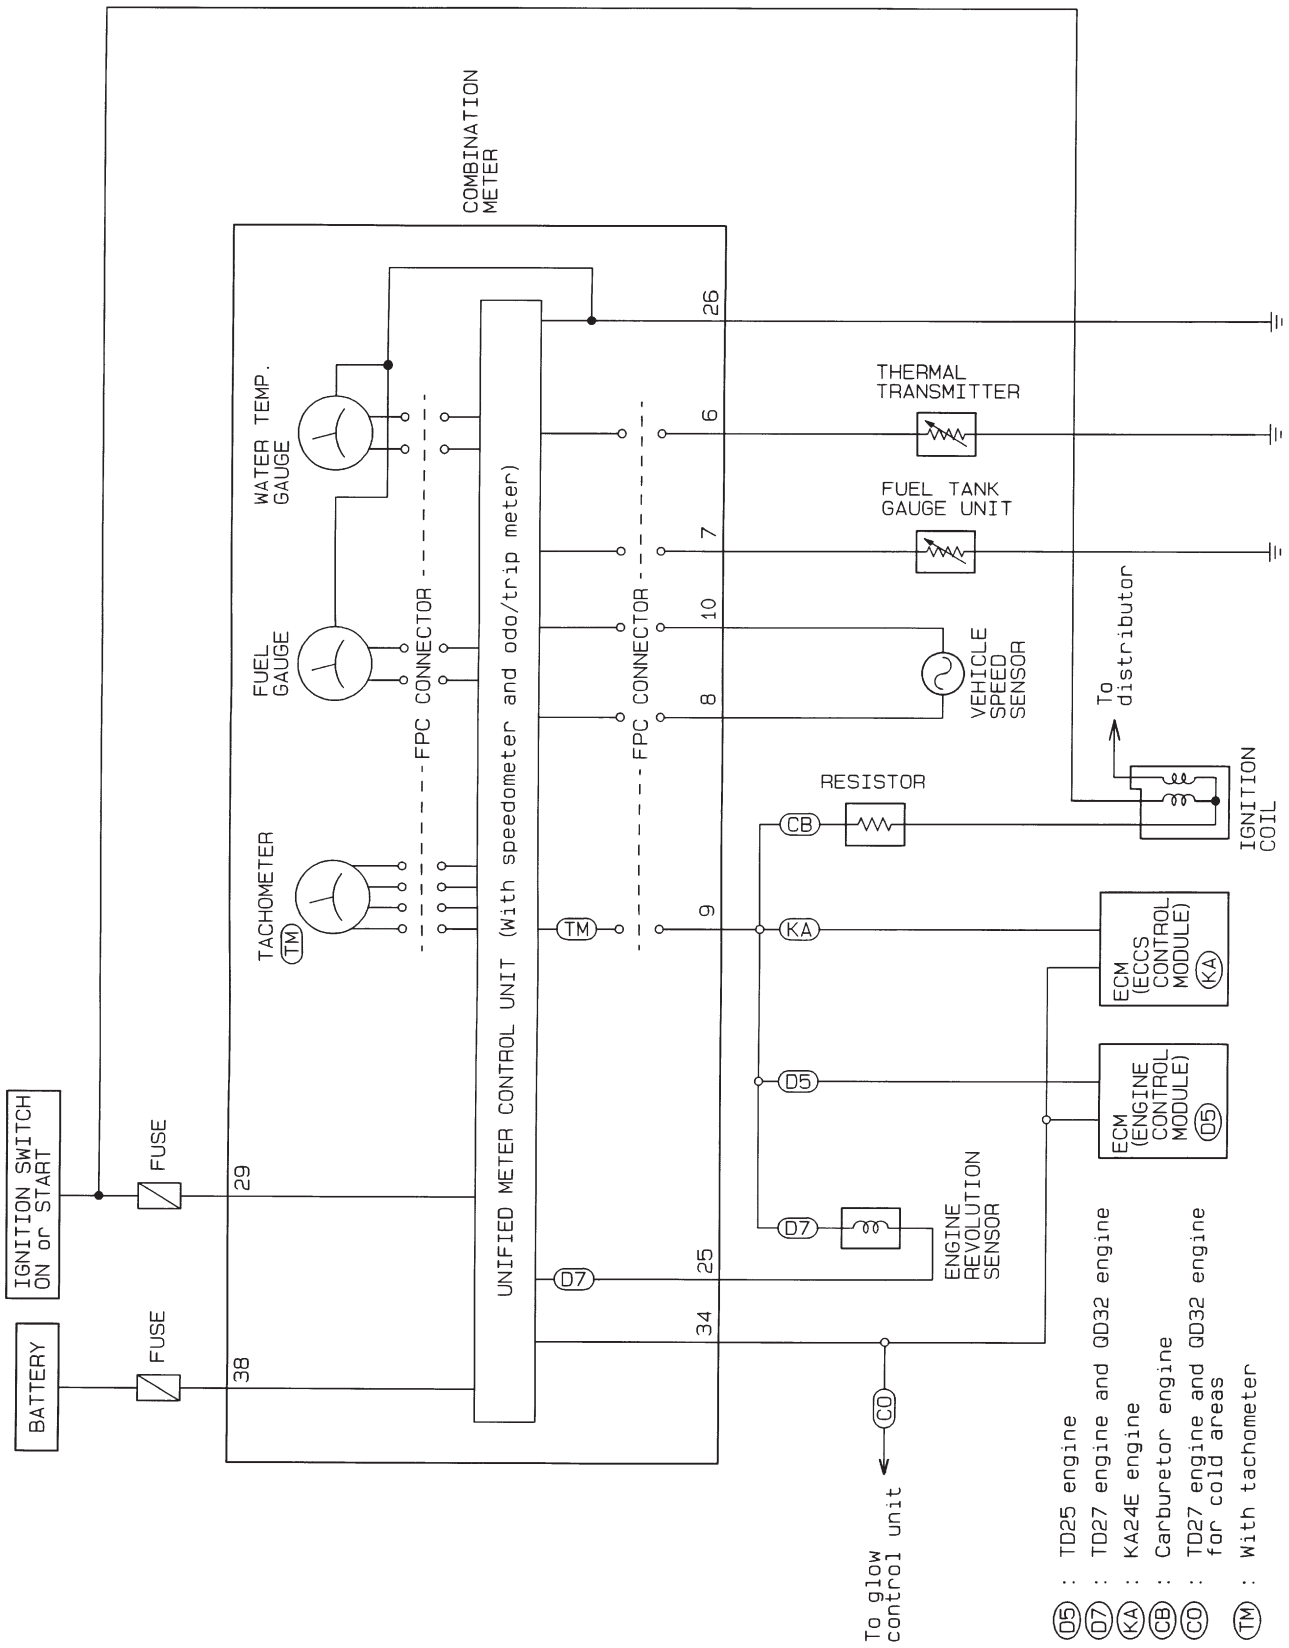

# INTERIOR AND SPOT LAMPS


## Wiring Diagram — METER —/LHD Models

### EL-METER-01

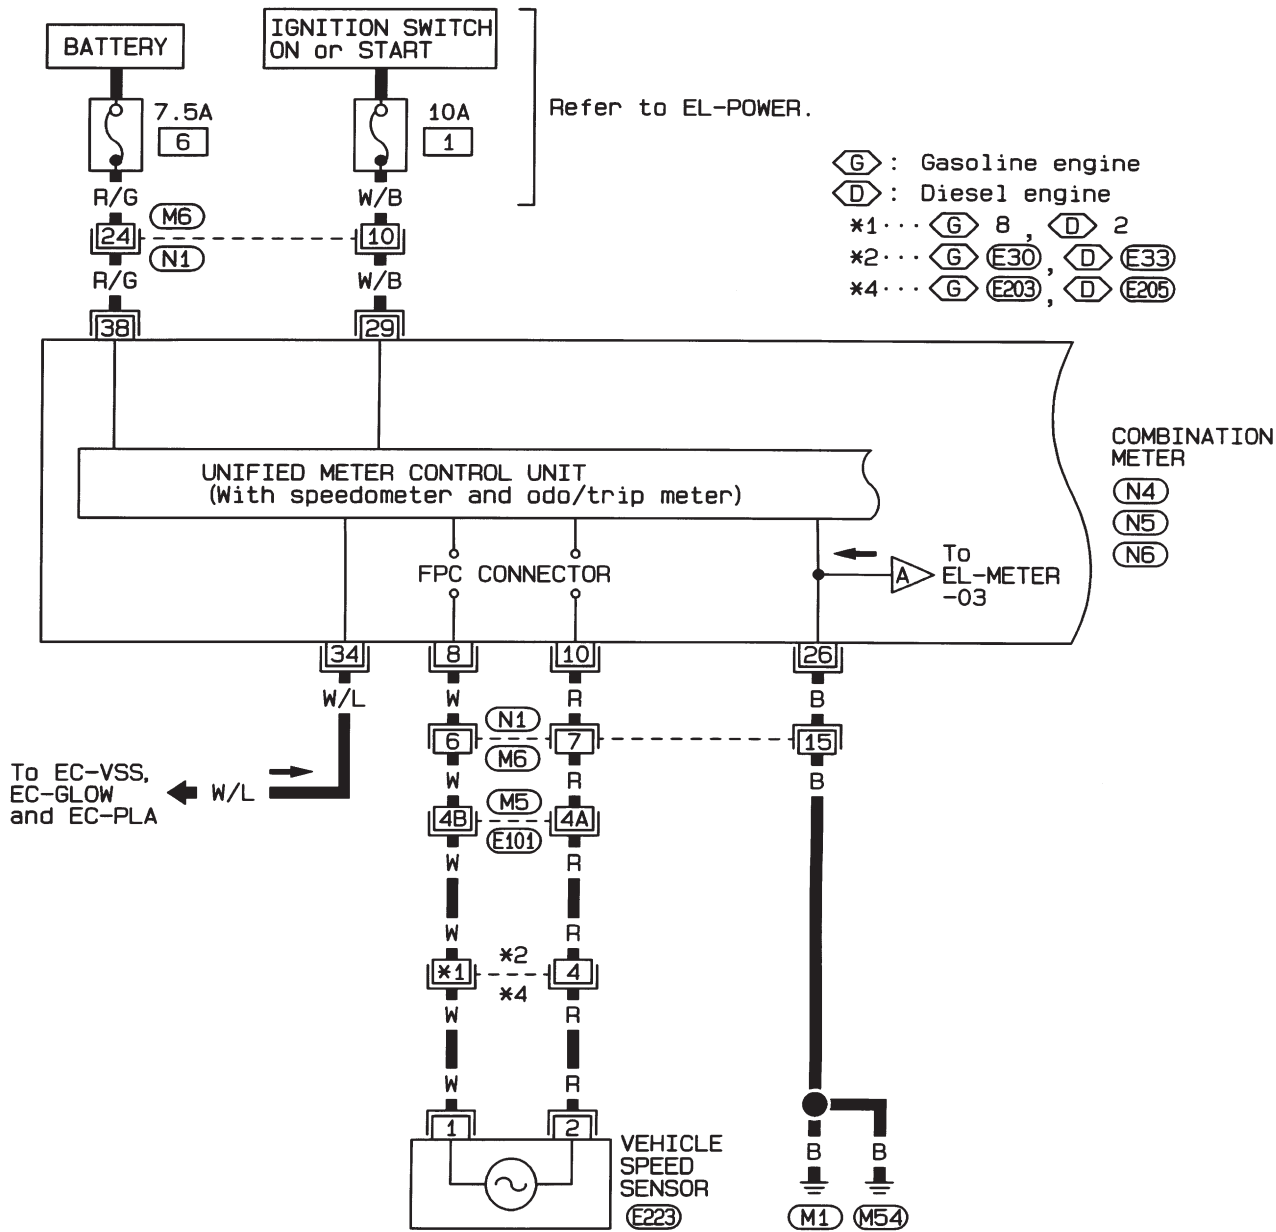

Refer to last page (Foldout page).



⊖ M5, ⊖ E101



# INTERIOR AND SPOT LAMPS

## Wiring Diagram — METER —/LHD Models (Cont'd)

EL-METER-02

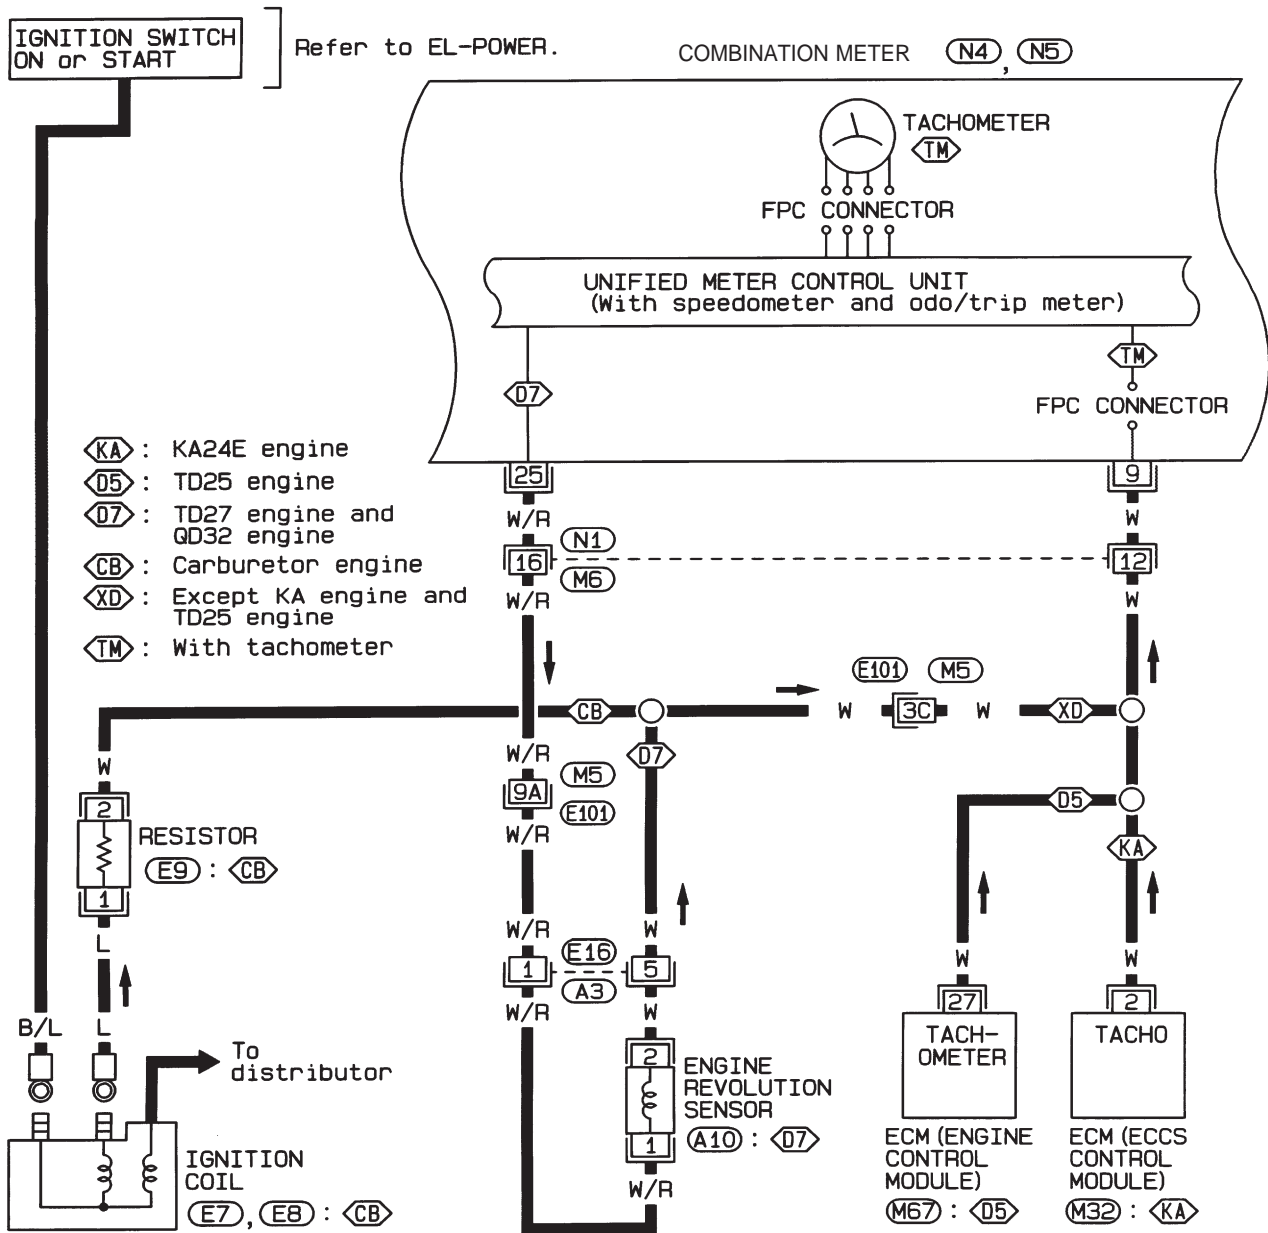

Refer to last page (Foldout page).



(M5), (E101)

(M32)

# INTERIOR AND SPOT LAMPS

## Wiring Diagram — METER —/LHD Models (Cont'd)

### EL-METER-03

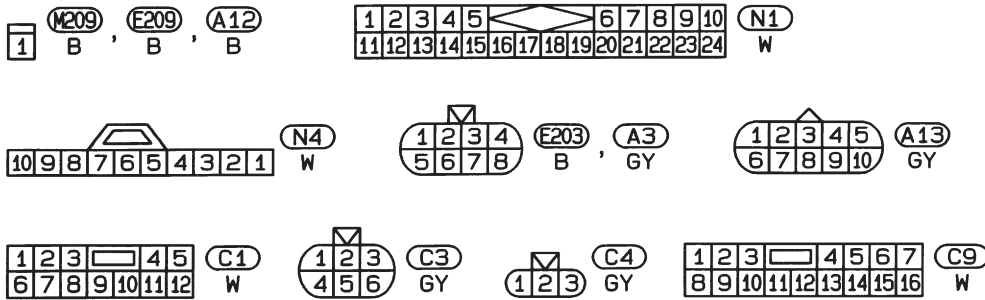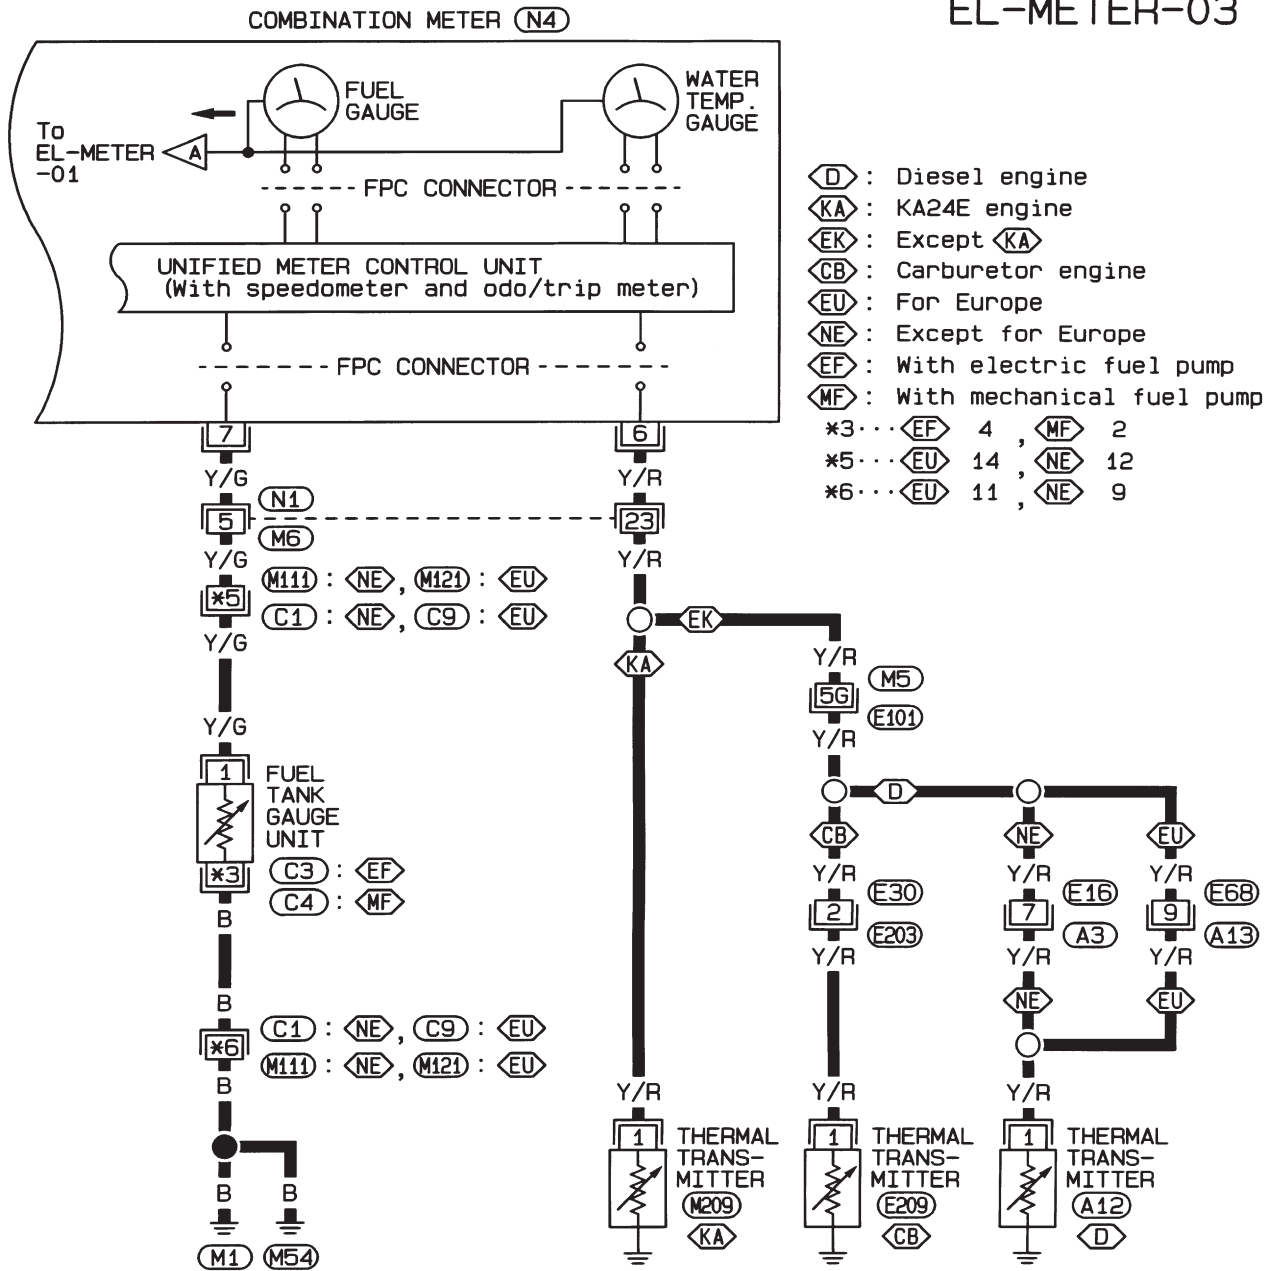


Refer to last page (Foldout page).

M5, E101

# INTERIOR AND SPOT LAMPS


## Wiring Diagram — METER —/RHD Models

### EL-METER-04

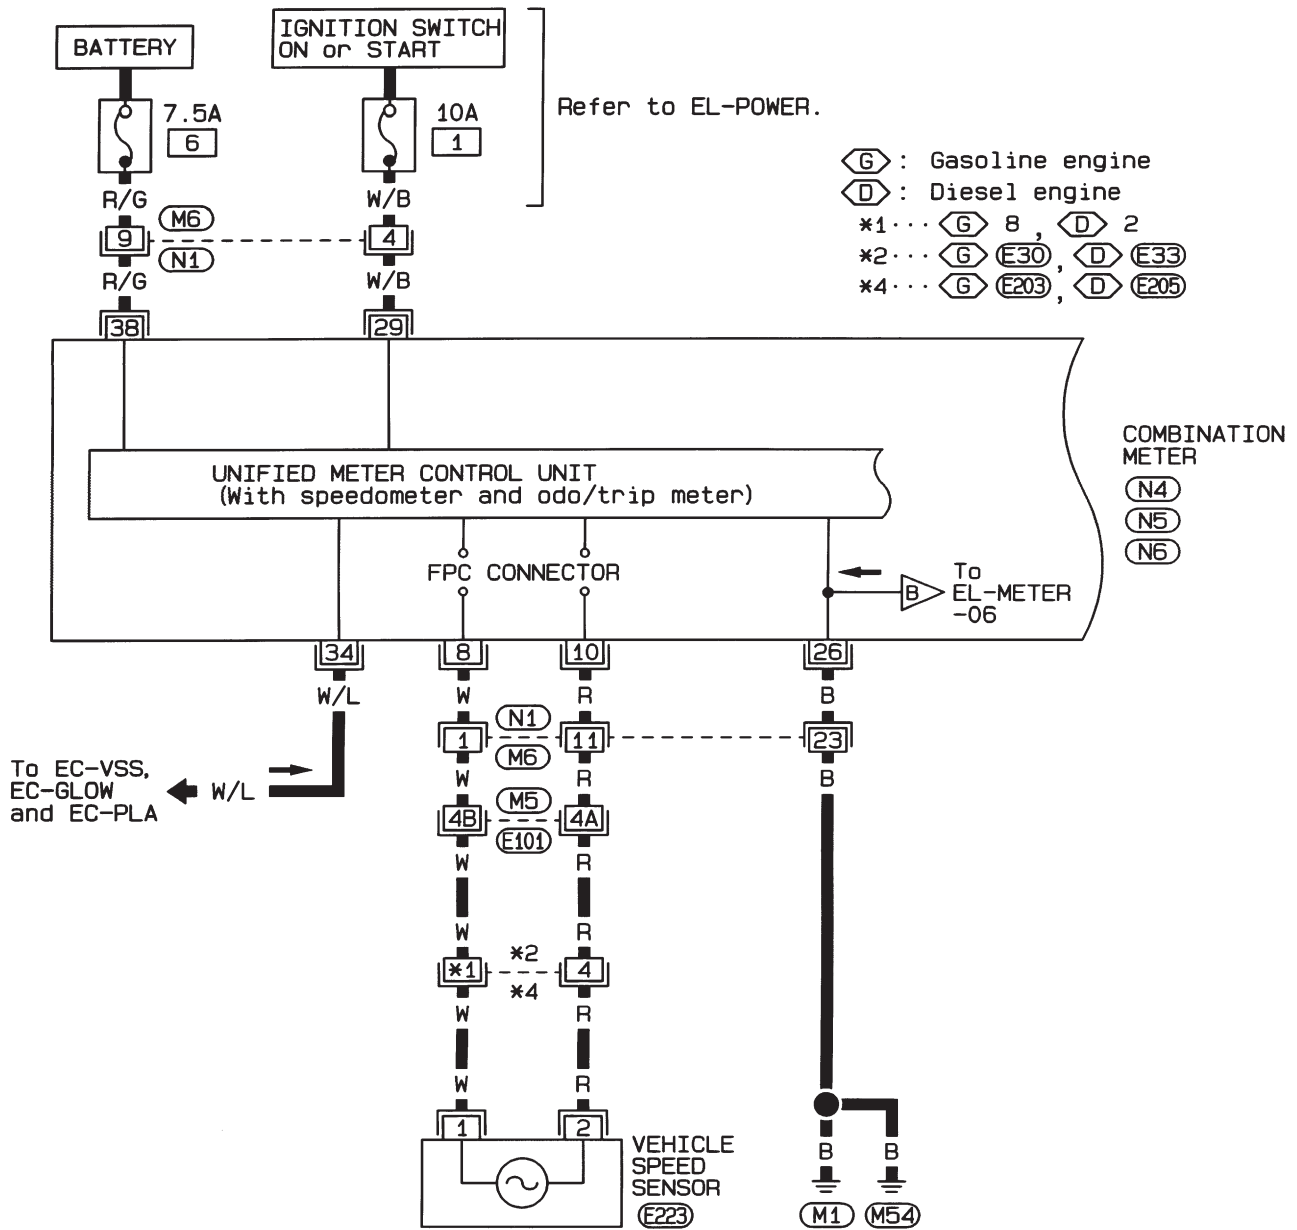

Refer to last page (Foldout page).

(M5), (E101)









# INTERIOR AND SPOT LAMPS

## Wiring Diagram — METER —/RHD Models (Cont'd)

EL-METER-05

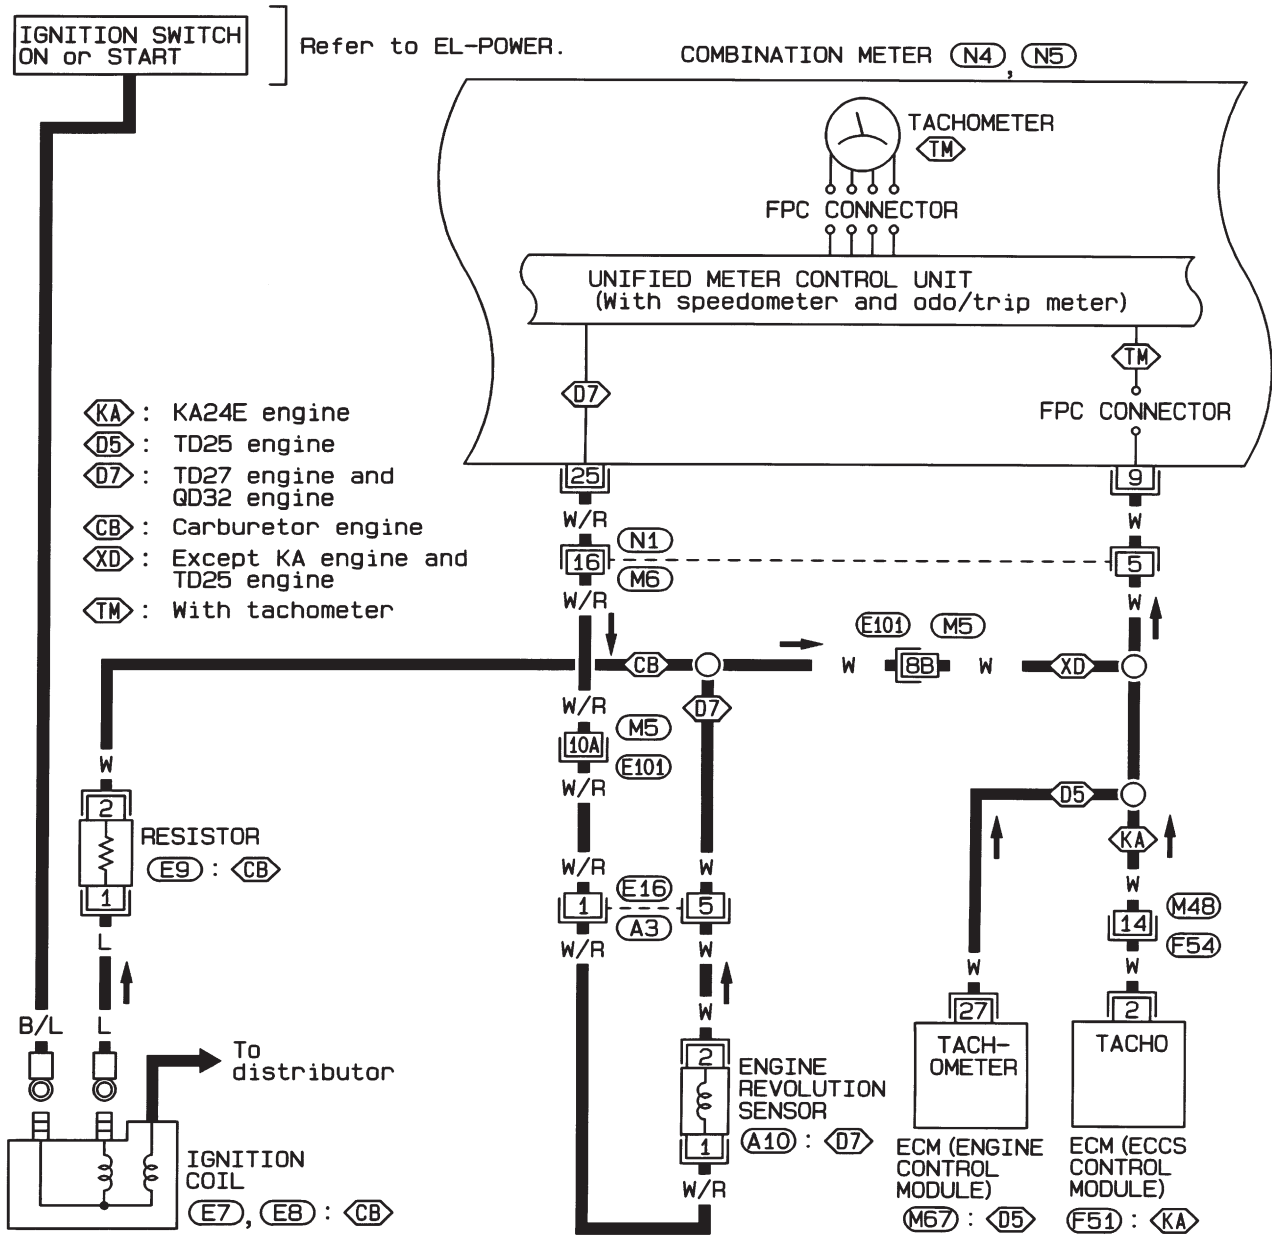

Refer to last page (Foldout page).








(M5), (E101)

(F51)

# INTERIOR AND SPOT LAMPS

## Wiring Diagram — METER —/RHD Models (Cont'd)

### EL-METER-06

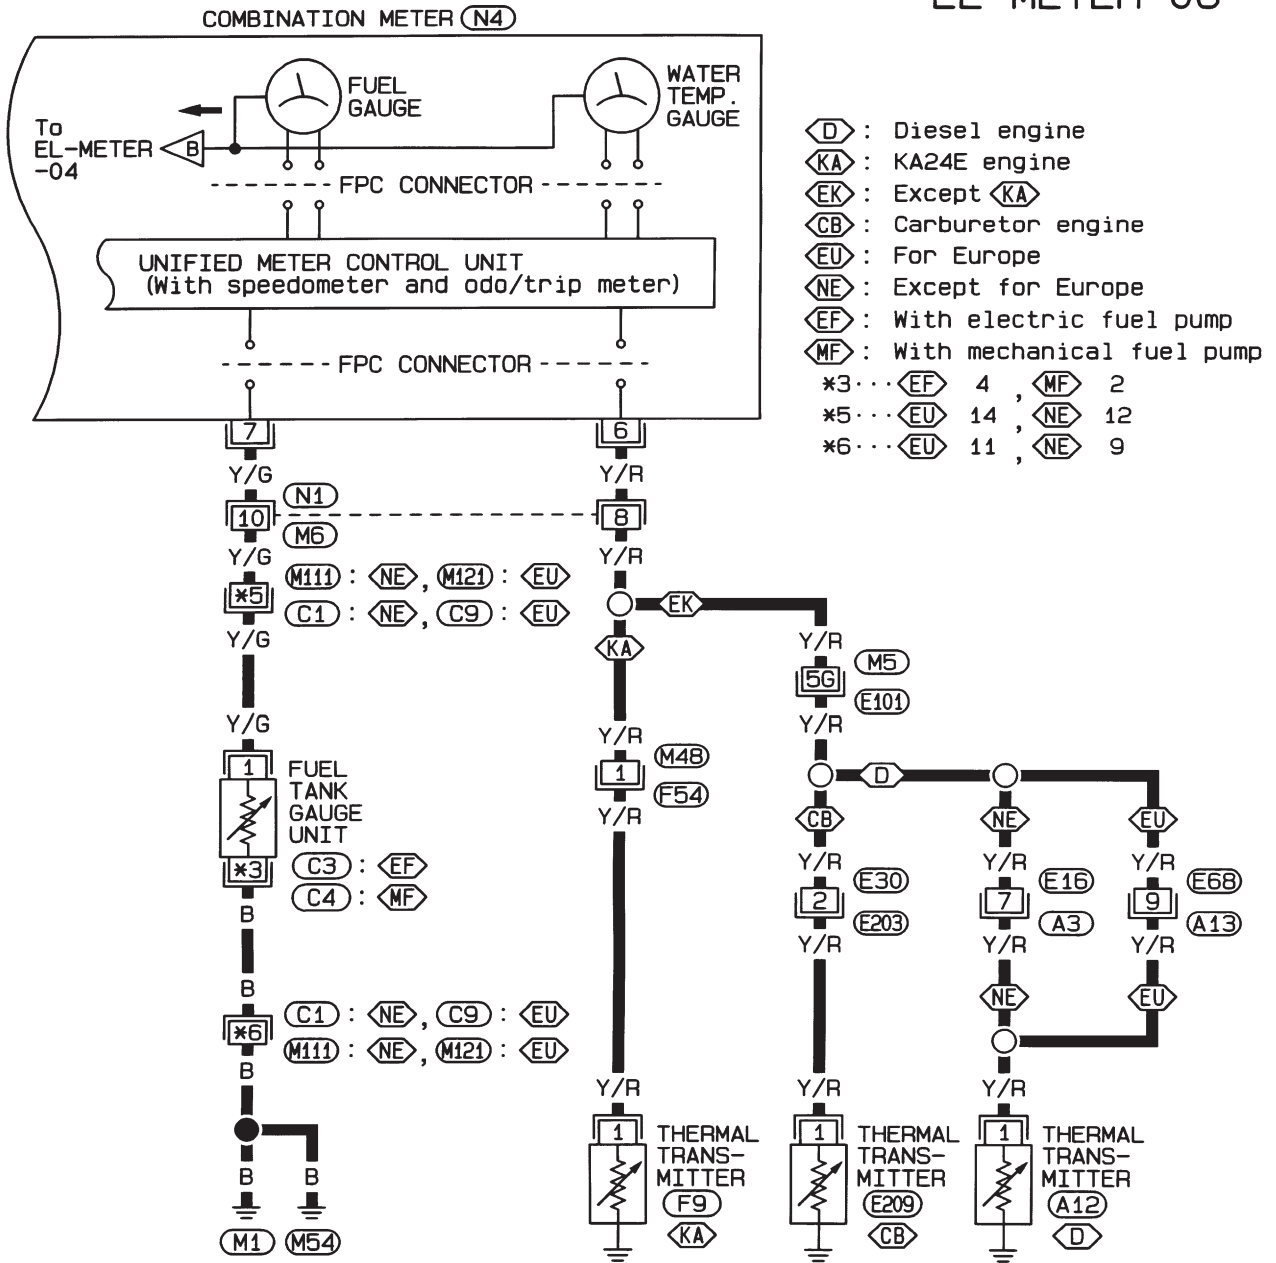

Refer to last page (Foldout page).

M5, E101

## INTERIOR AND SPOT LAMPS

### Unified Control Meter System Description


#### UNIFIED CONTROL METER

Speedometer, odo/trip meter, tachometer, fuel gauge and water temperature gauge are controlled totally by control unit combined with speedometer.

### Meter/gauge Operation and Odo/Trip Meter Segment Check in Diagnosis Mode

#### DIAGNOSIS FUNCTION

- Odo/trip meter segment can be checked in diagnosis mode.
- Meters/gauges can be checked in diagnosis mode.

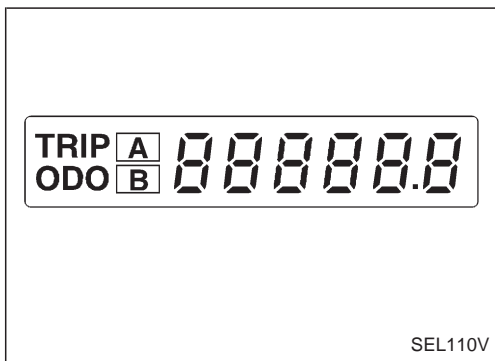


#### HOW TO ALTERNATE DIAGNOSIS MODE

1. Turn ignition switch to ON and change odo/trip meter to "TRIP A" or "TRIP B".
2. Turn ignition switch to OFF.
3. Turn ignition switch to ON when pushing odo/trip meter switch.
4. Confirm that trip meter indicates "000.0".
5. Push odo/trip meter switch more than three times within 5 seconds.
6. All odo/trip meter segments should be turned on.

**NOTE: If some segments are not turned on, speedometer (unified meter control unit) with odo/trip meter should be replaced.**

At this point, the unified control meter is turned to diagnosis mode.

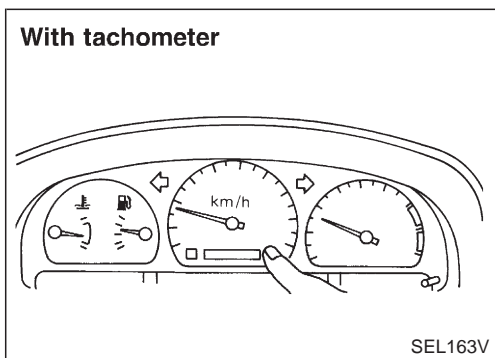


7. Push odo/trip meter switch. Indication of each meter/gauge should be as shown left during pushing odo/trip meter switch if it is no malfunctioning.

**NOTE: It takes about 1 minute for indication of fuel gauge to become stable.**

## INTERIOR AND SPOT LAMPS

### Meter/gauge Operation and Odo/Trip Meter Segment Check in Diagnosis Mode (Cont'd)

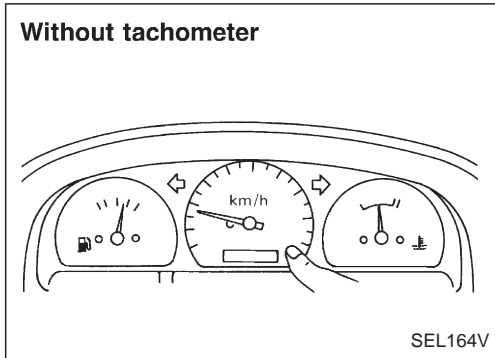


### Flexible Print Circuit (FPC)


Tachometer, fuel gauge and water temperature gauge are connected with unified meter control unit (speedometer) by Flexible Print Circuit (FPC) connector. When replace or remove and install unified control unit (speedometer), disconnect and connect FPC connector according to the following steps.

### DISCONNECT

1. Remove front cover from combination meter housing.

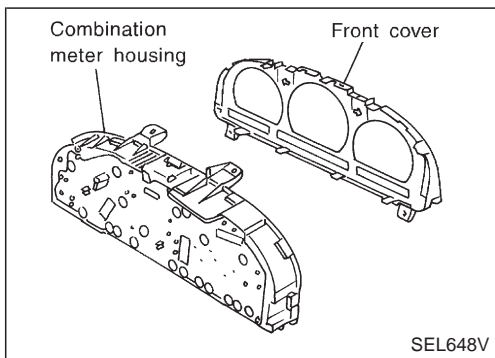


2. Open connector cover.
3. Release connector lock by holding both ends of it and pulling it up.
4. Disconnect FPC by pulling it up.

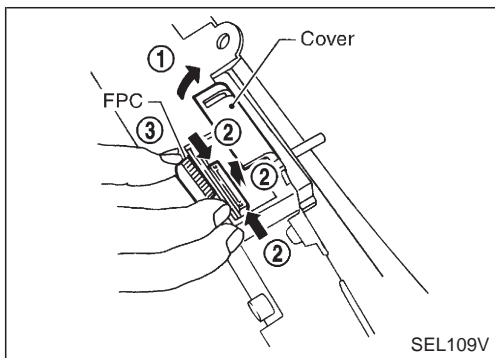

### CONNECT


1. Insert FPC into connector and lock connector pushing FPC downward.
2. Check secure connection of FPC.
3. Check continuity of check land terminals for secure connection of FPC.  
**Resistance: 0Ω**
4. Close connector cover.

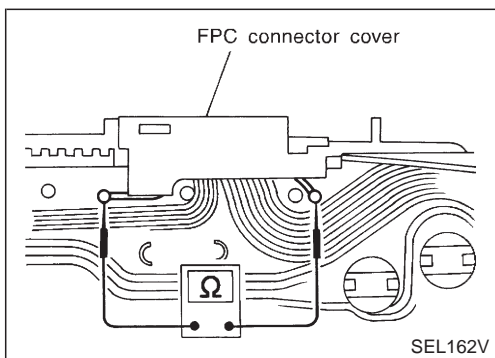

# INTERIOR AND SPOT LAMPS

## Trouble Diagnoses

### PRELIMINARY CHECK

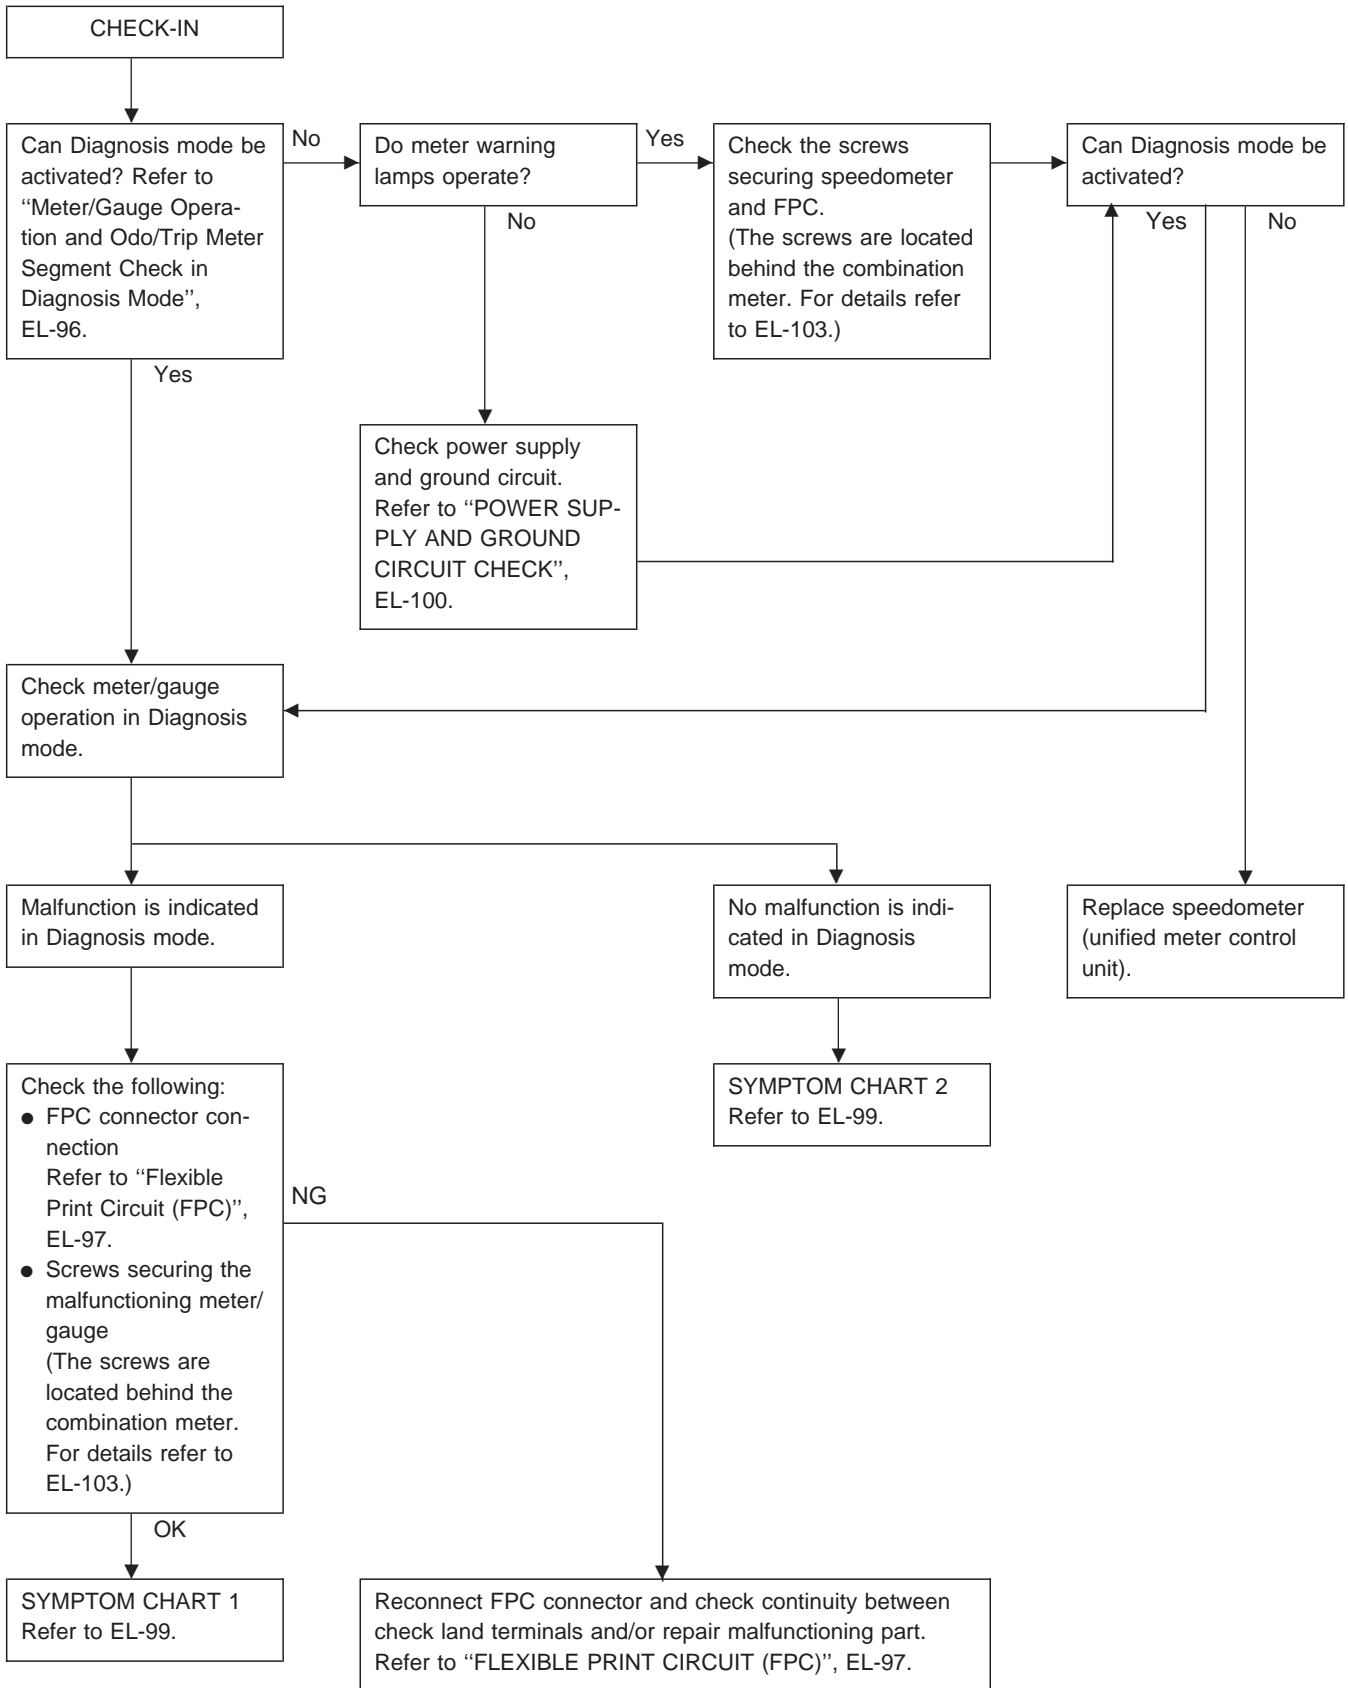

## INTERIOR AND SPOT LAMPS

### Trouble Diagnoses (Cont'd)

Before starting trouble diagnoses below, perform PRELIMINARY CHECK, EL-98.

#### SYMPTOM CHART 1 (MALFUNCTION IS INDICATED IN DIAGNOSIS MODE)

Symptom	Possible causes	Repair order
Speedometer and/or odo/trip meter indicate(s) malfunction in Diagnosis mode.	<ul style="list-style-type: none"> <li>● Speedometer (Unified meter control unit)</li> </ul>	<ul style="list-style-type: none"> <li>● Replace speedometer (unified meter control unit).</li> </ul>
Multiple meter/gauge indicate malfunction in Diagnosis mode.		
One of tachometer/fuel gauge/water temp. gauge indicates malfunction in Diagnosis mode.	<ul style="list-style-type: none"> <li>● Meter/Gauge</li> <li>● Speedometer (Unified meter control unit)</li> </ul>	<ol style="list-style-type: none"> <li>1. Check resistance of meter/gauge indicating malfunction. If the resistance is NG, replace the meter/gauge. Refer to "METER/GAUGE RESISTANCE CHECK", EL-103.</li> <li>2. If the resistance is OK, replace speedometer (unified meter control unit).</li> </ol>

#### SYMPTOM CHART 2 (NO MALFUNCTION IS INDICATED IN DIAGNOSIS MODE)


Symptom	Possible causes	Repair order
Speedometer and odo/trip meter are malfunctioning.	<ol style="list-style-type: none"> <li>1. Sensor                             <ul style="list-style-type: none"> <li>- Speedometer, Odo/Trip meter</li> </ul> </li> <li>2. FPC connector</li> <li>3. Speedometer (Unified meter control unit)</li> </ol>	<ol style="list-style-type: none"> <li>1. Check vehicle speed sensor. INSPECTION/VEHICLE SPEED SENSOR (Refer to EL-101.)</li> <li>2. Check FPC connector. Refer to "FLEXIBLE PRINT CIRCUIT (FPC)", EL-97.</li> <li>3. Replace speedometer (unified meter control unit).</li> </ol>
Multiple meter/gauge are malfunctioning. (except speedometer, odo/trip meter)	<ol style="list-style-type: none"> <li>1. FPC connector</li> <li>2. Speedometer (Unified meter control unit)</li> </ol>	<ol style="list-style-type: none"> <li>1. Check FPC connector. Refer to "FLEXIBLE PRINT CIRCUIT (FPC)", EL-97.</li> <li>2. Replace speedometer (unified meter control unit).</li> </ol>
One of tachometer/fuel gauge/water temp. gauge is malfunctioning.	<ol style="list-style-type: none"> <li>1. Sensor/Engine revolution signal                             <ul style="list-style-type: none"> <li>- Tachometer</li> <li>- Fuel gauge</li> <li>- Water temp. gauge</li> </ul> </li> <li>2. FPC connector</li> <li>3. Speedometer (Unified meter control unit)</li> </ol>	<ol style="list-style-type: none"> <li>1. Check the sensor for malfunctioning meter/gauge. INSPECTION/ENGINE REVOLUTION SIGNAL (Refer to EL-101.) INSPECTION/FUEL TANK GAUGE (Refer to EL-102.) INSPECTION/THERMAL TRANSMITTER (Refer to EL-102.)</li> <li>2. Check FPC connector. Refer to "FLEXIBLE PRINT CIRCUIT (FPC)", EL-97.</li> <li>3. Replace speedometer (unified meter control unit).</li> </ol>

## INTERIOR AND SPOT LAMPS

### Trouble Diagnoses (Cont'd)

#### POWER SUPPLY AND GROUND CIRCUIT CHECK


##### Power supply circuit check

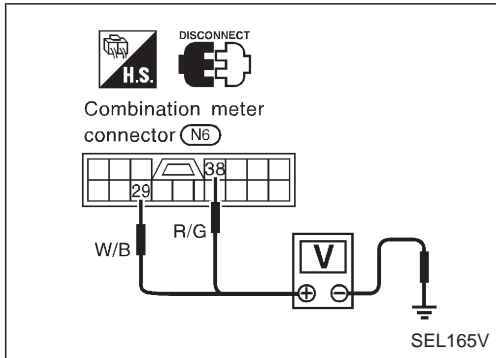

Terminals		Ignition switch position		
⊕	⊖	OFF	ACC	ON
Ⓝ38	Ground	Battery voltage	Battery voltage	Battery voltage
Ⓝ29	Ground	0V	0V	Battery voltage

If NG, check the following.

- 7.5A fuse [No. 6], located in fuse block (J/B)]
- 10A fuse [No. 1], located in fuse block (J/B)]
- Harness for open or short between fuse and combination meter

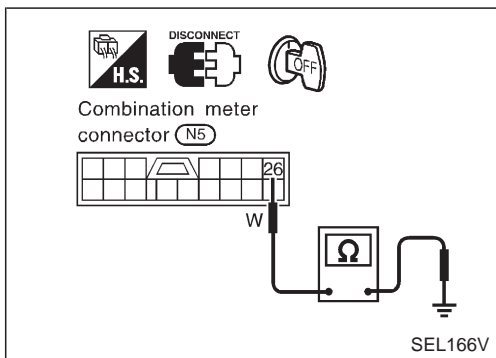


##### Ground circuit check

Terminals	Continuity
Ⓝ26 - Ground	Yes

# INTERIOR AND SPOT LAMPS

## Trouble Diagnoses (Cont'd)

### INSPECTION/VEHICLE SPEED SENSOR

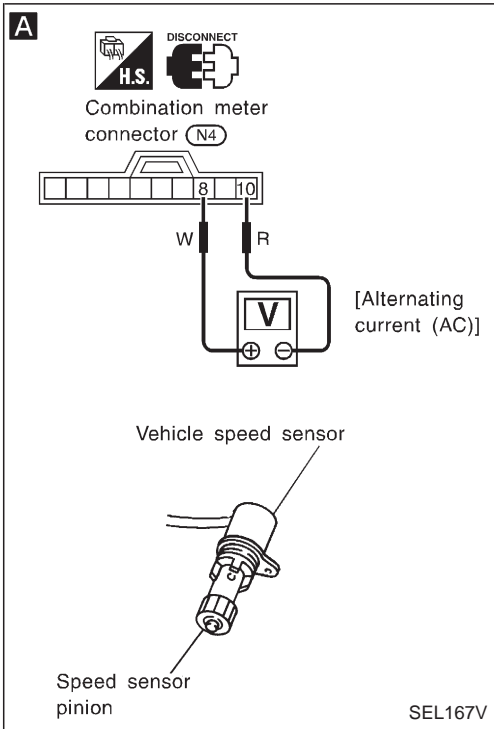

**A**

#### CHECK VEHICLE SPEED SENSOR OUTPUT.

1. Remove vehicle speed sensor from transmission.
  2. Check voltage between combination meter terminals ⑧ and ⑩ while quickly turning speed sensor pinion.
- Voltage: Approx. 0.5V**

OK

Vehicle speed sensor is OK.

NG

**B**

#### CHECK VEHICLE SPEED SENSOR.



- Check resistance between vehicle speed sensor terminals ① and ②.
- Resistance: Approx. 250Ω**

NG

Replace vehicle speed sensor.

OK

Check harness or connector between speedometer and vehicle speed sensor.

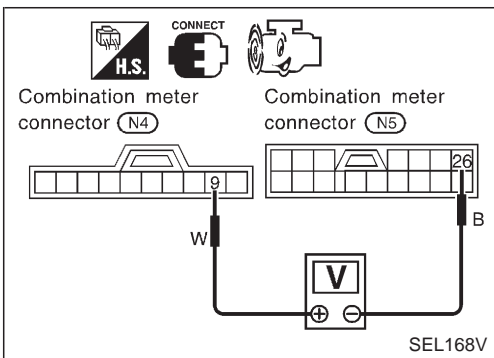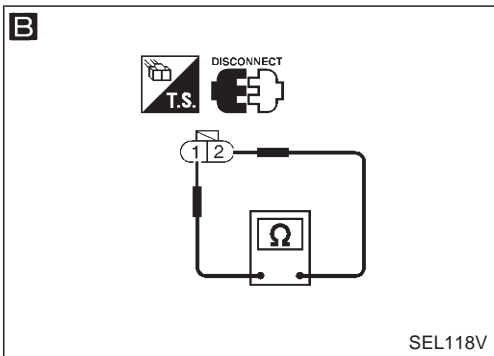

### INSPECTION/ENGINE REVOLUTION SIGNAL (Models with tachometer)

Engine	Check item	Terminals		Explanation
		⊕	⊖	
Injection	DC voltage	⑨	⑳	Higher rpm = Higher voltage Lower rpm = Lower voltage Voltage should change with rpm.
Diesel (TD25)				
Carburetor	AC voltage			





If NG, check the following.

Engine	Check item
Injection	<ul style="list-style-type: none"> <li>● Harness for open or short and connection</li> </ul>
Carburetor	<ul style="list-style-type: none"> <li>● Harness for open or short and connection</li> <li>● Resistor etc.</li> </ul>
Diesel	<ul style="list-style-type: none"> <li>● Harness for open or short and connection</li> <li>● Engine revolution sensor etc.</li> </ul>




# INTERIOR AND SPOT LAMPS

## Trouble Diagnoses (Cont'd) INSPECTION/FUEL TANK GAUGE

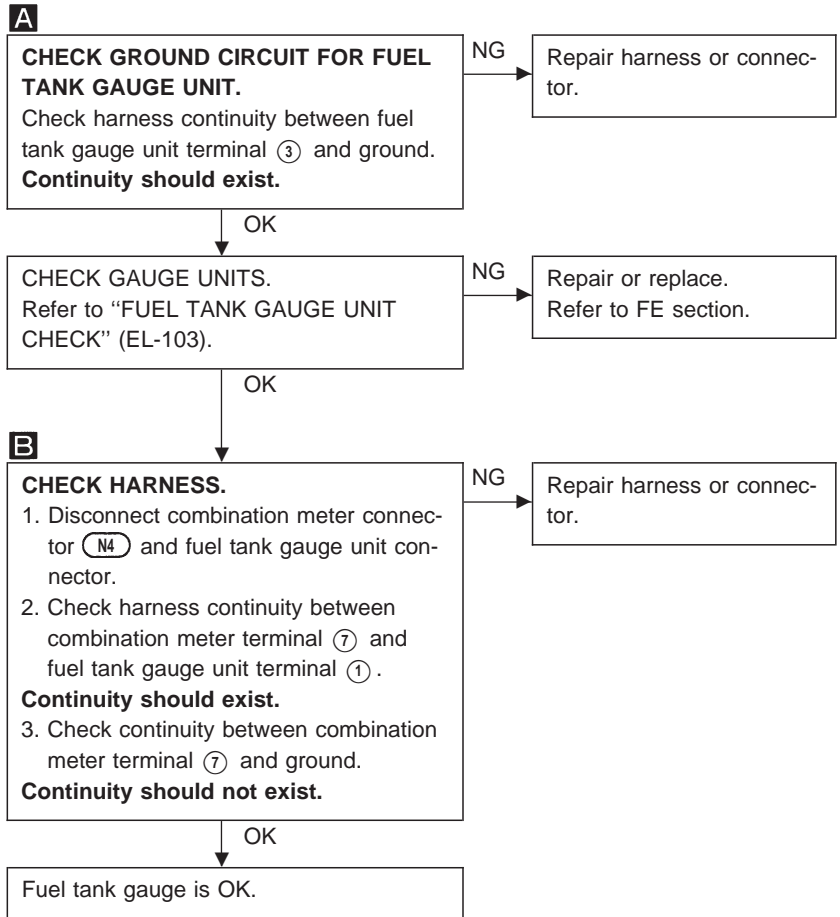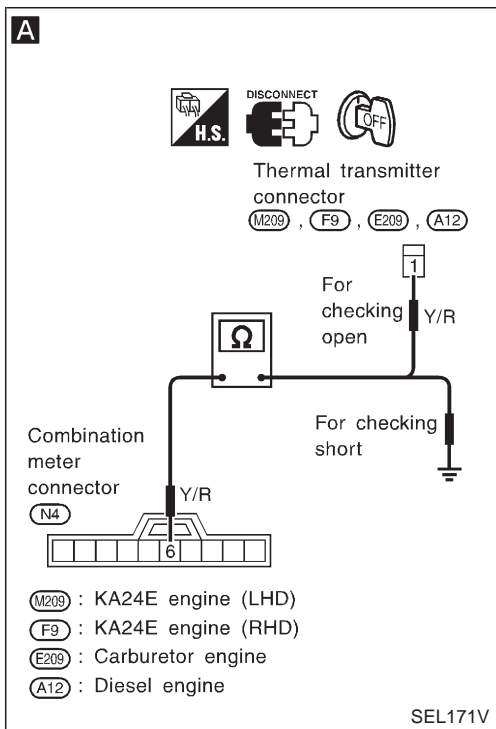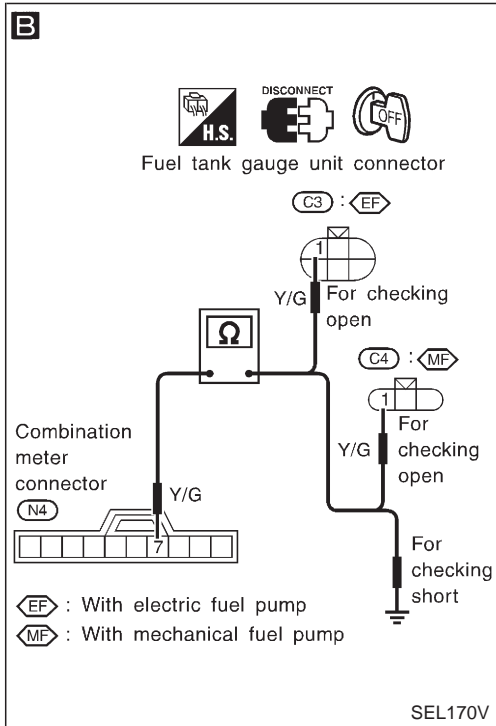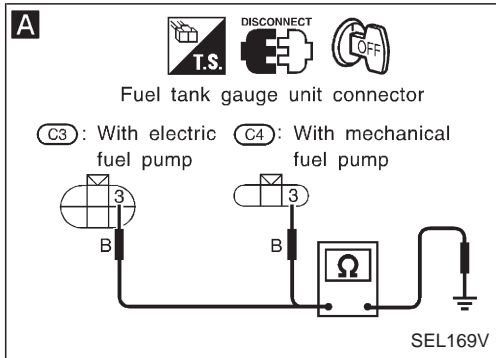

## INSPECTION/THERMAL TRANSMITTER

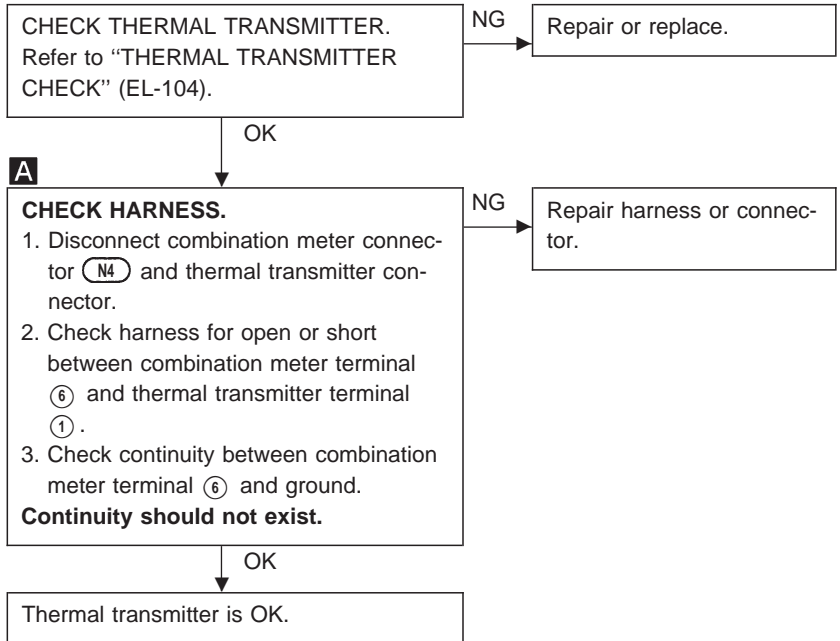

# INTERIOR AND SPOT LAMPS


## Electrical Components Inspection

### METER/GAUGE RESISTANCE CHECK

1. Disconnect FPC connector. Refer to EL-97.
2. Check resistance between installation screws of meter/gauge.


Screws		Resistance $\Omega$
Tachometer	Fuel/Temp. gauge	
A - C	A - C	Approx. 70 - Approx. 140
B - D	B - C	Approx. 90 - Approx. 170

With tachometer

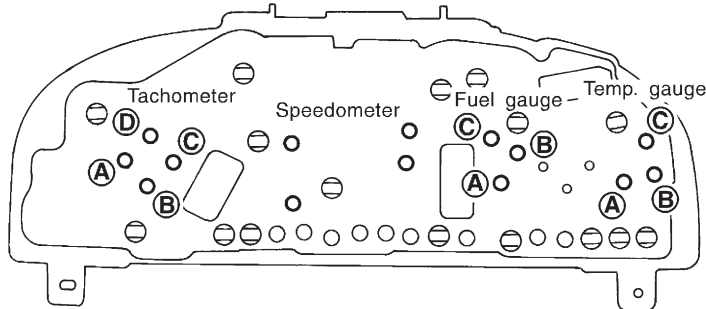


SEL172V

Without tachometer

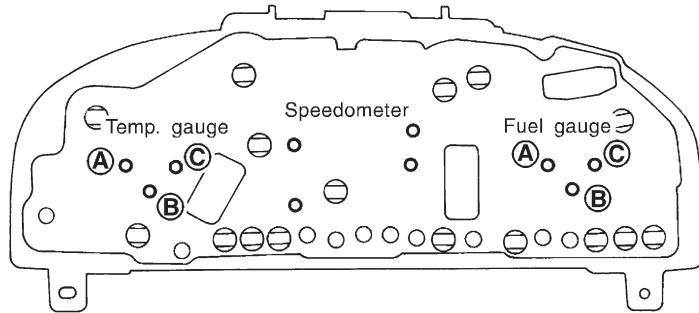

SEL173V

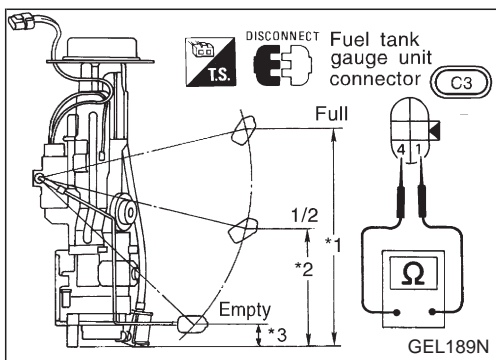

### FUEL TANK GAUGE UNIT CHECK (With electric fuel pump)

- For removal, refer to FE section.
- Check the resistance between terminals ① and ④.

Ohmmeter (+)	Ohmmeter (-)		Float position mm (in)		Resistance value ( $\Omega$ )	
			60ℓ (13-1/4 Imp gal) tank	80ℓ (17-5/8 Imp gal) tank		
①	④	*1	Full	253 (9.96)	247 (9.72)	Approx. 4 - 6
		*2	1/2	130 (5.12)	130 (5.12)	27 - 35
		*3	Empty	27 (1.06)	26 (1.02)	78 - 85


\*1 and \*3: When float rod is in contact with stopper.

## INTERIOR AND SPOT LAMPS

### Electrical Components Inspection (Cont'd) FUEL TANK GAUGE UNIT CHECK (With mechanical fuel pump)

- For removal, refer to FE section.


Check the resistance between terminals ① and ②.

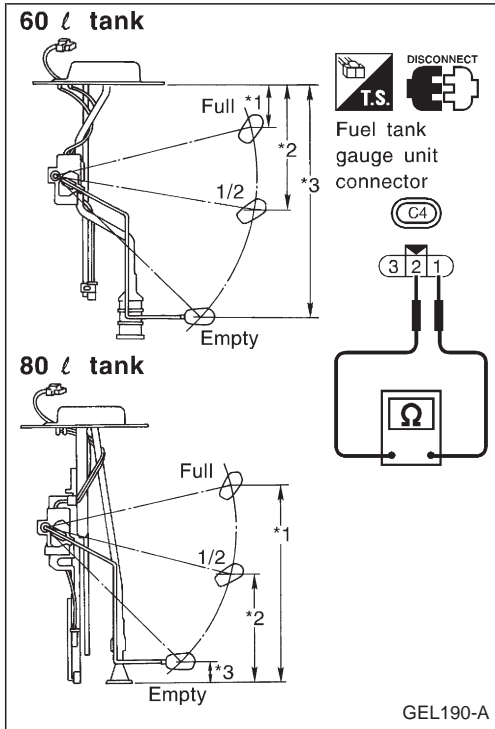

Ohmmeter		Float position mm (in)			Resistance value (Ω)		
(+)	(-)		60 l (13-1/4 Imp gal) tank	80 l (17-5/8 Imp gal) tank			
①	②	*1	Full	50 (1.97)	247 (9.72)	Approx. 4 - 6	
		*2	1/2	174 (6.85)	130 (5.12)		27 - 35
		*3	Empty	277 (10.91)	26 (1.02)		

### THERMAL TRANSMITTER CHECK


Check the resistance between the terminals of thermal transmitter and body ground.

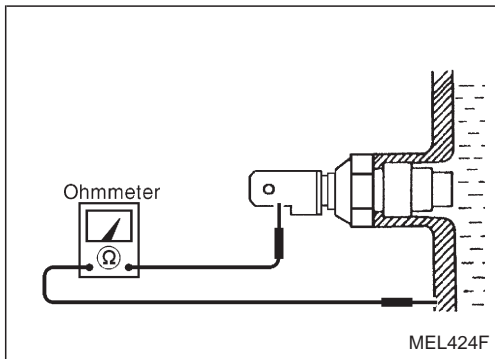

Water temperature	Resistance
60°C (140°F)	Approx. 167 - 211Ω
100°C (212°F)	Approx. 47 - 53Ω


### VEHICLE SPEED SENSOR SIGNAL CHECK

1. Remove vehicle speed sensor from transmission.
2. Turn vehicle speed sensor pinion quickly and measure voltage between terminals a and b.

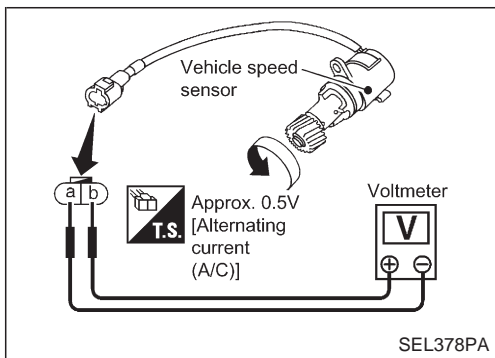

# WARNING LAMPS



## Schematic

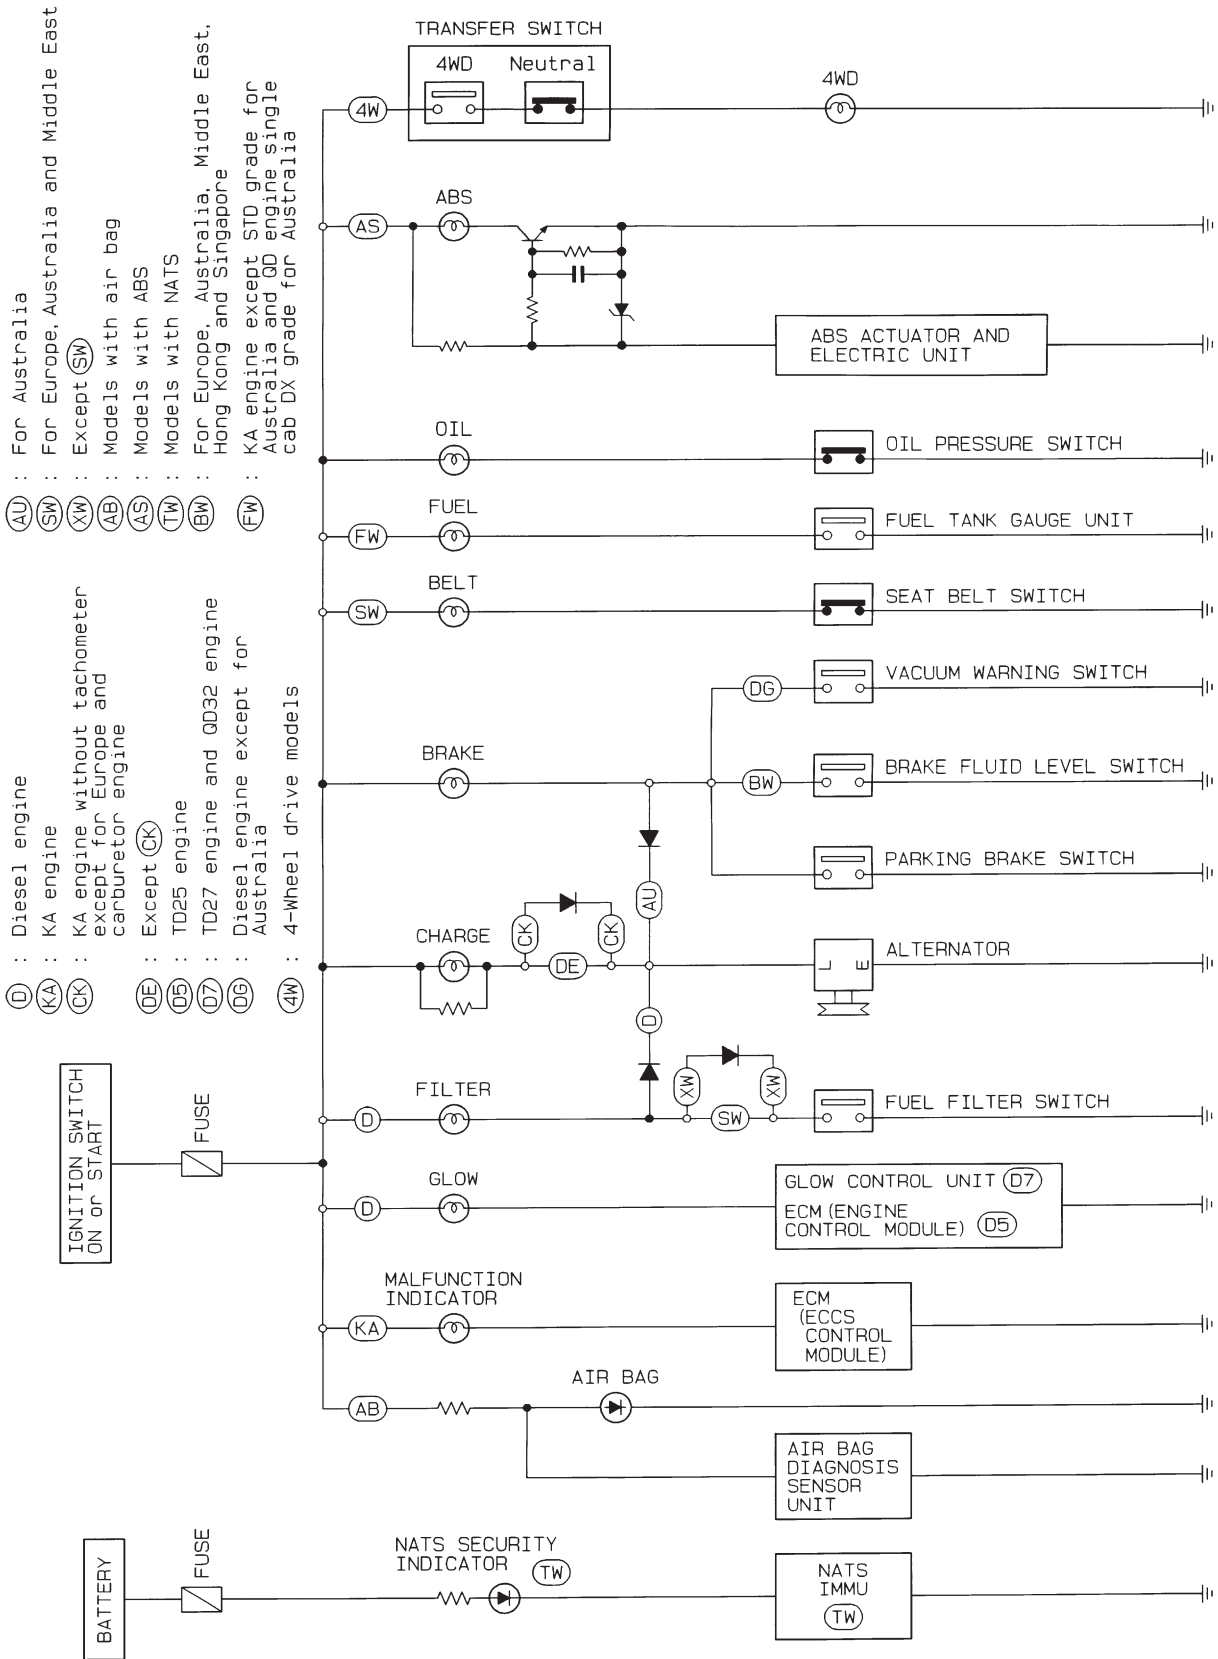

# WARNING LAMPS

## Wiring Diagram — WARN —/LHD Models

### EL-WARN-01

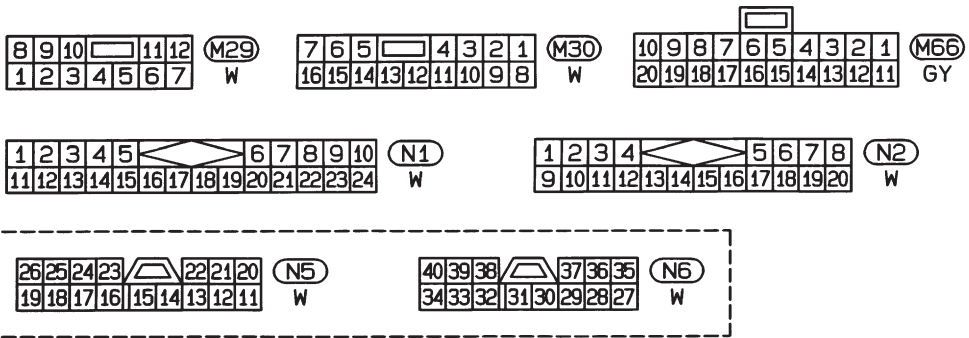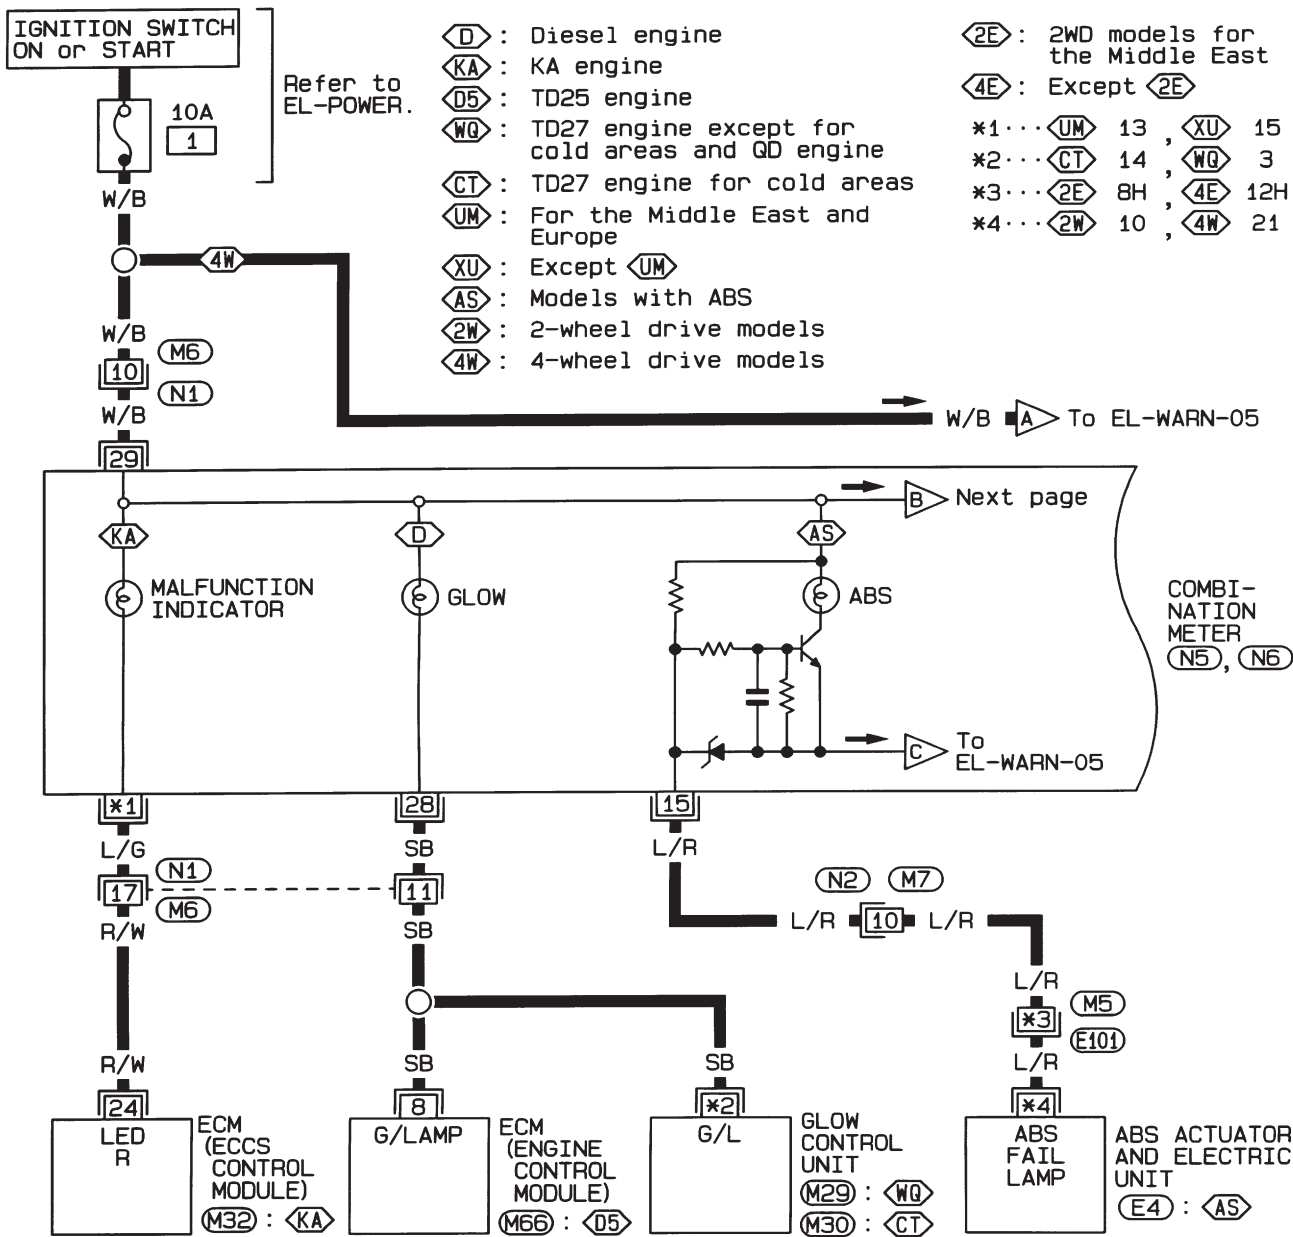

Refer to last page (Foldout page).

(M5), (E101)

(M32)

(E4)



# WARNING LAMPS

## Wiring Diagram — WARN —/LHD Models (Cont'd)

EL-WARN-02

G : Gasoline engine  
D : Diesel engine  
UM : For the Middle East and Europe

AB : Models with air bag system  
2A : 2WD models with air bag system  
4A : 4WD models with air bag system

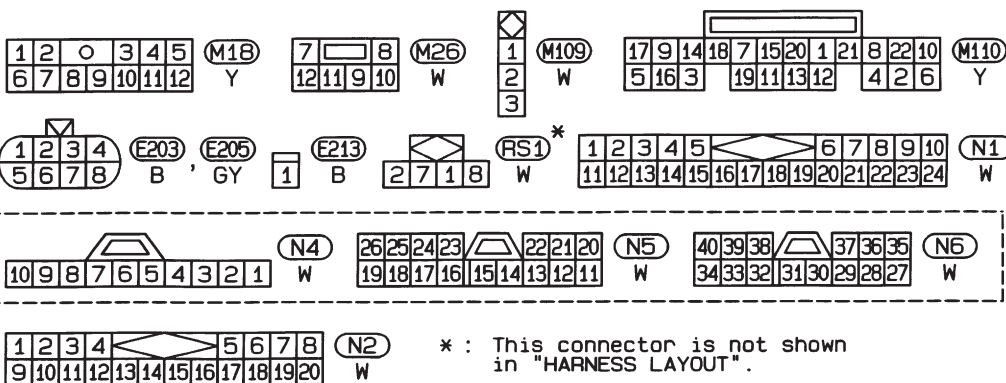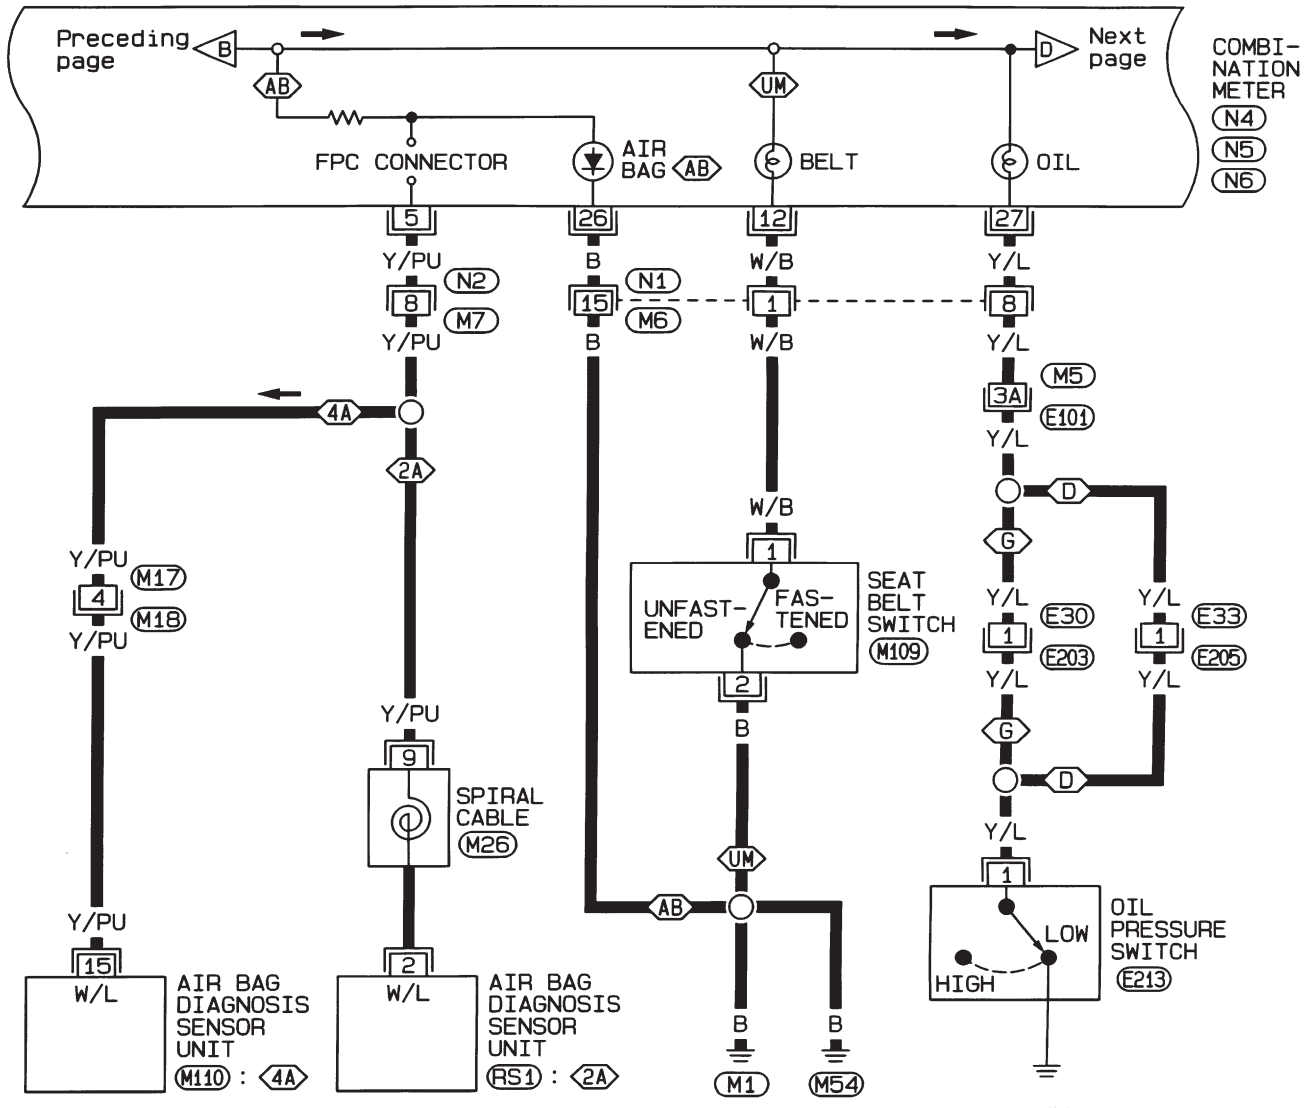

Refer to last page (Foldout page).

M5, E101





# WARNING LAMPS

## Wiring Diagram — WARN —/LHD Models (Cont'd)

EL-WARN-04

- ⊖G : Gasoline engine
- ⊖D : Diesel engine
- ⊖EU : For Europe
- ⊖NE : Except for Europe
- ⊖KA : KA engine
- ⊖CK : KA engine without tachometer except for Europe and carburetor engine
- ⊖DE : Except ⊖CK
- \*5... ⊖EU 13 , ⊖NE 11
- \*6... ⊖EU 11 , ⊖NE 9
- \*7... ⊖EU 8 , ⊖NE 6

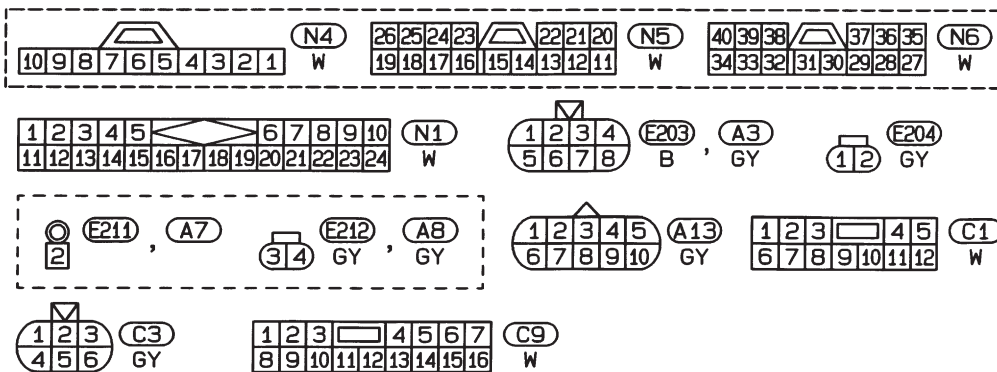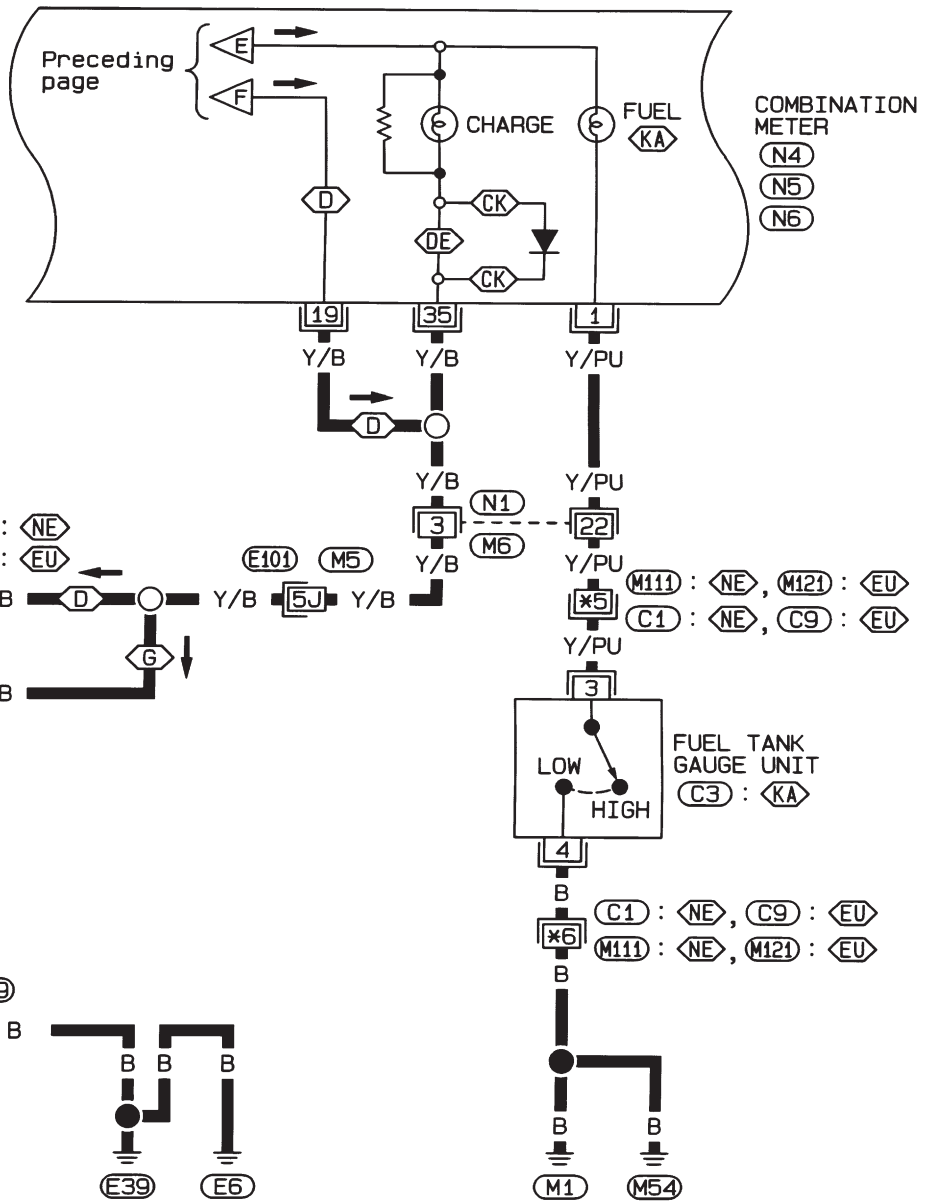

Refer to last page  
(Foldout page).


⊖M5 , ⊖E101





# WARNING LAMPS

## Wiring Diagram — WARN —/LHD Models (Cont'd)

EL-WARN-05

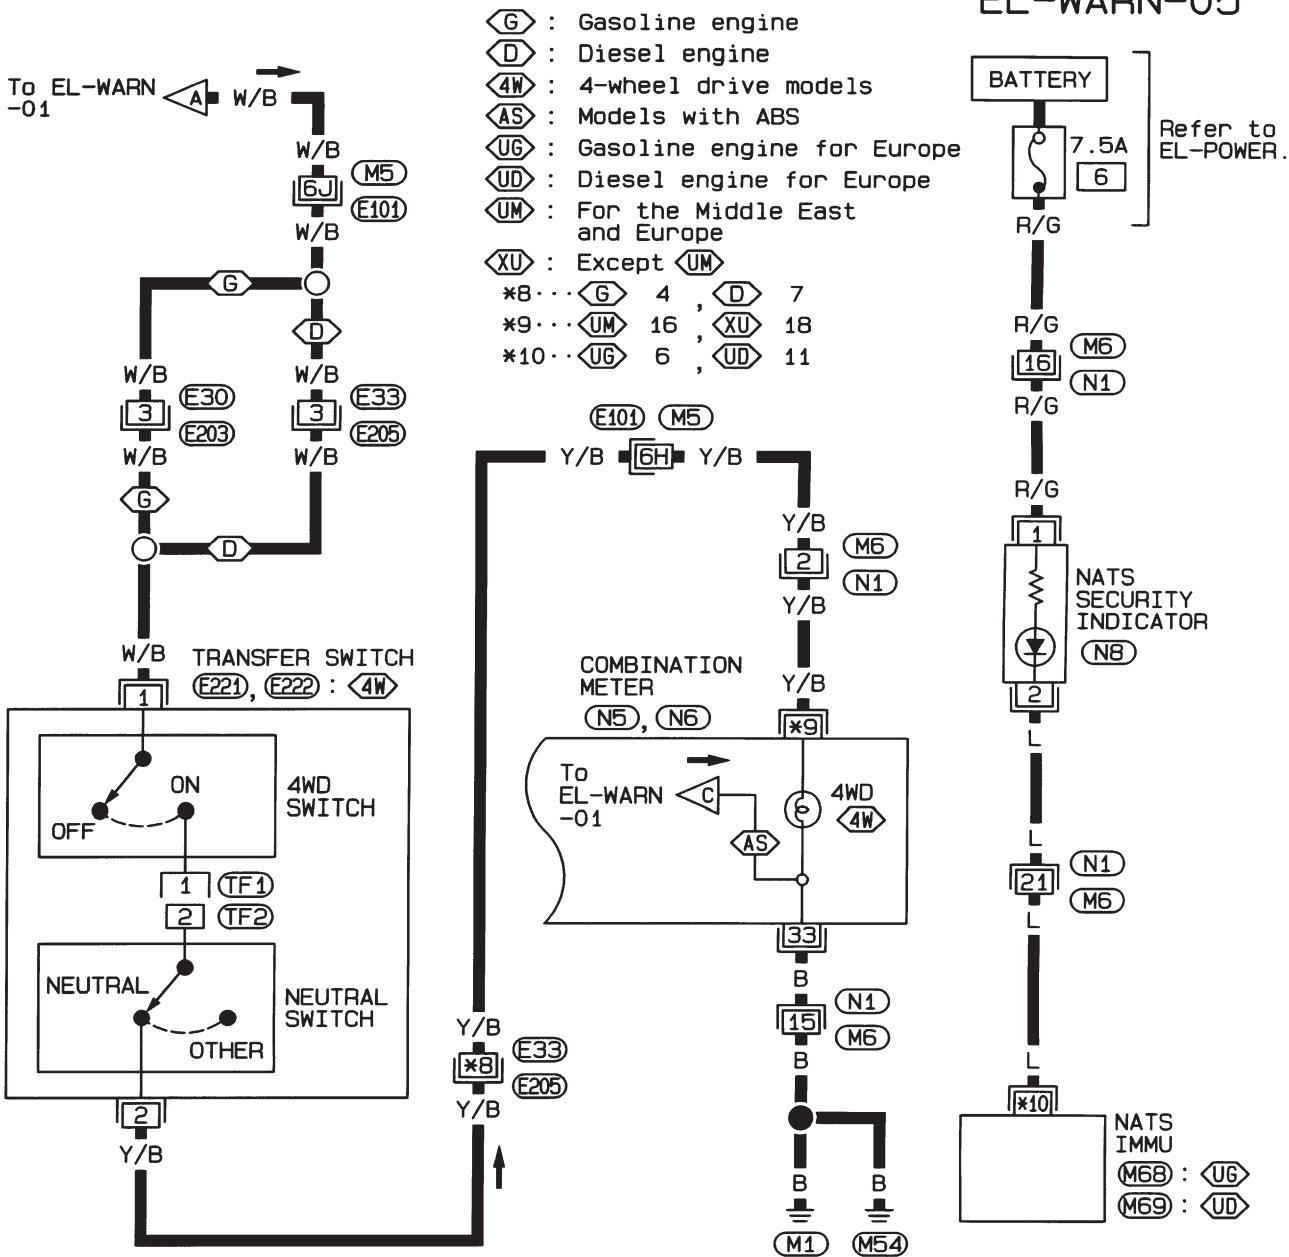

Refer to last page (Foldout page).





\* : This connector is not shown in "HARNES LAYOUT".

# WARNING LAMPS

## Wiring Diagram — WARN —/RHD Models

### EL-WARN-06

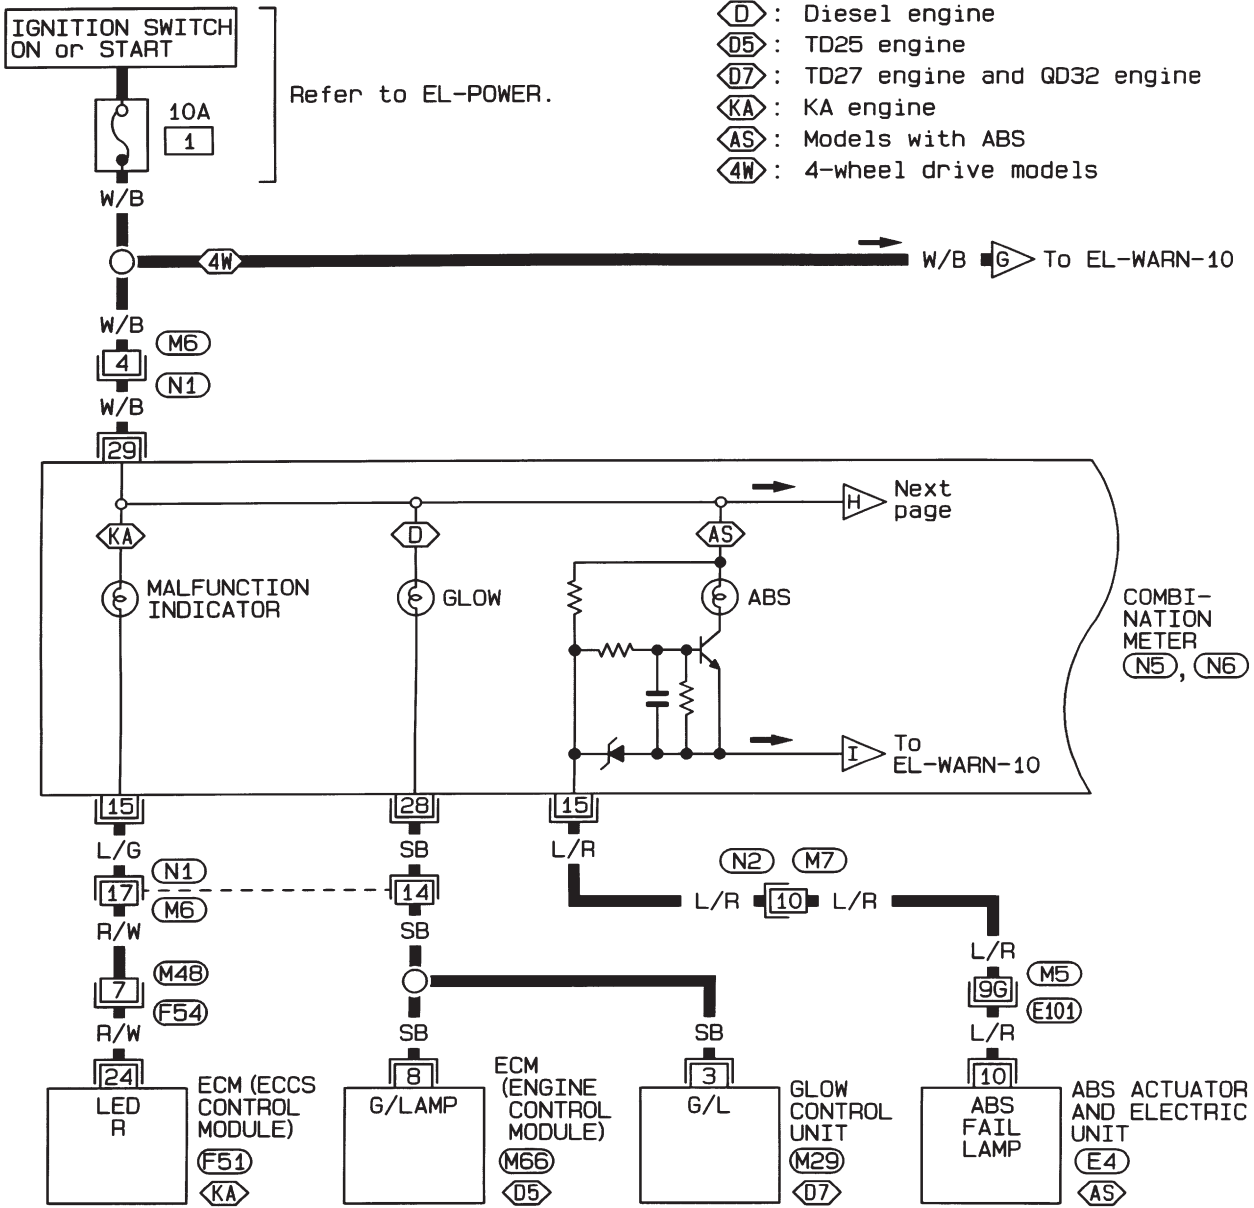

Refer to last page (Foldout page).

(M5), (E101)

(F51)


(E4)



# WARNING LAMPS

## Wiring Diagram — WARN —/RHD Models (Cont'd)

EL-WARN-08

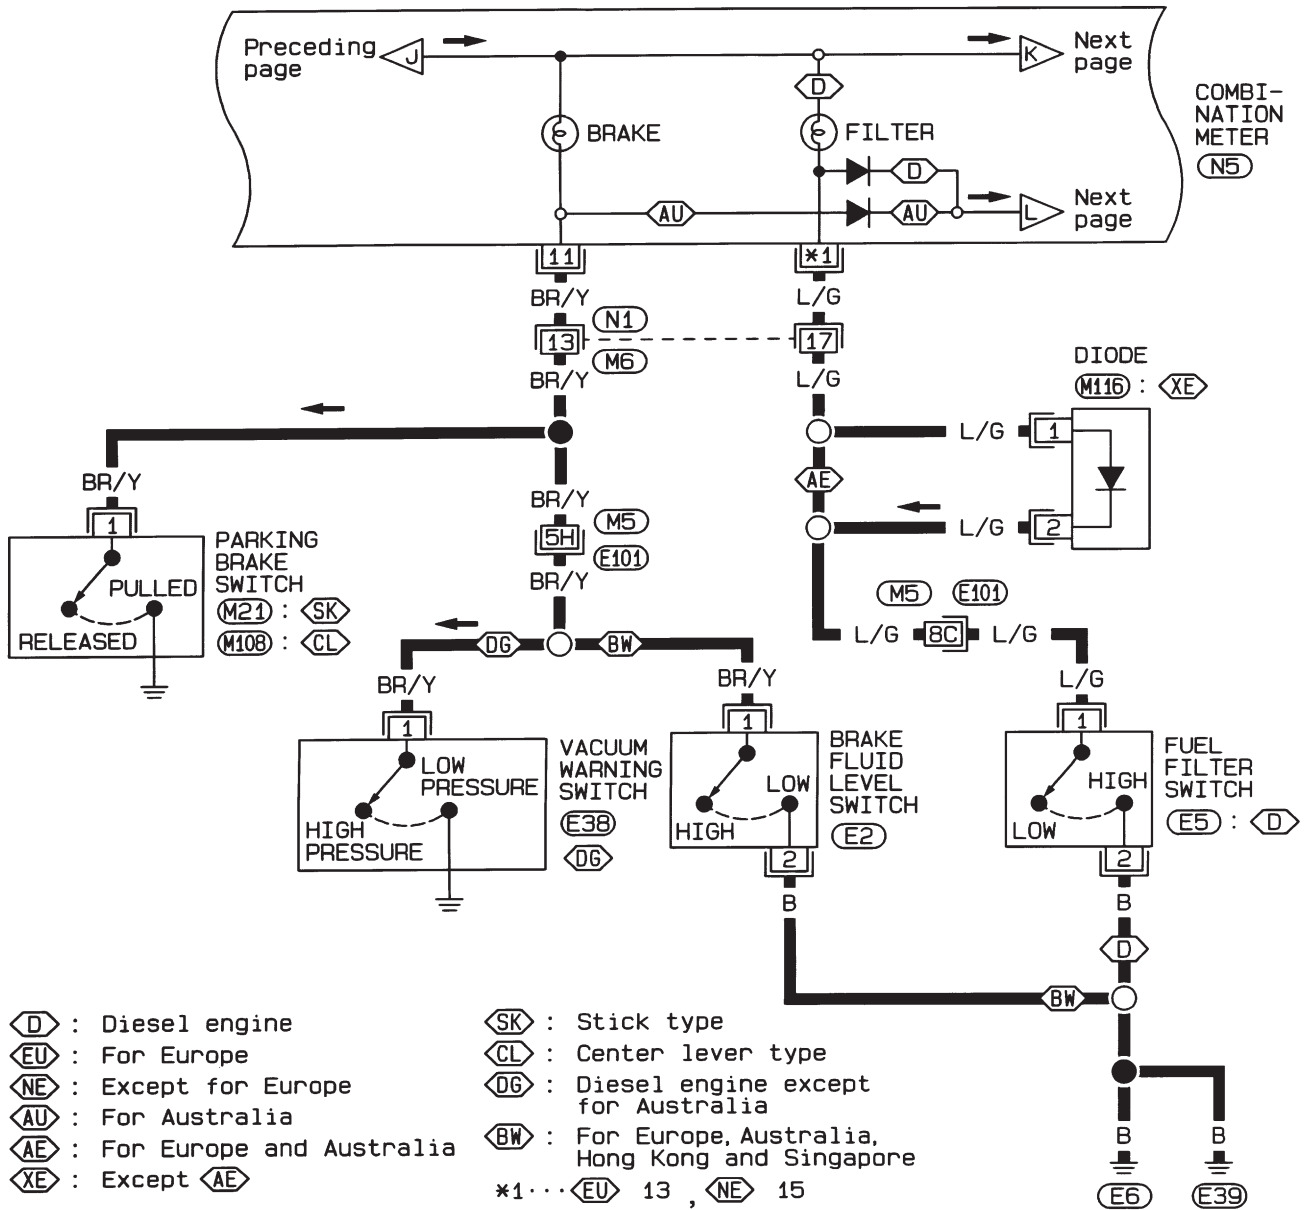

Refer to last page  
(Foldout page).



(M5) , (E101)

# WARNING LAMPS

## Wiring Diagram — WARN —/RHD Models (Cont'd)

EL-WARN-09

- G** : Gasoline engine
- D** : Diesel engine
- EU** : For Europe
- NE** : Except for Europe
- DA** : Diesel engine or for Australia
- CK** : KA engine without tachometer and carburetor engine
- DE** : Except **CK**
- FW** : KA engine except STD grade and QD engine single cab DX grade for Australia
- EF** : Models with electric fuel pump
- MF** : Models with mechanical fuel pump
- \*7... **EU** 8 , **NE** 6
- \*11... **EF** 4 , **MF** 2

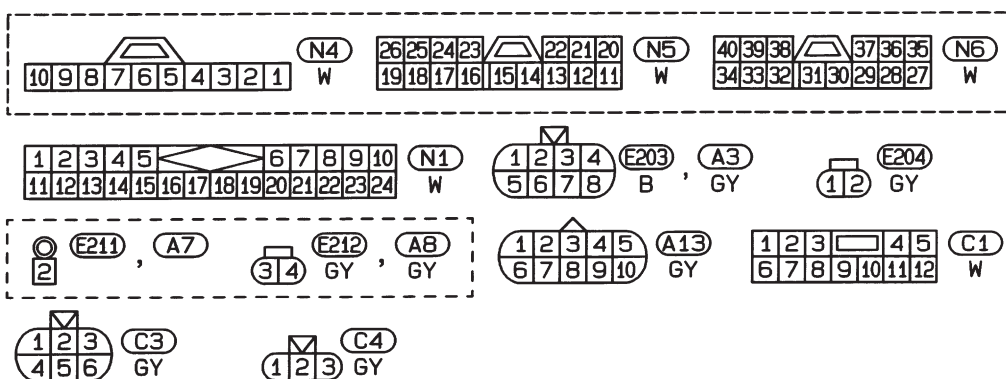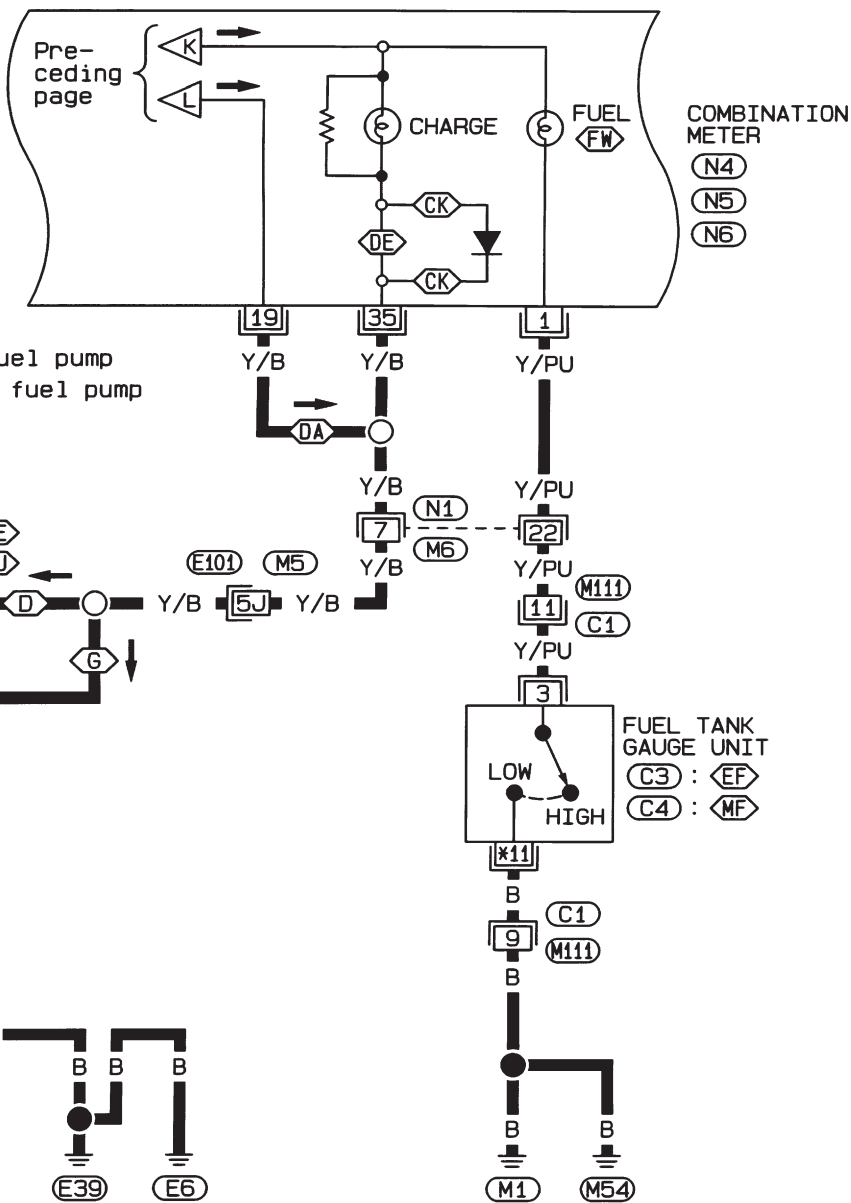


Refer to last page (Foldout page).

**M5** , **E101**





# WARNING LAMPS

## Wiring Diagram — WARN —/RHD Models (Cont'd)

EL-WARN-10

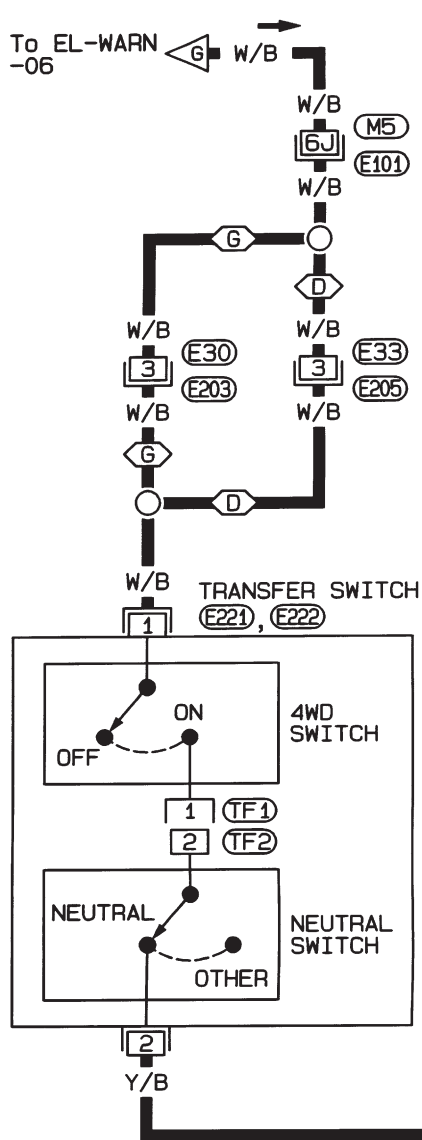

- ⊠G : Gasoline engine
- ⊠D : Diesel engine
- ⊠EU : For Europe
- ⊠NE : Except for Europe
- ⊠4W : 4-wheel drive models
- ⊠AS : Model with ABS
- \*8... ⊠G 4 , ⊠D 7
- \*12... ⊠EU 23 , ⊠NE 15

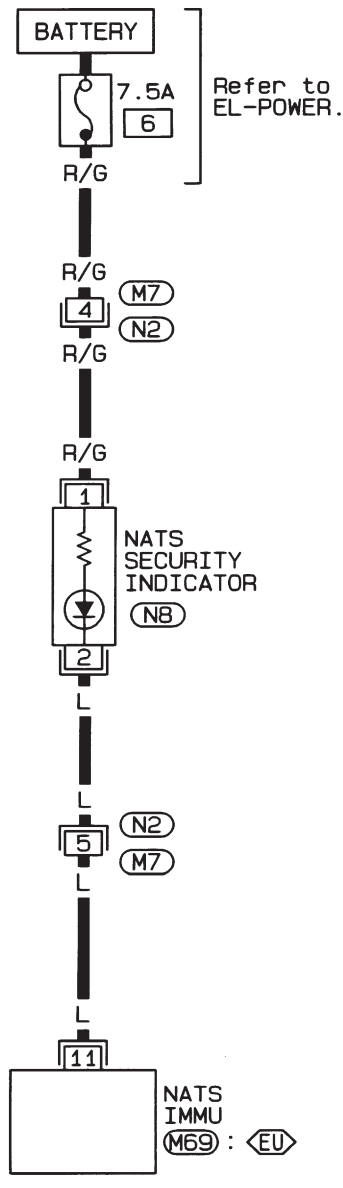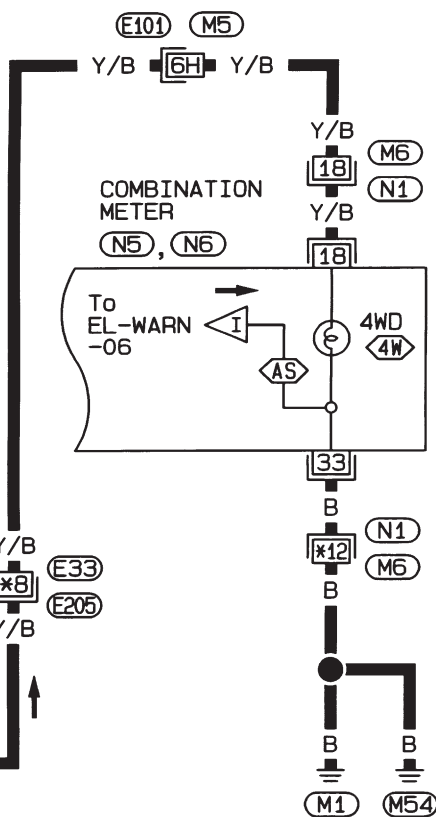


\* : This connector is not shown in "HARNES LAYOUT".

Refer to last page (Foldout page).

(M5) , (E101)


# WARNING LAMPS

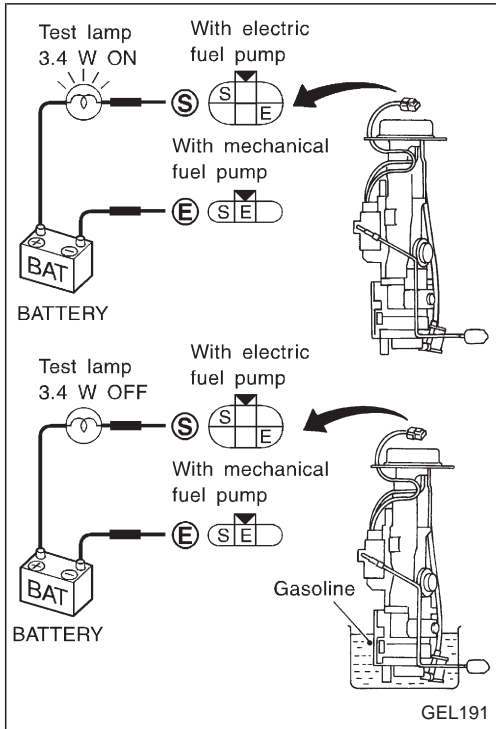

## Electrical Components Inspection

### FUEL WARNING LAMP SENSOR CHECK


- It will take a short time for the bulb to light.

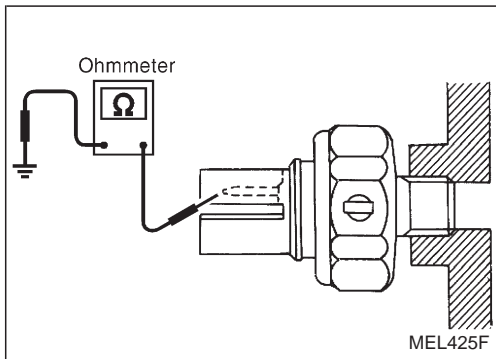

### OIL PRESSURE SWITCH CHECK

	Oil pressure kPa (bar, kg/cm <sup>2</sup> , psi)	Continuity
Engine start	More than 10 - 20 (0.10 - 0.20, 0.1 - 0.2, 1 - 3)	NO
Engine stop	Less than 10 - 20 (0.10 - 0.20, 0.1 - 0.2, 1 - 3)	YES


Check the continuity between the terminals of oil pressure switch and body ground.

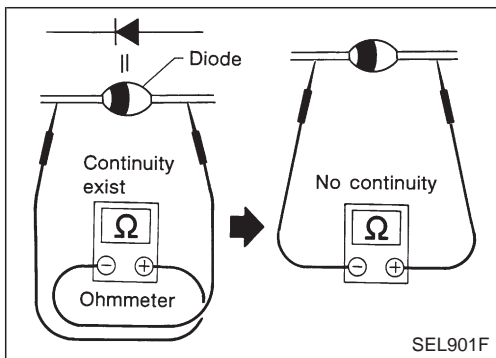

### DIODE CHECK

- Check continuity using an ohmmeter.
- Diode is functioning properly if test results are as shown in the figure at left.

**NOTE:** Specification may vary depending on the type of tester. Before performing this inspection, be sure to refer to the instruction manual for the tester to be used.

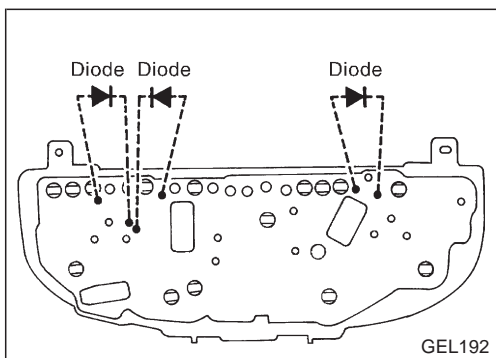




- Diodes for warning lamps are built into the combination meter printed circuit.

# WARNING BUZZER

## Wiring diagram — BUZZER —/LHD Models for Europe

### LIGHT WARNING BUZZER

### EL-BUZZER-02

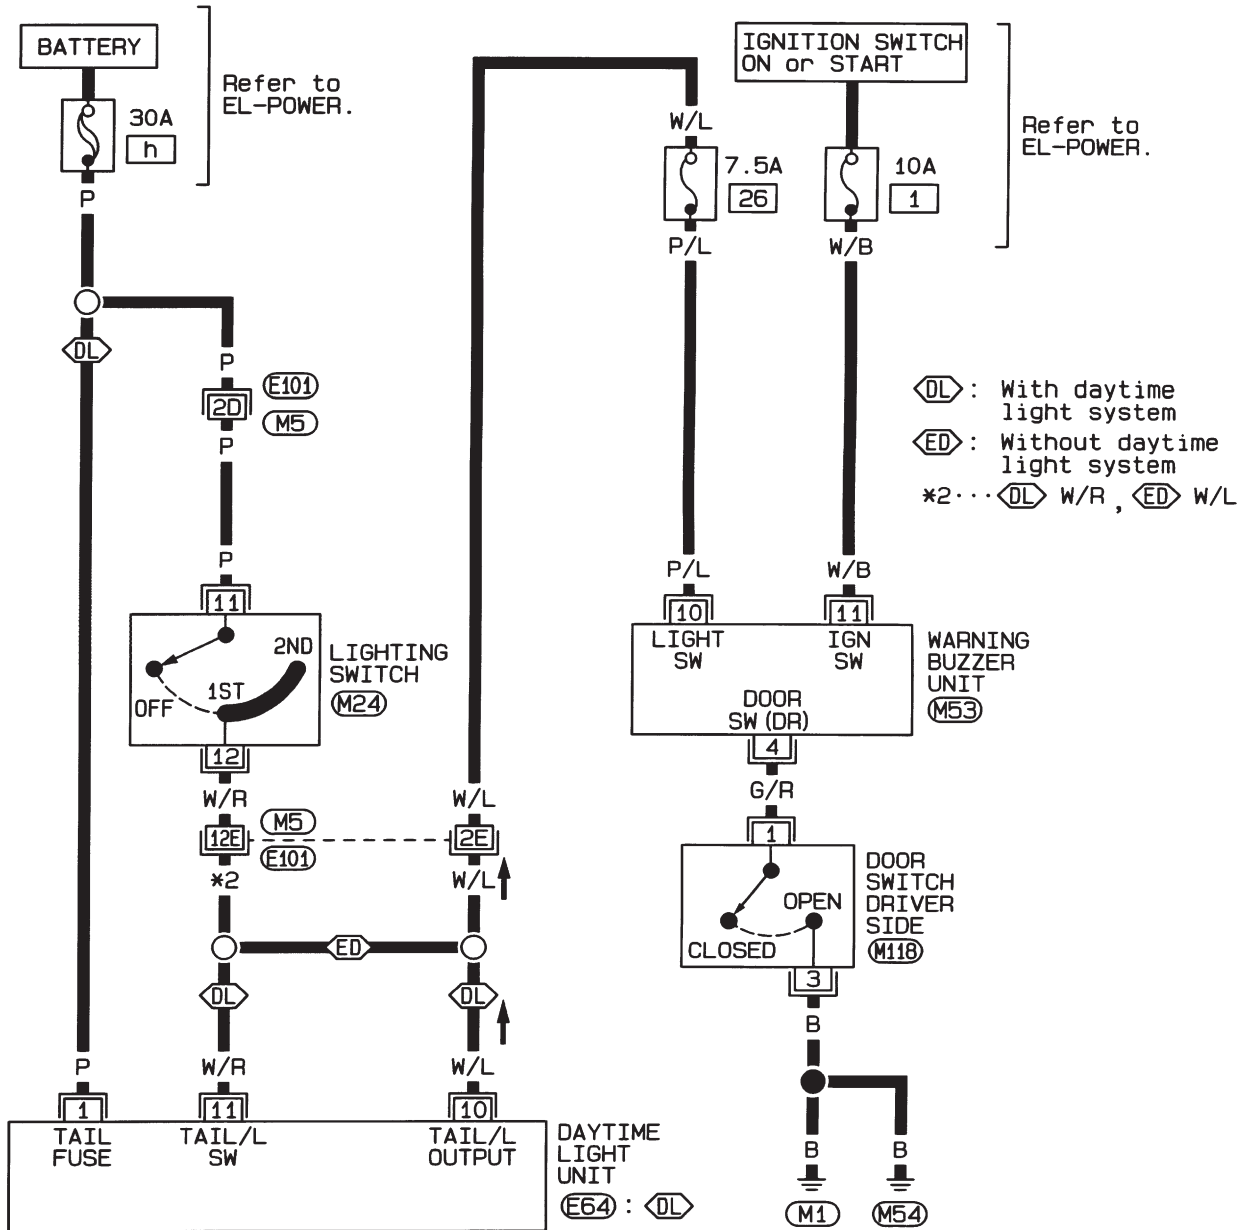

Refer to last page (Foldout page).

(M5), (E101)





# WARNING BUZZER


## Wiring diagram — BUZZER —/RHD Models for Europe

### LIGHT WARNING BUZZER


EL-BUZZER-03

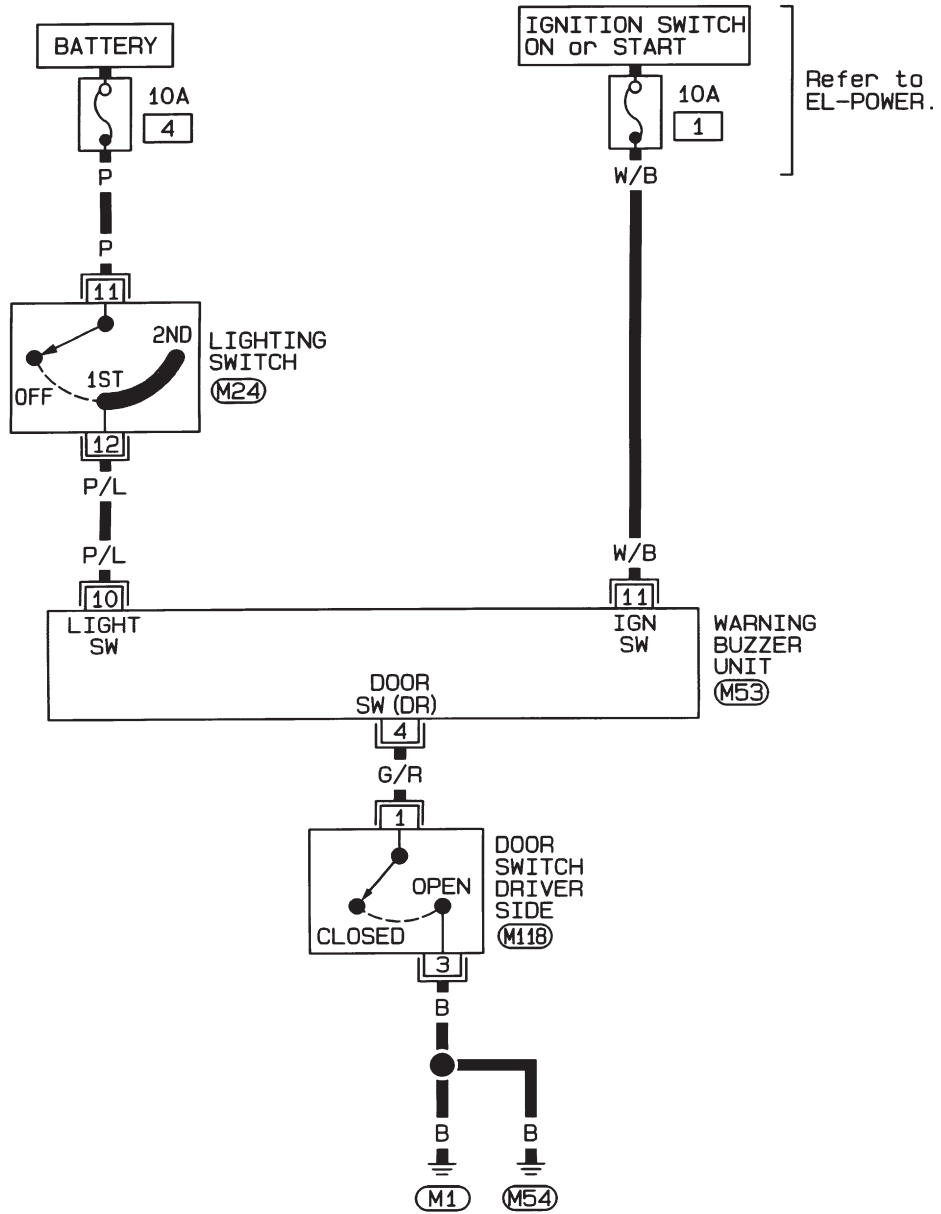

# WARNING BUZZER

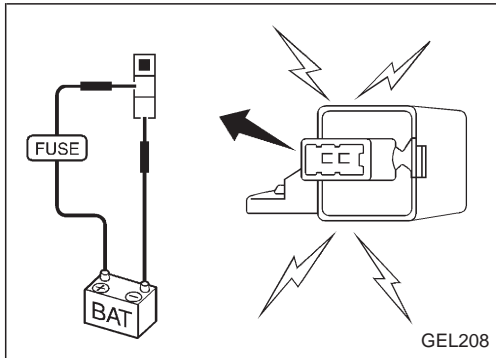


## Electrical Components Inspection FUEL FILTER WARNING BUZZER CHECK

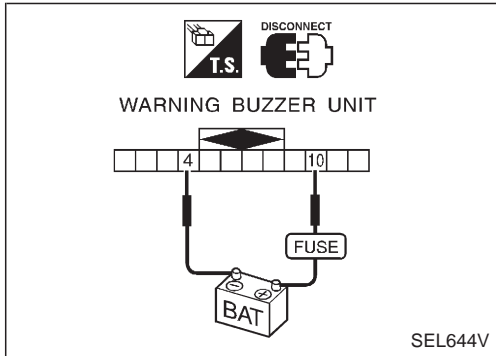

## LIGHT WARNING BUZZER

1. Apply 12V direct current to warning buzzer unit terminals ⑩ and ④.  
**Warning buzzer should sound.**

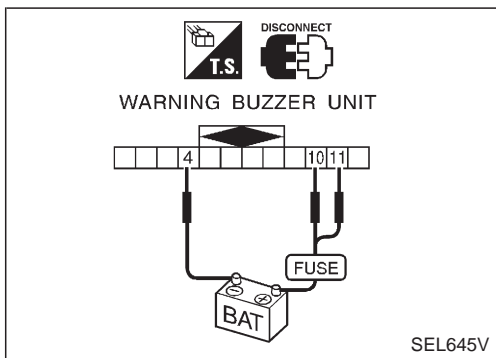

2. Apply 12V direct current to warning buzzer unit terminals ⑩, ⑪ and ④.  
**Warning buzzer should not sound.**

# FRONT WIPER AND WASHER

---

## System Description

### WIPER OPERATION

The wiper switch is controlled by a lever built into the combination switch.

There are two or three wiper switch positions:

- LO speed
- HI speed
- INT (Intermittent wiper models only)

With the ignition switch in the ACC or ON position, power is supplied

- through 20A fuse (No. 16, located in the fuse block)
- to wiper motor terminal 4.

#### Low and high speed wiper operation

Ground is supplied to wiper switch terminal 17 through body grounds M1 and M54.

When the wiper switch is placed in the LO position, ground is supplied

- through terminal 14 of the wiper switch
- to wiper motor terminal 2.

With power and ground supplied, the wiper motor operates at low speed.

When the wiper switch is placed in the HI position, ground is supplied

- through terminal 16 of the wiper switch
- to wiper motor terminal 3.

With power and ground supplied, the wiper motor operates at high speed.

#### Auto stop operation

With wiper switch turned OFF, wiper motor will continue to operate until wiper arms reach windshield base.

When wiper arms are not located at base of windshield with wiper switch OFF, ground is provided

- from terminal 14 of the wiper switch
- to wiper motor terminal 2, in order to continue wiper motor operation at low speed.

Ground is also supplied

- through terminal 13 of the wiper switch
- to wiper amplifier terminal 2 (Intermittent wiper models only)
- through terminal 7 of the wiper amplifier (Intermittent wiper models only)
- to wiper motor terminal 5
- through terminal 6 of the wiper motor, and
- through body grounds M1 and M54.

When wiper arms reach base of windshield, wiper motor terminals 4 and 5 are connected instead of terminals 5 and 6. Wiper motor will then stop wiper arms at the PARK position.

#### Intermittent operation

The wiper motor operates the wiper arms one time at low speed at an interval of approximately 7 seconds.

This feature is controlled by the wiper amplifier.

When the wiper switch is placed in the INT position, ground is supplied

- to wiper amplifier terminal 1
- from wiper switch terminal 15
- through body grounds M1 and M54.
- to wiper motor terminal 2
- through the wiper switch terminal 14
- to wiper switch terminal 13
- through wiper amplifier terminal 2
- to wiper amplifier terminal 3
- through body grounds M1 and M54.

With power and ground supplied, the wiper motor operates at low speed intermittently.

## FRONT WIPER AND WASHER

### System Description (Cont'd)

---

#### WASHER OPERATION

With the ignition switch in the ACC or ON position, power is supplied

- through 20A fuse (No. 16, located in the fuse block)
- to washer motor terminal ①.

#### With intermittent wiper

When the lever is pulled to the WASH position, ground is supplied

- to washer motor terminal ②, and
- to wiper amplifier terminal ⑥
- from terminal ⑱ of the wiper switch
- through terminal ⑰ of the wiper switch, and
- through body grounds M1 and M54.

With power and ground supplied, the washer motor operates.

When the lever is pulled to the WASH position for one second or more, the wiper motor operates at low speed for approximately 3 times after the lever is released. This feature is controlled by the wiper amplifier in the same manner as the intermittent operation.

#### Without intermittent wiper

When the lever is pulled to the WASH position, ground is supplied




- to washer motor terminal ②
- from terminal ⑱ of the wiper switch
- through terminal ⑰ of the wiper switch, and
- through body grounds M1 and M54.

With power and ground supplied, the washer motor operates.

# FRONT WIPER AND WASHER

## Wiring Diagram — WIPER —/LHD Models with Intermittent

EL-WIPER-01

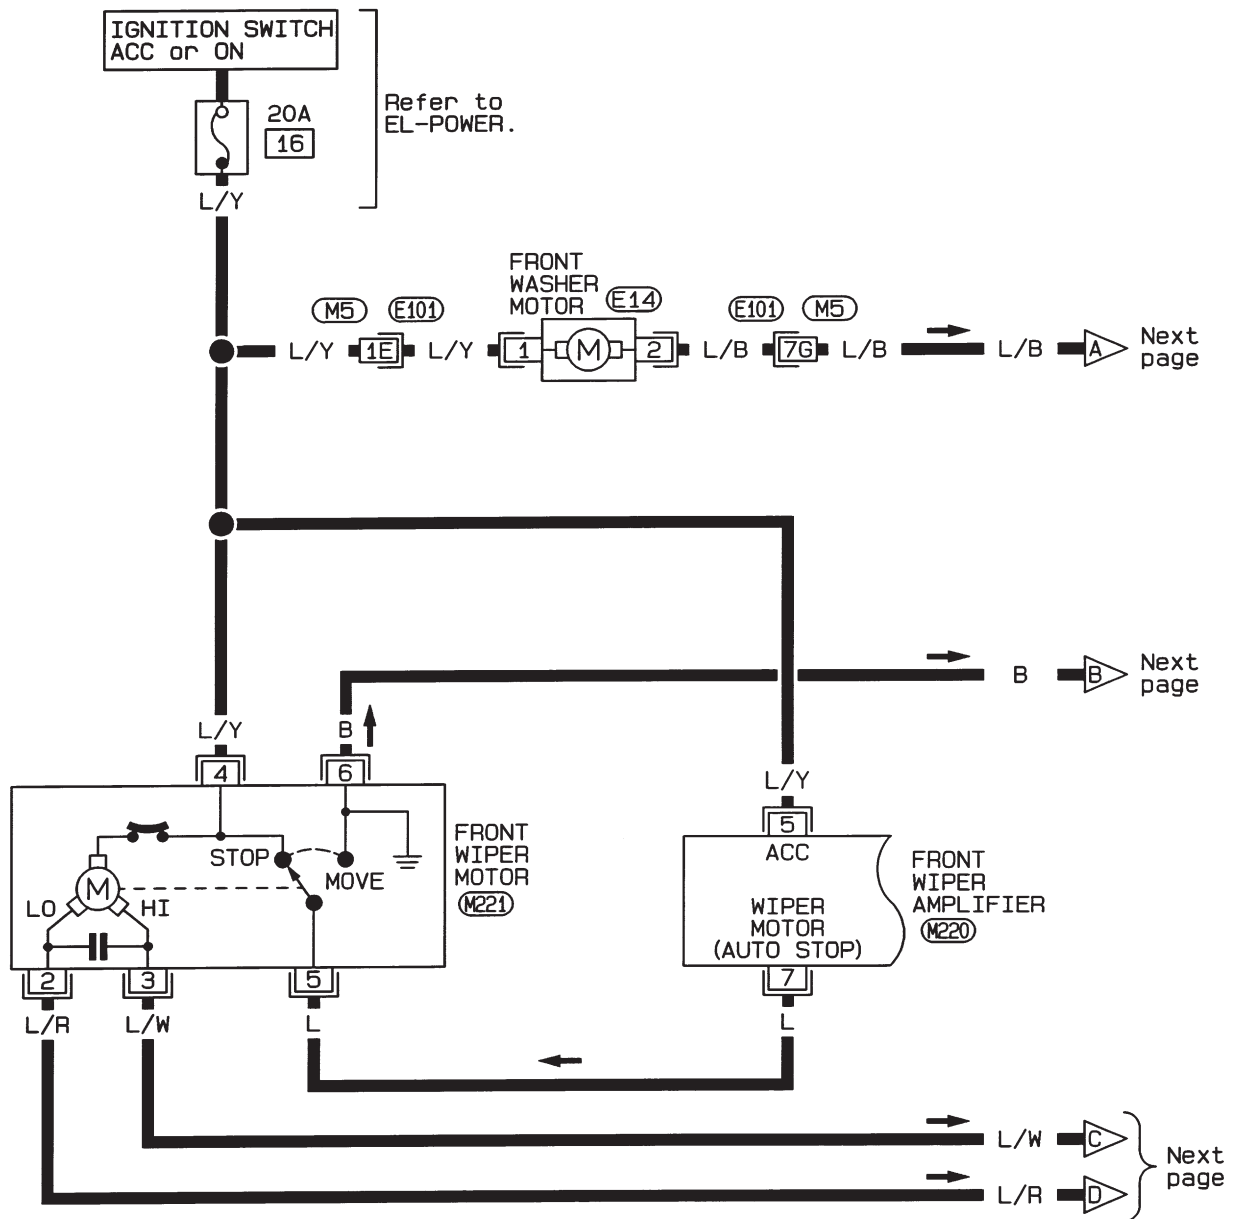


Refer to last page (Foldout page).

(M5), (E101)

# FRONT WIPER AND WASHER

## Wiring Diagram — WIPER —/LHD Models with Intermittent (Cont'd)

EL-WIPER-02

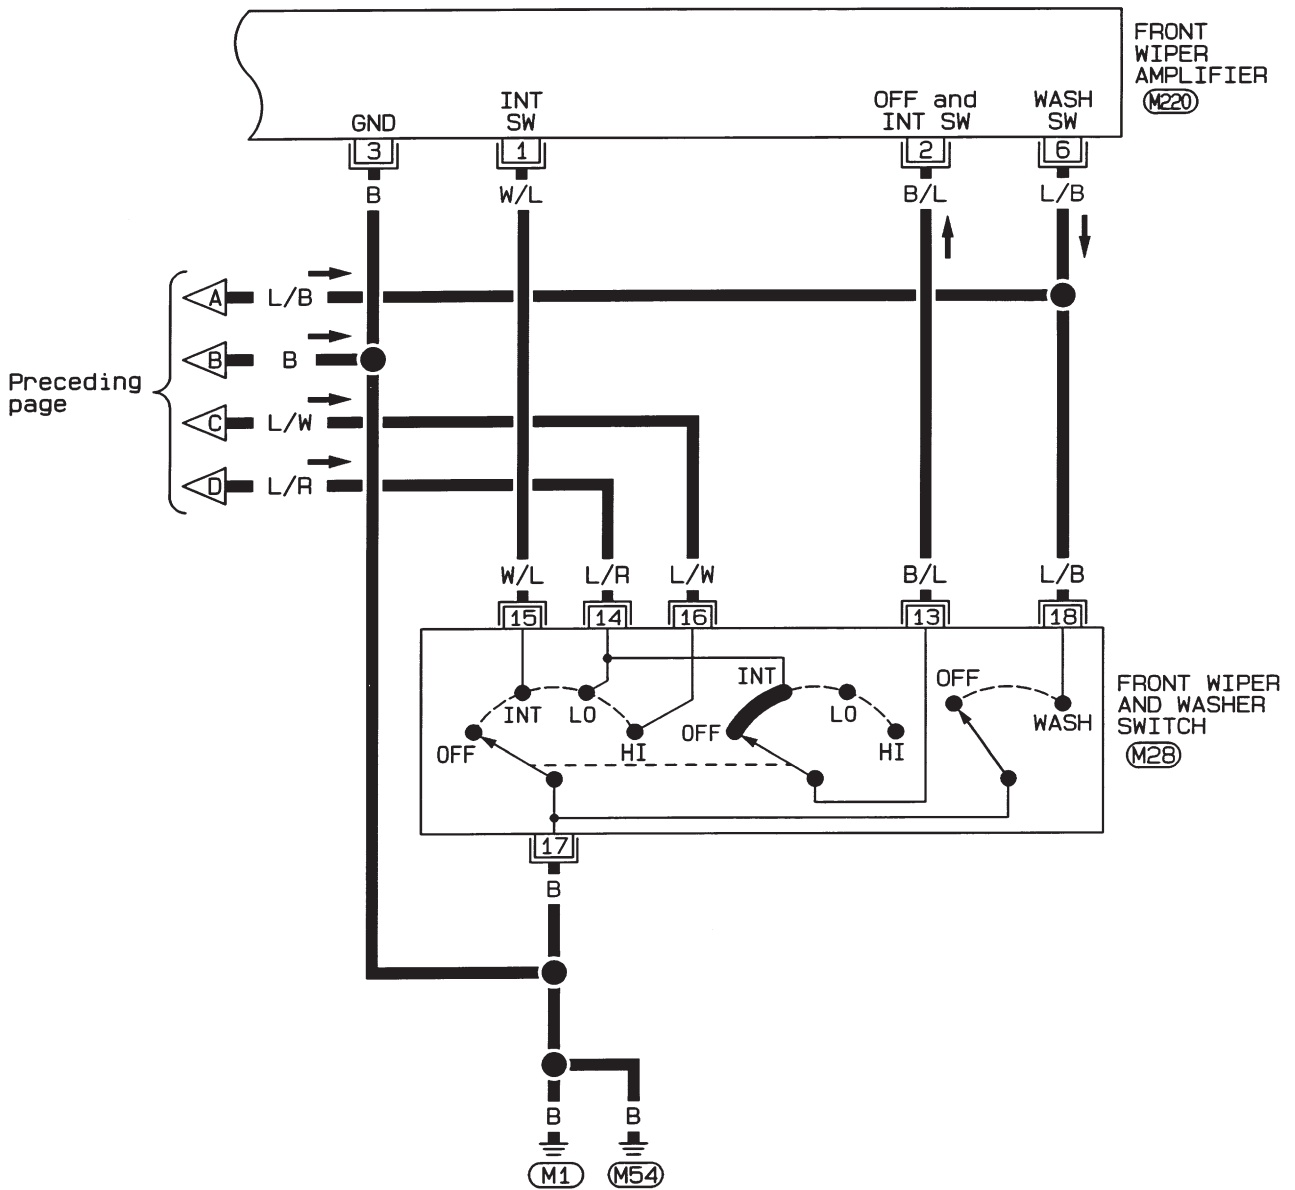


13	16	14	(M28) GY
15	17	18	

3	2	1	(M220) GY
7	6	5	

# FRONT WIPER AND WASHER

## Wiring Diagram — WIPER —/RHD Models with Intermittent

EL-WIPER-04

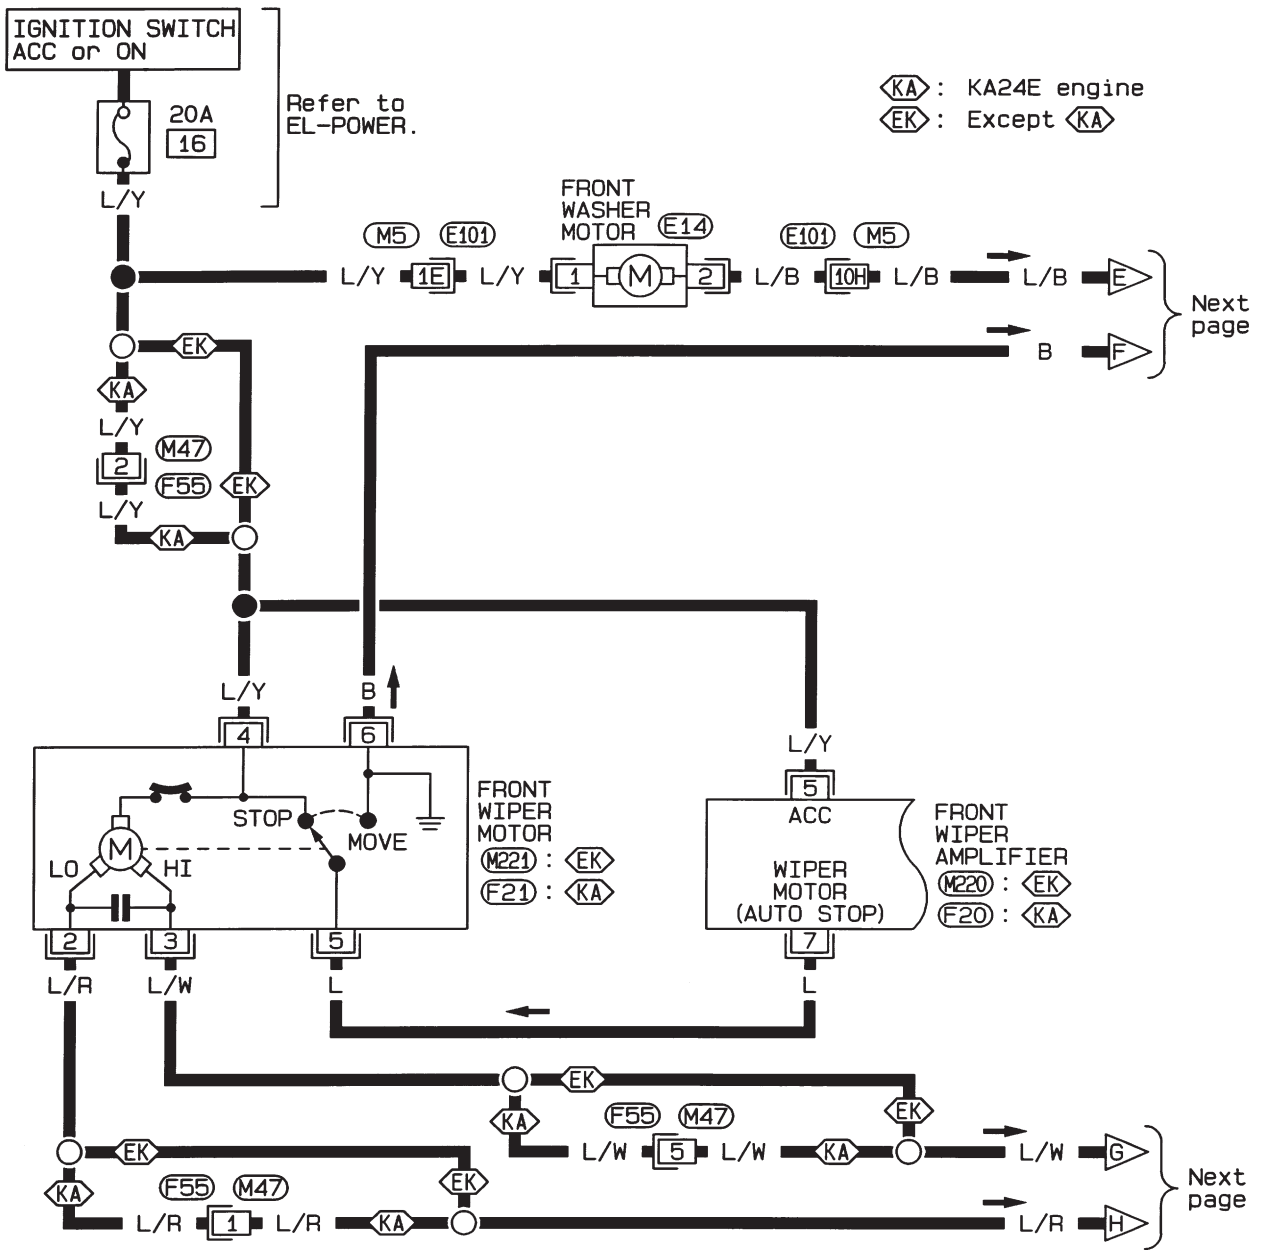

3	2	1
7	6	5

(M220), (F20)  
GY, GY

3	2
6	5

(M221), (F21)  
W, W

2	1
---	---

(E14)  
GY

1	2	3	4
5	6	7	8
9	10		

(F55)  
W




Refer to last page (Foldout page).

(M5), (E101)

# FRONT WIPER AND WASHER

## Wiring Diagram — WIPER —/RHD Models with Intermittent (Cont'd)

EL-WIPER-05

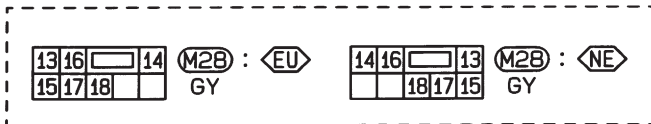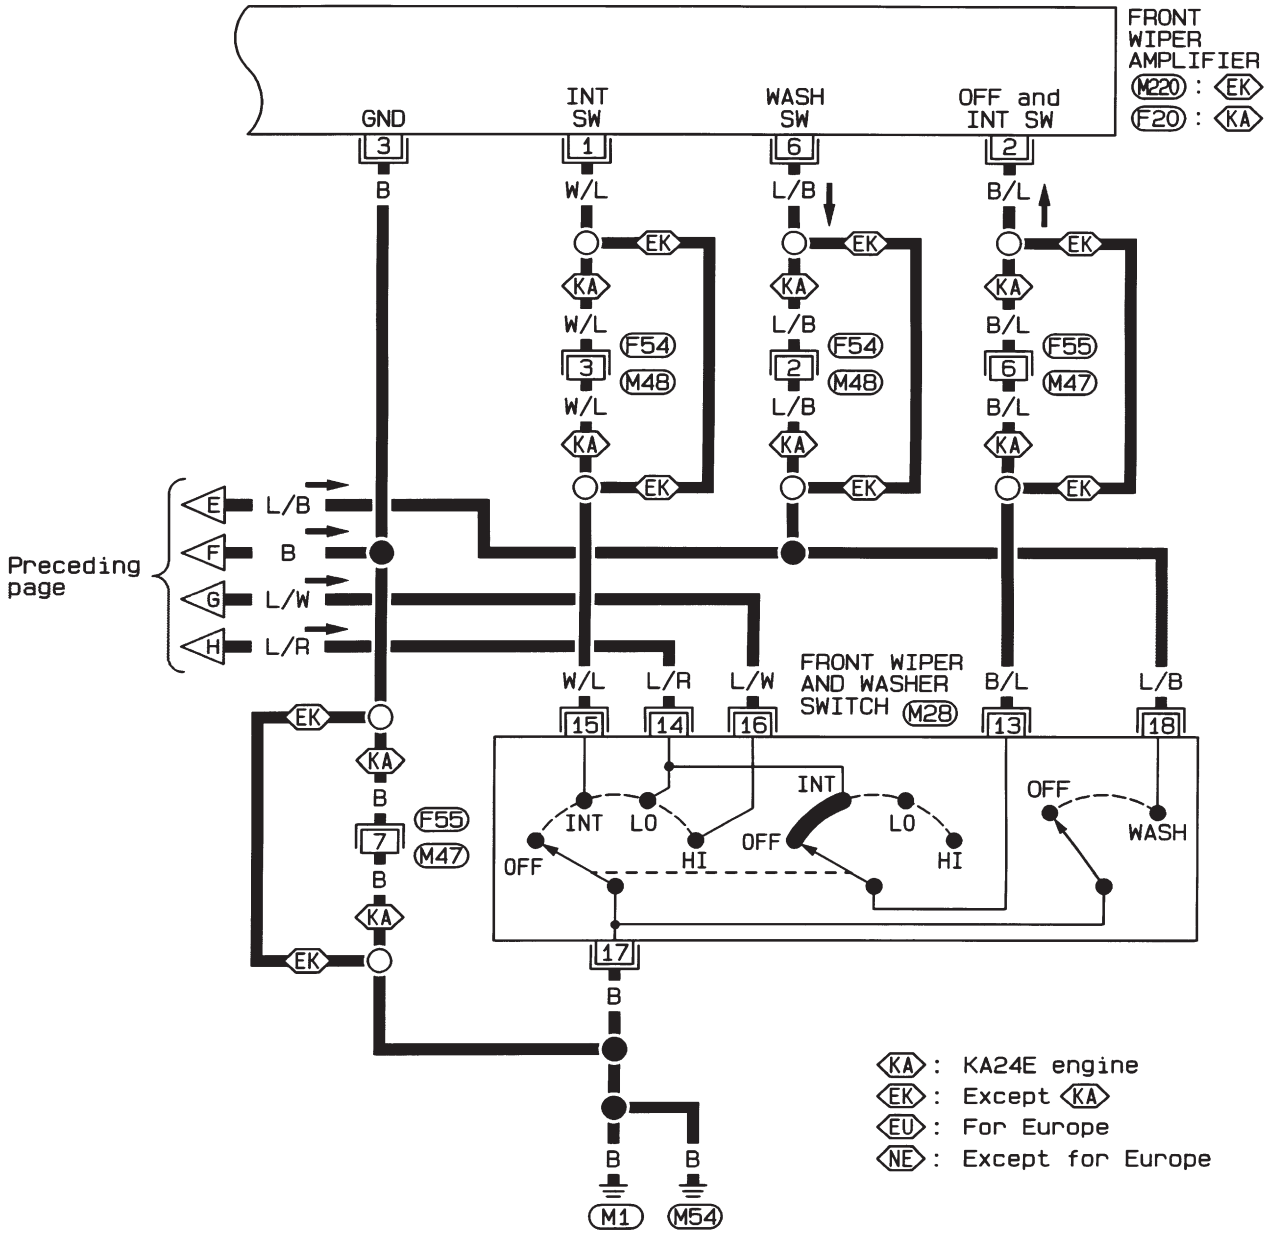







# FRONT WIPER AND WASHER

## Trouble Diagnoses

### DIAGNOSTIC PROCEDURE 1

**SYMPTOM: Intermittent wiper does not operate.**

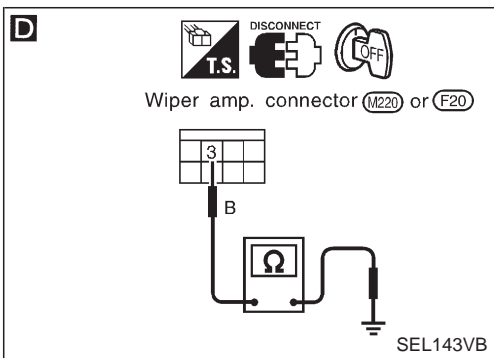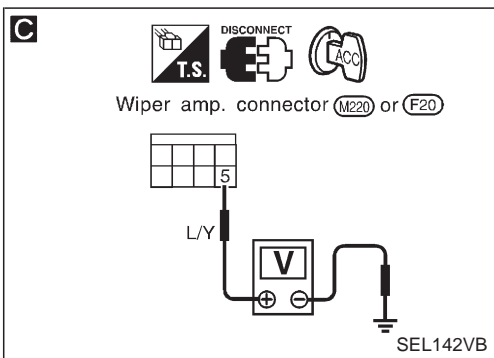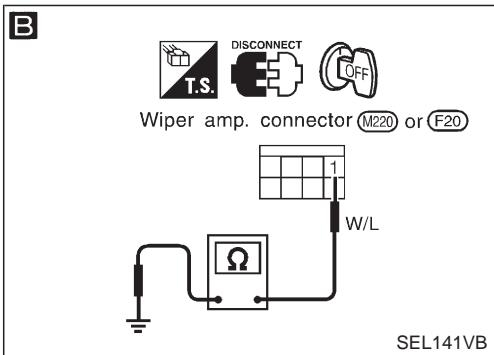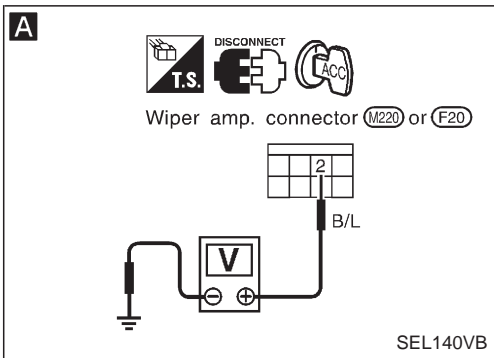

Check whether wiper operates with the wiper switch at Lo position.

NG → Check the following.

- 20A fuse (No. 16, located in fuse block)
- Wiper motor
- Wiper switch
- Harness for open or short

OK ↓

**A**

1) Turn front wiper switch to OFF.  
2) Disconnect wiper amp. connector.  
3) Check voltage between wiper amp. terminal ② and ground.  
**Battery voltage should exist.**

NG → Check the following.

- Wiper switch
- Harness for open or short between wiper amp. terminal ② and wiper switch terminal ⑬

OK ↓

**B**

**CHECK INTERMITTENT SWITCH INPUT SIGNAL.**  
Check harness continuity between wiper amp. terminal ① and ground.

Condition of wiper switch	Continuity
OFF	No
INT	Yes

NG → Check the following.

- Wiper switch
- Harness for open or short between wiper amp. terminal ① and wiper switch terminal ⑮
- Ground circuit for front wiper switch terminal ⑰

OK ↓

**C**

**CHECK WIPER AMP. POWER SUPPLY CIRCUIT.**  
Check voltage between wiper amp. terminal ⑤ and ground while ignition switch is "ACC".  
**Battery voltage should exist.**

NG → Check the following.

- 20A fuse (No. 16, located in fuse block)
- Harness for open or short between wiper amp. and fuse

OK ↓

**D**

**CHECK WIPER AMP. GROUND CIRCUIT.**  
Check harness continuity between wiper amp. terminal ③ and body ground.  
**Continuity should exist.**

NG → Repair harness or connector.

OK ↓


Replace wiper amp.

# FRONT WIPER AND WASHER

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE 2

**SYMPTOM:** Wiper and washer activate individually but not in combination.

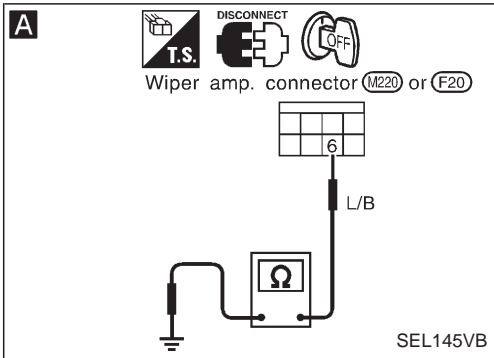

**A**

CHECK WASHER SWITCH INPUT SIGNAL.

- 1) Turn ignition switch to "OFF".
- 2) Disconnect wiper amp. connector.
- 3) Check harness continuity between wiper amp. terminal ⑥ and ground.

Condition of washer switch	Continuity
OFF	No
ON	Yes

NG


Check harness for open or short between wiper amp. terminal ⑥ and wiper switch terminal ⑱.

OK

Go to DIAGNOSTIC PROCEDURE 1.


NG

Replace wiper amp.

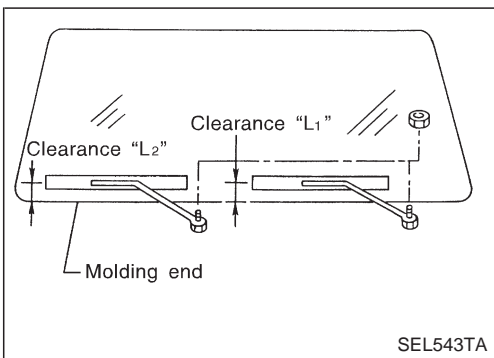


## Wiper Installation and Adjustment

1. Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (Auto Stop).
  2. Lift the blade up and then set it down onto glass surface to set the blade center to clearance "L<sub>1</sub>" & "L<sub>2</sub>" immediately before tightening nut.
  3. Eject washer fluid. Turn on wiper switch to operate wiper motor and then turn it "OFF".
  4. Ensure that wiper blades stop within clearance "L<sub>1</sub>" & "L<sub>2</sub>".  
**Clearance "L<sub>1</sub>": 20 - 30 mm (0.79 - 1.18 in)**  
**Clearance "L<sub>2</sub>": 20 - 30 mm (0.79 - 1.18 in)**
- Tighten wiper arm nuts to specified torque.  
**Front wiper: 12.7 - 17.7 N·m (1.3 - 1.8 kg·m, 9 - 13 ft·lb)**

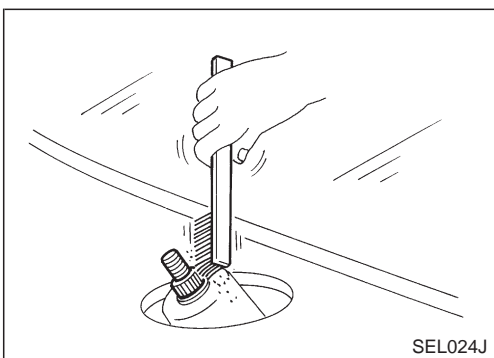

- Before reinstalling wiper arm, clean up the pivot area as illustrated. This will reduce possibility of wiper arm looseness.



# FRONT WIPER AND WASHER

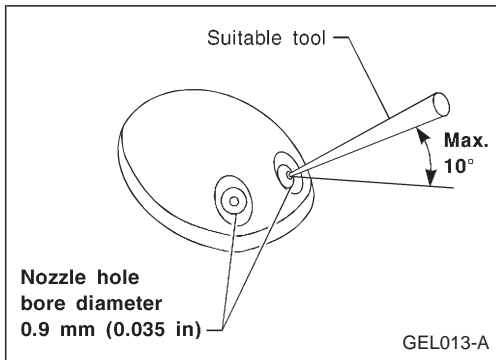

## Washer Nozzle Adjustment

- Adjust washer nozzle with suitable tool as shown in the figure at left.


Adjustable range:  $\pm 10^\circ$

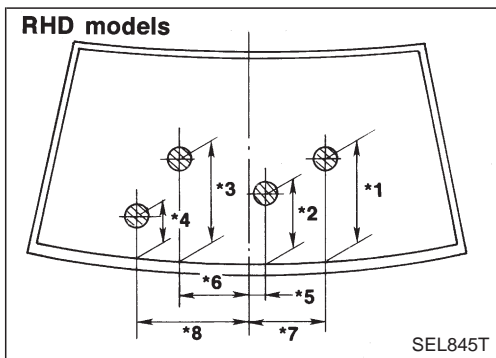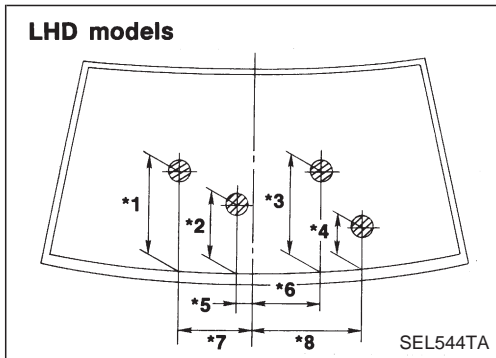

Unit: mm (in)

*1	470 (18.50)	*5	60 (2.36)
*2	215 (8.46)	*6	225 (8.86)
*3	380 (14.96)	*7	255 (10.04)
*4	180 (7.09)	*8	460 (18.11)


\*: The diameters of these circles are less than 60 mm (2.36 in).

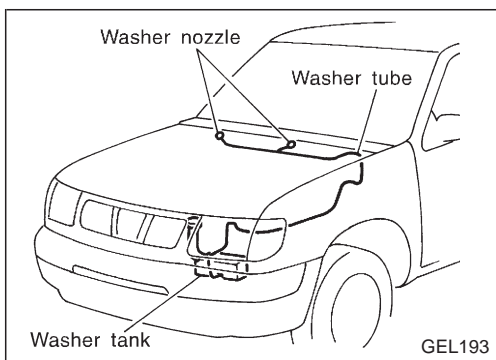

## Washer Tube Layout

# FRONT WIPER AND WASHER

## Wiper Linkage

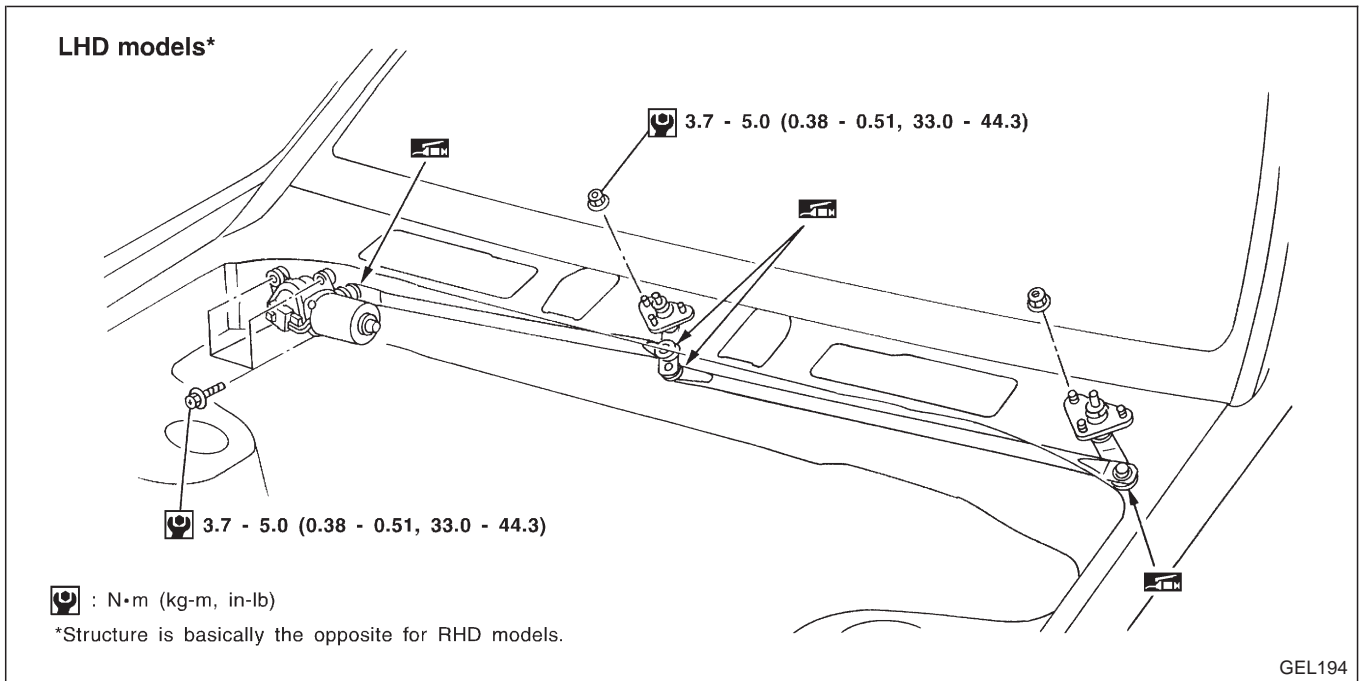

### REMOVAL

1. Remove 4 bolts that secure wiper motor.
2. Detach wiper motor from wiper linkage at ball joint.
3. Remove wiper linkage.

**Be careful not to break ball joint rubber boot.**





### INSTALLATION

- Grease ball joint portion before installation.
1. Installation is the reverse order of removal.

# HEADLAMP WASHER

## Wiring Diagram — HLC —

EL-HLC-01

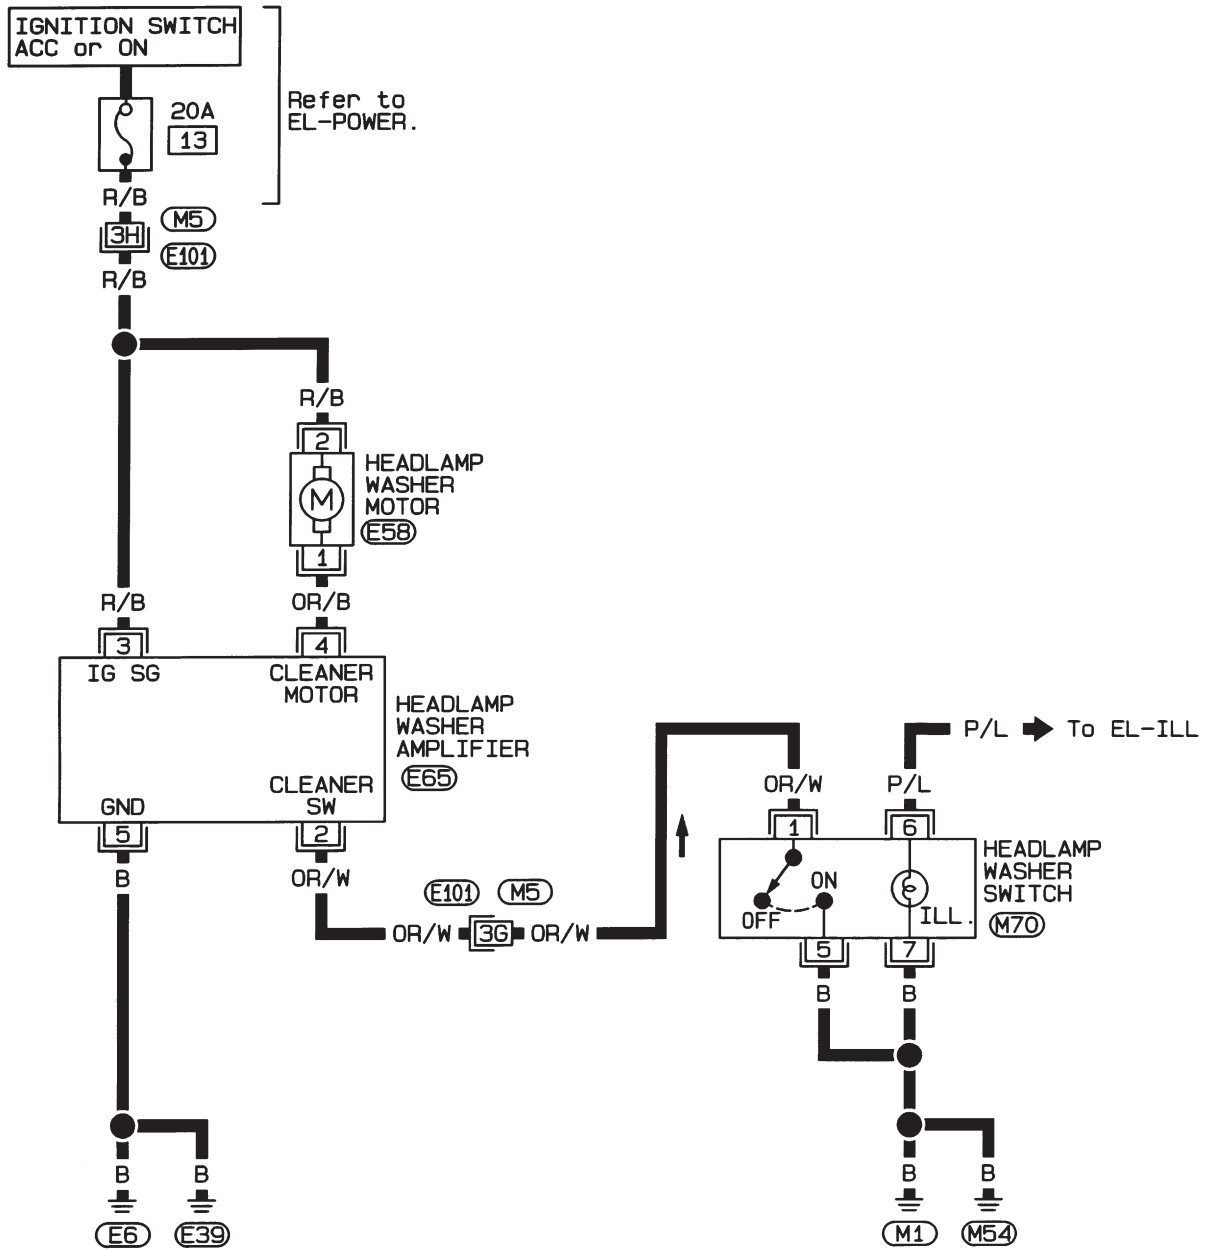

Refer to last page (Foldout page).

(M5), (E101)


# HEADLAMP WASHER

## Trouble Diagnoses


### HEADLAMP WASHER AMPLIFIER INSPECTION TABLE

Voltage should be measured between each terminal of headlamp washer amplifier harness connector terminal and ground.

Terminal No.	Connections	Operated condition	Voltage (V) (Approximate value)
2	Headlamp washer switch	Headlamp washer switch ON	0V
		Headlamp washer switch OFF	12V
3	Power source for amplifier	Ignition switch ACC or ON	12V
4	Headlamp washer motor	Headlamp washer switch ON	0V NOTE: Approx. 0.5 sec.
		Headlamp washer switch OFF	12V
5	Ground	—	—

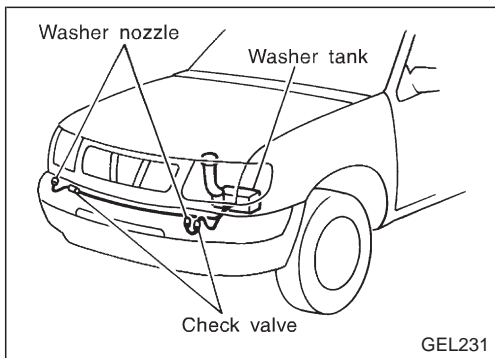

## Washer Tube Layout

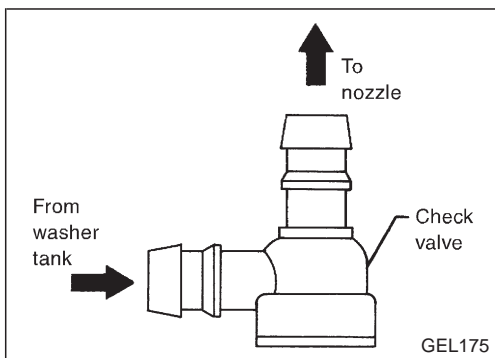


## Check Valve

# HORN

## Wiring Diagram — HORN —

EL-HORN-01

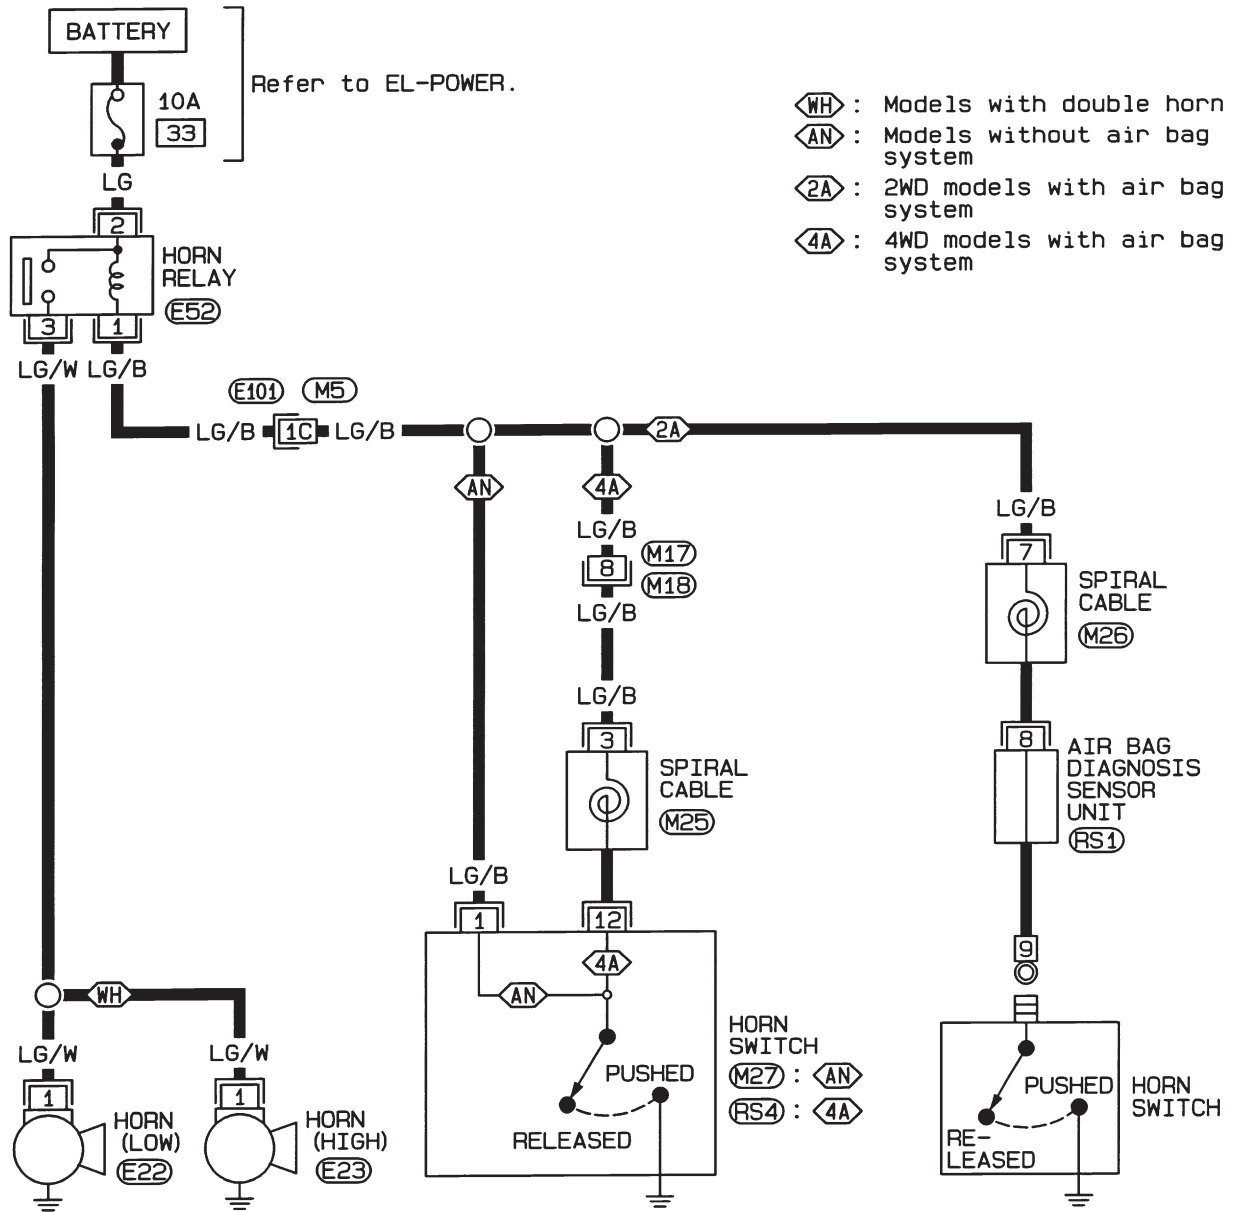

Refer to last page (Foldout page).


(M5), (E101)

\* : This connector is not shown in "HARNESS LAYOUT".

# CIGARETTE LIGHTER

## Wiring Diagram — CIGAR —

EL-CIGAR-01

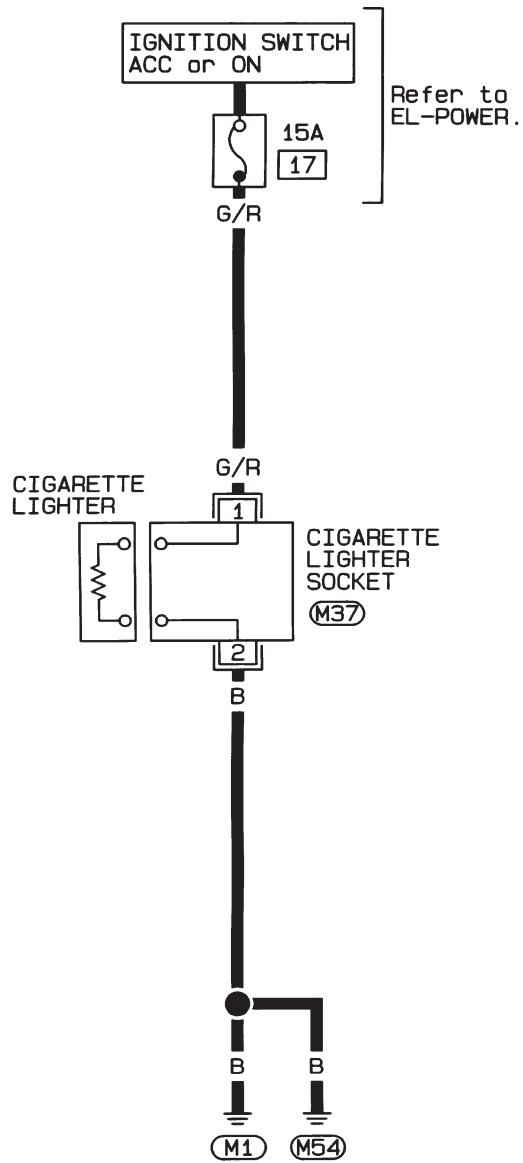




# CLOCK

## Wiring Diagram — CLOCK —

EL-CLOCK-01

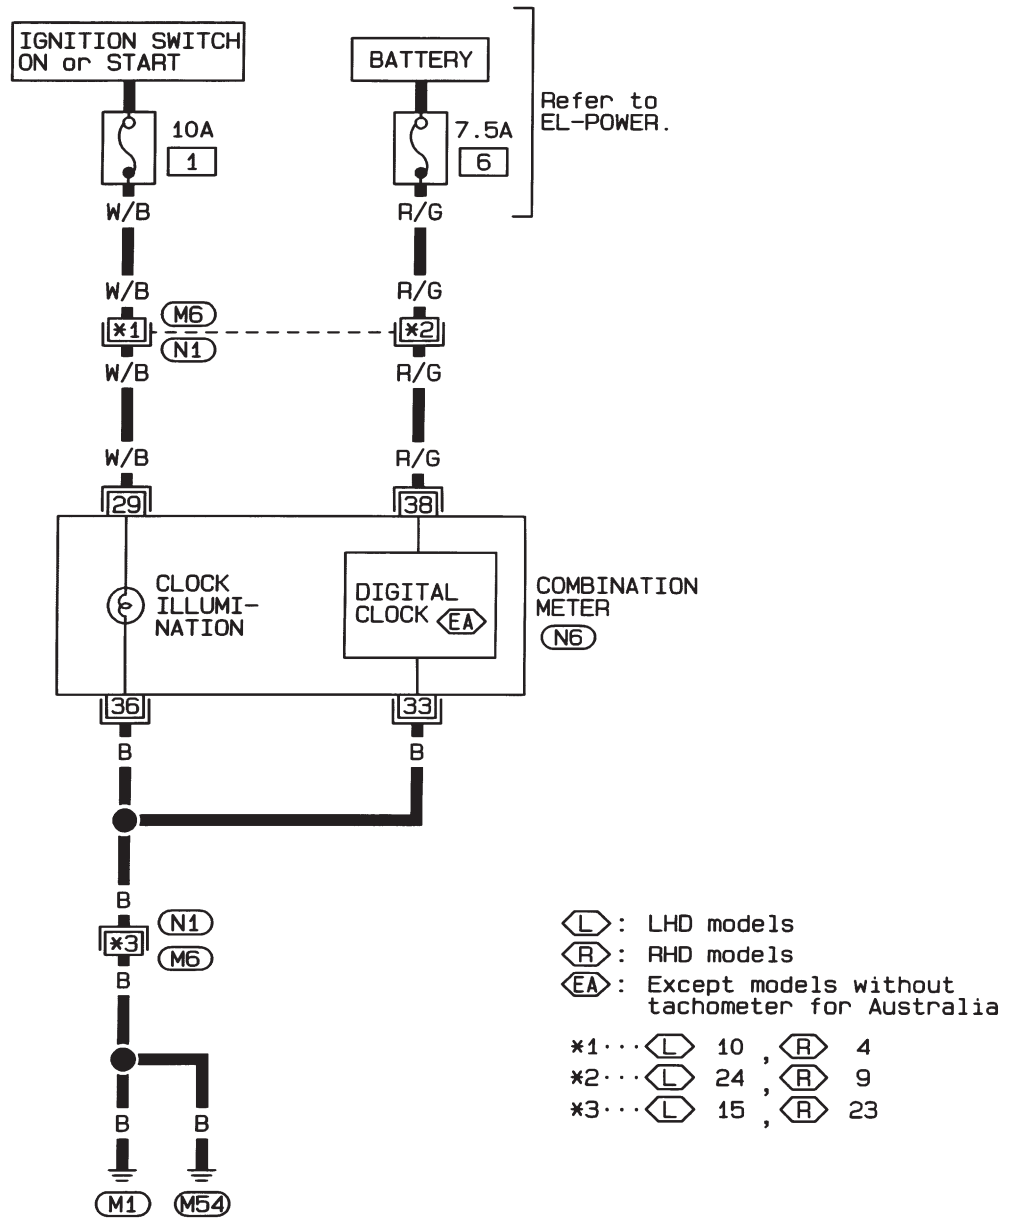



1	2	3	4	5	6	7	8	9	10	N1				
11	12	13	14	15	16	17	18	19	20	21	22	23	24	W

40	39	38	37	36	35	N6		
34	33	32	31	30	29	28	27	W


# REAR WINDOW DEFOGGER

## Wiring Diagram — DEF —

EL-DEF-01

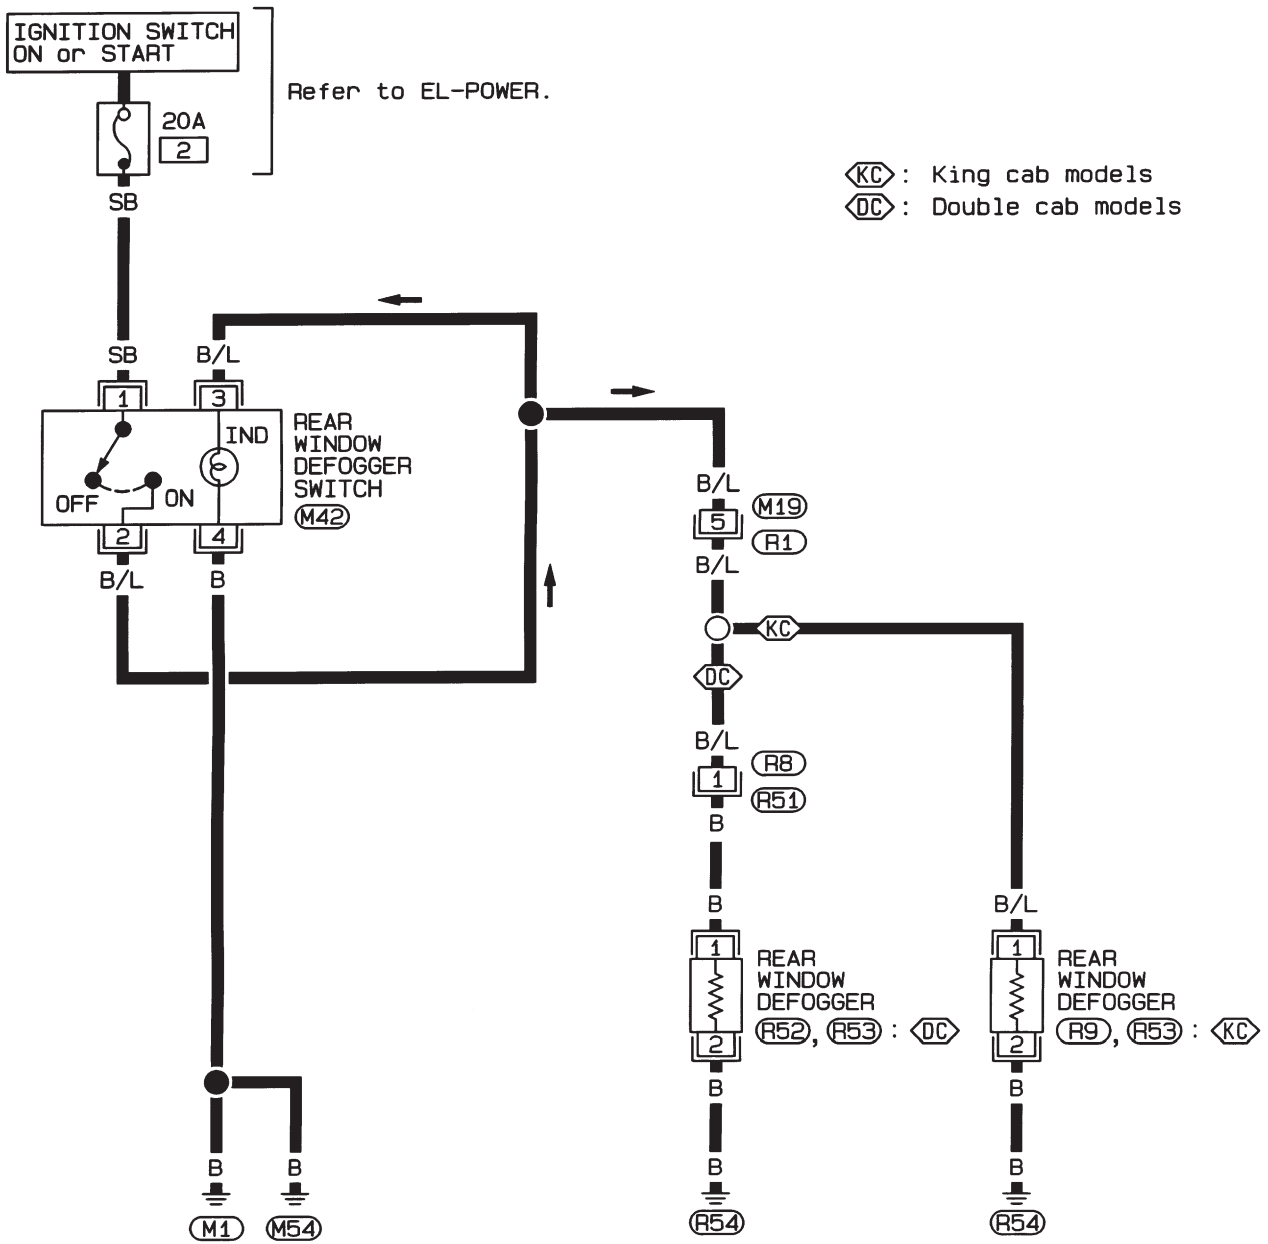

# REAR WINDOW DEFOGGER

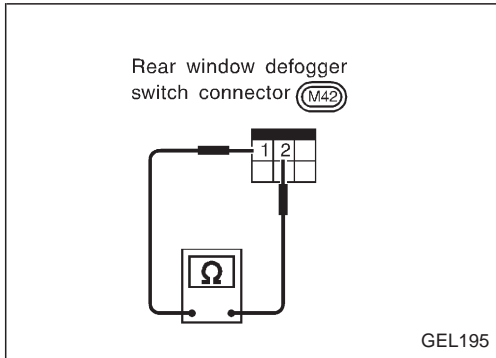


## Electrical Components Inspection

### REAR WINDOW DEFOGGER SWITCH


Check continuity between terminals when rear window defogger switch is pushed and released.

Terminals	Condition	Continuity
① - ②	Rear window defogger switch is pushed	Yes
	Rear window defogger switch is released	No

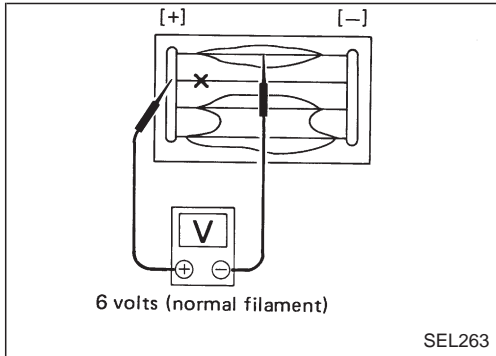


### Filament Check

1. Attach probe circuit tester (in volt range) to middle portion of each filament.

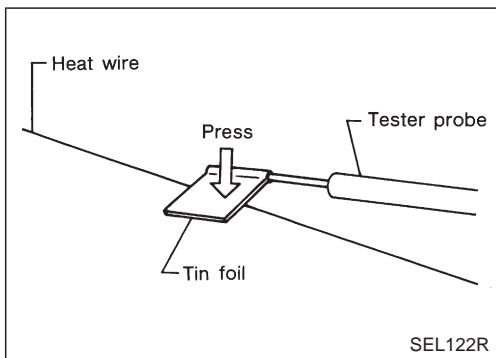


- When measuring voltage, wrap tin foil around the top of the negative probe. Then press the foil against the wire with your finger.

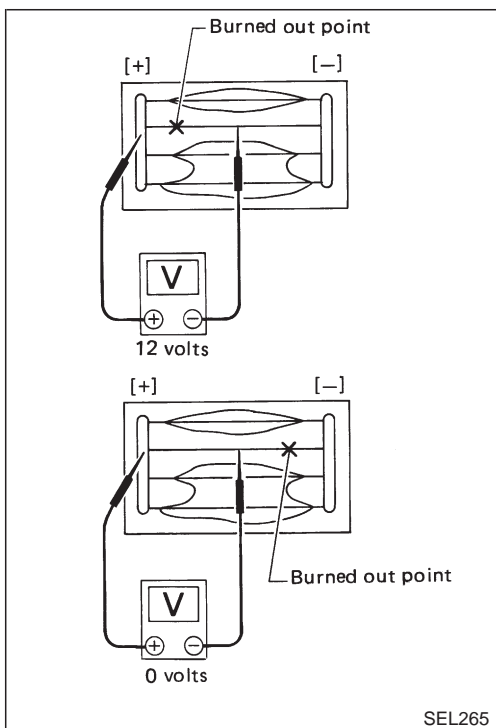

2. If a filament is burned out, circuit tester registers 0 or 12 volts.

## REAR WINDOW DEFOGGER

### Filament Check (Cont'd)

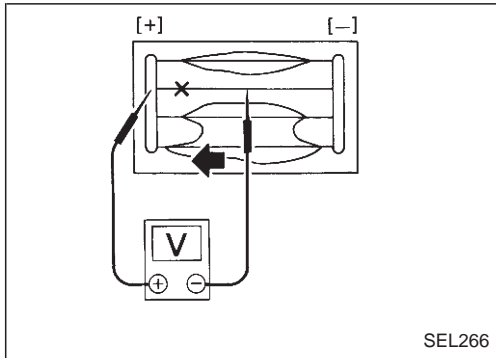

3. To locate burned out point, move probe to left and right along filament. Test needle will swing abruptly when probe passes the point.

### Filament Repair

#### REPAIR EQUIPMENT


1. Conductive silver composition (Dupont No. 4817 or equivalent)
2. Ruler 30 cm (11.8 in) long
3. Drawing pen
4. Heat gun
5. Alcohol
6. Cloth

#### REPAIRING PROCEDURE

1. Wipe broken heat wire and its surrounding area clean with a cloth dampened in alcohol.
2. Apply a small amount of conductive silver composition to tip of drawing pen.


#### Shake silver composition container before use.

3. Place ruler on glass along broken line. Deposit conductive silver composition on break with drawing pen. Slightly overlap existing heat wire on both sides [preferably 5 mm (0.20 in)] of the break.

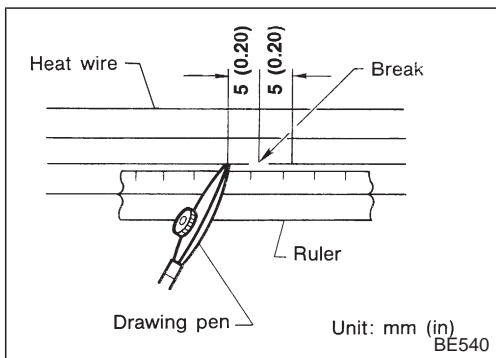


4. After repair has been completed, check repaired wire for continuity. This check should be conducted 10 minutes after silver composition is deposited.

**Do not touch repaired area while test is being conducted.**

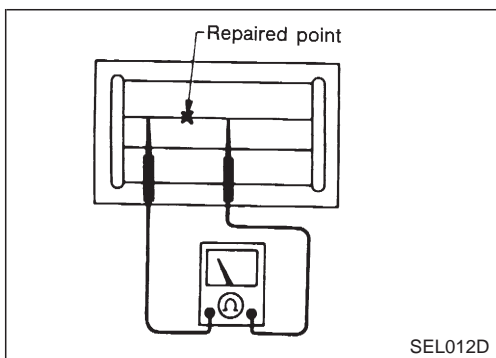

5. Apply a constant stream of hot air directly to the repaired area for approximately 20 minutes with a heat gun. A minimum distance of 3 cm (1.2 in) should be kept between repaired area and hot air outlet. If a heat gun is not available, let the repaired area dry for 24 hours.



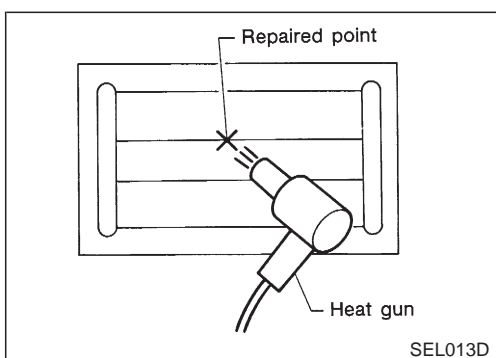


# AUDIO

## Wiring Diagram — AUDIO —/LHD Models Type-2

WITH 2 OR 4-SPEAKERS (Without CD deck) AND WITH 1-SPEAKER (For Europe)

EL-AUDIO-02

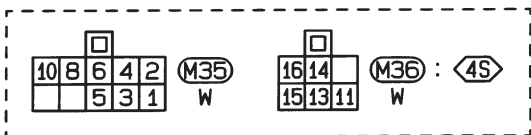
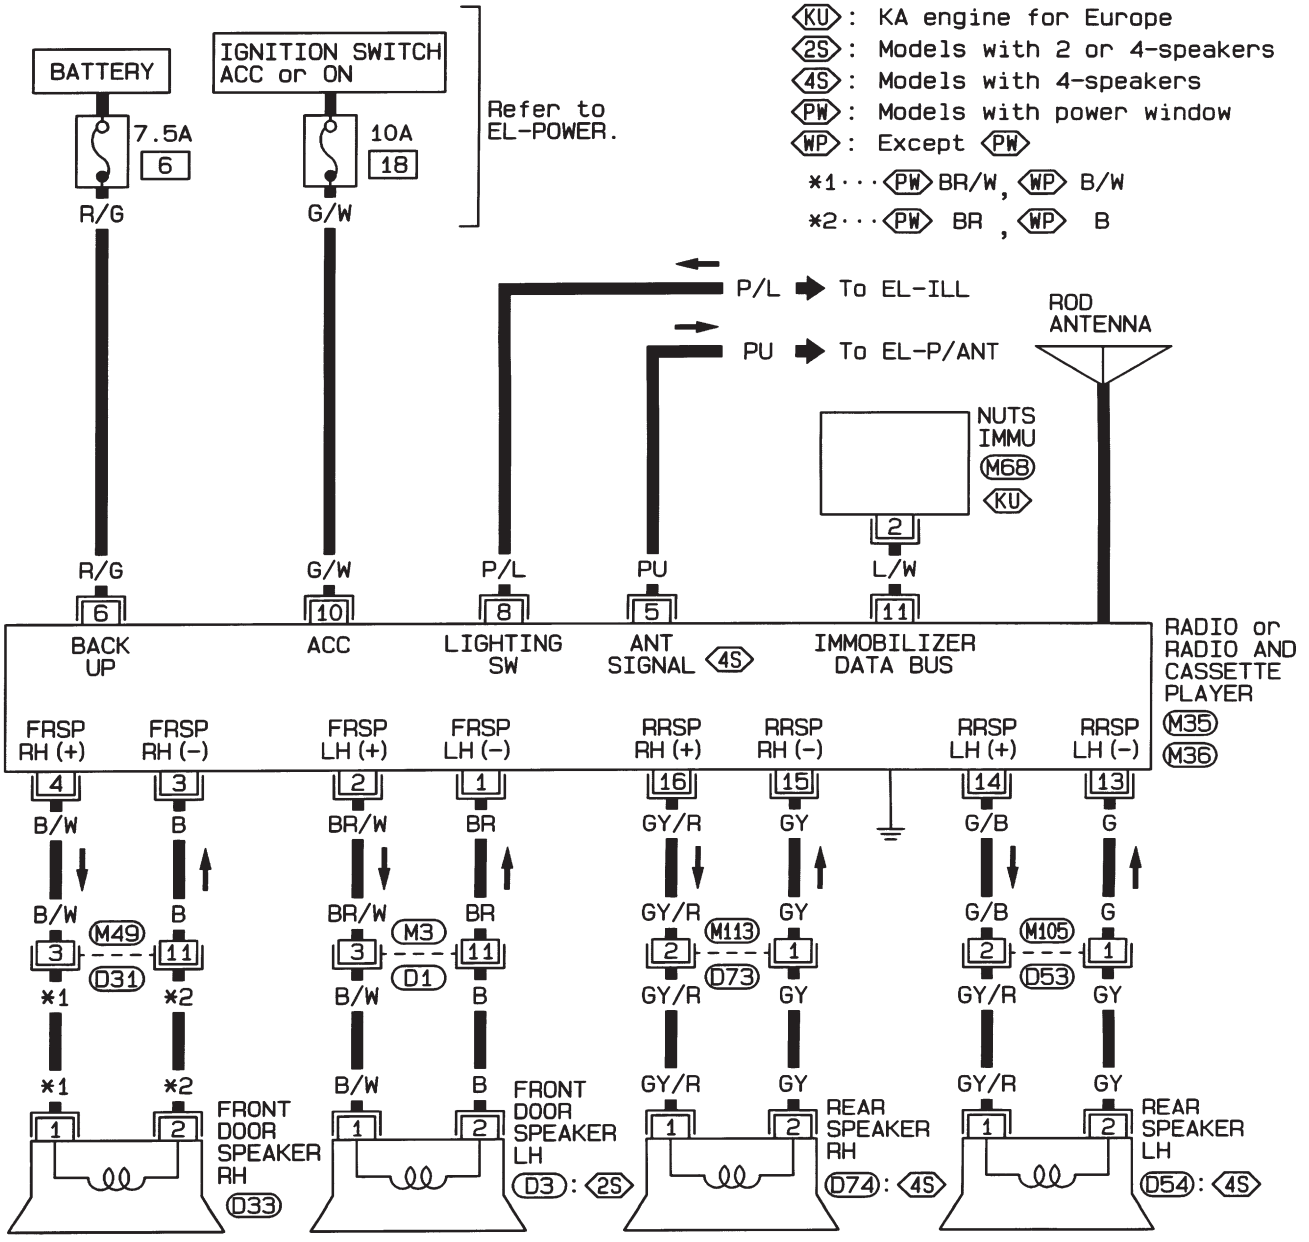


# AUDIO

## Wiring Diagram — AUDIO —/LHD Models Type-3

WITH 4-SPEAKERS (With CD deck)





EL-AUDIO-03

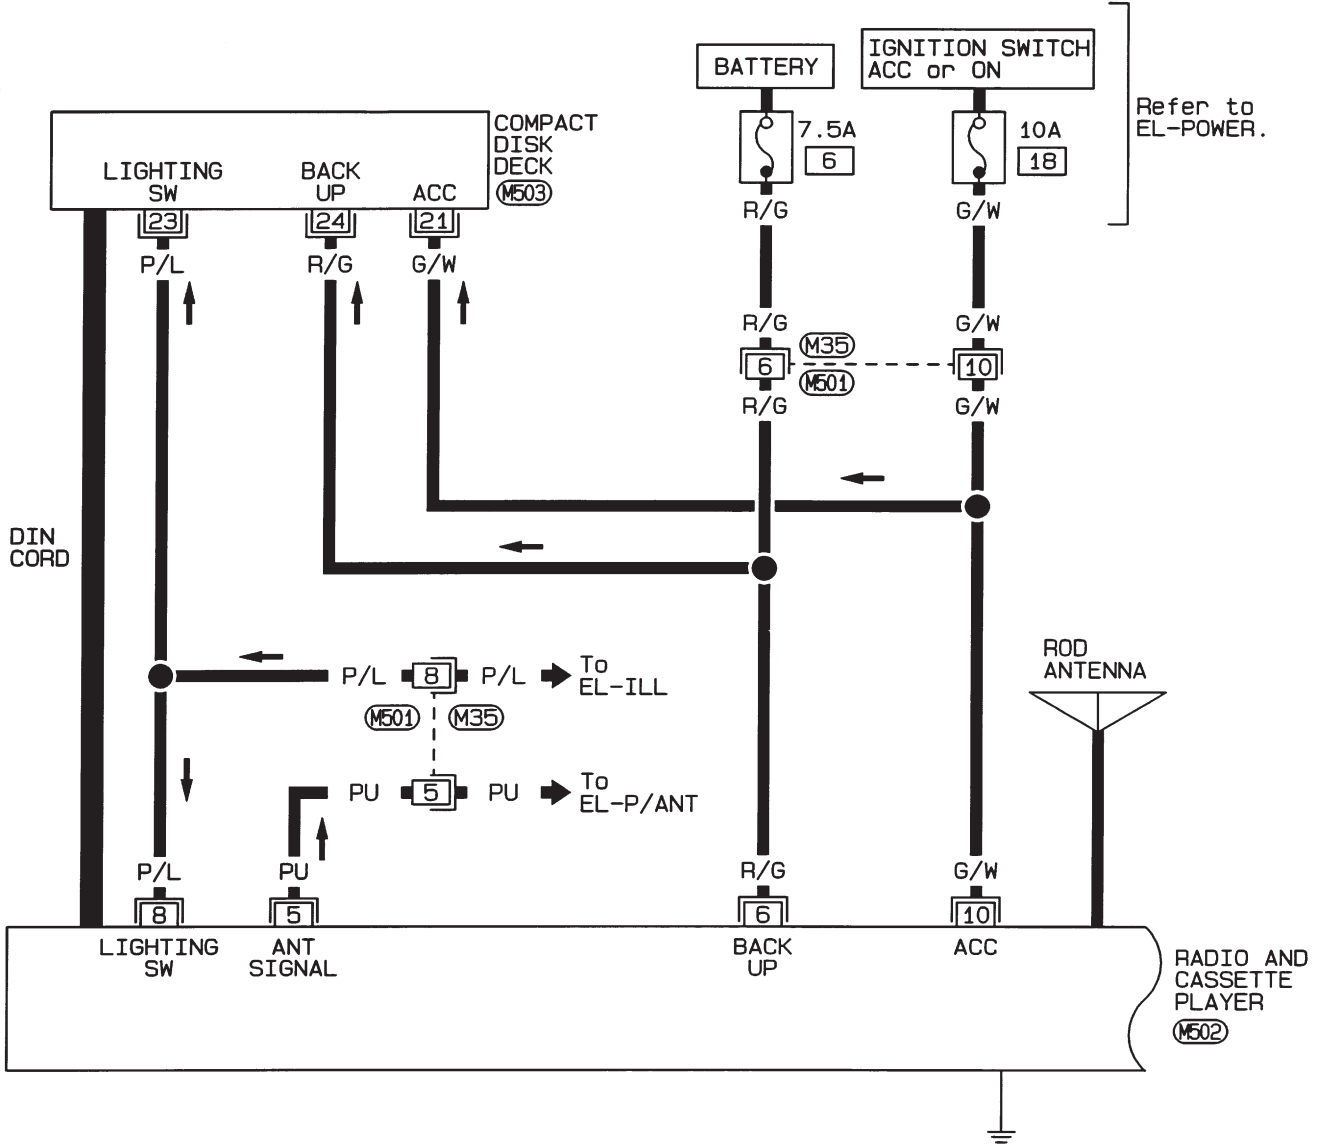

# AUDIO

## Wiring Diagram — AUDIO —/LHD Models Type-3 (Cont'd)




EL-AUDIO-04

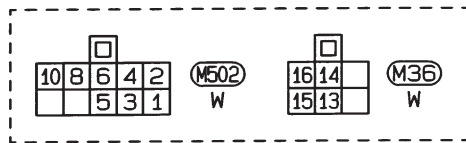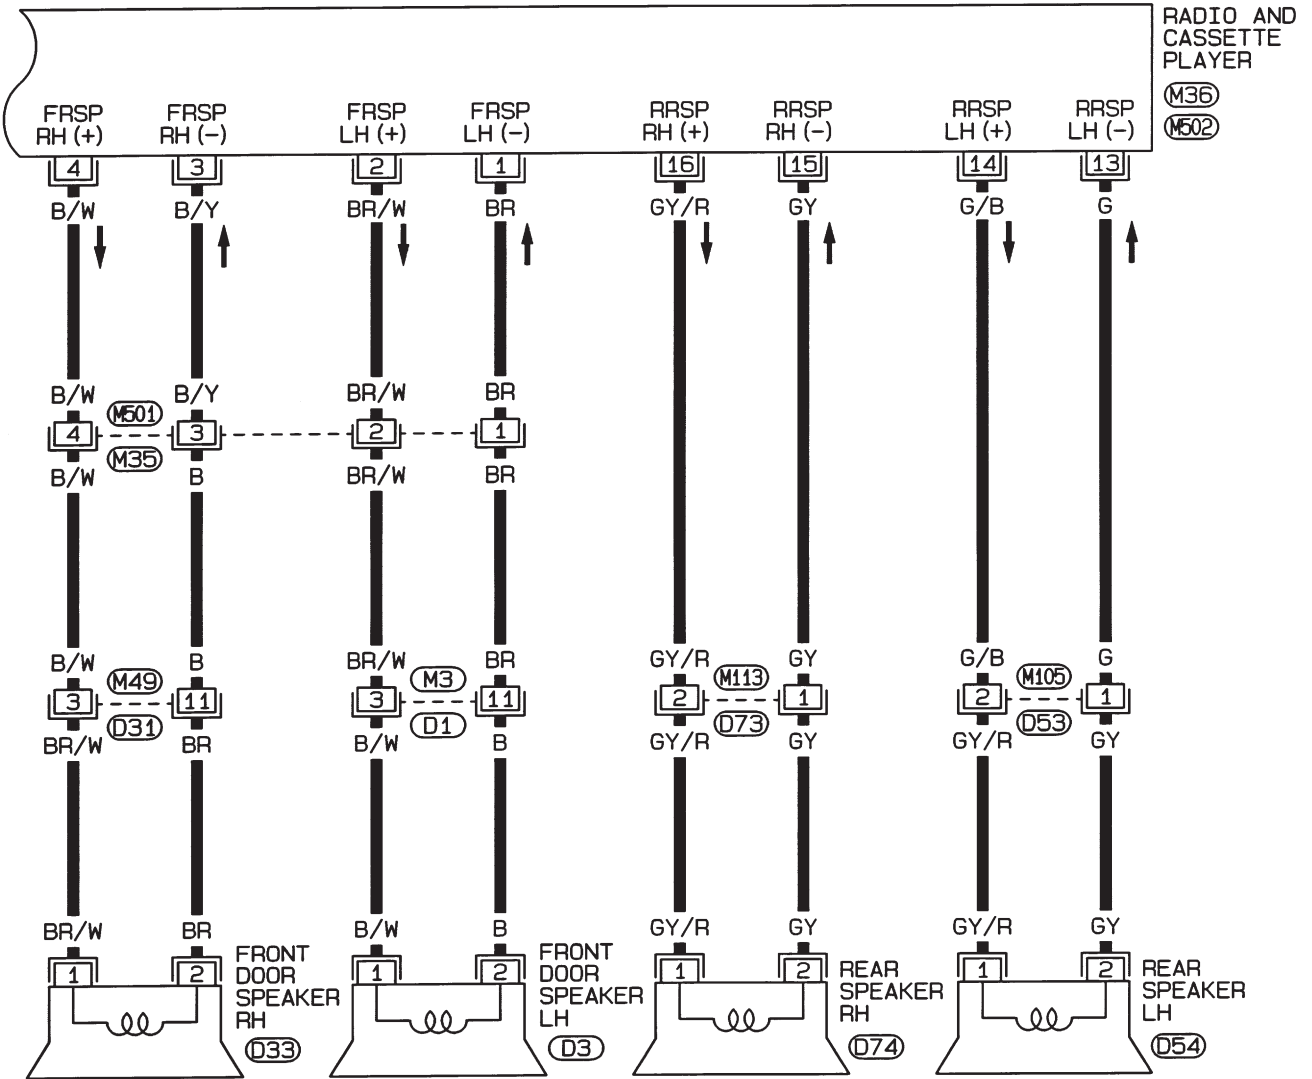

# AUDIO

## Wiring Diagram — AUDIO —/RHD Models

### EL-AUDIO-05

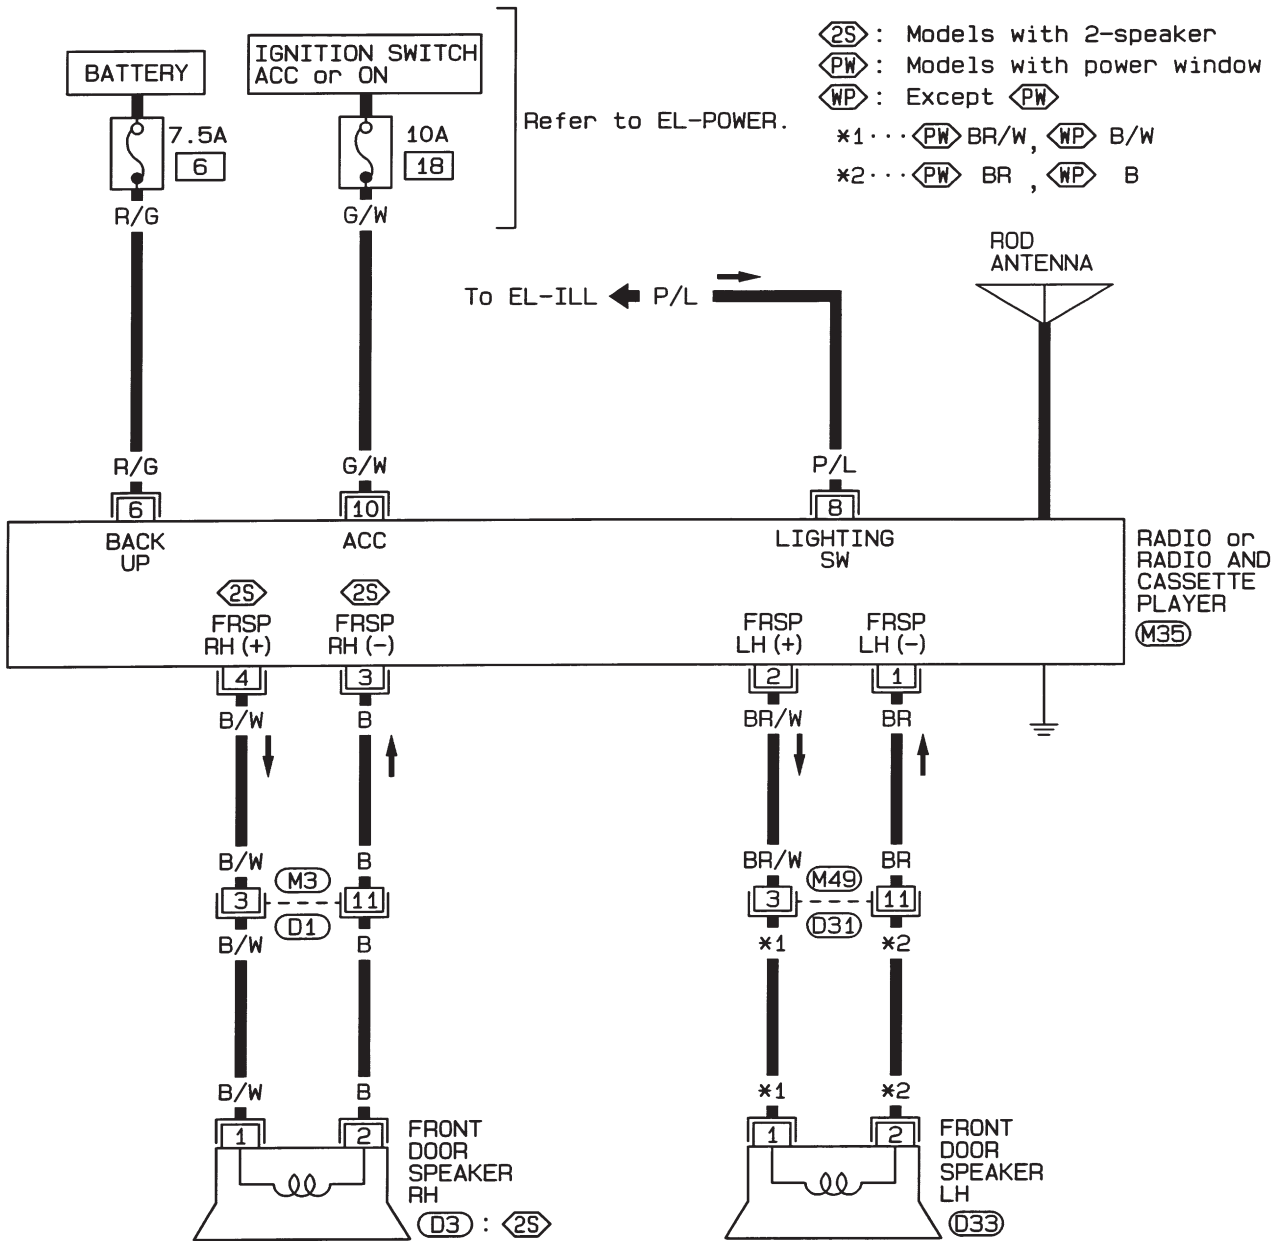



# AUDIO

## Trouble Diagnoses

Symptom	Possible causes	Repair order
Radio inoperative (no digital display and no sound from speakers).	<ol style="list-style-type: none"> <li>1. 10A fuse</li> <li>2. Poor radio case ground</li> <li>3. Radio</li> </ol>	<ol style="list-style-type: none"> <li>1. Check 10A fuse (No. <span style="border: 1px solid black; padding: 0 2px;">18</span>), located in fuse block). Turn ignition switch ON and verify battery positive voltage is present at terminal <span style="border: 1px solid black; padding: 0 2px;">10</span> of radio.</li> <li>2. Check radio case ground.</li> <li>3. Remove radio for repair.</li> </ol>
Radio controls are operational, but no sound is heard from any speaker.	<ol style="list-style-type: none"> <li>1. Radio output</li> <li>2. Radio</li> </ol>	<ol style="list-style-type: none"> <li>1. Check radio output voltages.</li> <li>2. Remove radio for repair.</li> </ol>
Radio presets are lost when ignition switch is turned OFF.	<ol style="list-style-type: none"> <li>1. 7.5A fuse</li> <li>2. Radio</li> </ol>	<ol style="list-style-type: none"> <li>1. Check 7.5A fuse (No. <span style="border: 1px solid black; padding: 0 2px;">6</span>), located in fuse block) and verify battery positive voltage is present at terminal <span style="border: 1px solid black; padding: 0 2px;">6</span> of radio.</li> <li>2. Remove radio for repair.</li> </ol>
Individual speaker is noisy or inoperative.	<ol style="list-style-type: none"> <li>1. Speaker</li> <li>2. Radio output</li> <li>3. Speaker circuit</li> <li>4. Radio</li> </ol>	<ol style="list-style-type: none"> <li>1. Check speaker.</li> <li>2. Check radio output voltages.</li> <li>3. Check wires for open or short between radio and speaker.</li> <li>4. Remove radio for repair.</li> </ol>
Radio stations are weak or noisy.	<ol style="list-style-type: none"> <li>1. Antenna</li> <li>2. Poor radio ground</li> <li>3. Radio</li> </ol>	<ol style="list-style-type: none"> <li>1. Check antenna.</li> <li>2. Check radio ground.</li> <li>3. Remove radio for repair.</li> </ol>
Radio generates static noise with engine running.	<ol style="list-style-type: none"> <li>1. Poor radio ground</li> <li>2. Loose or missing ground bonding straps</li> <li>3. Ignition condenser or rear window defogger noise suppressor condenser</li> <li>4. Alternator</li> <li>5. Ignition coil or secondary wiring</li> <li>6. Radio</li> </ol>	<ol style="list-style-type: none"> <li>1. Check radio ground.</li> <li>2. Check ground bonding straps.</li> <li>3. Replace ignition condenser or rear window defogger noise suppressor condenser.</li> <li>4. Check alternator.</li> <li>5. Check ignition coil and secondary wiring.</li> <li>6. Remove radio for repair.</li> </ol>
Radio generates static noise with accessories on (switch pops and motor noise).	<ol style="list-style-type: none"> <li>1. Poor radio ground</li> <li>2. Antenna</li> <li>3. Accessory ground</li> <li>4. Faulty accessory</li> </ol>	<ol style="list-style-type: none"> <li>1. Check radio ground.</li> <li>2. Check antenna.</li> <li>3. Check accessory ground.</li> <li>4. Replace accessory.</li> </ol>

### SPEAKER INSPECTION

1. Disconnect speaker harness connector.
2. Measure the resistance between speaker terminals 1 and 2.
  - The resistance should be 2 - 4Ω.
3. Using jumper wires, momentarily connect a 9V battery between speaker terminals 1 and 2.
  - A momentary hum or pop should be heard.

### ANTENNA INSPECTION

Using a jumper wire, clip an auxiliary ground between antenna and body.

- If reception improves, check antenna ground (at body surface).
- If reception does not improve, check main feeder cable for short circuit or open circuit.

### RADIO INSPECTION

All voltage inspections are made with:

- Ignition switch ON or ACC
- Radio ON
- Radio connected (If removed for inspection, supply a ground to the case using a jumper wire.)

## AUDIO

---

### CATS (Code) System/For Europe RHD

**NOTE:**

- This system is used for code indicator-equipped radios on all models.
- The Europe LHD model with KA24E engine has a NATS-linked anti-theft function with radio as optional equipment that renders the code system inoperable.

**DESCRIPTION**

By using a personal 4-digit code known only to the vehicle owner, the possibility of the audio unit being stolen is effectively reduced, because without the code the unit can not be activated. When in normal use, the unit is unlocked and accessible in the usual way.

If however, someone attempts to remove the unit or the battery cable is disconnected, the anti-theft system activates and the unit “locks”. The only way it can be unlocked is by entering a personal code number known only by the owner.

**UNLOCKING THE UNIT (How to enter a personal code number)**

- If the battery supply to the vehicle is interrupted by accident for some reason, the unit will lock. To unlock the unit, proceed as follows:
  1. Press the power/volume control knob to turn the unit on.
  2. “CODE IN” is displayed.
  3. Input your personal code by pressing the preset buttons (1 to 4).
  4. Press the  $\wedge$  button.
  5. If the entered code number is correct, the radio turns on.

**When the code is incorrect**

1. If the entered code is incorrect, the unit becomes inoperable for 10 seconds for the first three attempts, then the code input mode is automatically set (“CODE IN” is displayed).
2. If the code is incorrect the fourth time, the unit becomes inoperable for 60 minutes and “----” is displayed. After 60 minutes, the code input mode is automatically set (“CODE IN” is displayed).

**NOTE:**

**If the above is repeated 17 times, the unit will lock and “LOCKED” is displayed.**

3. After “LOCKED” is displayed, radio can be returned to the code input mode only within three attempts as follows. (Only three attempts are allowed to unlock the unit.)
  - a. Press the power/volume control knob while pushing both the MOD and TA switches.
  - b. The unit then returns to the code input mode.

**CAUTION:**

**If the third attempt is unsuccessful, the unit will lock permanently.**

# AUDIO

## NATS Audio Link/For Europe LHD (KA24E)

### DESCRIPTION

The Europe LHD model with KA24E engine has a NATS-linked anti-theft function with radio as optional equipment.

The link with the NATS IMMU implies that the radio can basically only be operated if connected to the matching NATS IMMU to which the radio was initially fitted on the production line.

Since radio operation is impossible after the link with the NATS is disrupted theft of the radio unit is basically useless since special equipment is required to reset the radio.

### Initialisation process for radios that are linked to the NATS IMMU

New radios will be delivered to the factories in the “NEW” state, i.e. ready to be linked with the vehicle’s NATS.

When the radio in “NEW” state is first switched on at the factory, it will start up communication with the vehicle’s immobiliser control unit (IMMU) and send a code (the “Radio Code”) to the IMMU. The IMMU will then store this code, which is unique to each radio, in its (permanent) memory.

Upon receipt of the code by the IMMU, the NATS will confirm correct receipt of the radio code to the radio. Hereafter, the radio will operate as normal.

During the initialisation process, “NEW” is displayed on the radio display. Normally though, communication between Radio and IMMU takes such a short time (300 ms) that the radio seems to switch on directly without showing “NEW” on its display.

### Normal operation

Each time the radio is switched on afterwards, the radio code will be verified between the radio unit and the NATS before the radio becomes operational. During the code verification process, “WAIT” is shown on the radio display. Again, the communication takes such a short time (300 ms) that the radio seems to switch on directly without showing “WAIT” on its display.

### When the radio is locked

In case of a radio being linked with the vehicle’s NATS (immobiliser system), disconnection of the link between the radio and the IMMU will cause the radio to switch into the lock (“SECURE”) mode in which the radio unit is fully inoperative. Hence, repair of the radio is basically impossible, unless the radio is reset to the “NEW” state for which special decoding equipment is required.

Both Blaupunkt and Clarion have provided their authorized service representatives with so called “decoder boxes” which can bring the radio unit back to the “NEW” state, enabling the radio to be switched on after which repair can be carried out. Subsequently, when the repaired radio is delivered to the final user again, it will be in the “NEW” state as to enable re-linking the radio to the vehicle’s immobiliser system. As a result of the above, repair of the radio can only be done by an authorized Blaupunkt or Clarion representative.

### Note:

Radio manufacturer of Nissan D22 models for Europe is “Clarion”.

### SERVICE PROCEDURE

Item	Service procedure	Description
Battery disconnection	No additional action required.	—
Radio needs repair	Repair needs to be done by authorized representative of radio manufacturer since radio cannot be operated unless it is reset to NEW state, using special decoding equipment.	—
Replacement of radio by new part	No additional action required.	Radio is delivered in NEW state.
Transferring radio to another vehicle/replacement of radio by an “old” part	Radio needs to be reset to NEW state by authorized representative of radio manufacturer.	—

## AUDIO

### NATS Audio Link/For Europe LHD (KA24E) (Cont'd)

Item	Service procedure	Description
Replacement of IMMU by new part	No additional action required.	The new IMMU will be recognized by the radio since a "blank" code is stored in the memory of the IMMU. In case the radio recognizes this "blank" code, it will request for input of the correct CATS code after which the radio will switch back to the initialisation process.
Replacement of IMMU by old part	Radio needs to be reset to NEW state by authorized representative of radio manufacturer.	If a radio code has already been stored in memory of the IMMU, the radio cannot be linked to it. After switching on the radio, it will display "SECURE" after 1 minute.
No communication from IMMU to radio	<ol style="list-style-type: none"><li>1. If NATS is malfunctioning, check NATS system.</li><li>2. After NATS is repaired, reset radio to NEW state by authorized representative of radio manufacture.</li></ol>	After switching on the radio, the radio will display "SECURE" after 1 minute. Further use of radios impossible until communication is established again, or after radio is reset by authorized representative of (radio) manufacturer.


**NOTE: Authorized radio manufacturer representatives in Europe are listed in the technical bulletin TB-EL 96-001 issued by Nissan Europe N.V.**

# AUDIO ANTENNA

## Manual Antenna

### LOCATION OF ANTENNA



LHD models\*

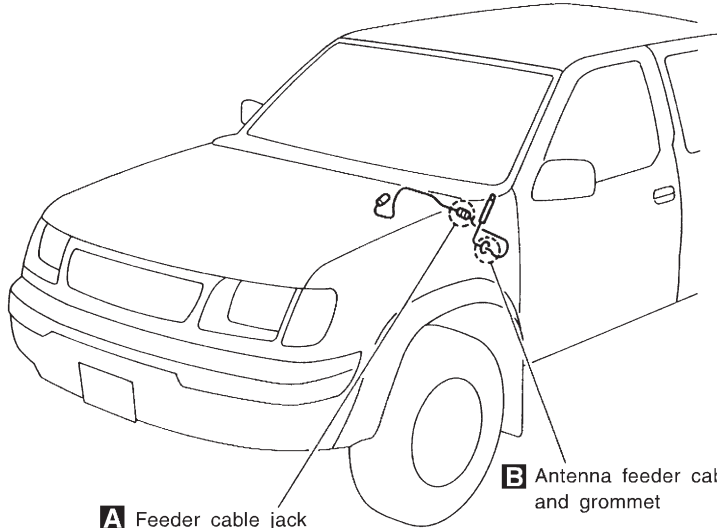


**A** Feeder cable jack

**B** Antenna feeder cable and grommet

\* Structure is basically the opposite of the structure for RHD models.

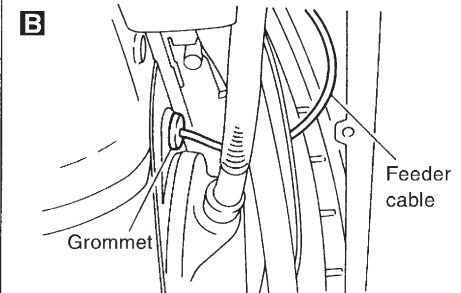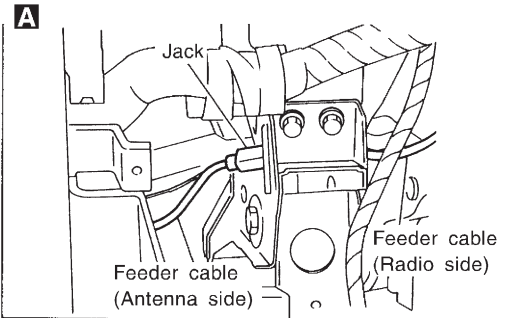


GEL196

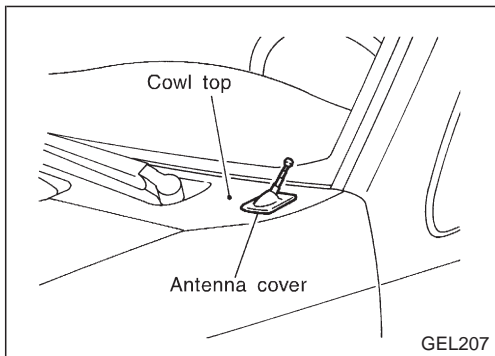

GEL207

### ANTENNA ASSEMBLY REPLACEMENT

1. Remove antenna cover in cowl top.
2. Remove wiper arm and cowl top.

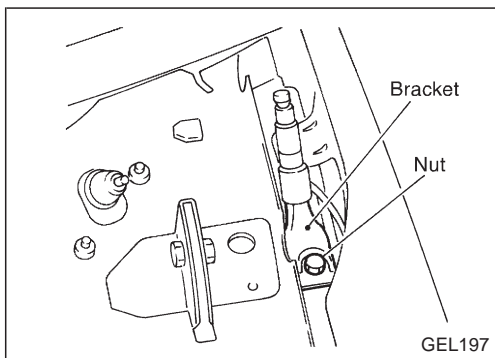

GEL197

3. Loosen nut at antenna bracket.
4. Disconnect antenna feeder cable jack shown in the above illustration.
5. Remove fender protector.
6. Remove the grommet and pull the feeder cable out from fender inner.
7. Remove antenna assembly and replace with a new one.





# AUDIO ANTENNA

## Power Antenna

### TROUBLE DIAGNOSES

Symptom	Possible causes	Repair order
Power antenna does not operate.	<ol style="list-style-type: none"> <li>7.5A fuse</li> <li>Radio signal</li> <li>Grounds (E6) and (E39)</li> </ol>	<ol style="list-style-type: none"> <li>Check 7.5A fuse (No. 6), located in fuse block). Verify that battery positive voltage is present at terminal ① of power antenna.</li> <li>Turn ignition switch and radio ON. Verify that battery positive voltage is present at terminal ③ of power antenna.</li> <li>Check grounds (E6) and (E39).</li> </ol>


### LOCATION OF ANTENNA

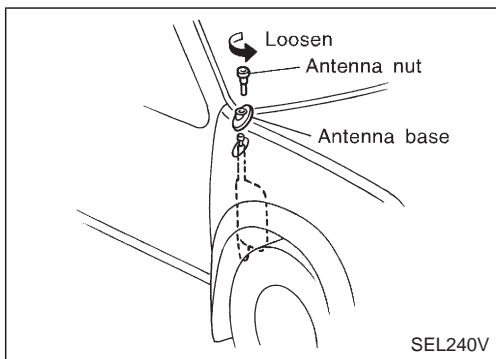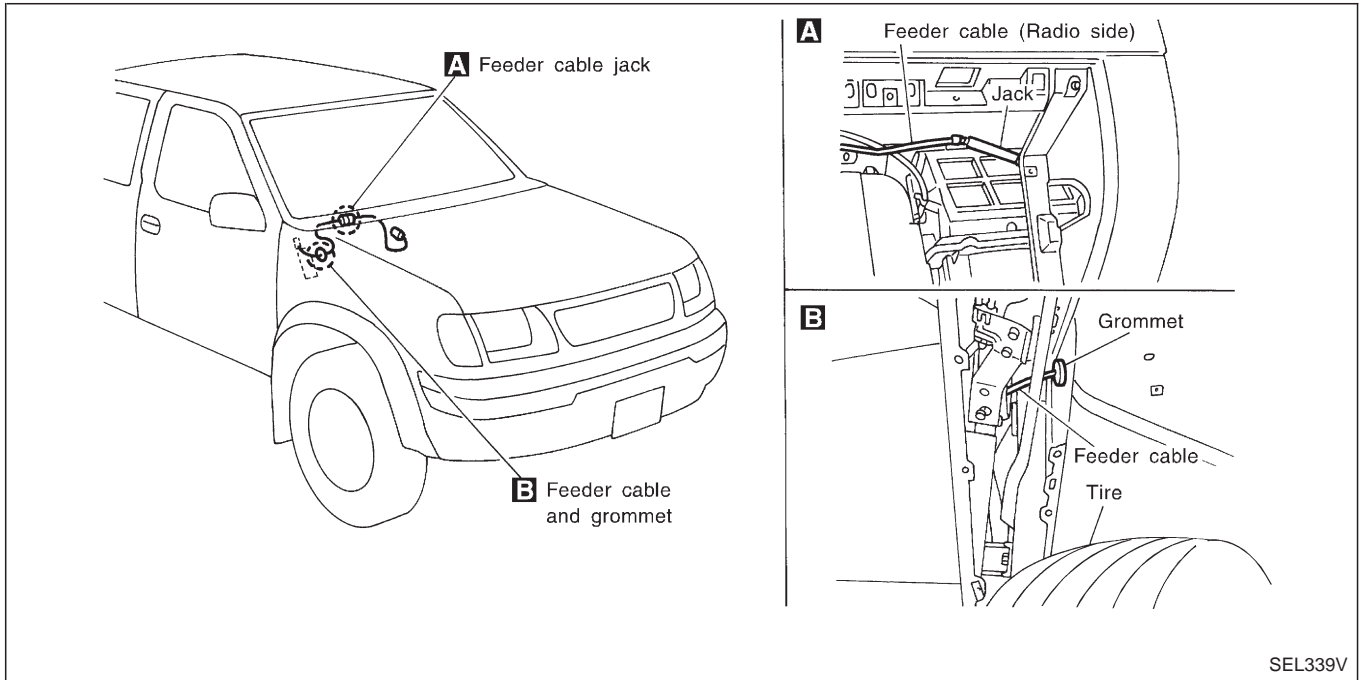

### ANTENNA ROD REPLACEMENT

#### Removal

1. Remove antenna nut and antenna base.

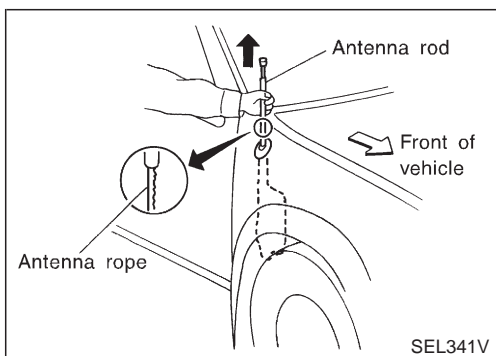



2. Withdraw antenna rod while raising it by operating antenna motor.

## AUDIO ANTENNA

### Power Antenna (Cont'd)


#### Installation

1. Lower antenna rod by operating antenna motor.
2. Insert gear section of antenna rope into place with it facing toward antenna motor.
3. As soon as antenna rope is wound on antenna motor, stop antenna motor. Insert antenna rod lower end into antenna motor pipe.
4. Retract antenna rod completely by operating antenna motor.
5. Install antenna nut and base.

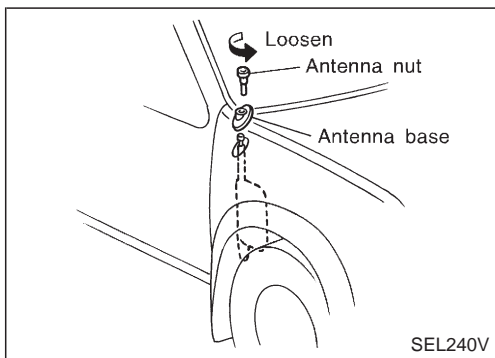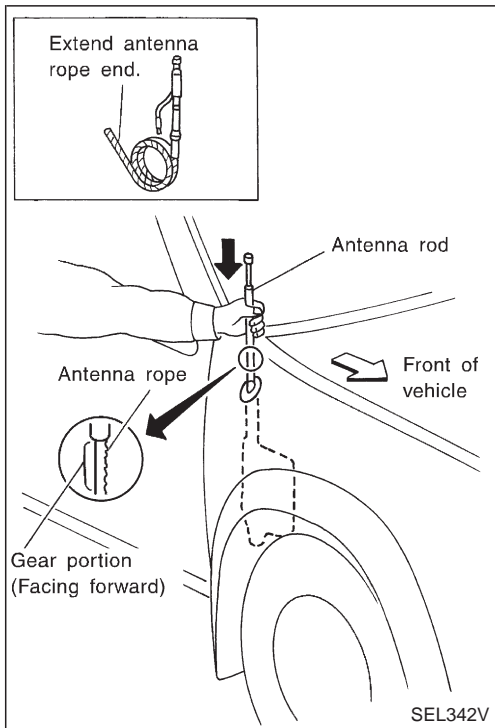

#### ANTENNA ASSEMBLY REPLACEMENT

1. Remove antenna nut and antenna base.
2. Loosen bolts at antenna bracket and disconnect power antenna connector.
3. Disconnect antenna feeder cable jack shown in "LOCATION OF ANTENNA".
4. Remove fender protector.
5. Remove the grommet and pull the feeder cable out from fender inner.
6. Remove antenna assembly and replace with a new one.

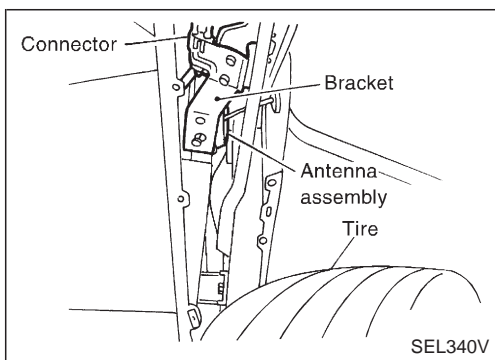




# POWER DOOR MIRROR

## Wiring Diagram — MIRROR —

EL-MIRROR-01

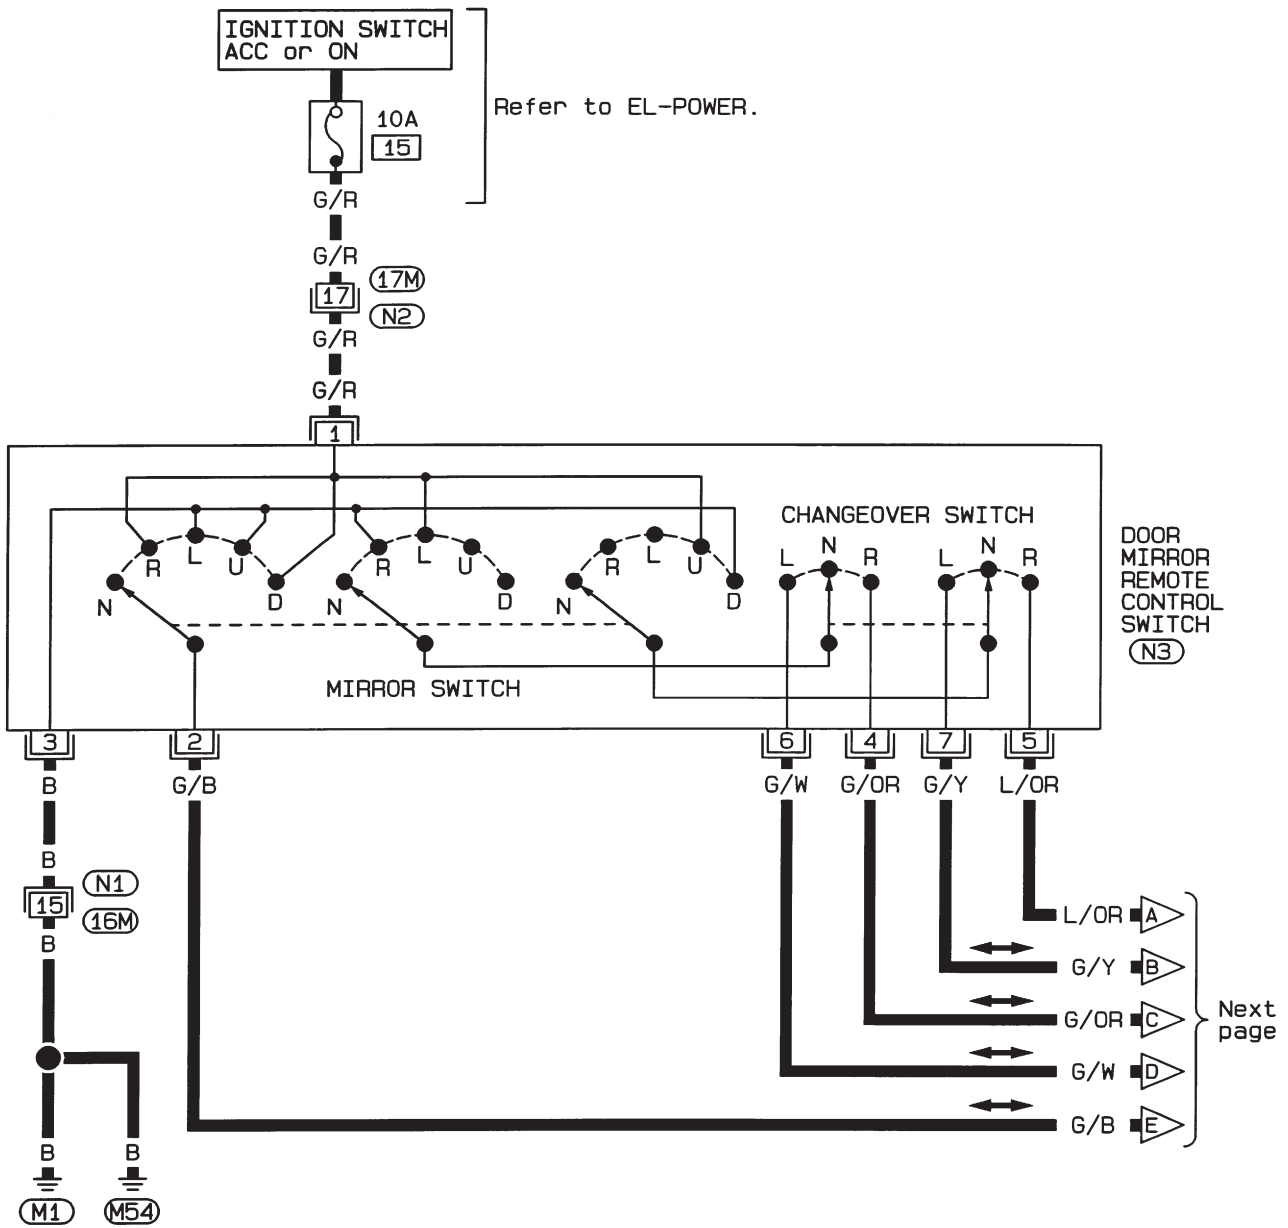

1	2	3	4	5	6	7	8	9	10	N1 W
11	12	13	14	15	16	17	18	19	20	



1	2	3	4	5	6	7	8	N2 W
9	10	11	12	13	14	15	16	

2	3	1	N3 GY
5	7	4	

# POWER DOOR MIRROR

## Wiring Diagram — MIRROR — (Cont'd)


EL-MIRROR-02

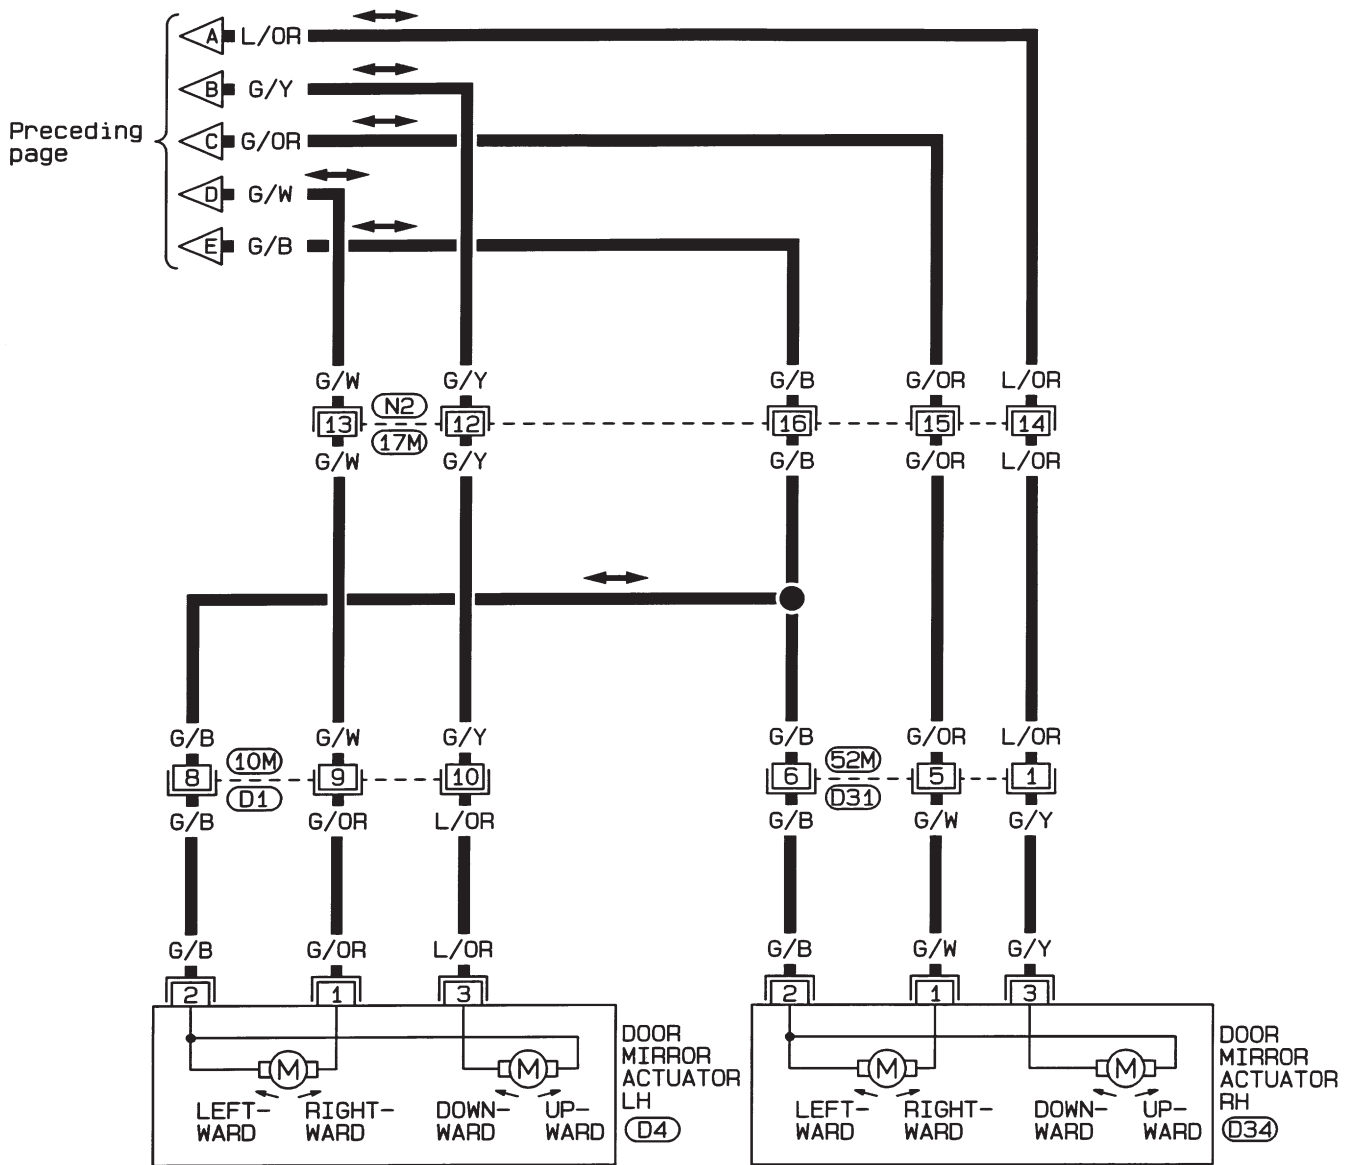

# HEATED SEAT

## Wiring Diagram — H/SEAT —



EL-H/SEAT-01

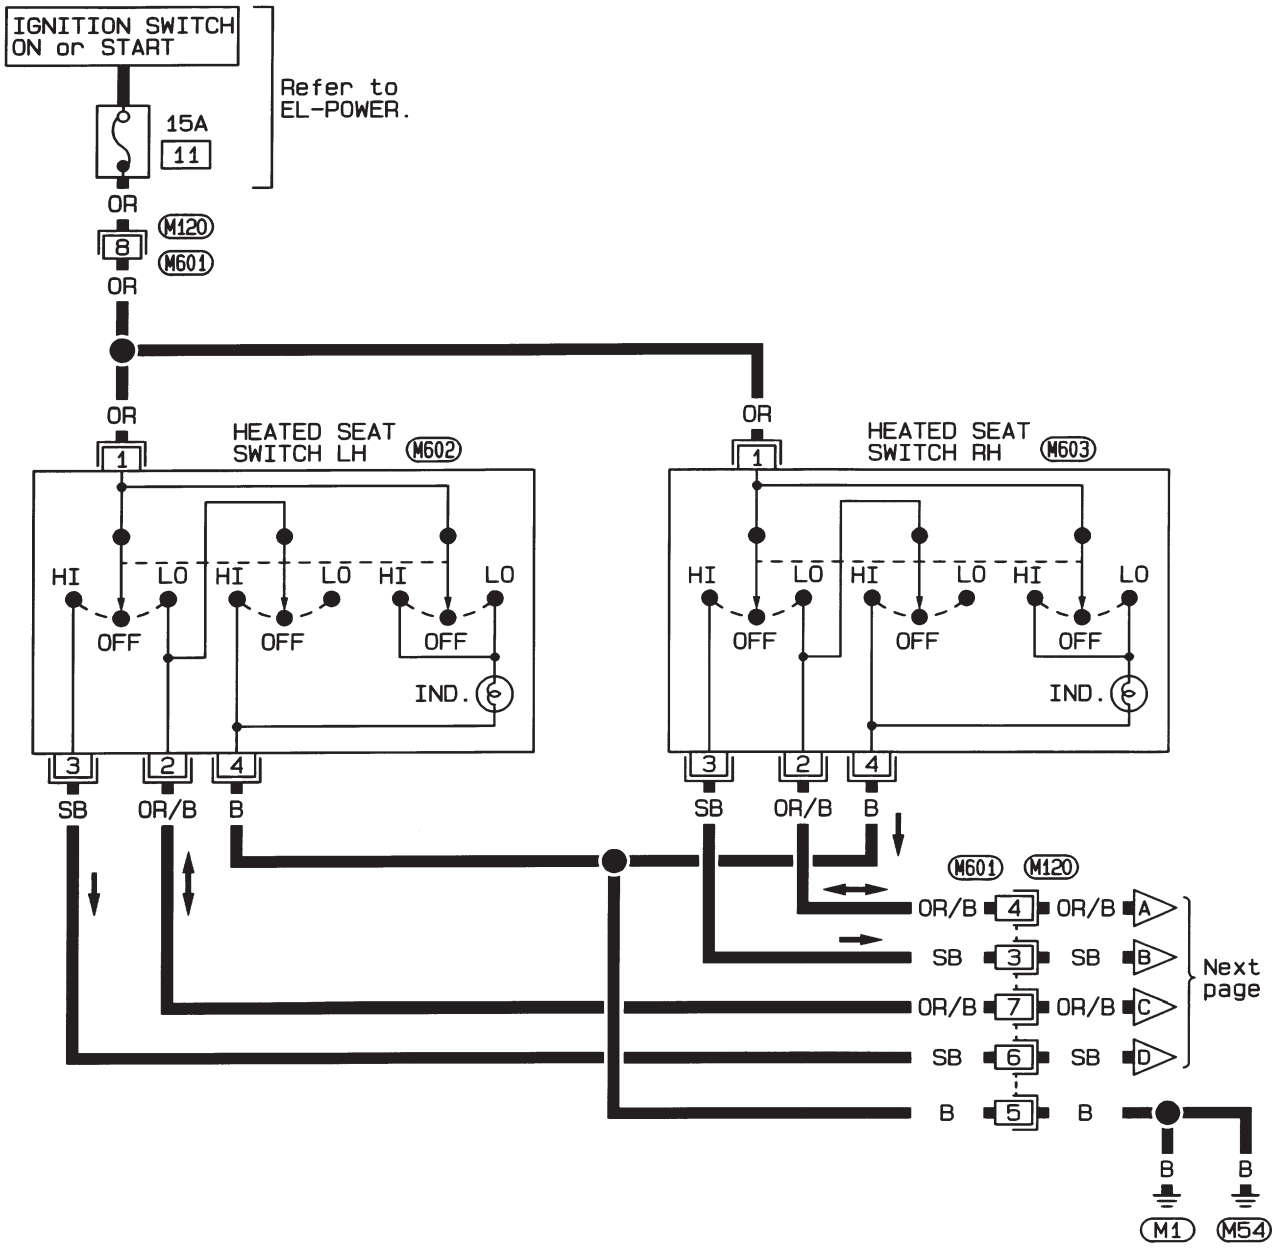

# HEATED SEAT

## Wiring Diagram — H/SEAT — (Cont'd)

EL-H/SEAT-02

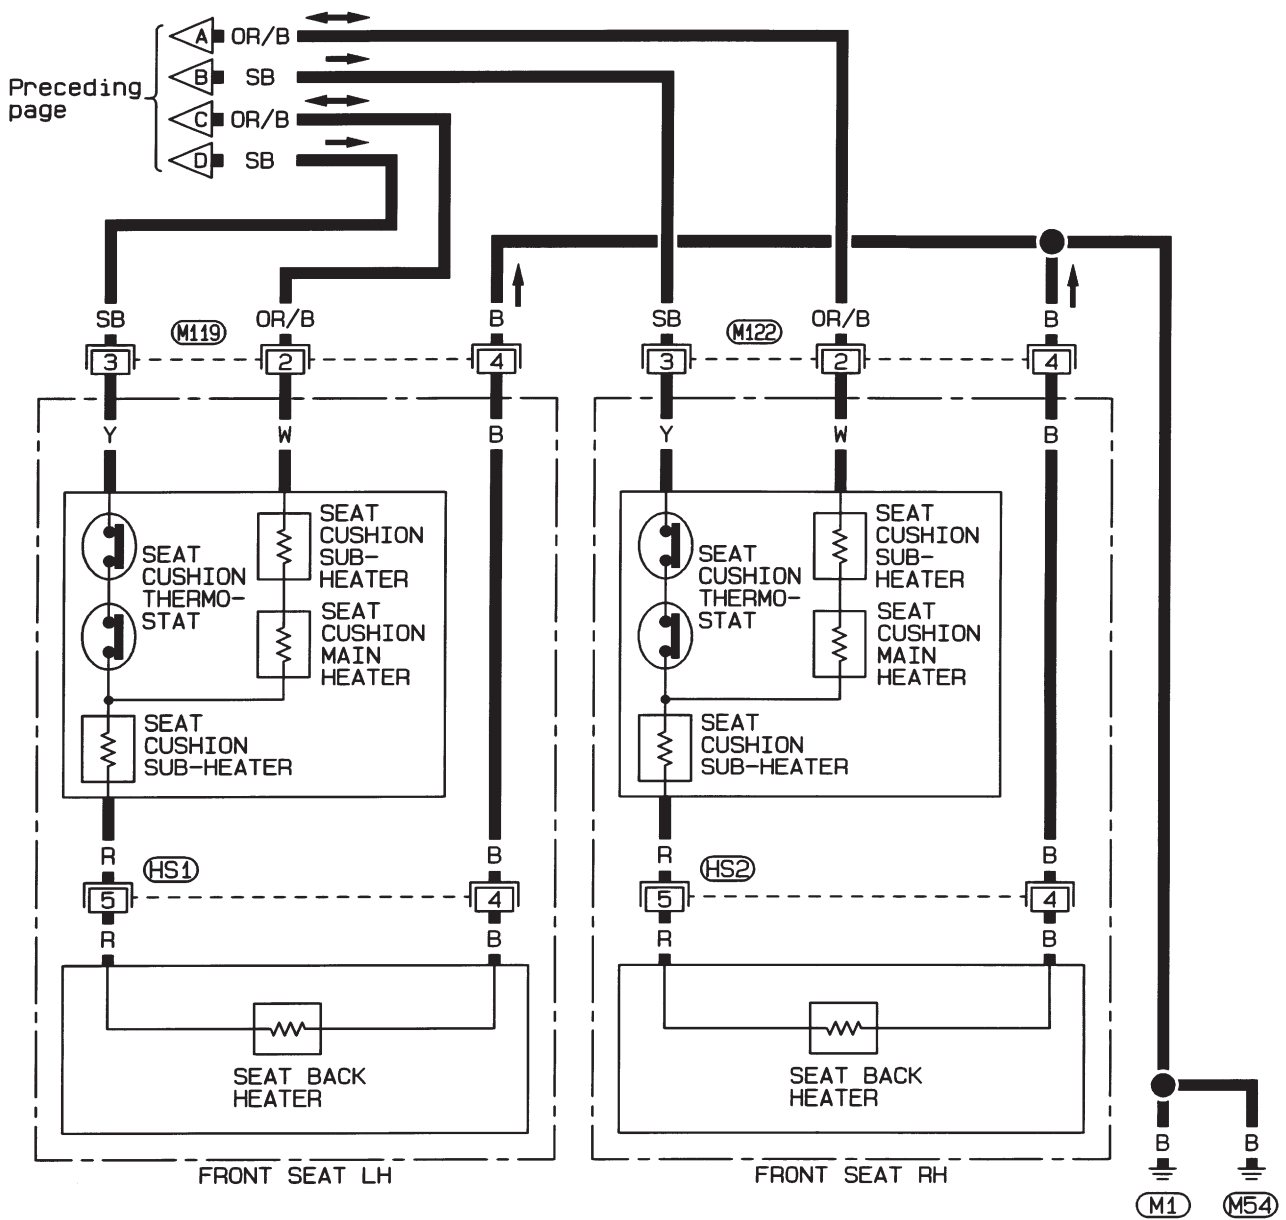

\* : This connector is not shown in "HARNES LAYOUT".

# POWER WINDOW

---

## System Description

Power is supplied at all times

- from 30A fusible link (Letter **B**), located in the fusible link and fuse box)
- to circuit breaker terminal ①
- through circuit breaker terminal ②
- to power window relay terminal ③.

With ignition switch in ON or START position, power is supplied

- through 10A fuse (No. **14**), located in the fuse block)
- to power window relay terminal ②.

Ground is supplied to power window relay terminal ①

- through body grounds **M1** and **M54**.

The power window relay is energized and power is supplied

- through power window relay terminal ⑤
- to power window main switch terminal ①,
- to power window sub-switch terminal ⑤.

## MANUAL OPERATION

### Driver side door

Ground is supplied

- to power window main switch terminal ③
- through body grounds **M1** and **M54**.

### WINDOW UP

When the driver side switch in the power window main switch is pressed in the up position, power is supplied

- to driver side power window regulator terminal ②
- through power window main switch terminal ⑨.

Ground is supplied

- to driver side power window regulator terminal ①
- through power window main switch terminal ⑧.

Then, the motor raises the window until the switch is released.

### WINDOW DOWN

When the driver side switch in the power window main switch is pressed in the down position, power is supplied

- to driver side power window regulator terminal ①
- through power window main switch terminal ⑧.

Ground is supplied

- to driver side power window regulator terminal ②
- through power window main switch terminal ⑨.

Then, the motor lowers the window until the switch is released.

### Front passenger side door

Ground is supplied

- to power window main switch terminal ③
- through body grounds **M1** and **M54**.

### NOTE:

Numbers in parentheses are terminal numbers, when power window switch is pressed in the up and down positions respectively.

### MAIN SWITCH OPERATION

Power is supplied

- through power window main switch (⑤, ⑥)
- to front power window sub-switch (④, ③).

The subsequent operation is the same as the sub-switch operation.

## POWER WINDOW

### System Description (Cont'd)

---

#### SUB-SWITCH OPERATION

Power is supplied

- through front power window sub-switch (②, ①)
- to front passenger side power window regulator (②, ①).

Ground is supplied

- to front passenger side power window regulator (①, ②)
- through front power window sub-switch (①, ②)
- to front power window sub-switch (③, ④)
- through power window main switch (⑥, ⑤).

Then, the motor raises or lowers the window until the switch is released.

#### Rear door

Rear door windows will raise and lower in the same manner as front passenger side door window.

#### AUTO OPERATION

The power window AUTO feature enables the driver to open or close the driver's window without holding the window switch in the respective position.

When the AUTO switch in the main switch is pressed and released, the driver's window will travel to the fully open or closed position.

#### POWER WINDOW LOCK

The power window lock is designed to lock operation of all windows except for driver's door window.




When the lock switch is pressed to lock position, ground of the sub-switches in the power window main switch is disconnected. This prevents the power window motors from operating.



# POWER WINDOW

## Wiring Diagram — WINDOW —/LHD Models

EL-WINDOW-01

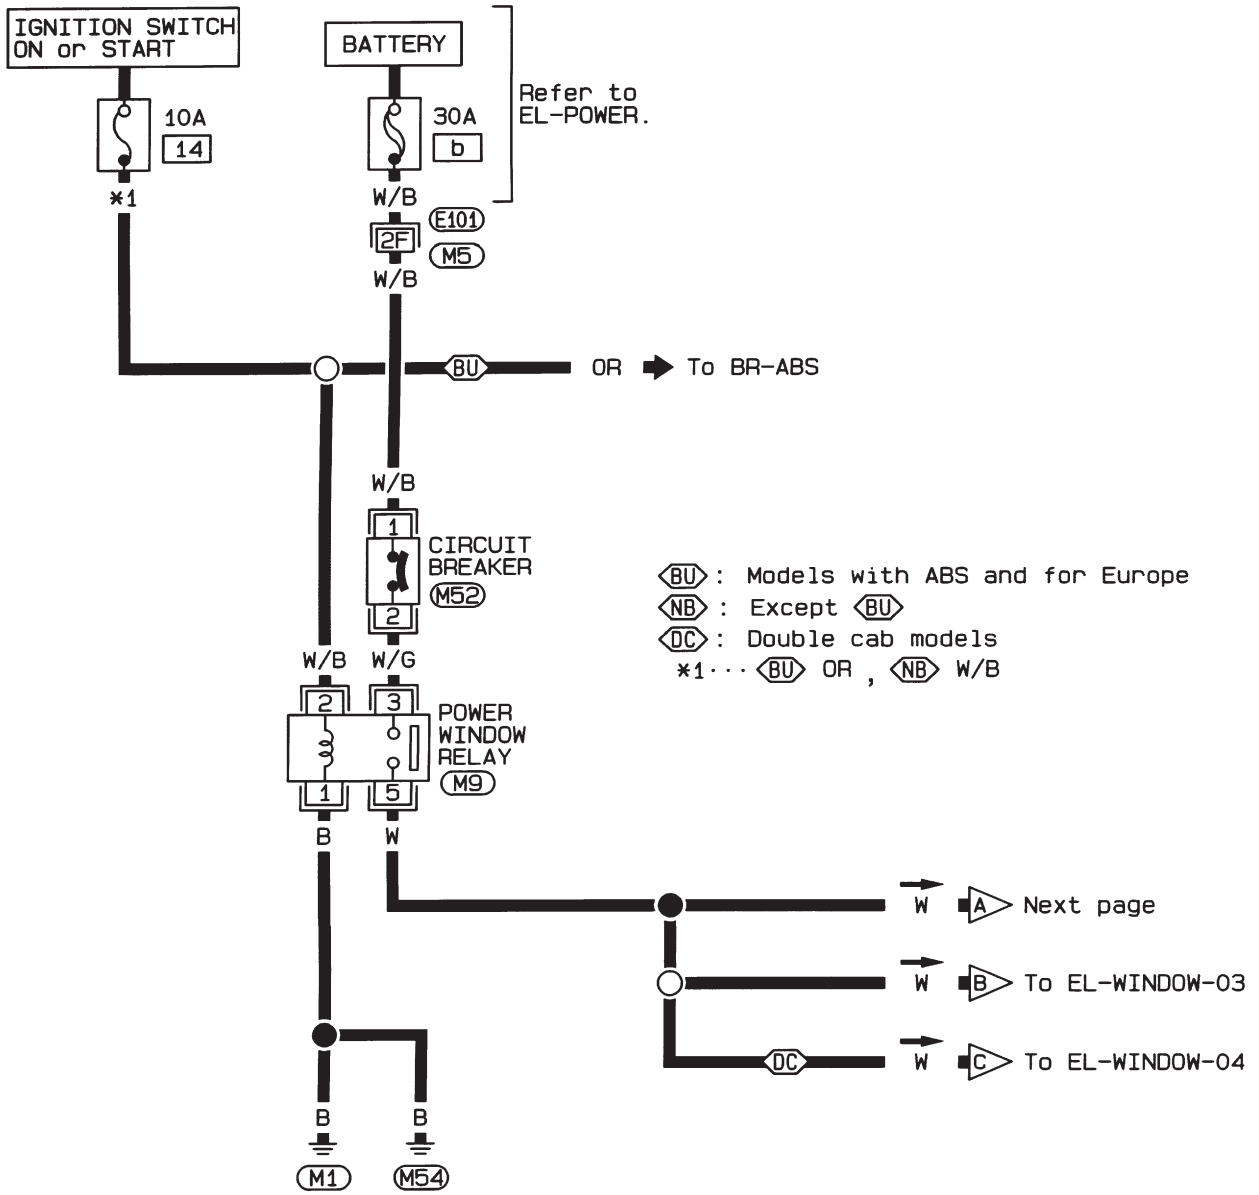

HEL425A



# POWER WINDOW




## Wiring Diagram — WINDOW —/LHD Models (Cont'd)

EL-WINDOW-02

Preceding page






ⓀC : Double cab models  
ⓀS : Single cab and king cab models

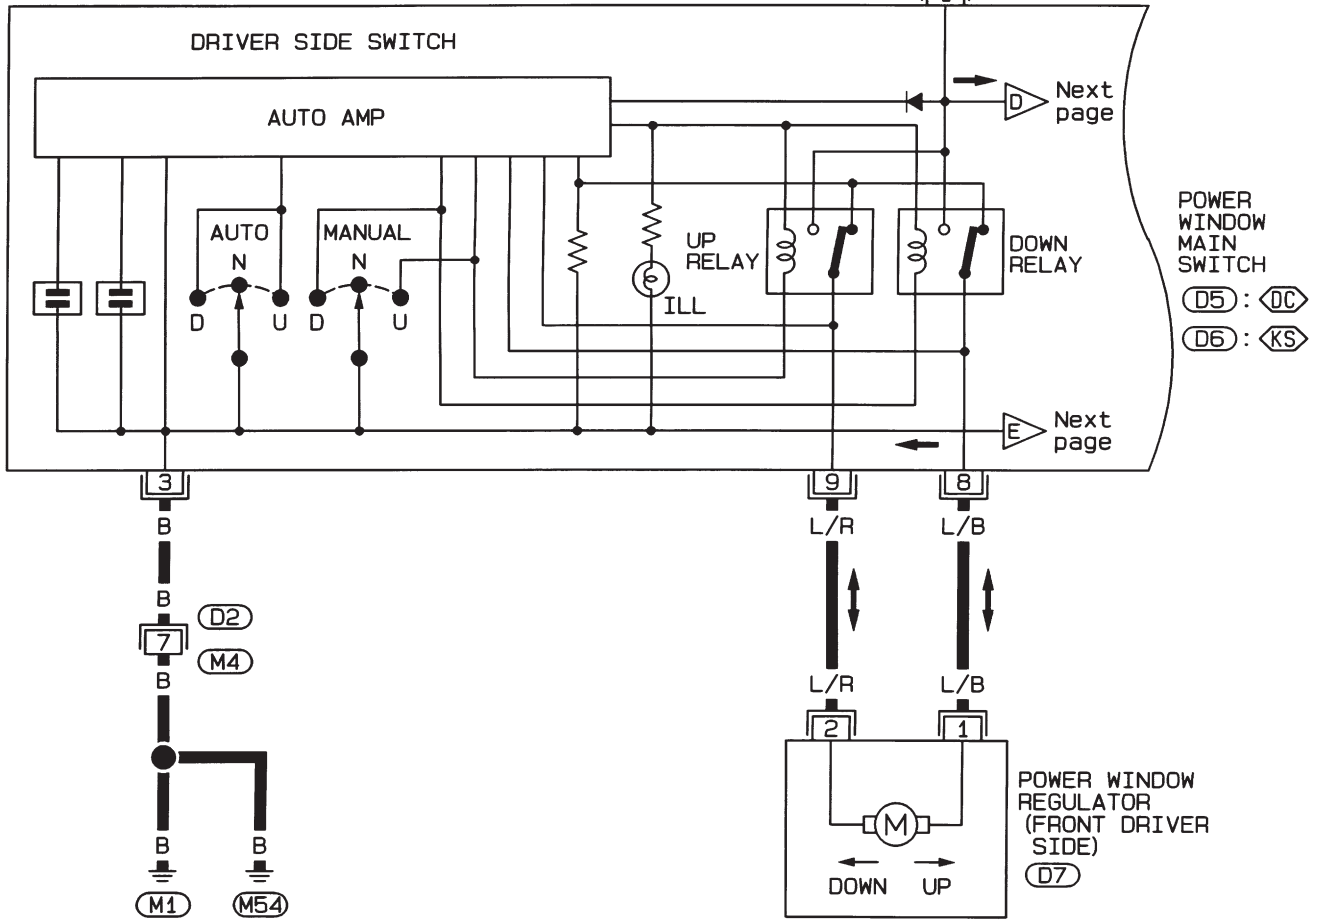

# POWER WINDOW

## Wiring Diagram — WINDOW —/LHD Models (Cont'd)




EL-WINDOW-03

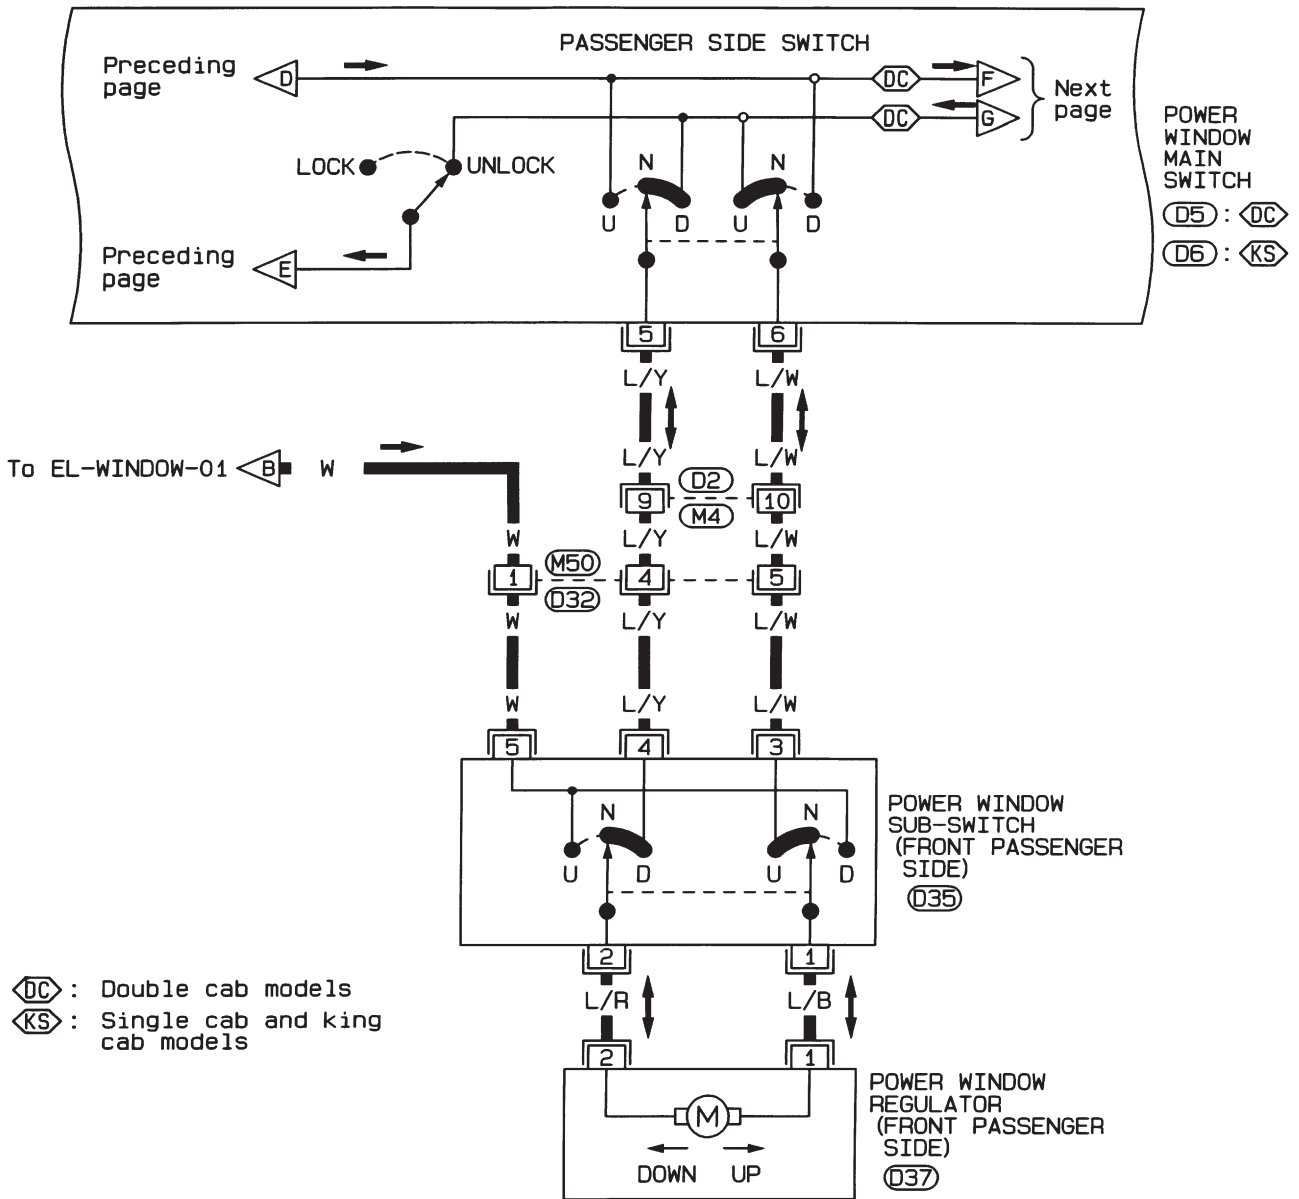

# POWER WINDOW

## Wiring Diagram — WINDOW —/LHD Models (Cont'd)




EL-WINDOW-04

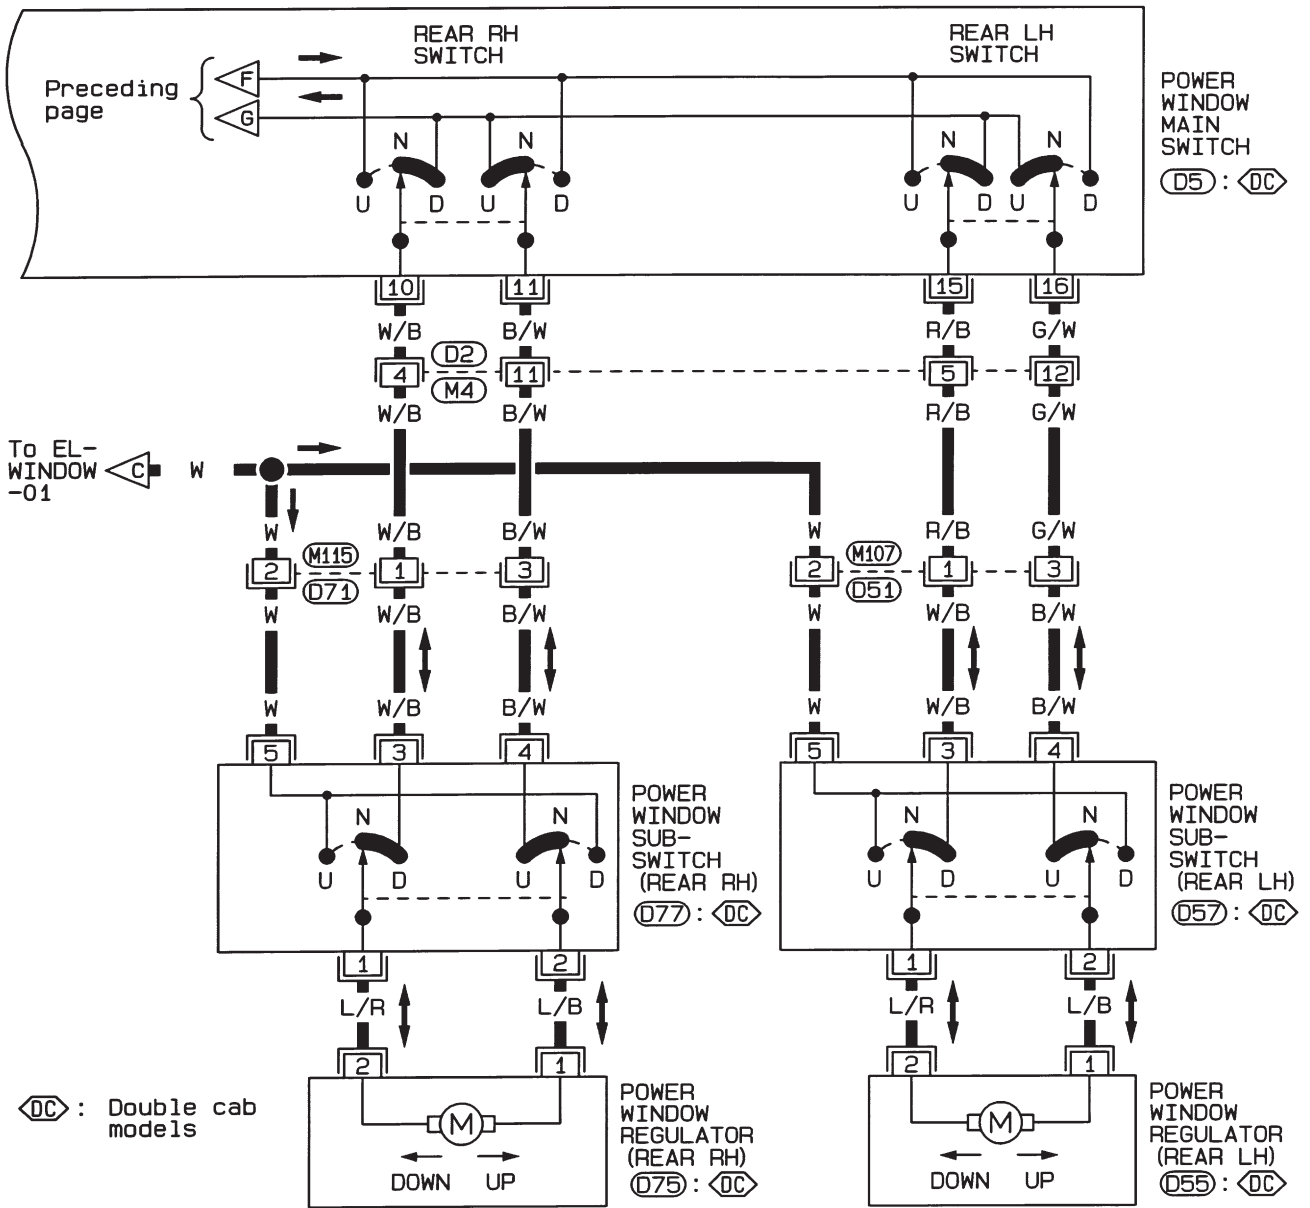

# POWER WINDOW

## Wiring Diagram — WINDOW —/RHD Models

### EL-WINDOW-05

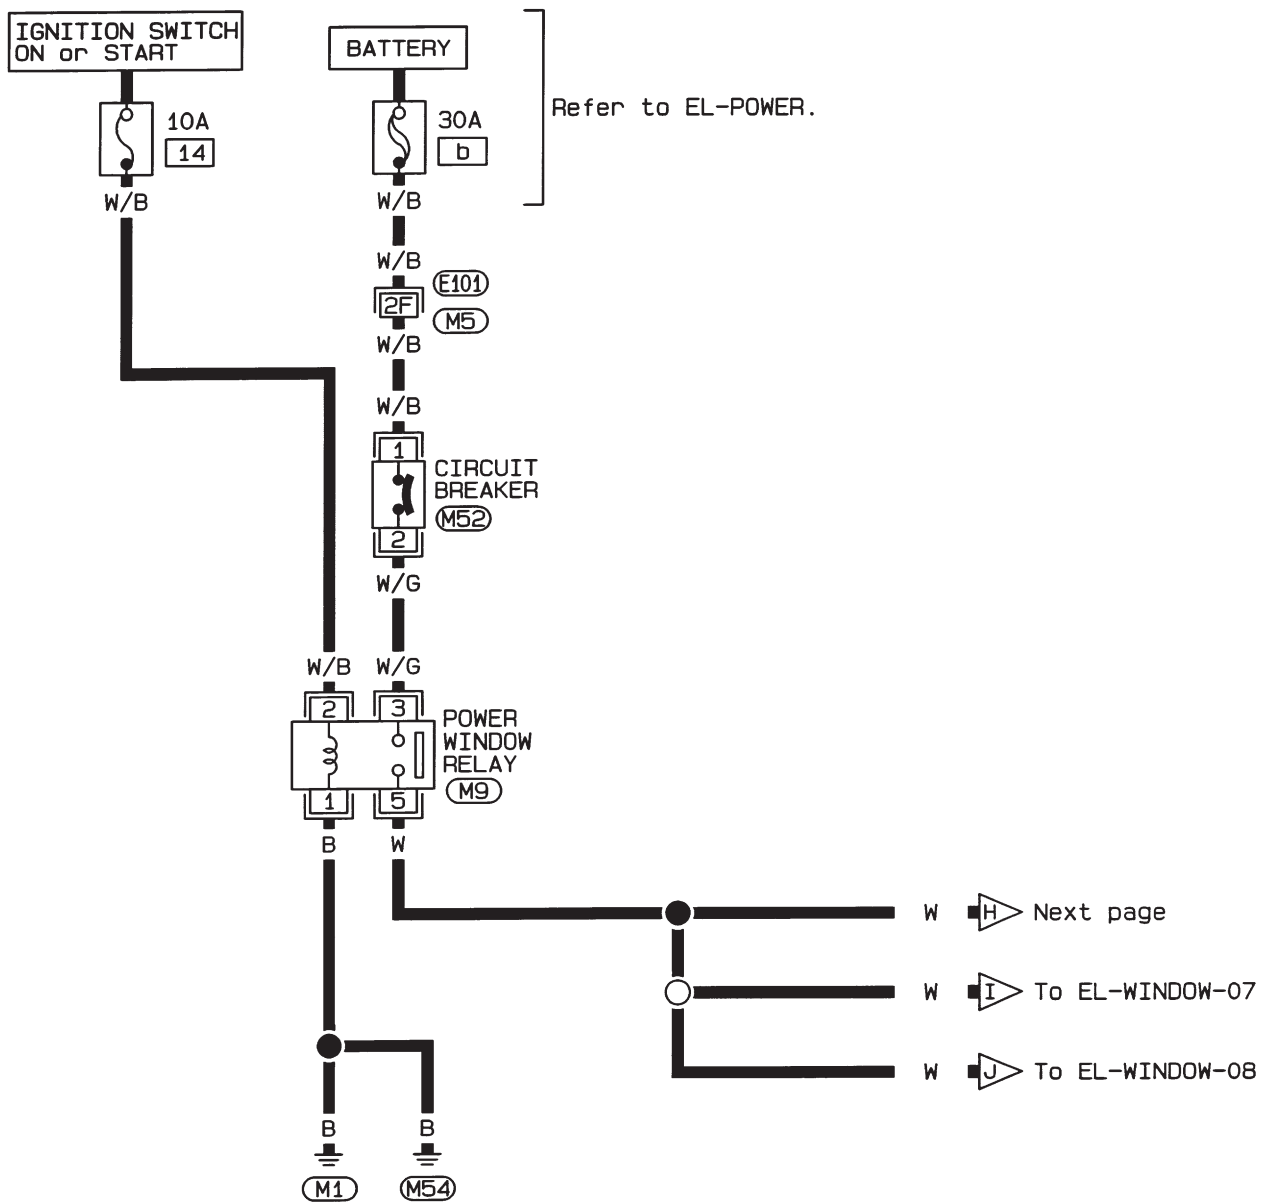




Refer to last page (Foldout page).

M5, E101

# POWER WINDOW

## Wiring Diagram — WINDOW —/RHD Models (Cont'd)


EL-WINDOW-06

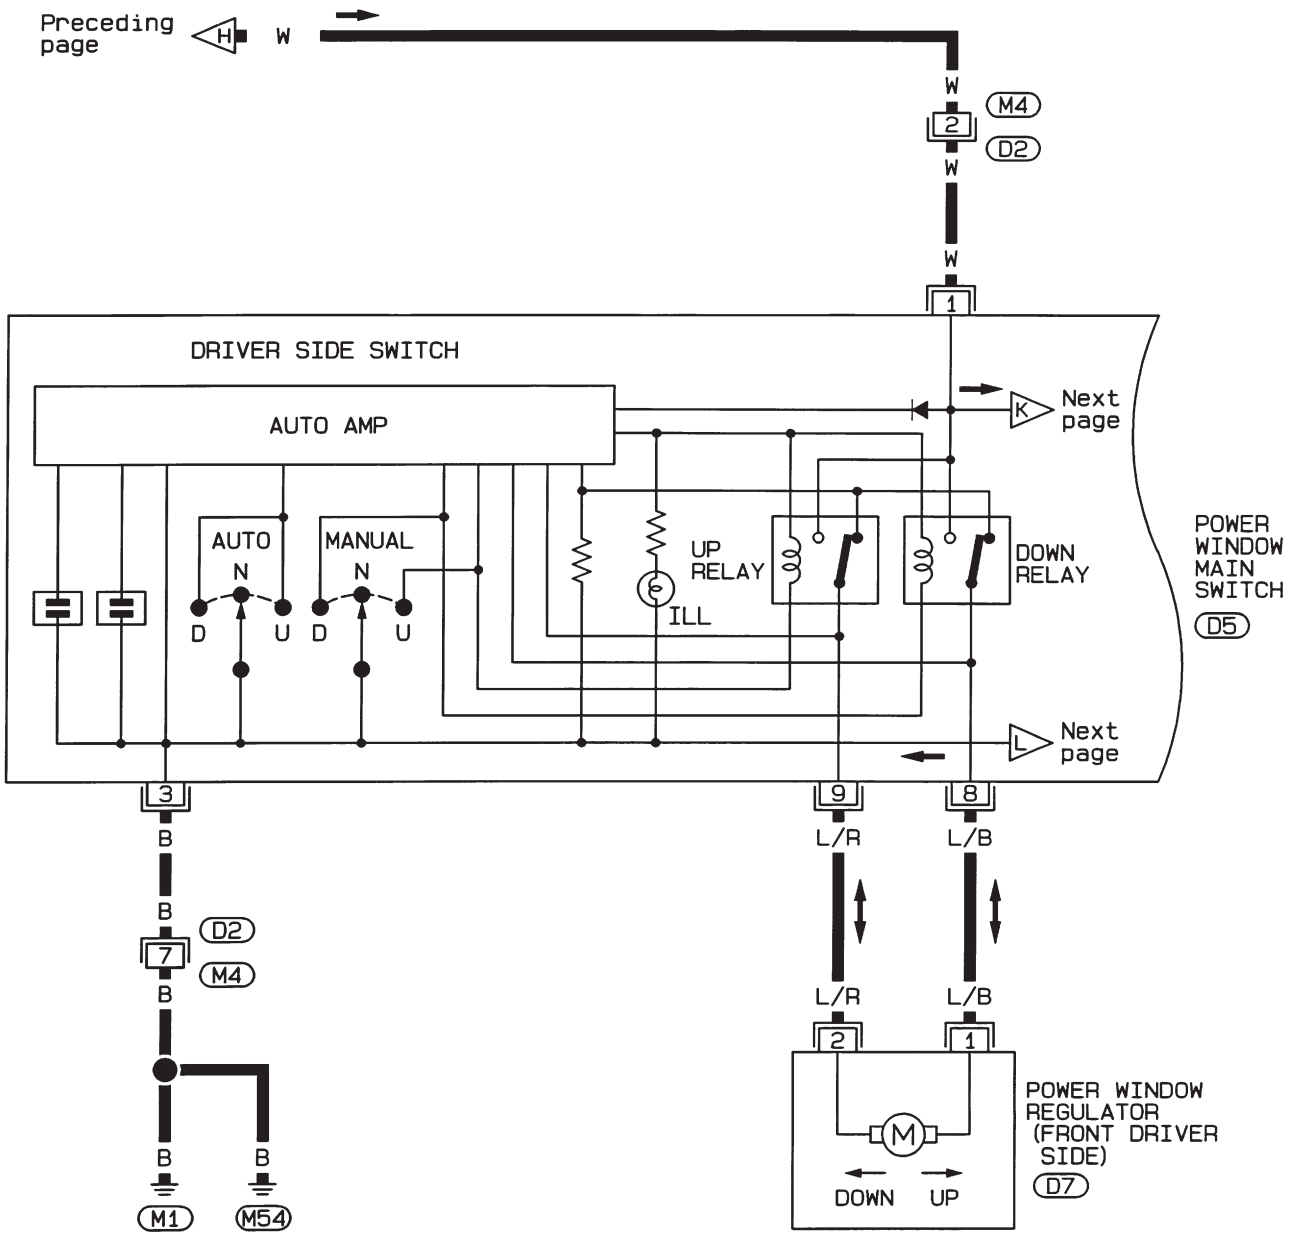

# POWER WINDOW

## Wiring Diagram — WINDOW —/RHD Models (Cont'd)

EL-WINDOW-07

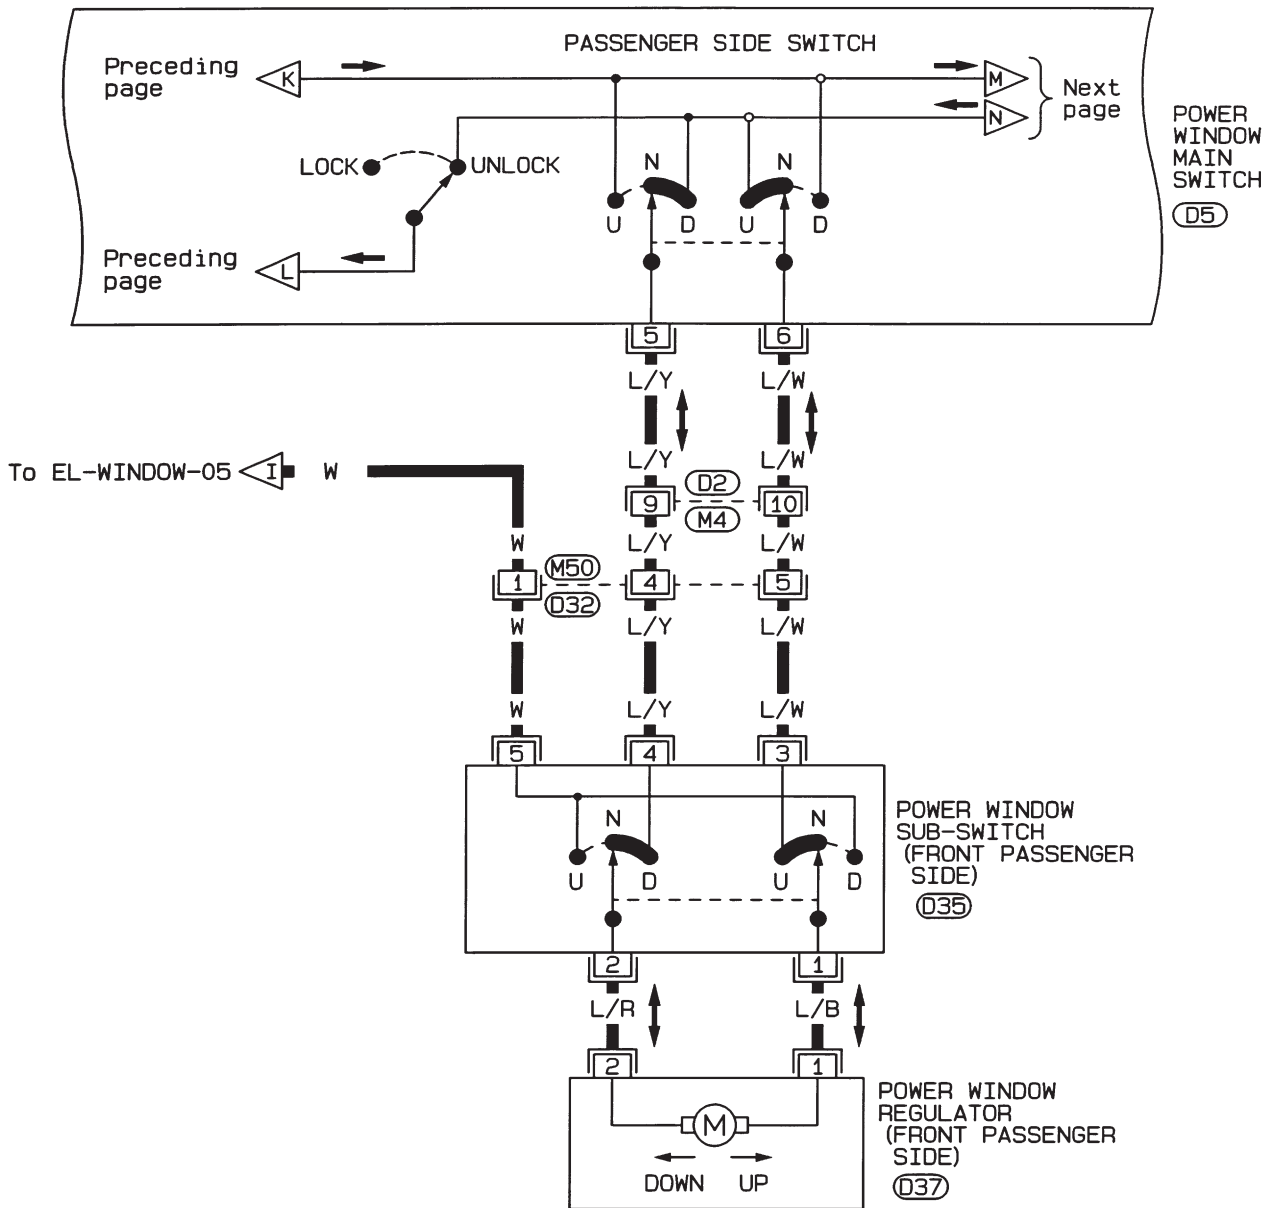

1	2	3	4	5	(D2)		
6	7	8	9	10	11	12	W

3	6	5	1	(D5)				
14	7	15	16	11	10	9	8	W

1	2	(D32)		
3	4	5	6	W




6	(D35)				
4	1	3	2	5	W

1	2	(D37)
		B

# POWER WINDOW

## Wiring Diagram — WINDOW —/RHD Models (Cont'd)

EL-WINDOW-08

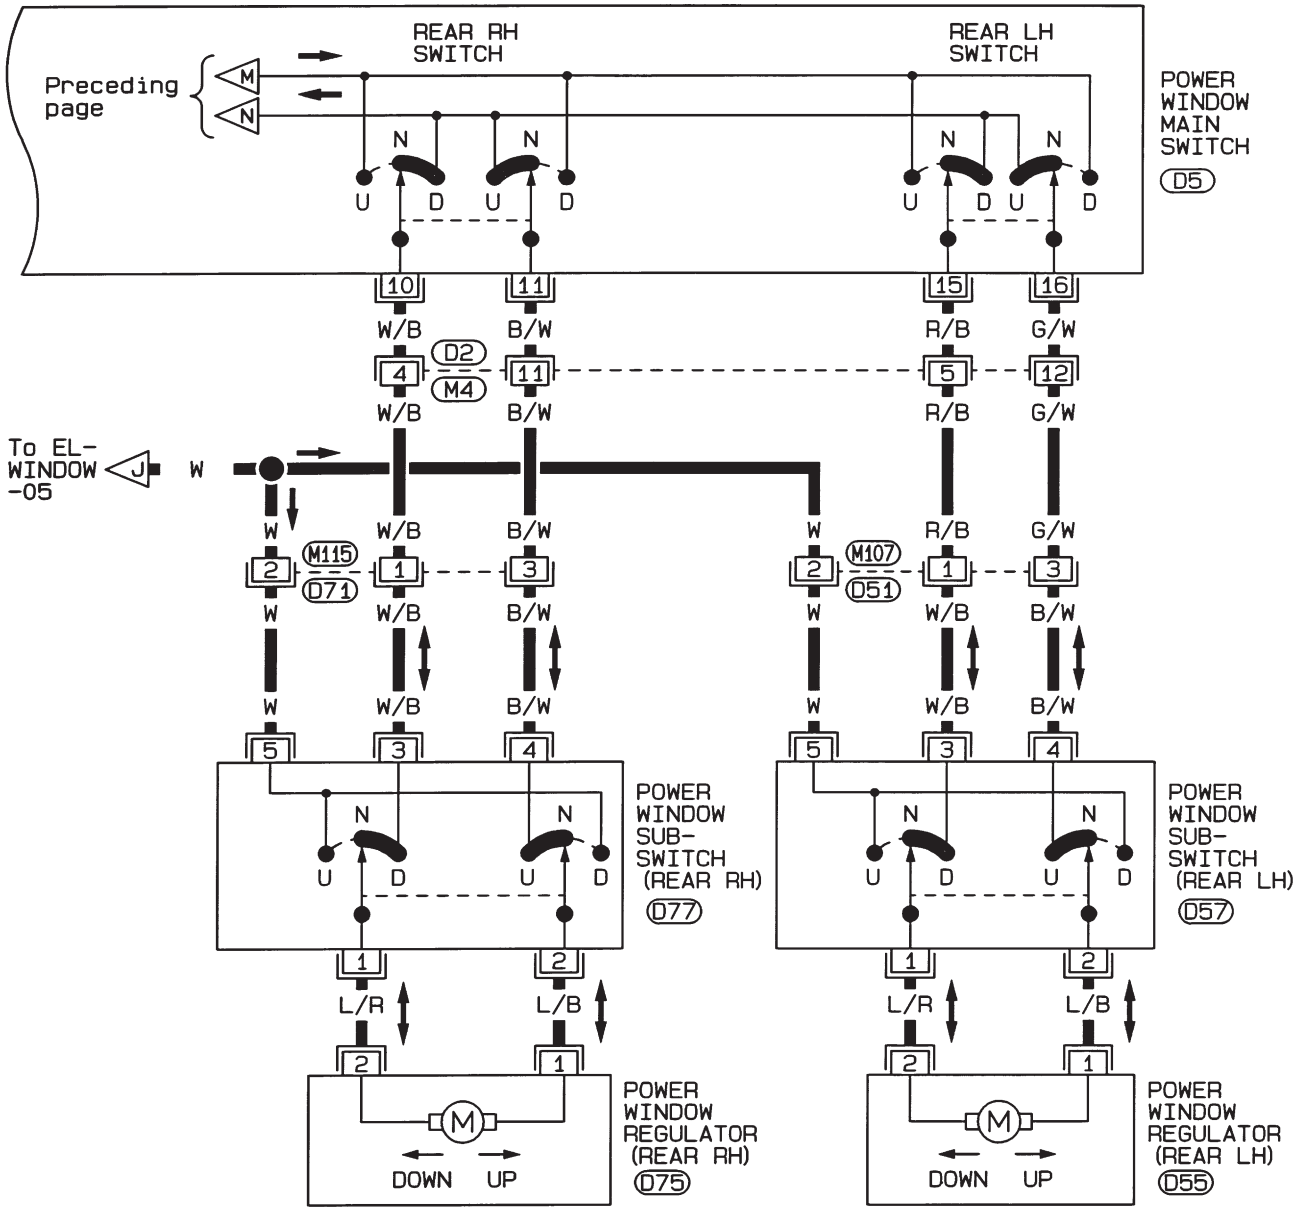

# POWER WINDOW

## Trouble Diagnoses

Symptom	Possible cause	Repair order
None of the power windows can be operated using any switch.	<ol style="list-style-type: none"> <li>1. 10A fuse, 30A fusible link and (M52) circuit breaker</li> <li>2. Grounds (M1) and (M54)</li> <li>3. Power window relay</li> <li>4. Open/short in power window main switch circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check 10A fuse (No. 14, located in fuse block), 30A fusible link (letter b, located in fusible link and fuse box) and (M52) circuit breaker. Turn ignition switch "ON" and verify battery positive voltage is present at terminal ① of power window main switch and terminal ⑤ of sub-switch.</li> <li>2. Check grounds (M1) and (M54).</li> <li>3. Check power window relay.</li> <li>4. Check W wire between power window relay and power window main switch for open/short circuit.</li> </ol>
Driver side power window cannot be operated but other windows can be operated.	<ol style="list-style-type: none"> <li>1. Driver side power window regulator circuit</li> <li>2. Driver side power window regulator</li> </ol>	<ol style="list-style-type: none"> <li>1. Check harness between power window main switch and power window regulator for open or short circuit.</li> <li>2. Check driver side power window regulator.</li> </ol>
Passenger power window cannot be operated.	<ol style="list-style-type: none"> <li>1. Power window sub-switches</li> <li>2. Passenger side power window regulators</li> <li>3. Power window main switch</li> <li>4. Power window circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check power window sub-switch.</li> <li>2. Check passenger side power window regulator.</li> <li>3. Check power window main switch.</li> <li>4-1. Check harnesses between power window main switch and power window sub-switch for open/short circuit.</li> <li>4-2. Check harnesses between power window sub-switch and power window regulator for open/short circuit.</li> </ol>
Passenger power window cannot be operated using power window main switch but can be operated by power window sub-switch.	<ol style="list-style-type: none"> <li>1. Power window main switch</li> </ol>	<ol style="list-style-type: none"> <li>1. Check power window main switch.</li> </ol>
Driver side power window auto function cannot be operated using power window main switch.	<ol style="list-style-type: none"> <li>1. Power window main switch</li> </ol>	<ol style="list-style-type: none"> <li>1. Check power window main switch.</li> </ol>



# POWER DOOR LOCK

---

## System Description

Power is supplied at all times

- through 30A fusible link (Letter (No. **b**), located in the fusible link and fuse box)
- to circuit breaker terminal ①
- through circuit breaker terminal ②
- to door lock timer terminal ③.

Ground is supplied to door lock timer terminal ① through body grounds **M1** and **M54**.

### INPUT

When the door lock & unlock switch (power window main switch) is in LOCKED position, ground signal is supplied

- to door lock timer terminal ⑤
- through door lock & unlock switch terminal ⑭
- to door lock & unlock switch terminal ③
- through body grounds **M1** and **M54**.

When the door lock & unlock switch (power window main switch) is in UNLOCKED position, ground signal is supplied

- to door lock timer terminal ⑧
- through door lock & unlock switch terminal ⑦
- to door lock & unlock switch terminal ③
- through body grounds **M1** and **M54**.

Driver side door key cylinder and driver side lock knob are connected to lock knob switch with a rod. When lock knob switch is in UNLOCKED position, ground signal is supplied

- to door lock timer terminal ⑥
- through lock knob switch terminal ②
- to driver side lock knob switch terminal ①
- through body grounds **M1** and **M54**.

When lock knob switch is in LOCKED position, ground signal is interrupted.

Door lock operates according to the conditions of the door lock & unlock switch (power window main switch) and lock knob switch.

### OUTPUT

#### Unlock

Ground is supplied

- to passenger side door lock actuator, rear door lock actuator LH and RH terminal ① (double cab models)
- through door lock timer terminal ②.

Power is supplied

- to passenger side door lock actuator, rear door lock actuator LH and RH terminal ② (double cab models)
- through door lock timer terminal ④.

Then, the doors are unlocked.

#### Lock

Ground is supplied

- to passenger side door lock actuator, rear door lock actuator LH and RH terminal ②
- through door lock timer terminal ④.

Power is supplied



- to passenger side door lock actuator, rear door lock actuator LH and RH terminal ①
- through door lock timer terminal ②.

Then, the doors are locked.

# POWER DOOR LOCK

## Wiring Diagram — D/LOCK —

### EL-D/LOCK-01

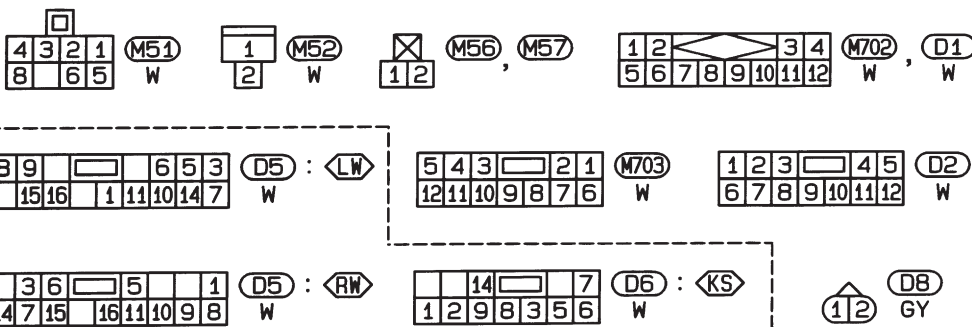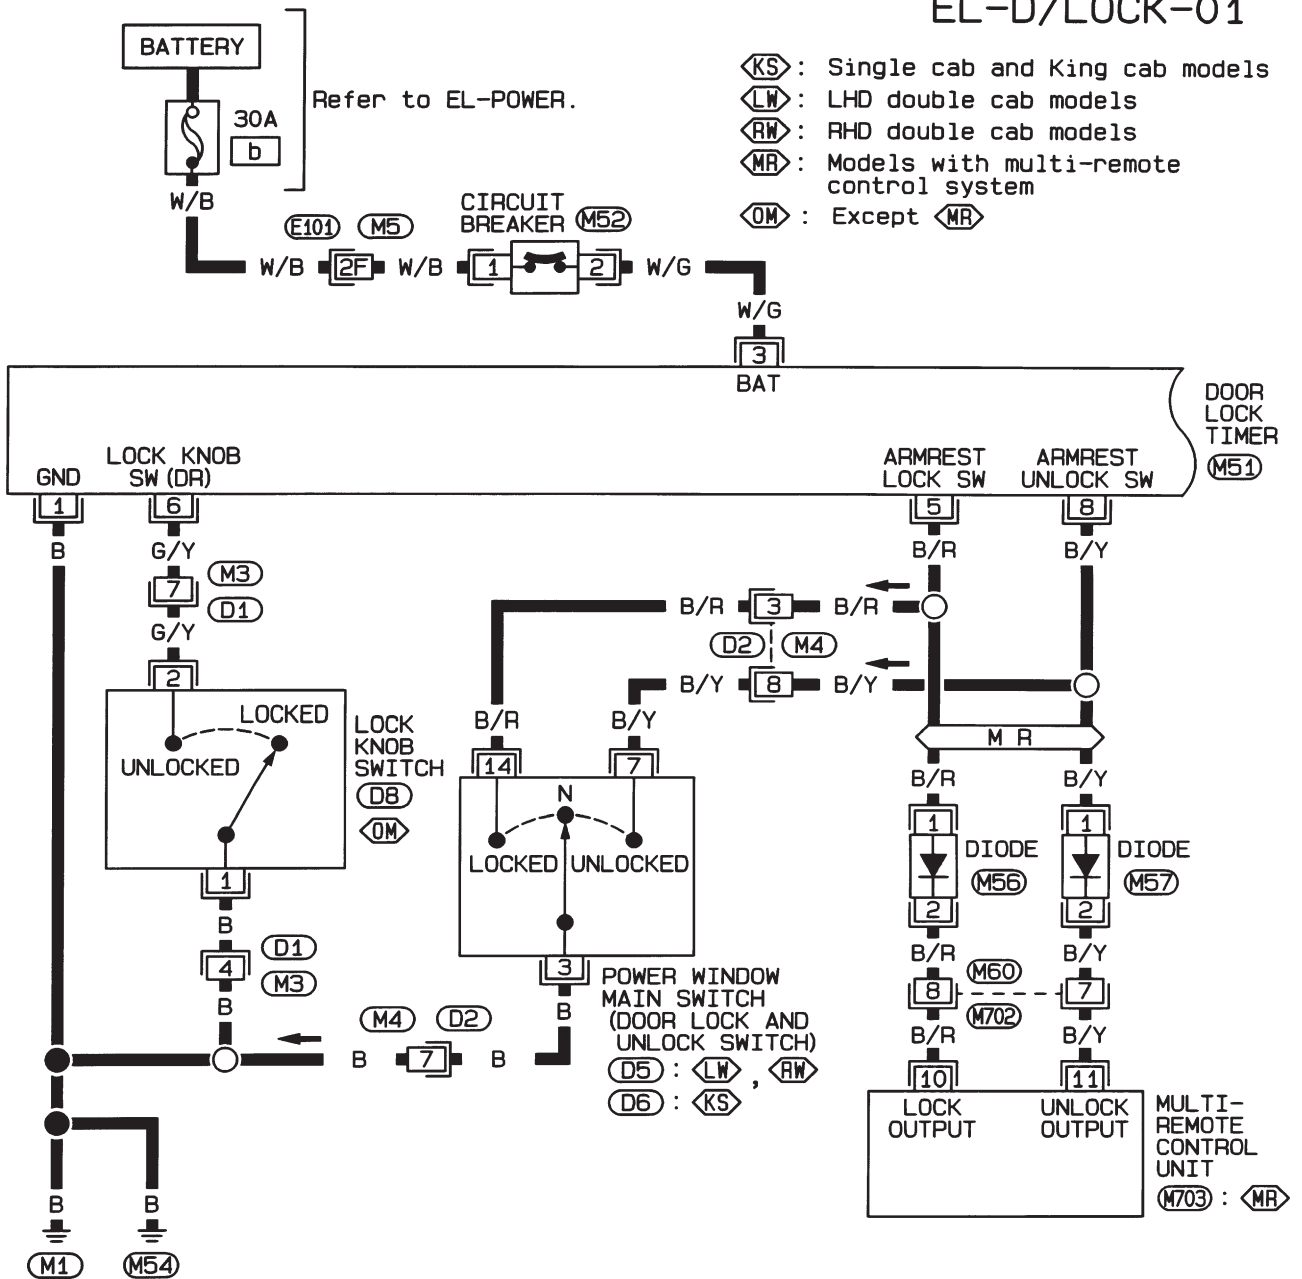




Refer to last page (Foldout page).

M5, E101

# POWER DOOR LOCK

## Wiring Diagram — D/LOCK — (Cont'd)

EL-D/LOCK-02

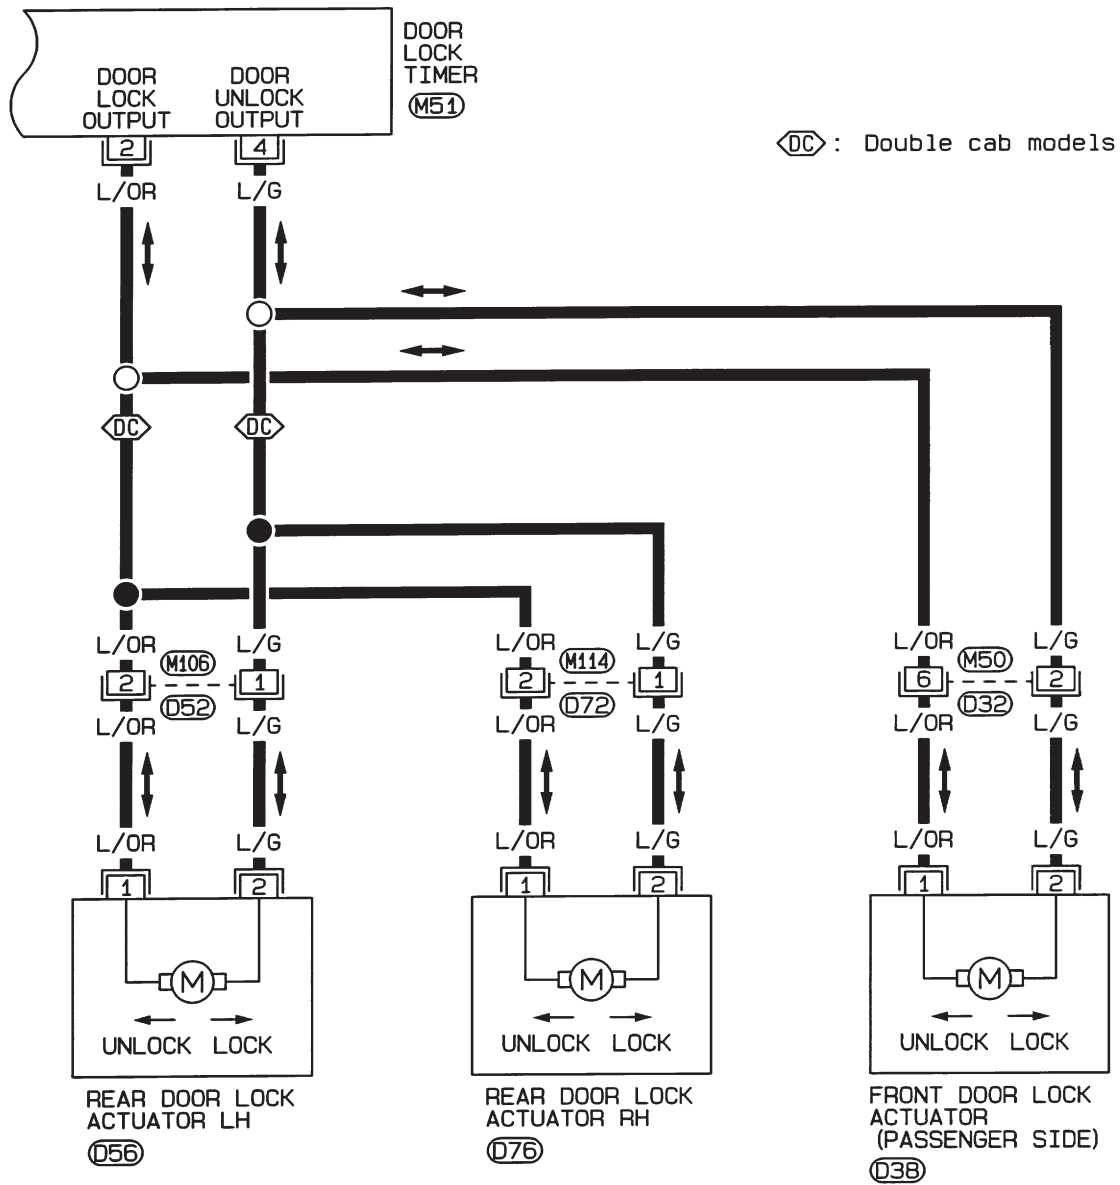


# POWER DOOR LOCK

## Trouble Diagnosis

### SYMPTOM CHART


REFERENCE PAGE	EL-169	EL-170	EL-171	EL-172
SYMPTOM	Main power supply and ground circuit check	Diagnostic procedure 1 (Door lock and unlock switch check)	Diagnostic procedure 2 (Door lock actuator check)	Diagnostic procedure 3 (Driver side lock knob switch check)
None of the doors lock/unlock when operating any switch.	X		X	
One or more doors are not locked and/or unlocked.			X	
Door lock and unlock switch does not operate.		X		
Lock knob switch on driver's door does not operate.				X

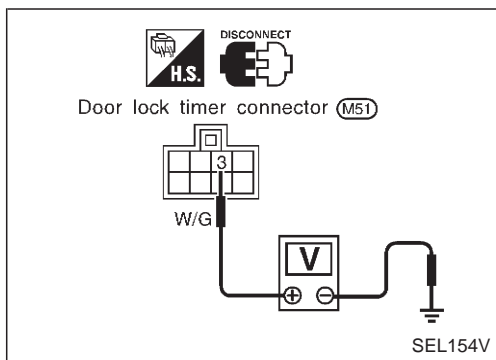

### MAIN POWER SUPPLY AND GROUND CIRCUIT CHECK

#### Main power supply for door lock timer

Terminal		Ignition switch		
⊕	⊖	OFF	ACC	ON
③	Ground	Battery voltage	Battery voltage	Battery voltage

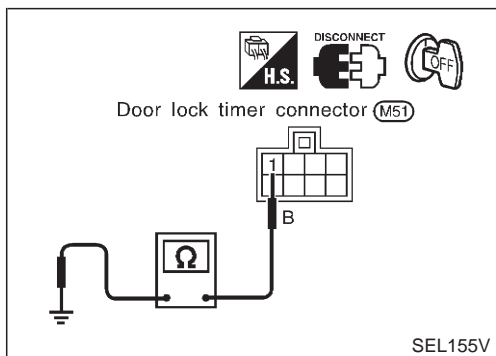

#### Ground circuit for door lock timer



Terminals	Continuity
① - Ground	Yes

# POWER DOOR LOCK

## Trouble Diagnosis (Cont'd)

### DIAGNOSTIC PROCEDURE 1

#### (Door lock and unlock switch check)

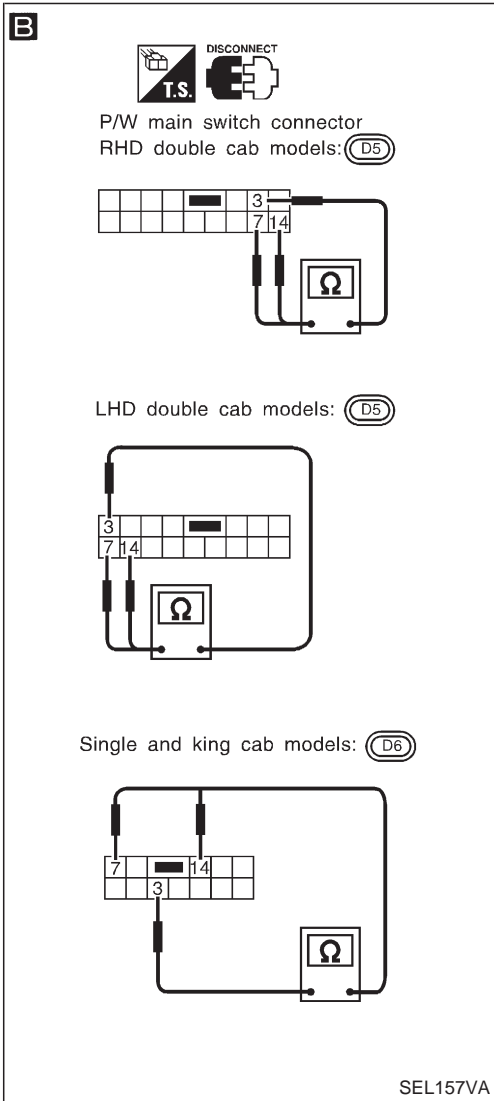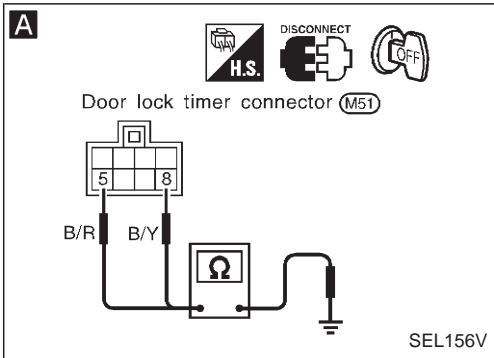

**A**

CHECK DOOR LOCK AND UNLOCK SWITCH INPUT SIGNAL.

OK → Door lock and unlock switch is OK.

1. Disconnect door lock timer connector.
2. Check continuity between control unit terminal ⑤ or ⑧ and ground.

Terminals	Door lock and unlock switch condition	Continuity
⑤ - Ground	Lock	Yes
	N and Unlock	No
⑧ - Ground	Unlock	Yes
	N and Lock	No

NG

**B**

CHECK DOOR LOCK AND UNLOCK SWITCH.

NG → Replace door lock and unlock switch.

1. Disconnect door lock and unlock switch connector.
2. Check continuity between power window main switch (Door lock and unlock switch) terminals.

Condition	Terminals		
	3	7	14
Lock	○	○	○
N	No continuity		
Unlock	○	○	

OK

Check the following.



- Ground circuit for door lock and unlock switch
- Harness for open or short between door lock and unlock switch and door lock timer connector

# POWER DOOR LOCK

## Trouble Diagnosis (Cont'd)

### DIAGNOSTIC PROCEDURE 2

#### (Door lock actuator check)

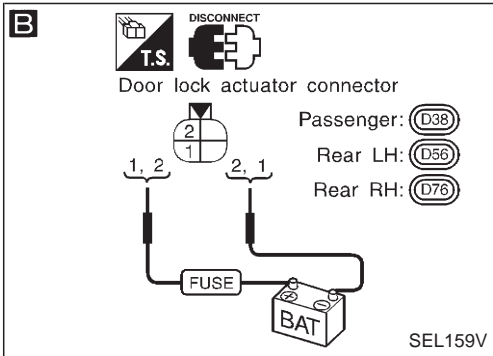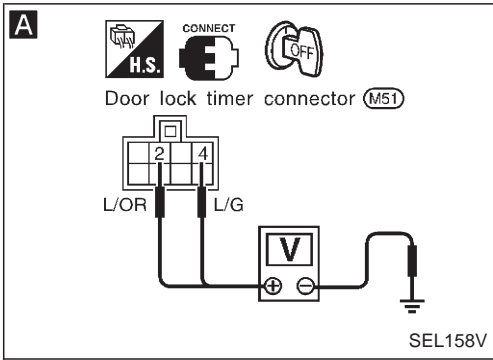

**A**

**CHECK DOOR LOCK ACTUATOR CIRCUIT.**  
Check voltage for door lock actuator.

Lock knob switch condition	Terminals		Voltage (V)
	⊕	⊖	
Lock	②	ground	Battery voltage
Unlock	④	ground	

NG → Replace door lock timer. (Before replacing control unit, perform DIAGNOSTIC PROCEDURE 1.)

OK ↓

**B**

**CHECK DOOR LOCK ACTUATOR.**  
1. Disconnect door lock actuator connector.  
2. Apply 12V direct current to door lock actuator and check operation.

Door lock actuator operation	Terminals	
	⊕	⊖
Unlocked → Locked	①	②
Locked → Unlocked	②	①

NG → Replace door lock actuator.

OK ↓



Repair harness between door lock timer connector and door lock actuator.

# POWER DOOR LOCK

## Trouble Diagnosis (Cont'd)

### DIAGNOSTIC PROCEDURE 3

#### (Driver side lock knob switch check)

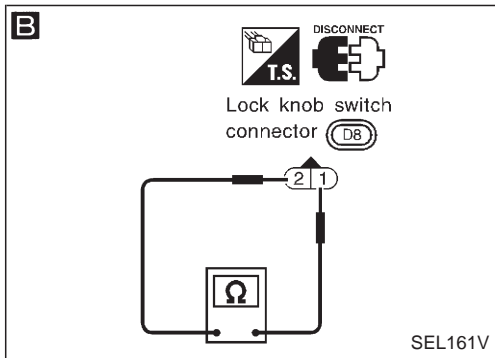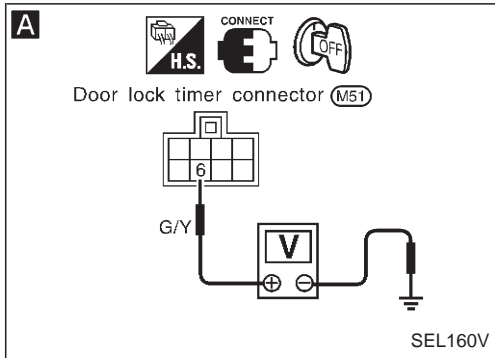

**A**

**CHECK LOCK KNOB SWITCH INPUT SIGNAL.**  
Check voltage between door lock timer terminal ⑥ and ground.

Lock knob switch condition	Voltage (V)
Lock	Approx. 12
Unlock	0

OK → Driver side lock knob switch is OK.

NG

**B**

**CHECK LOCK KNOB SWITCH.**  
1. Disconnect driver side lock knob switch connector.  
2. Check continuity between lock knob switch terminals.

Terminals	Condition	Continuity
① - ②	Locked	No
	Unlocked	Yes

NG → Replace lock knob switch.

OK

Check the following.

- Ground circuit for lock knob switch
- Harness for open or short between lock knob switch and door lock timer

## System Description

### FUNCTION

Multi-remote control system has the following function.

- Door lock
- Door unlock
- Hazard reminder

### LOCK OPERATION

To lock door by multi-remote controller, the following two signals must be received.

- Key switch OFF (when ignition key is not in ignition key cylinder.)
- All door switches CLOSED

When the LOCK signal is input to multi-remote control unit (the antenna of the system is combined with multi-remote control unit), ground is supplied

- through multi-remote control unit terminal ⑩
- to door lock timer terminal ⑤ and
- to multi-remote control relay-3 (LOCK) terminal ①.

Then door lock timer operates to lock doors (except for driver's door) and multi-remote control relay-3 (LOCK) energized to lock driver's door.

### UNLOCK OPERATION

To unlock door by multi-remote controller, the following signal must be received.

- Key switch OFF (when ignition key is not in ignition key cylinder)

When the UNLOCK signal is input to multi-remote control unit (the antenna of the system is combined with multi-remote control unit), ground is supplied

- through multi-remote control unit terminal ⑪
- to door lock timer terminal ⑧ and
- to multi-remote control relay-4 (UNLOCK) terminal ①.

Then door lock timer operates to unlock doors (except for driver's door) and multi-remote control relay-4 (UNLOCK) is energized to unlock driver's door.

### HAZARD REMINDER

When the doors are locked or unlocked by multi-remote controller, ground is supplied

- to terminal ① of multi-remote control relay-1 and 2
- through multi-remote control unit terminal ⑫.

Then the relays are energized and hazard warning lamp flashes as follows

- Lock operation: Flash once
- Unlock operation: Flash twice

### MULTI-REMOTE CONTROLLER ID CODE ENTRY

A maximum of four remote controllers can be entered. Any attempt to enter a remote controller will erase all ID codes previously entered. Therefore, be sure to receive all remote controllers from the vehicle owner when any ID code entry is performed.

To enter ID code entry, the following signals must be input to the multi-remote control unit.


- Driver side LOCKED signal (from driver side door unlock sensor)
- Door switch CLOSED signal
- Key switch signal (INSERTED/WITHDRAWN)
- Accessory power supply
- Signal from remote controller

For detailed procedure, refer to "ID Code Entry Procedure" in EL-182.



# MULTI-REMOTE CONTROL SYSTEM/FOR EUROPE



## Schematic

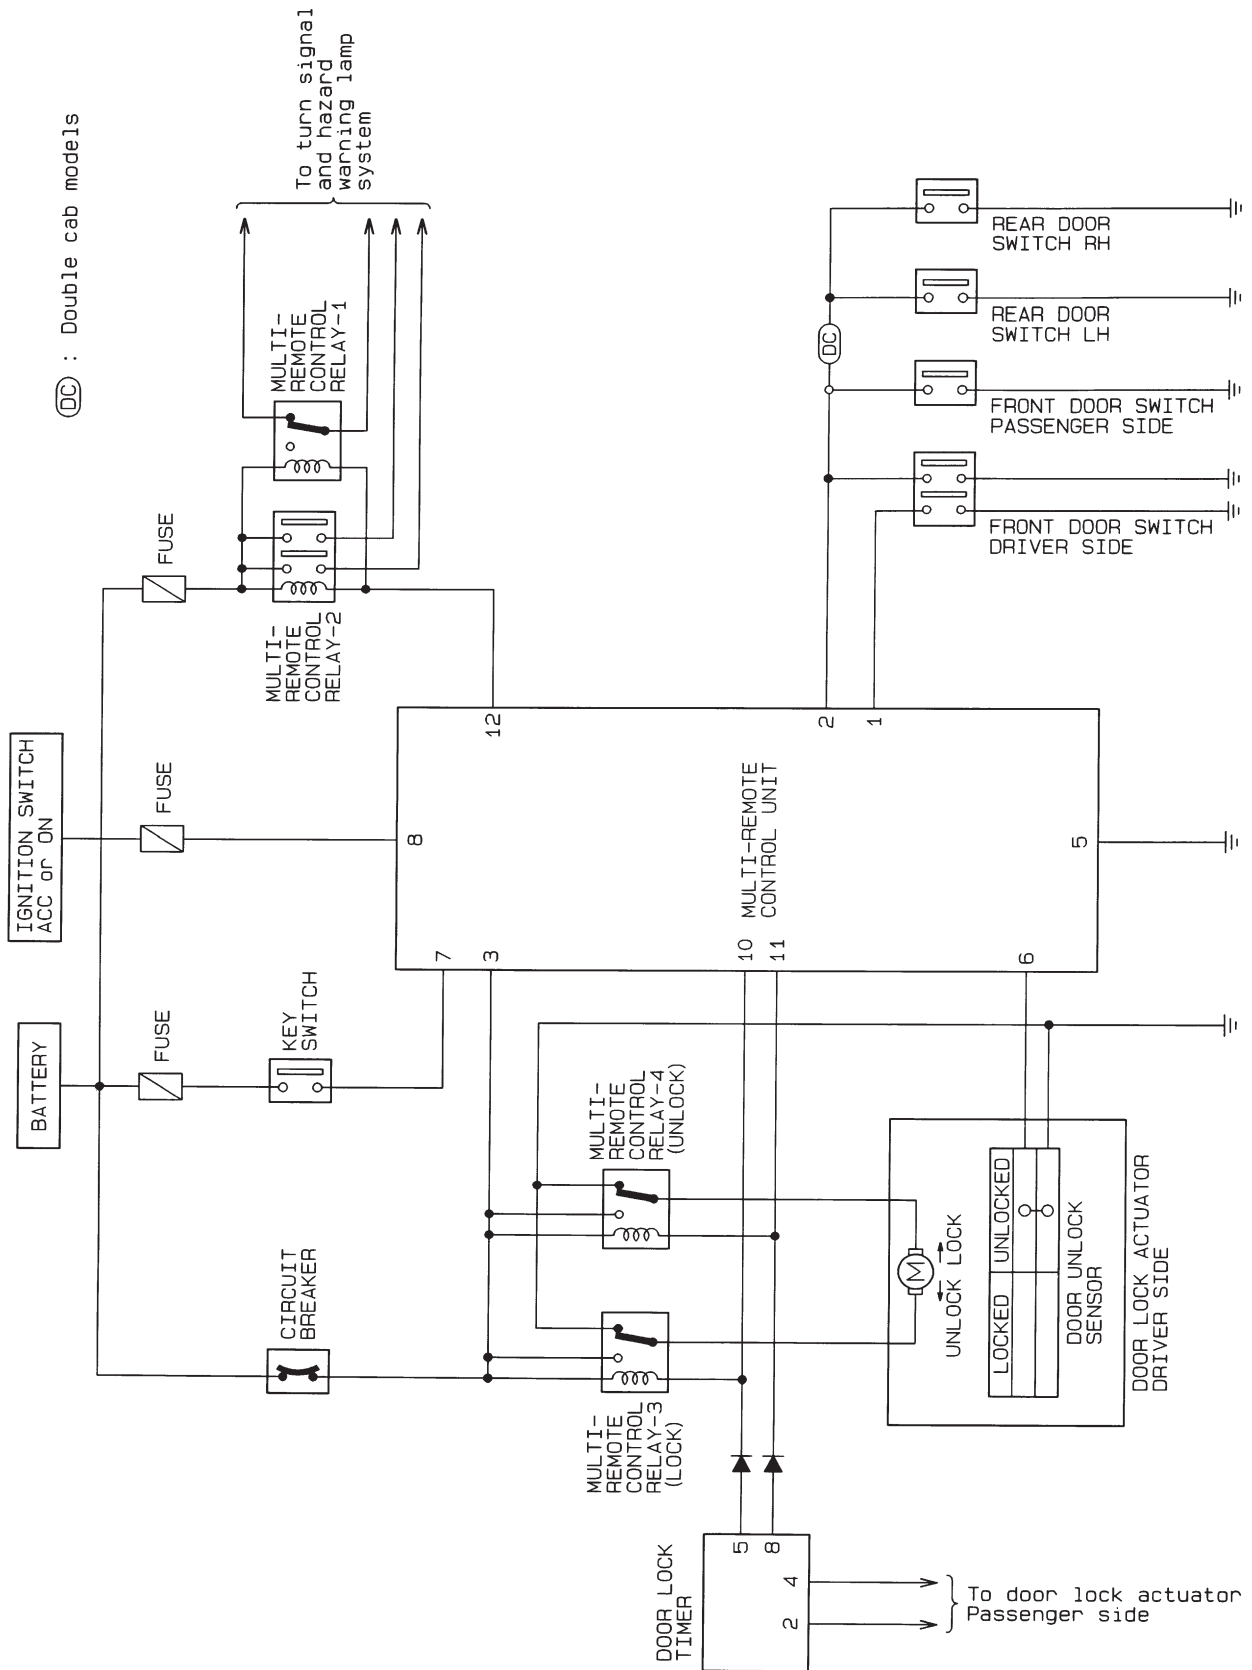

# MULTI-REMOTE CONTROL SYSTEM/FOR EUROPE


## Wiring Diagram — MULTI —/LHD Models

EL-MULTI-01

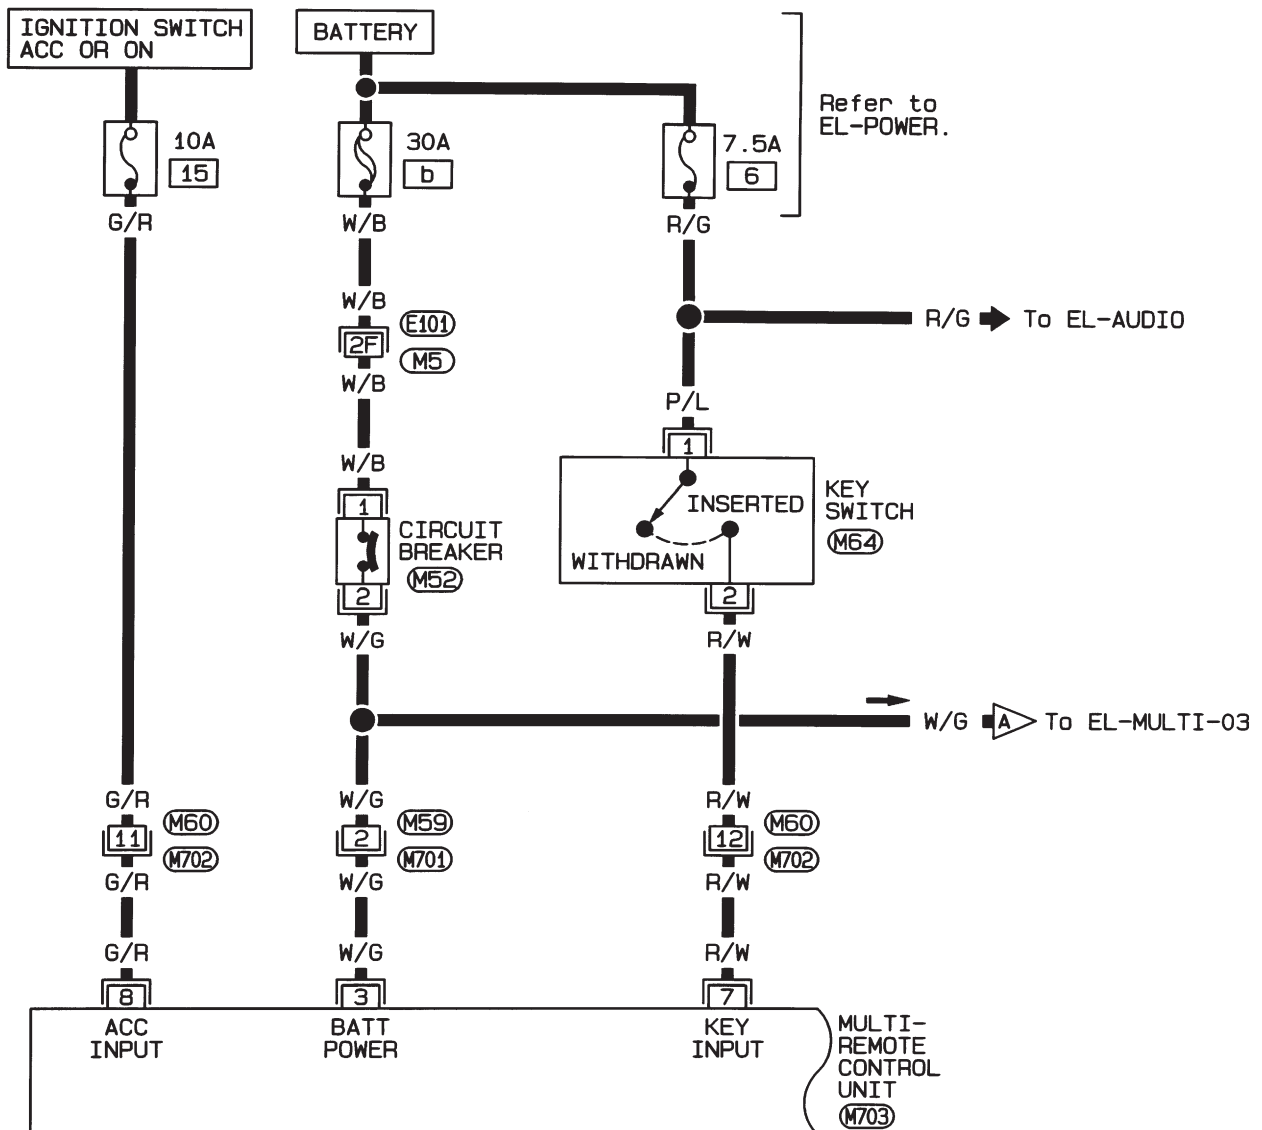

Refer to last page (Foldout page) .




(M5), (E101)



# MULTI-REMOTE CONTROL SYSTEM/FOR EUROPE

## Wiring Diagram — MULTI —/LHD Models (Cont'd)





EL-MULTI-02

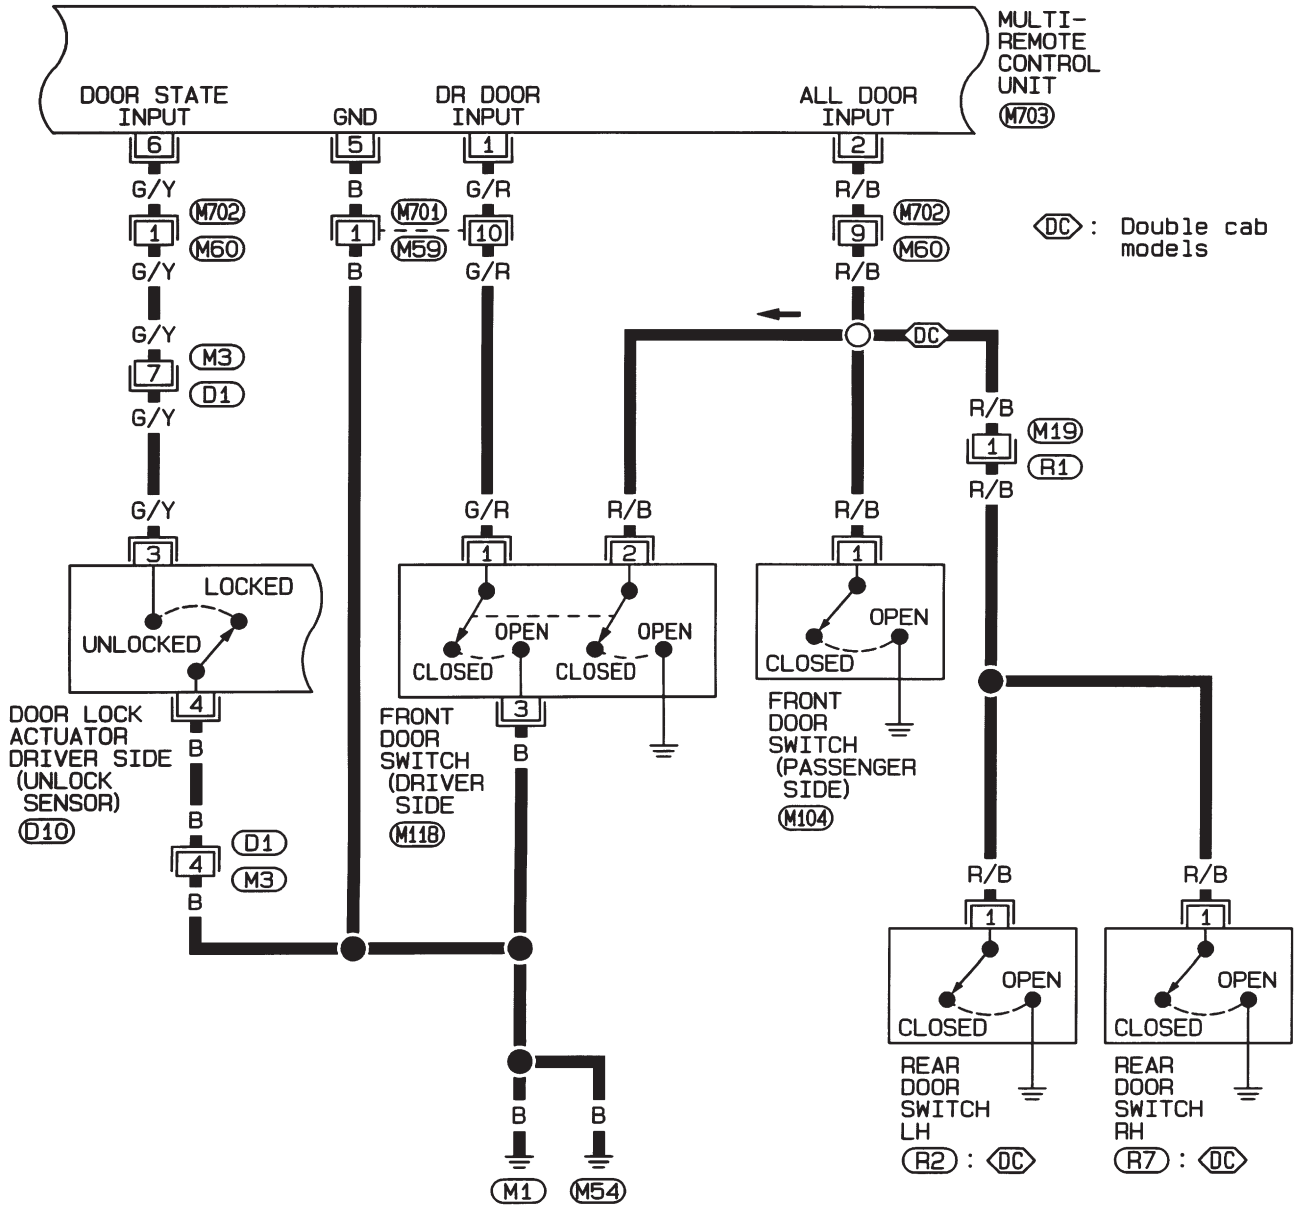

# MULTI-REMOTE CONTROL SYSTEM/FOR EUROPE

## Wiring Diagram — MULTI —/LHD Models (Cont'd)





EL-MULTI-03

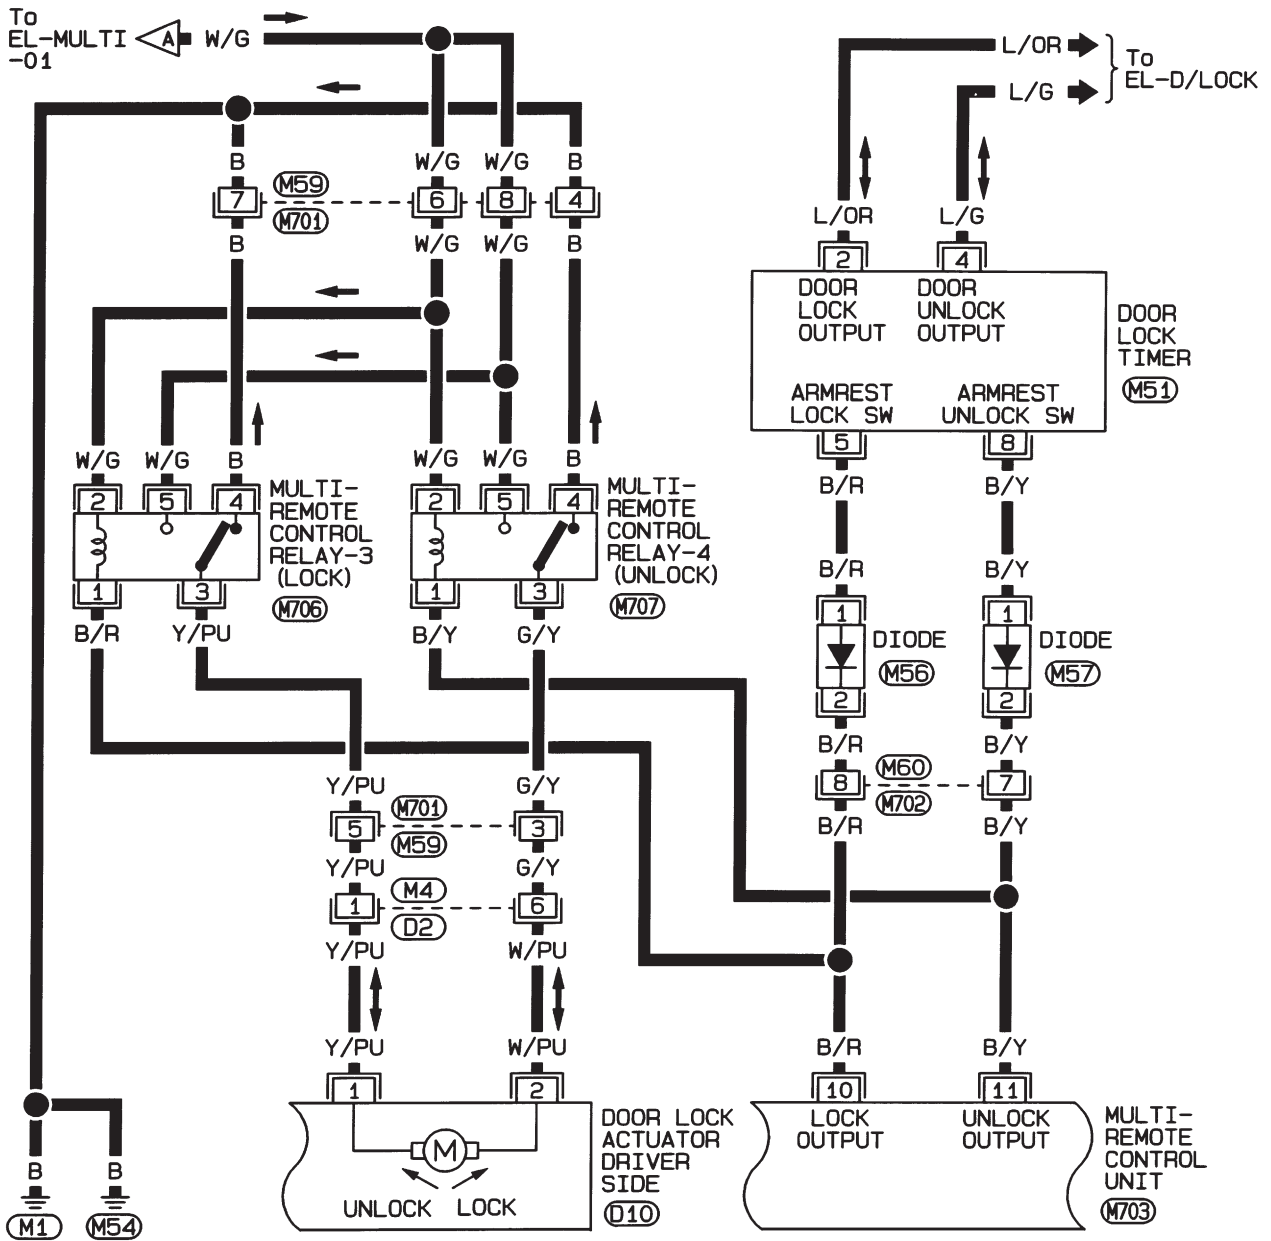

# MULTI-REMOTE CONTROL SYSTEM/FOR EUROPE

## Wiring Diagram — MULTI —/LHD Models (Cont'd)

EL-MULTI-04

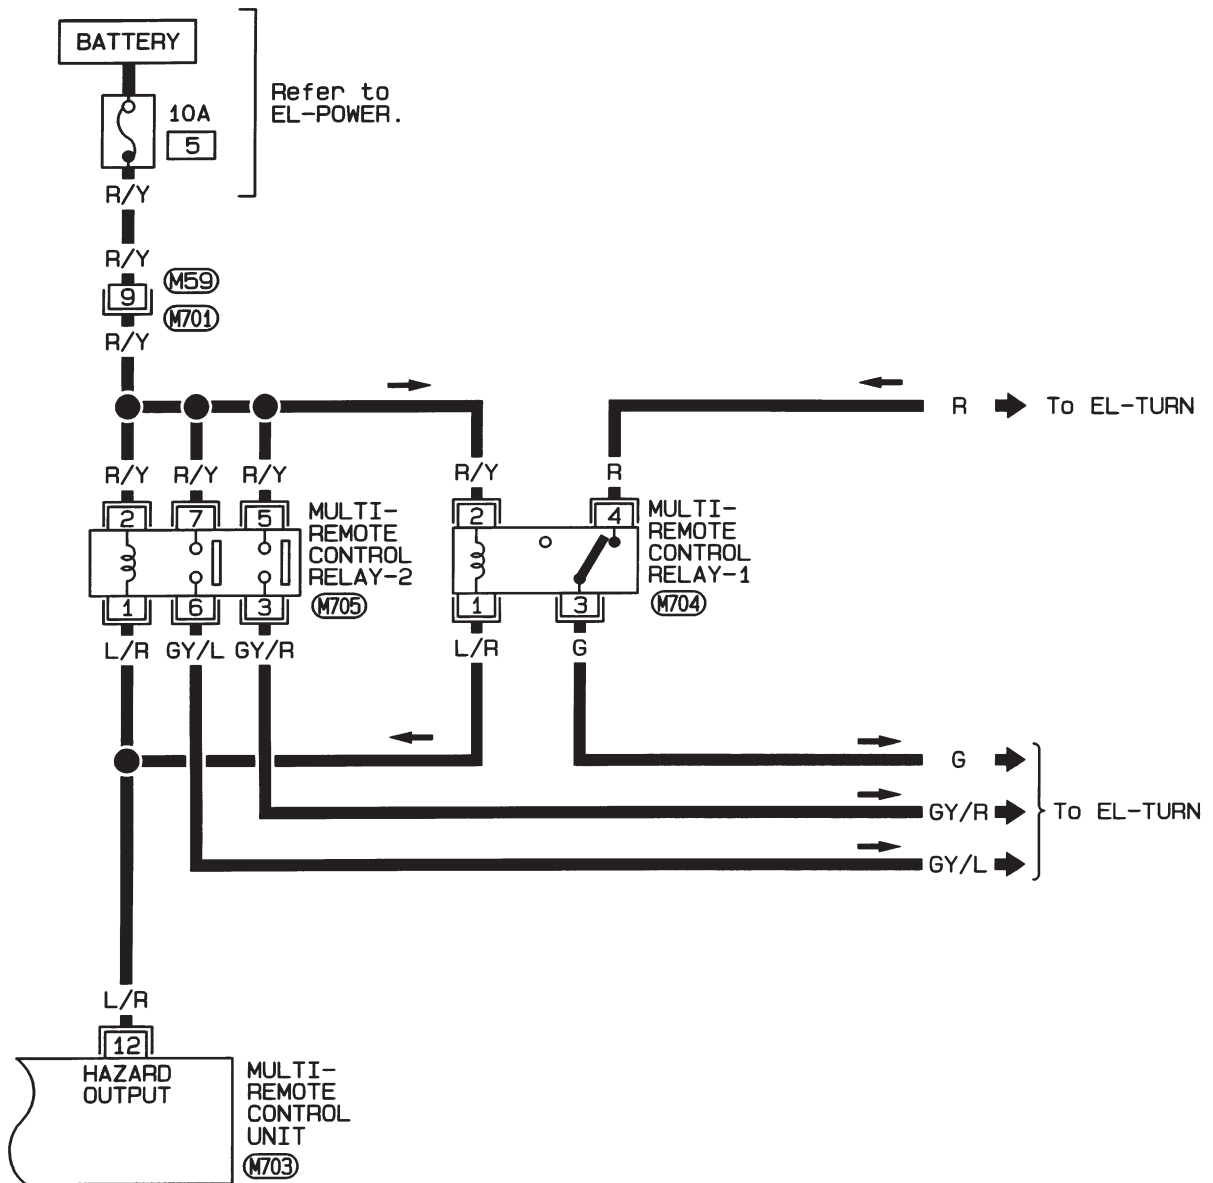

# MULTI-REMOTE CONTROL SYSTEM/FOR EUROPE

## Trouble Diagnoses

### SYMPTOM CHART

Symptom	Possible cause	Diagnoses/service order
No doors can be locked or unlocked by remote control operation. (See NOTE.)	<ol style="list-style-type: none"> <li>1. Remote controller battery</li> <li>2. Key switch (insert)</li> <li>3. Door switch</li> <li>4. Power supply circuit for multi-remote control unit</li> <li>5. Ground circuit for multi-remote control unit</li> <li>6. Remote controller</li> </ol>	<ol style="list-style-type: none"> <li>1. Check remote controller battery. Refer to EL-180.</li> <li>2. Check key switch (insert) signal at terminal ⑦ of multi-remote control unit.</li> <li>3. Check door switch signal at terminals ① and ② of multi-remote control unit.</li> <li>4. Make sure battery voltage is present at terminal ③ of multi-remote control unit.</li> <li>5. Check continuity between terminal ⑤ of multi-remote control unit and ground.</li> <li>6. Replace remote controller. Refer to EL-182.</li> </ol>
Driver's door cannot be locked or unlocked by remote controller operation.	<ol style="list-style-type: none"> <li>1. Driver side door lock actuator circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check driver side door lock actuator circuit. Refer to EL-181.</li> </ol>
Doors other than driver side cannot be locked or unlocked by remote control operation. (If the power door lock system does not operate correctly, check power door lock system. Refer to EL-169.)	<ol style="list-style-type: none"> <li>1. Lock/unlock signal to smart entrance control unit</li> </ol>	<ul style="list-style-type: none"> <li>● When locking is not possible: Check continuity between terminal ⑩ of multi-remote control unit and terminal ⑤ of door lock timer.</li> <li>● When unlocking is not possible: Check continuity between terminal ⑪ of multi-remote control unit and terminal ⑧ of door lock timer.</li> </ul>
Hazard reminder does not operate properly.	<ol style="list-style-type: none"> <li>1. 10A fuse</li> <li>2. Multi-remote control relay-1 and 2</li> <li>3. Hazard reminder circuit</li> </ol>	<ol style="list-style-type: none"> <li>1. Check 10A fuse (No. ⑤, located in the fuse block).</li> <li>2. Check multi-remote control relay-1 and 2.</li> <li>3. Check harness for open or short between relays and multi-remote control unit terminal ⑫.</li> </ol>
The new ID of remote controller cannot be entered.	<ol style="list-style-type: none"> <li>1. Remote controller battery</li> <li>2. Key switch (insert)</li> <li>3. Door switch</li> <li>4. Driver's door unlock sensor</li> <li>5. Accessory power supply circuit for multi-remote control unit</li> <li>6. Remote controller</li> </ol>	<ol style="list-style-type: none"> <li>1. Check remote controller battery. Refer to EL-180.</li> <li>2. Check key switch (insert) signal at terminal ⑦ of multi-remote control unit.</li> <li>3. Check door switch signal at terminals ① and ② of multi-remote control unit.</li> <li>4. Check driver's door unlock sensor signal at terminal ⑥ of multi-remote control unit.</li> <li>5. Make sure battery voltage is present at terminal ⑧ of multi-remote control unit while ignition switch is in ACC position.</li> <li>6. Replace remote controller. Refer to EL-182.</li> </ol>

Refer to "MULTI-REMOTE CONTROL UNIT INSPECTION TABLE" on next page to check the control unit signals.

**NOTE:**



- The unlock operation of multi-remote control system does not activate with key inserted in the ignition key cylinder.
- The lock operation of multi-remote controller does not activate with the key inserted ignition key cylinder or if one of the door is opened.

# MULTI-REMOTE CONTROL SYSTEM/FOR EUROPE

## Trouble Diagnoses (Cont'd)

### MULTI-REMOTE CONTROL UNIT INSPECTION TABLE

Terminal No.	Connections	Condition		Voltage (V) (approximate values)
1	Driver side door switch	Driver side door	Opened	0
			Closed	12
2	Door switch (all doors)	One of doors is opened		0
		All doors are closed		12
3	Power source (BAT)	—		12
5	Ground	—		—
6	Driver side door unlock sensor	Driver side door	Locked	5
			Unlocked	0
7	Key switch (insert)	Key is in ignition key cylinder		12
		Key is not in ignition key cylinder		0
8	Accessory power supply	Ignition switch	OFF	0
			ACC or ON	12
10	Lock signal	Remote controller LOCK button is pushed (All doors are closed and key is not in ignition key cylinder.)		0
		Other than above condition		12
11	Unlock signal	Remote controller UNLOCK button is pushed (Key is not in ignition key cylinder.)		0
		Other than above condition		12
12	Multi-remote control relay-1, 2	Remote controller LOCK/UNLOCK button is pushed (All doors are closed and key is not in ignition key cylinder.)		0
		Other than above condition		12

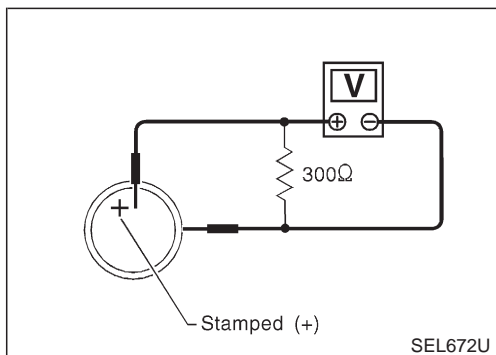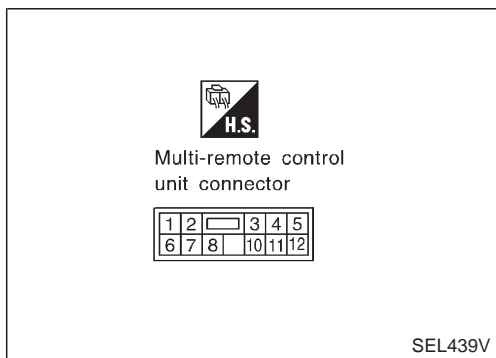

### REMOTE CONTROLLER BATTERY CHECK

Remove battery and measure voltage across battery positive and negative terminals, ⊕ and ⊖.

Measuring terminal		Standard value
⊕	⊖	
Battery positive terminal ⊕	Battery negative terminal ⊖	2.5 - 3.0V






**Note:**

Remote controller does not function if battery is not set correctly.

# MULTI-REMOTE CONTROL SYSTEM/FOR EUROPE

## Trouble Diagnoses (Cont'd)

### DRIVER SIDE DOOR LOCK ACTUATOR CHECK

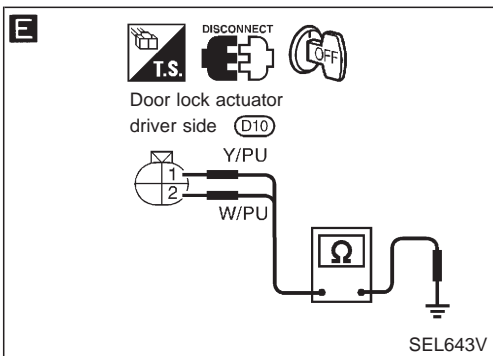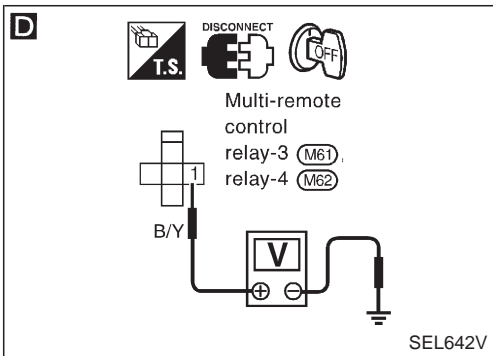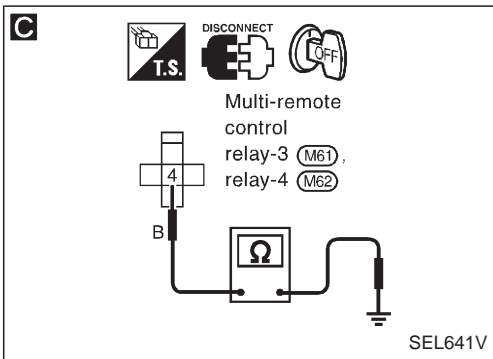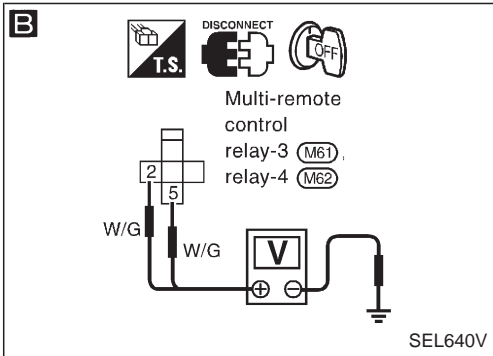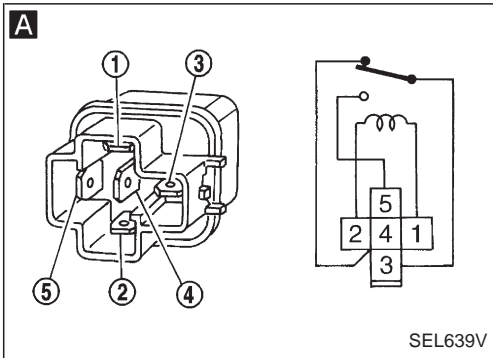

**A**

**CHECK MULTI-REMOTE CONTROL RELAY-3, 4.**

NG → Replace the relay.

condition	Continuity existence between terminals	
	(3) and (4)	(3) and (5)
Battery voltage not applied between each terminal (1) and (2)	Yes	No
Battery voltage applied between each terminal (1) and (2)	No	Yes

**While applying battery voltage to relay terminals, insert fuse into the circuit.**

OK

**B**

**CHECK POWER SUPPLY FOR THE RELAYS.**  
Check voltage between multi-remote control relay-3, 4 terminal (2), (5) and ground. **Battery voltage should exist.**

NG → Check the following.  

- 30A fuse (No. [b]), located in the fusible link and fuse box).
- Check harness for open or short between fuse and relay.

OK

**C**

**CHECK GROUND CIRCUIT FOR THE RELAYS.**  
Check continuity between multi-remote control relay-3, 4 terminal (4) and ground. **Continuity should exist.**

NG → Repair harness.

OK

**D**

**CHECK LOCK/UNLOCK SIGNAL FOR THE RELAYS.**  
Check voltage between multi-remote control relay-3, 4 terminal (1) and ground. **5V should exist.**

NG → Check harness for open or short between multi-remote control relay and multi-remote control unit.

OK

**E**

**CHECK DOOR LOCK ACTUATOR CIRCUIT.**  

1. Connect the relays.
2. Disconnect driver side door lock actuator.
3. Check continuity between driver side door lock actuator and relays. **Continuity should exist.**

NG → Check harness for open or short between multi-remote control relays and door lock actuator.

OK

Replace door lock actuator.



# MULTI-REMOTE CONTROL SYSTEM/FOR EUROPE

## ID Code Entry Procedure

### Note:


**A maximum of four remote controllers can be entered. Any attempt to enter a remote controller will erase all ID codes previously entered. Therefore, be sure to receive all remote controllers from the vehicle owner when any ID code entry is performed.**

Enter the identity (ID) code manually when:

- remote controller or control unit is replaced.
- an additional remote controller is activated.

To enter the ID code, follow the procedures below.


### PROCEDURE

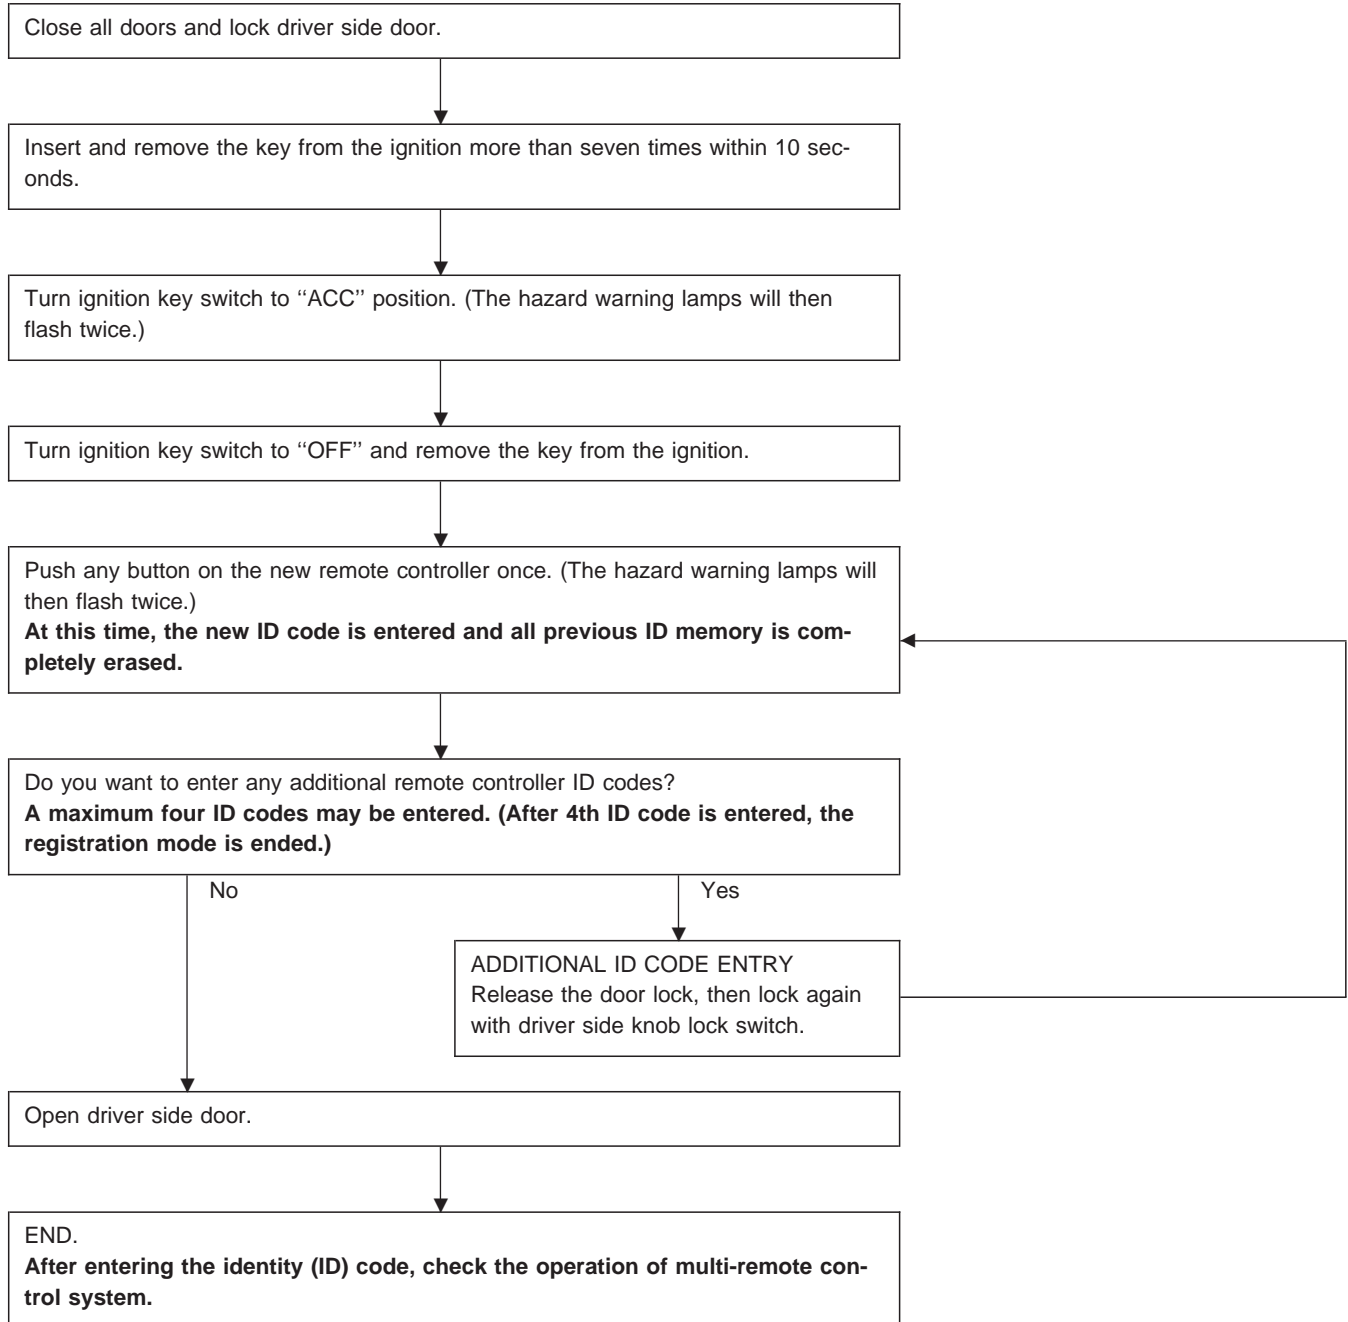

### NOTE:

- If you need to activate more than two additional new remote controllers, repeat the procedure "Additional ID code entry" for each new remote controller.
- Any ID codes cannot be entered after termination of the "setting mode".

## Component Parts and Harness Connector Location

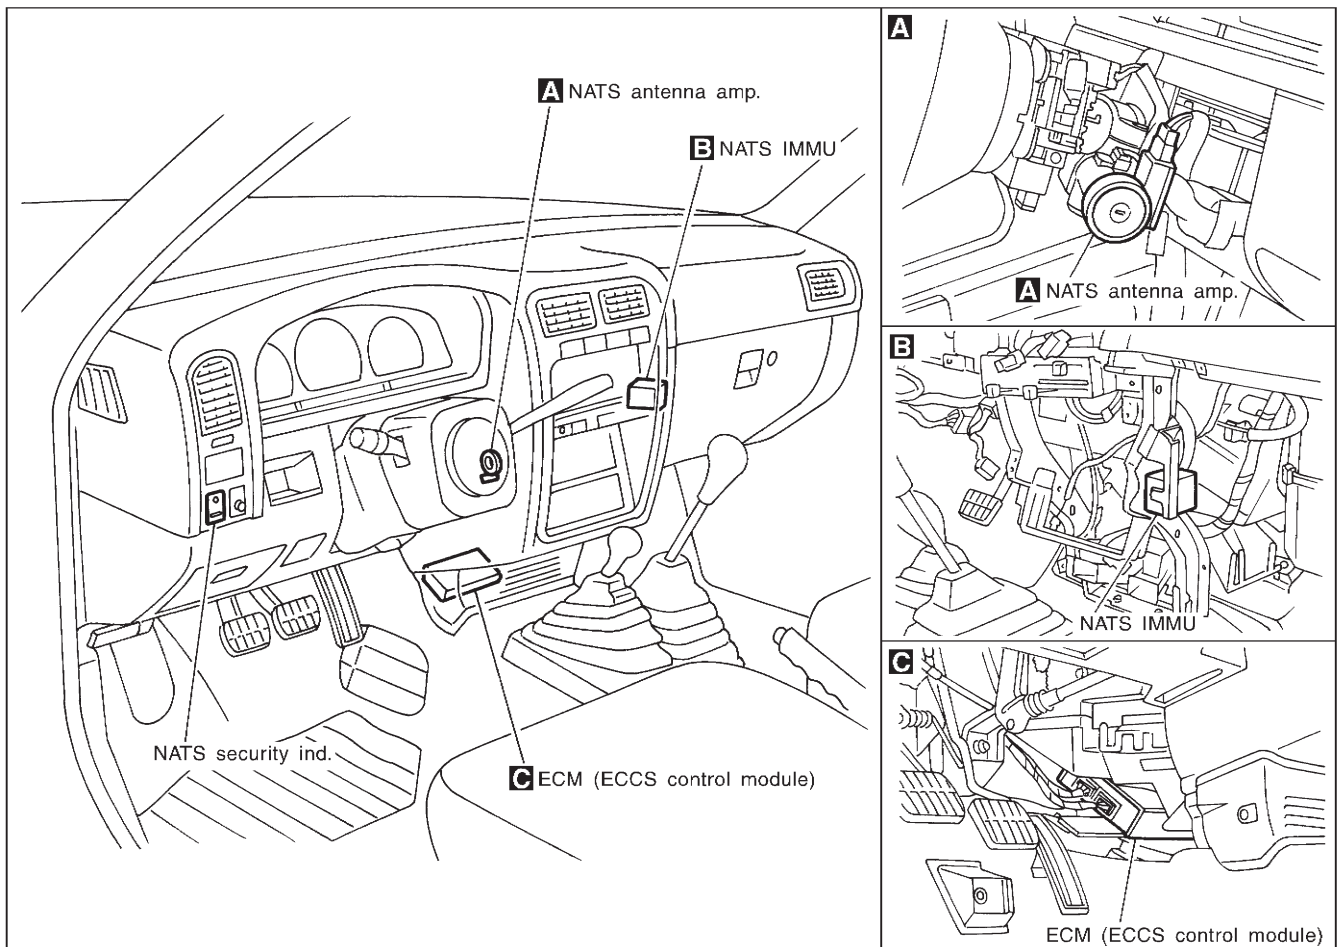

SEL649V

## System Description

NATS has the following immobiliser functions:


- Since only NATS ignition keys, whose IDs. have been registered into the ECM and IMMU of NATS, allow the engine to run, operation of a stolen vehicle without a NATS registered key is prevented by NATS. That is to say, NATS will immobilize the engine if someone tries to start it without the registered key of NATS.
- Both of the originally supplied ignition key IDs have been NATS registered. If requested by the vehicle owner, a maximum of four key IDs can be registered into the NATS components.
- The NATS security indicator (NATS security ind.) blinks when the ignition switch is in "OFF" or "ACC" position. Therefore, NATS warns outsiders that the vehicle is equipped with the anti-theft system.
- When NATS detects trouble, the malfunction indicator lamp (MIL) blinks.
- NATS trouble diagnoses, system initialisation and additional registration of other NATS ignition key IDs must be carried out using CONSULT hardware and CONSULT NATS software. When NATS initialisation has been completed, the ID of the inserted ignition key is automatically NATS registered. Then, if necessary, additional registration of other NATS ignition key IDs can be carried out. Regarding the procedures of NATS initialisation and NATS ignition key ID registration, refer to CONSULT operation manual, NATS.
- **When servicing a malfunction of the NATS (indicated by flashing of Malfunction Indicator Lamp) or registering another NATS ignition key ID no., it may be necessary to re-register original key identification. Therefore, be sure to receive all keys from vehicle owner.**

# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

## System Composition



The immobiliser function of the NATS consists of the following:

- NATS ignition key
- NATS immobiliser control unit (NATS IMMU) located in the ignition key cylinder
- Engine control module (ECM)
- NATS security indicator
- Malfunction indicator lamp (MIL)

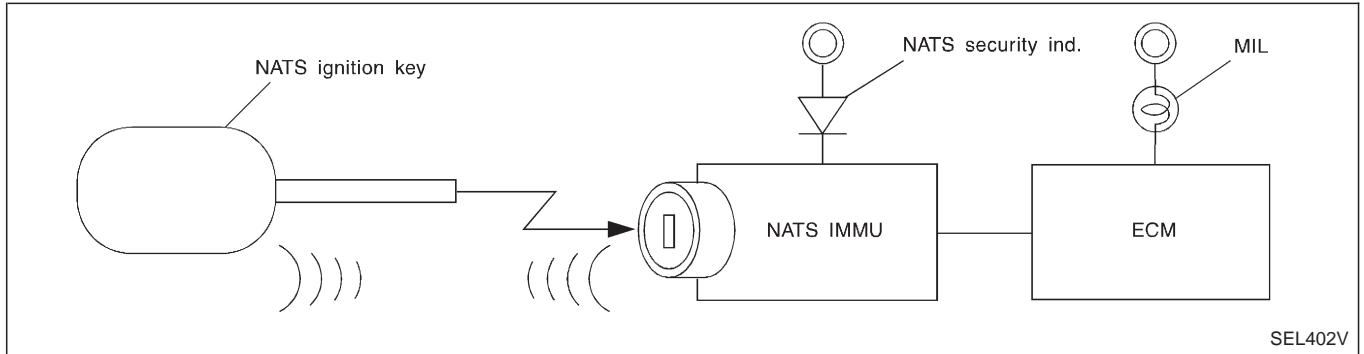

Wiring Diagram — NATS —


EL-NATS-01

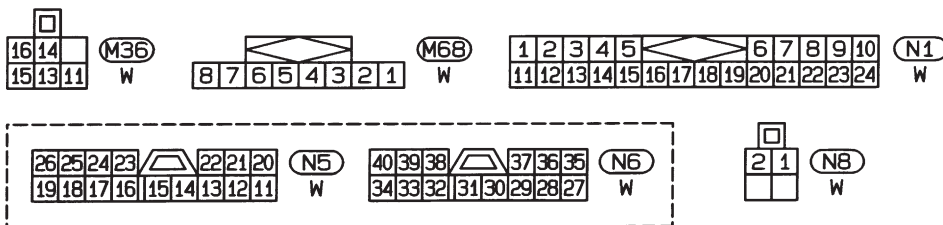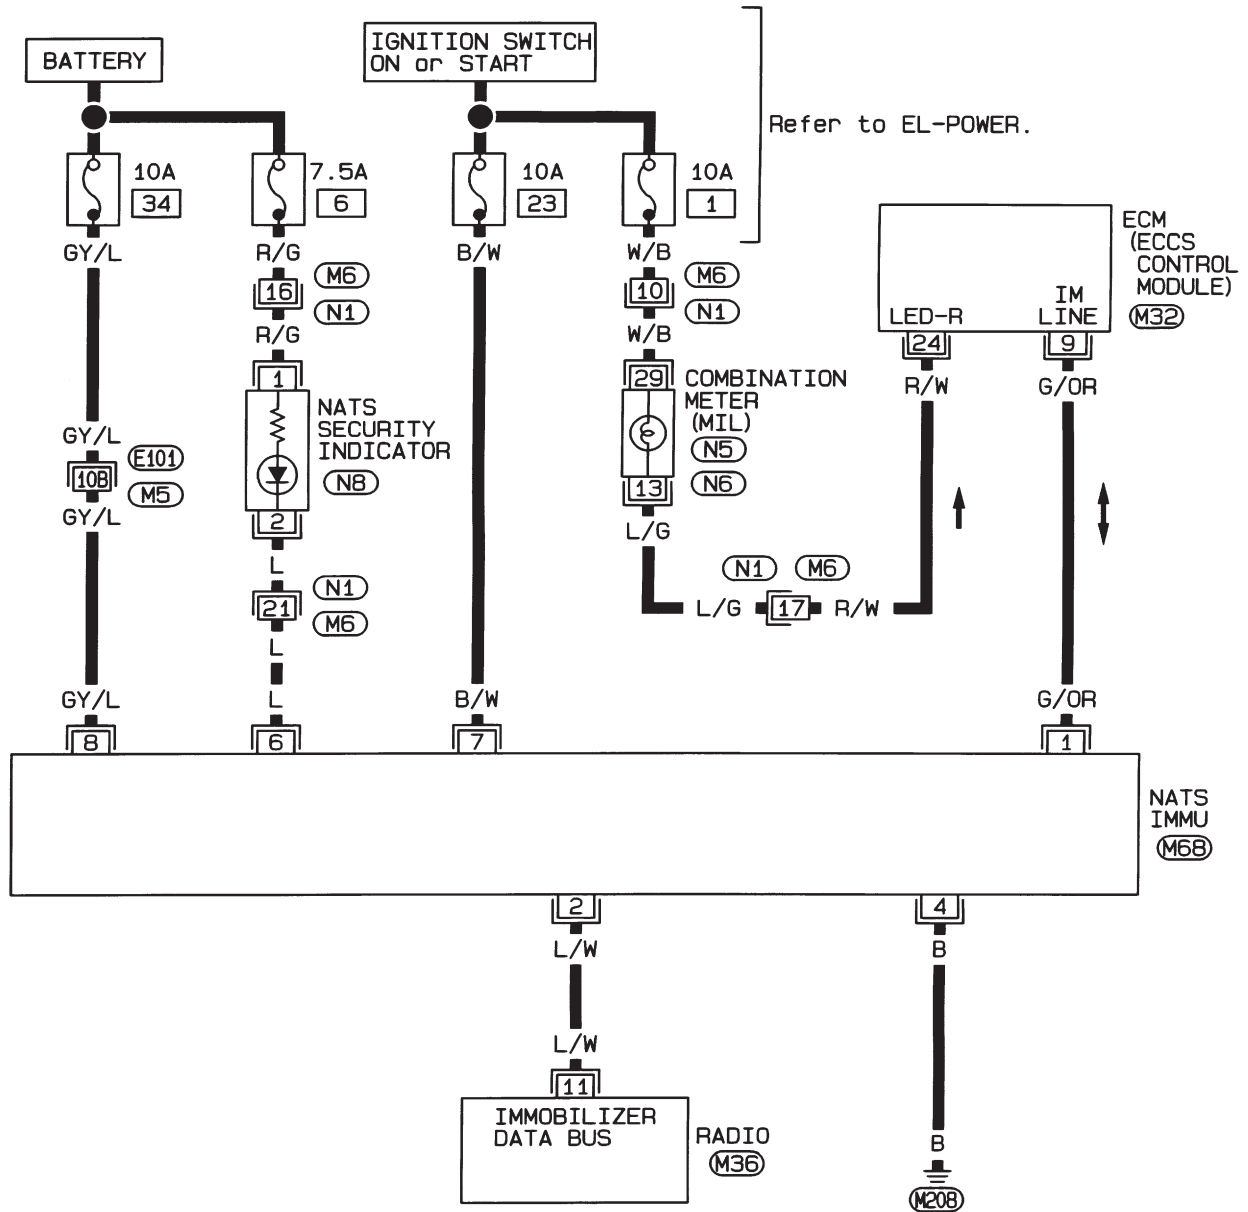

Refer to last page (Foldout page).

(M5), (E101), (M32)


# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

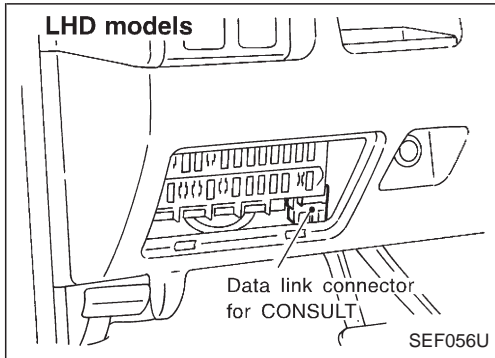

## CONSULT

### CONSULT INSPECTION PROCEDURE


1. Turn off ignition switch.
2. Connect "CONSULT" to Data link connector for CONSULT.

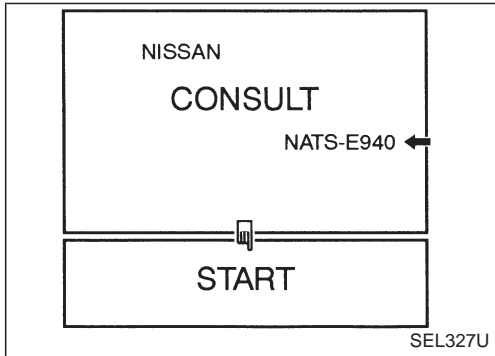


3. Insert NATS program card into CONSULT.

←: Program card  
NATS-E940

4. Turn on ignition switch.
5. Touch "START".

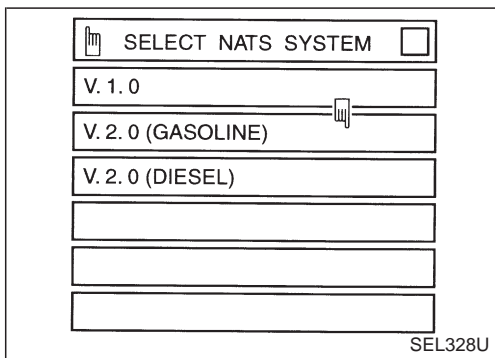

6. Touch "V.2.0 (GASOLINE)".

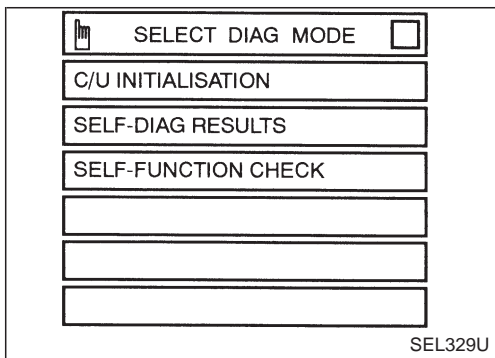

7. Perform each diagnostic test mode according to each service procedure.

For further information, see the CONSULT Operation Manual, NATS V2.0 (GASOLINE).

# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

## CONSULT (Cont'd)

### CONSULT DIAGNOSTIC TEST MODE FUNCTION


CONSULT DIAGNOSTIC TEST MODE	Description
C/U INITIALIZATION	When replacing any of the following three components, C/U initialization is necessary. [NATS ignition key/IMMU/ECM]
SELF-FUNCTION CHECK	ECM checks its own NATS communication interface by itself.
SELF-DIAGNOSTIC RESULTS	Detected items (screen terms) are as shown in the chart below.

#### NOTE:

When any initialisation is performed, all ID previously registered will be erased. So all NATS ignition keys must be registered again.

The engine cannot be started with an unregistered key. In this case, the system may show "DIFFERENCE OF KEY" or "LOCK MODE" as a self-diagnostic result on the CONSULT screen.

#### HOW TO READ SELF-DIAGNOSTIC RESULTS

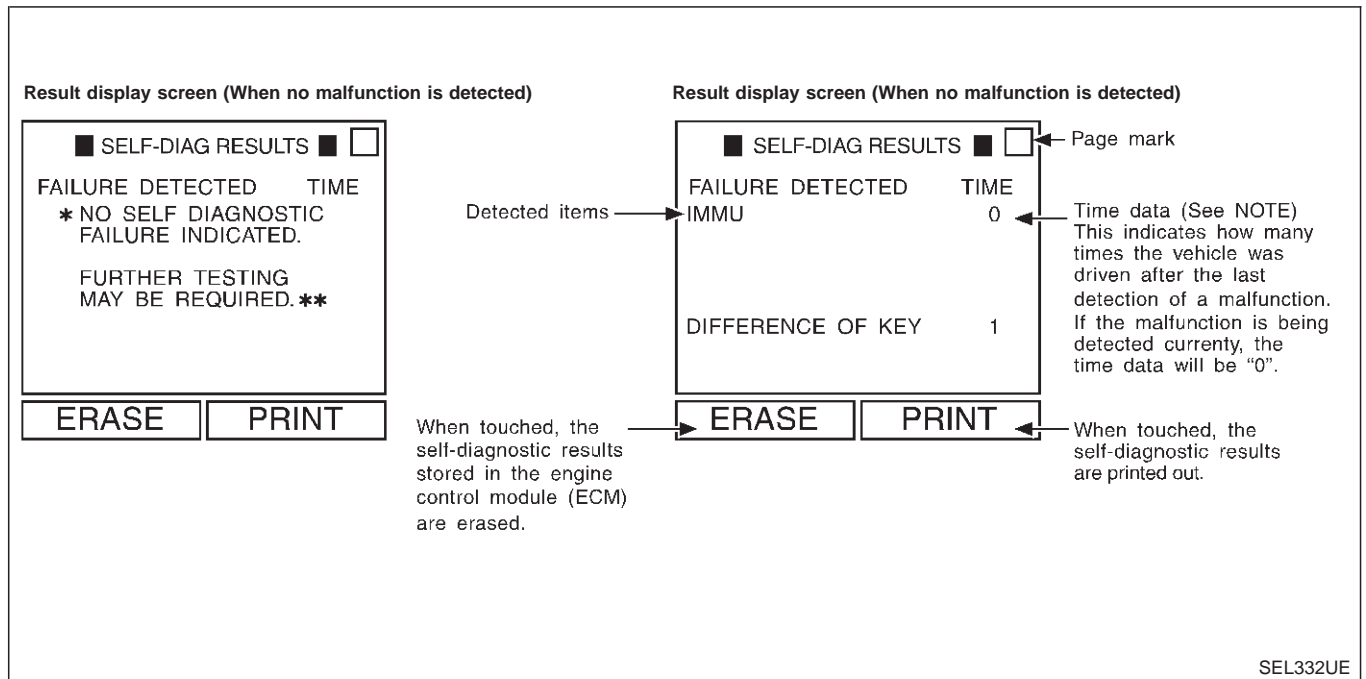

#### NOTE:

- If trip number is more than 1, MIL does not blink.
- Time data is not indicated for this model.


#### SELF-DIAGNOSTIC RESULTS ITEM CHART

Detected items (Screen terms)	Description	Reference page
IMMU	ECM received the signal from IMMU that IMMU is malfunctioning.	EL-190
ECM	ECM is malfunctioning.	EL-190
CHAIN OF ECM-IMMU	Communication impossible between ECM and IMMU.	EL-191
DIFFERENCE OF KEY	IMMU can receive the key ID signal but the result of ID verification between key ID and IMMU is NG.	EL-193
CHAIN OF IMMU-KEY	IMMU cannot receive the key ID signal.	EL-194
ID DISCORD, IMM-ECM	The result of ID verification between IMMU and ECM is NG. System initialisation is required.	EL-194
MINGLE NOISE	Noise (interference) mingled into NATS communication lines during communicating.	EL-195
DON'T ERASE BEFORE CHECKING ENG DIAG	Engine trouble data and NATS trouble data have been detected in ECM.	EL-188
LOCK MODE	When an unregistered ignition key is used, or if the starting operation is carried out two or more times consecutively with the ignition key, IMMU or ECM malfunctioning, NATS will shift the mode to one which prevents the engine from being started.	EL-196

# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

## Trouble Diagnoses

### WORK FLOW

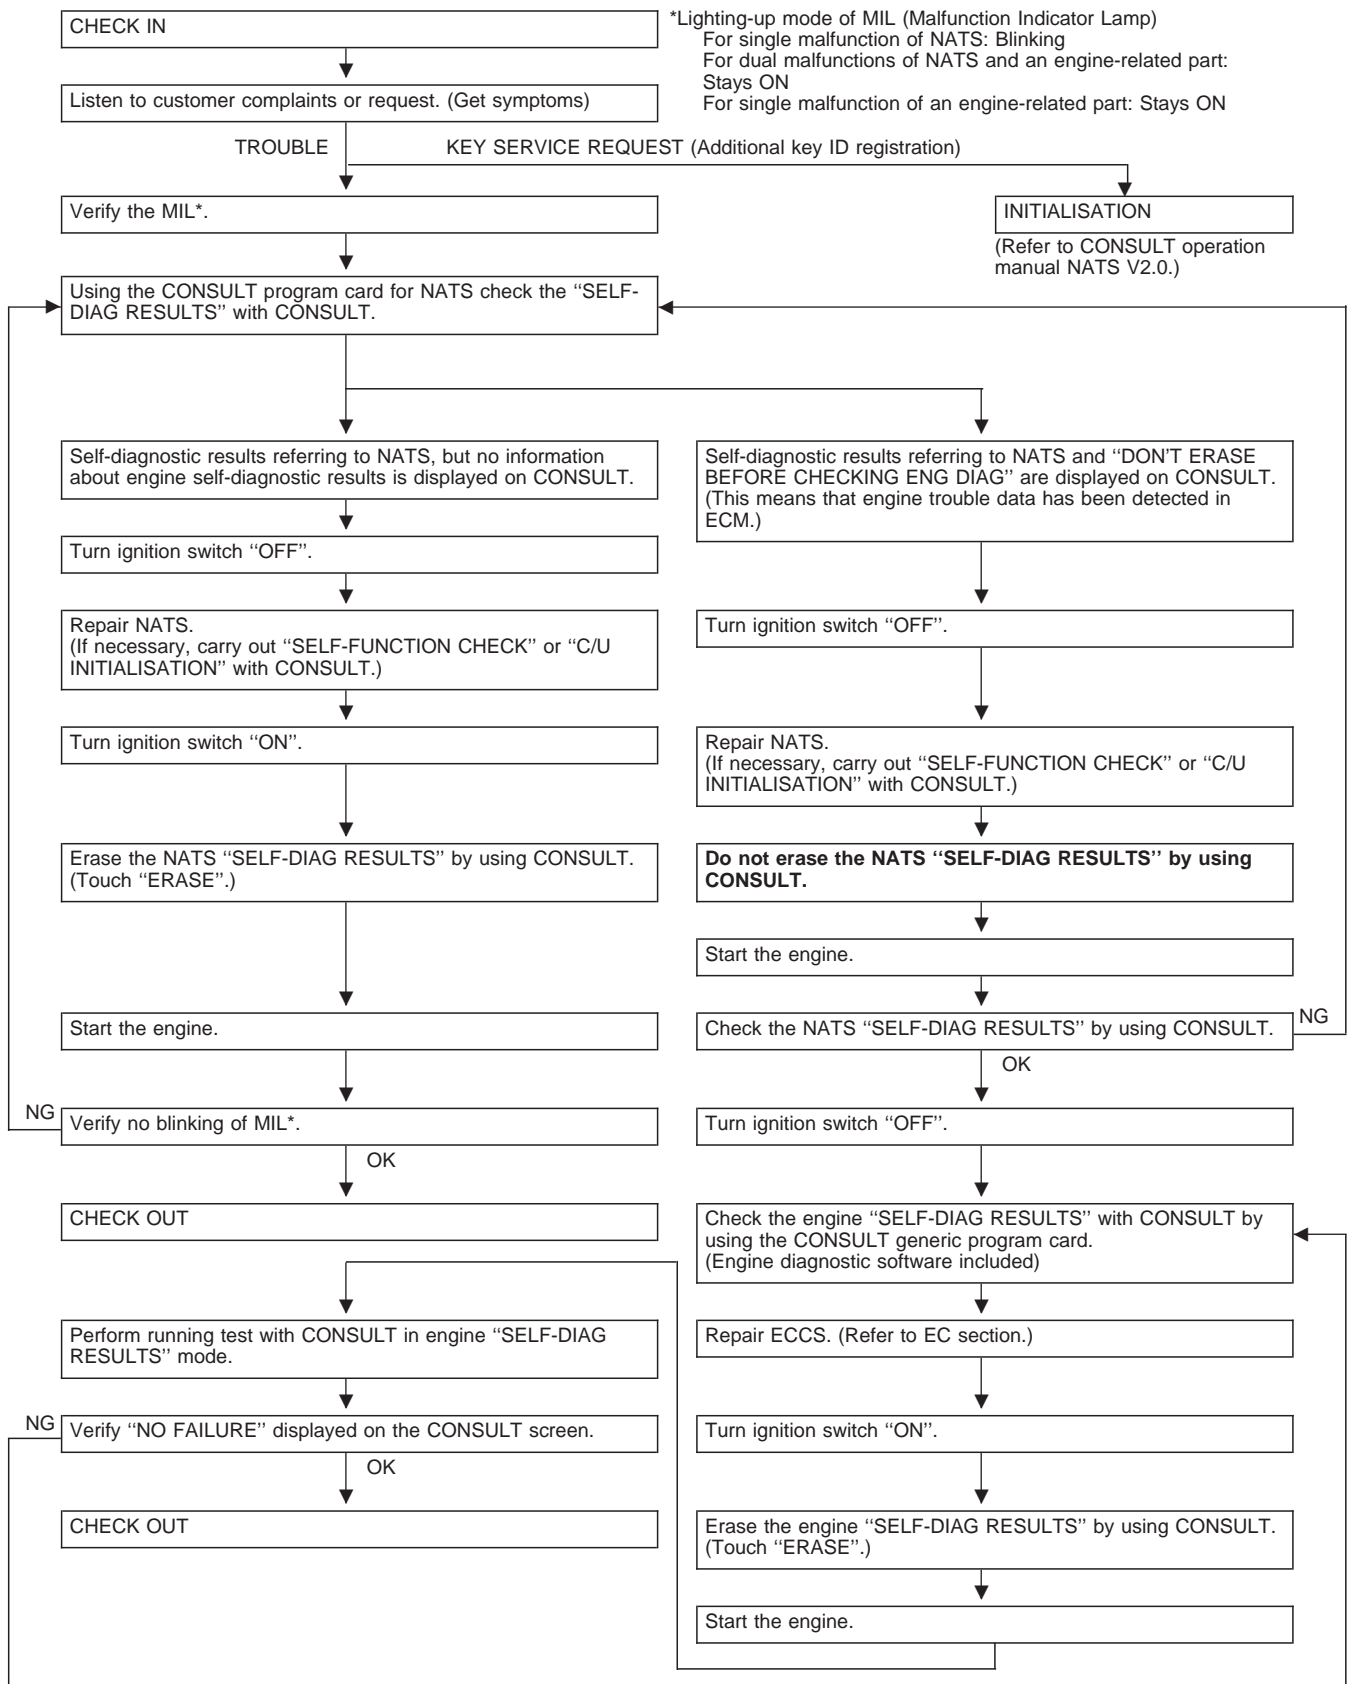

# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

## Trouble Diagnoses (Cont'd)

### SYMPTOM CHART

SYMPTOM	Displayed "SELF-DIAG RESULTS" on CONSULT screen.	DIAGNOSTIC PROCEDURE (Reference page)	SYSTEM (Malfunctioning part or mode)
<ul style="list-style-type: none"> <li>● MIL blinking</li> <li>● Engine will start</li> </ul>	IMMU	PROCEDURE 1 (EL-190)	IMMU
	ECM	PROCEDURE 2 (EL-190)	ECM
<ul style="list-style-type: none"> <li>● MIL blinking</li> <li>● Engine does not start</li> </ul>	CHAIN OF ECM-IMMU	PROCEDURE 3 (EL-191)	Open circuit in battery voltage line of IMMU circuit
			Open circuit in ignition line of IMMU circuit
			Open circuit in ground line of IMMU circuit
			Open or short circuit in communication line between IMMU and ECM
			ECM
	DIFFERENCE OF KEY	PROCEDURE 4 (EL-193)	Unregistered key
			IMMU
	CHAIN OF IMMU-KEY	PROCEDURE 5 (EL-194)	Malfunction of key ID chip
	ID DISCORD, IMM-ECM	PROCEDURE 6 (EL-194)	System initialisation has not yet been completed.
			ECM
	MINGLE NOISE	PROCEDURE 7 (EL-195)	IMMU
			Noise interference in communication line
LOCK MODE	PROCEDURE 8 (EL-196)	LOCK MODE	
● MIL staying ON	DON'T ERASE BEFORE CHECKING ENG DIAG	WORK FLOW (EL-188)	Engine trouble data and NATS trouble data have been detected in ECM.
<ul style="list-style-type: none"> <li>● Security indicator does not operate properly.</li> <li>● Engine starts properly.</li> </ul>	—	PROCEDURE 9 (EL-197)	Security indicator circuit
			Security indicator
			Continuation of initialisation mode

\*Lighting-up mode of MIL (Malfunction Indicator Lamp)  
 For single malfunction of NATS: Blinking  
 For dual malfunctions of NATS and an engine-related part: Stays ON  
 For single malfunction of an engine-related part: Stays ON




# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE 1

Self-diagnostic results:

“IMMU” displayed on CONSULT screen

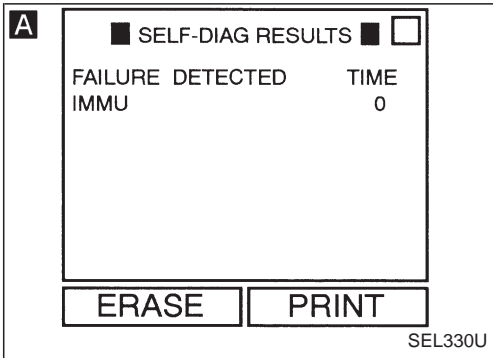

**A**




Confirm SELF-DIAGNOSTIC RESULTS “IMMU” displayed on CONSULT screen.



● IMMU is malfunctioning.

1. Replace IMMU.
2. Perform initialisation with CONSULT.

For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0 (GASOLINE)”.

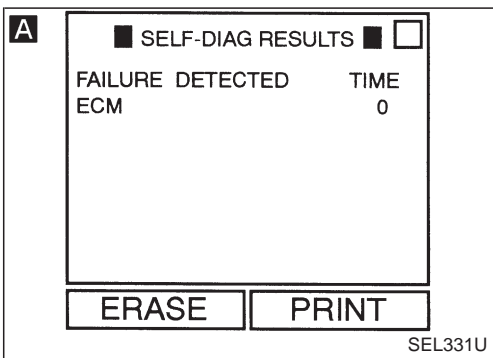

### DIAGNOSTIC PROCEDURE 2

Self-diagnostic results:

“ECM” displayed on CONSULT screen

**A**



Confirm SELF-DIAGNOSTIC RESULTS “ECM” displayed on CONSULT screen.



● ECM is malfunctioning.

1. Replace ECM.
2. Perform initialisation with CONSULT.

For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0 (GASOLINE)”.



# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

## Trouble Diagnoses (Cont'd)


### DIAGNOSTIC PROCEDURE 3

Self-diagnostic results:

“CHAIN OF ECM-IMMU” displayed on CONSULT screen

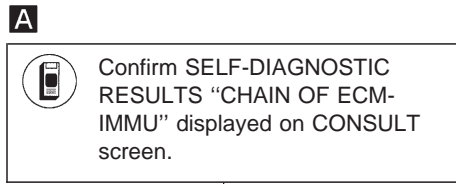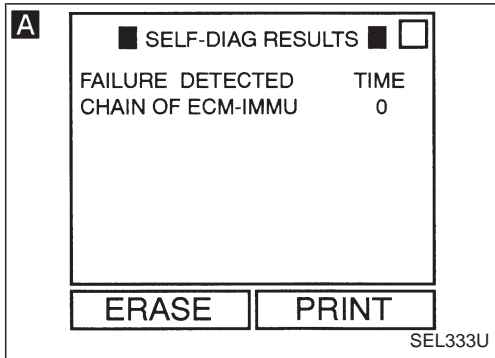


OK

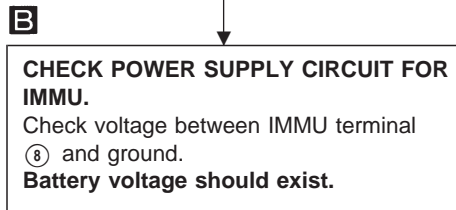

NG

- Check the following.
- 10A fuse (No. 34, located in the fusible link and fuse box)
  - Harness for open or short between fuse and IMMU connector


OK

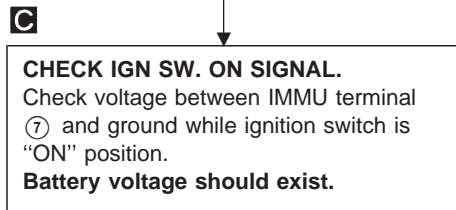

NG

- Check the following.
- 10A fuse (No. 23, located in the fuse block)
  - Harness for open or short between fuse and IMMU connector


OK

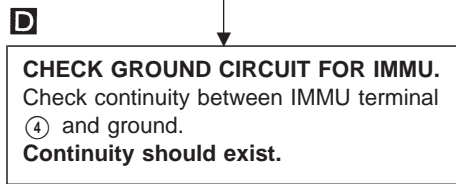

NG

Repair harness.

OK




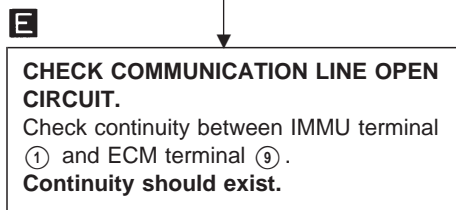


NG

Repair harness.






OK

Ⓐ

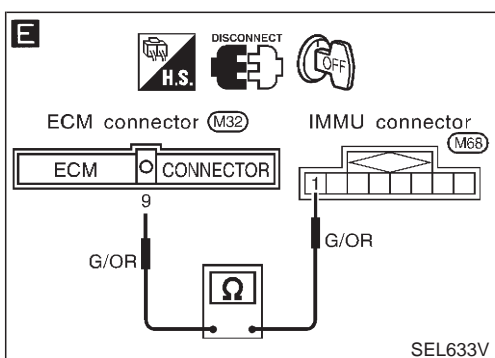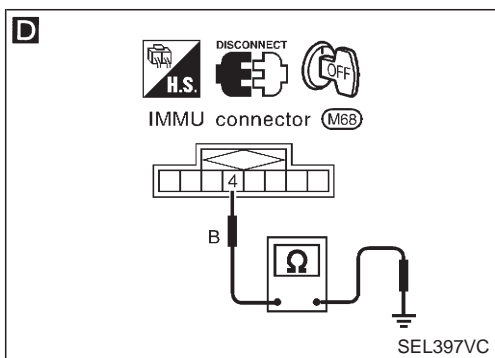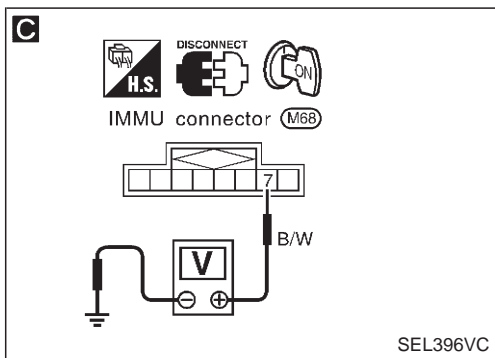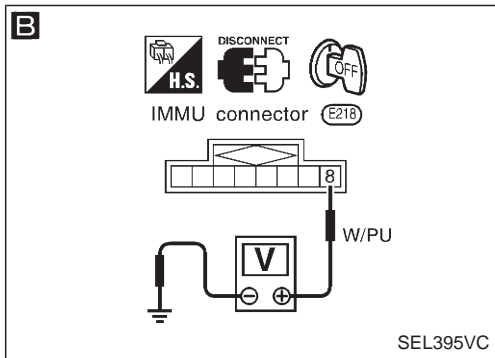




# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

## Trouble Diagnoses (Cont'd)

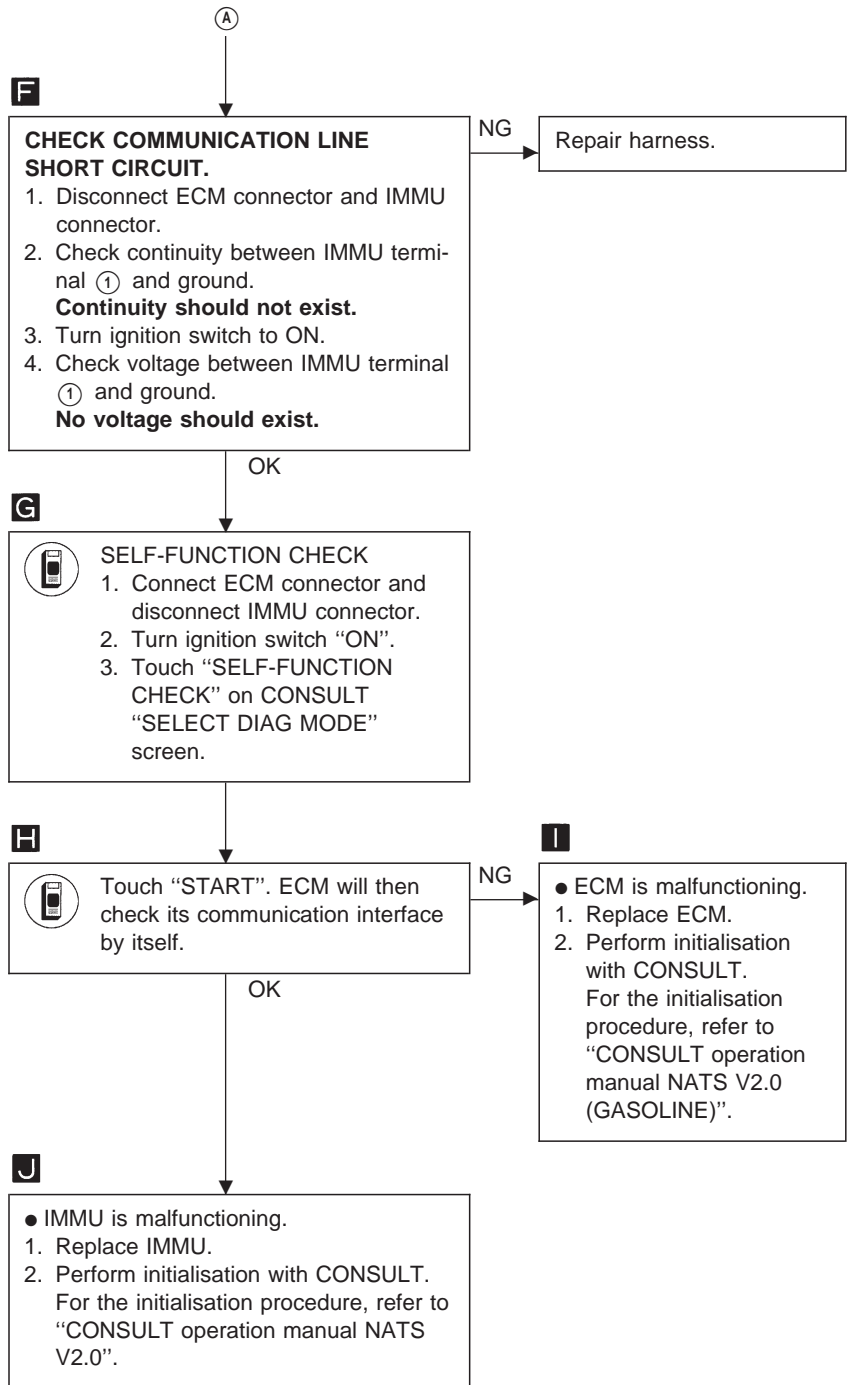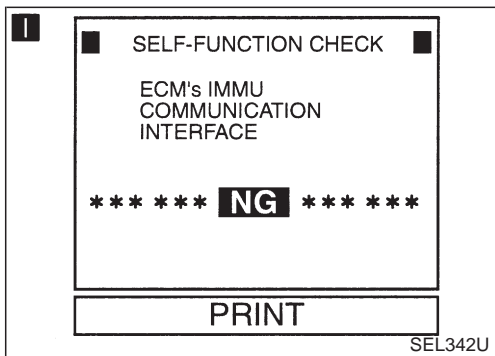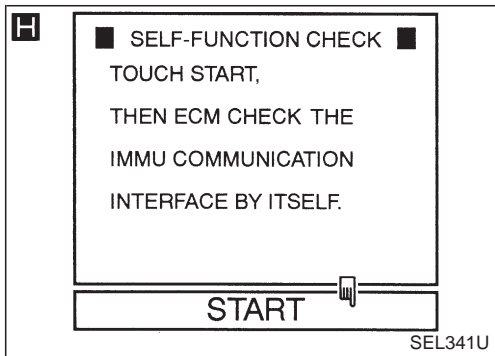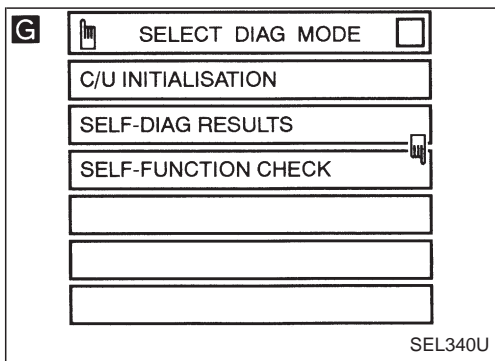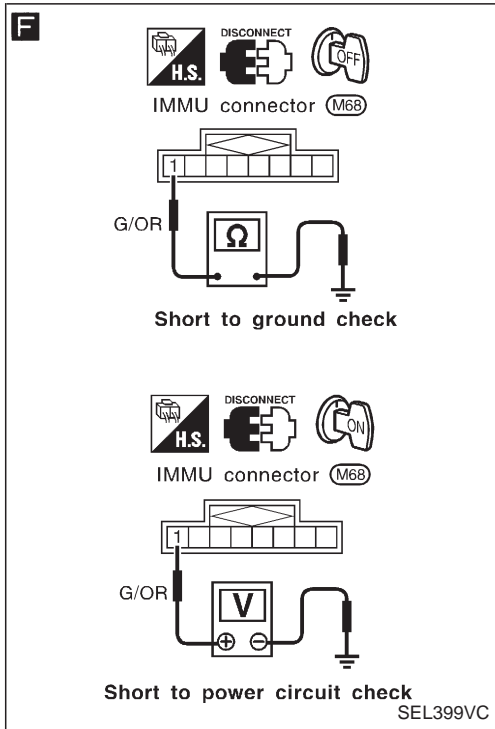


# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

## Trouble Diagnoses (Cont'd)

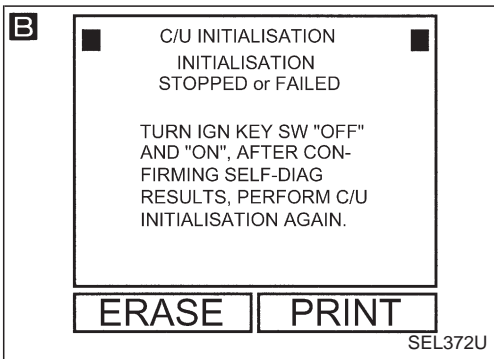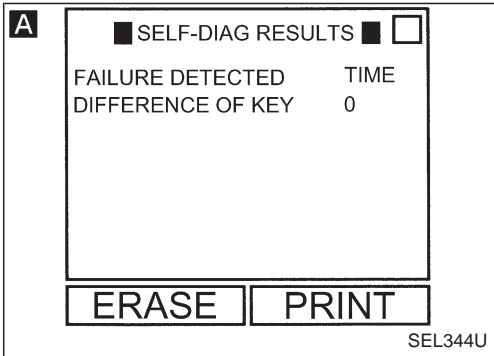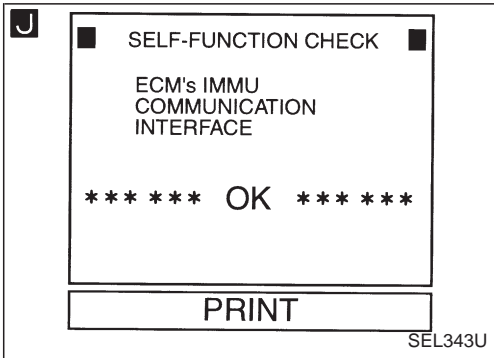

### DIAGNOSTIC PROCEDURE 4

**Self-diagnostic results:**  
"DIFFERENCE OF KEY" displayed on CONSULT screen

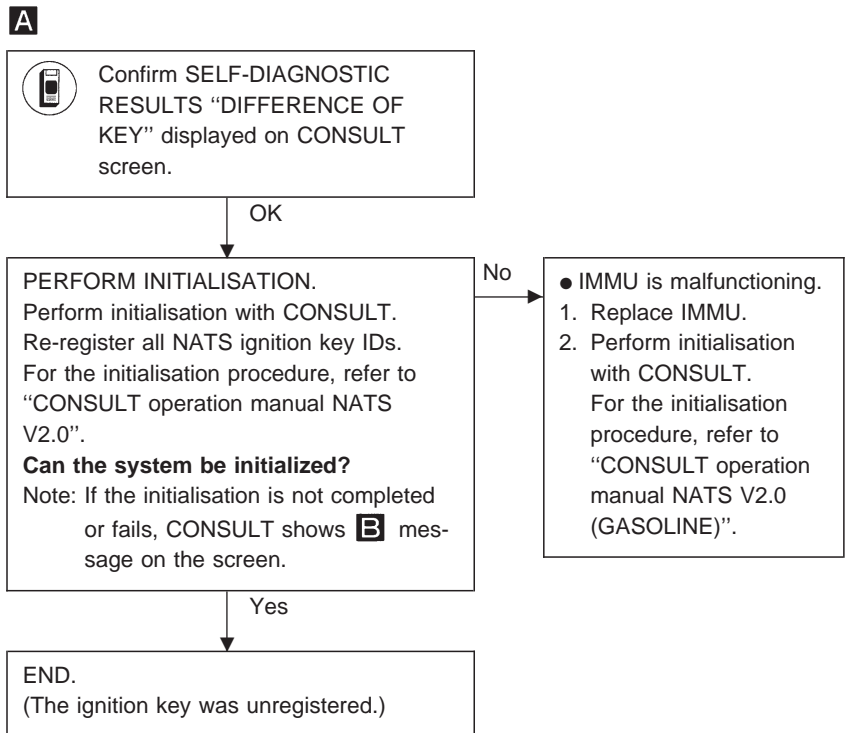


# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE 5

Self-diagnostic results:

“CHAIN OF IMMU-KEY” displayed on CONSULT screen

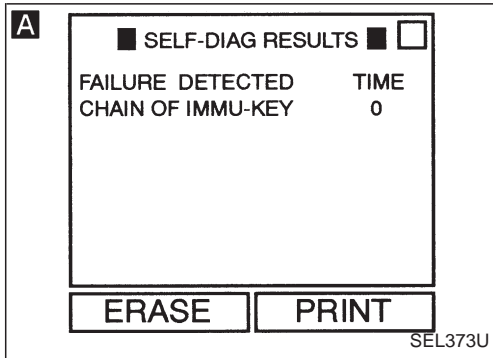

**A** Confirm SELF-DIAGNOSTIC RESULTS “CHAIN OF IMMU-KEY” displayed on CONSULT screen.

OK

CHECK NATS IGNITION KEY ID CHIP.  
Can the engine start with another registered NATS ignition key?

Yes


- Ignition key ID chip is malfunctioning.

1. Replace the ignition key.
2. Perform initialisation with CONSULT.  
For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0 (GASOLINE)”.

No

- IMMU is malfunctioning.

1. Replace IMMU.
2. Perform initialisation with CONSULT.  
For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0”.

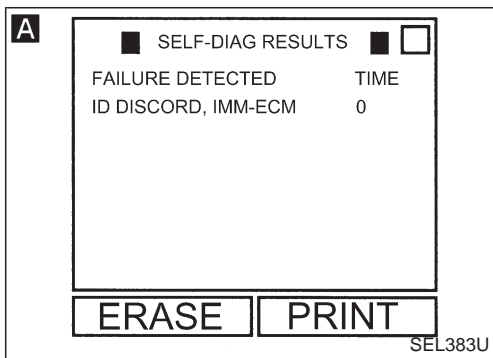

### DIAGNOSTIC PROCEDURE 6

Self-diagnostic results:

“ID DISCORD, IMM-ECM” displayed on CONSULT screen

**A** Confirm SELF-DIAGNOSTIC RESULTS “ID DISCORD, IMM-ECM” displayed on CONSULT screen.

\* “ID DISCORD, IMM-ECM”:  
Registered ID of IMMU is in discord with that of ECM.

PERFORM INITIALISATION.  
Perform initialisation with CONSULT.  
Re-register all NATS ignition key IDs.  
For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0”.

**Can the system be initialized?**  
Note: If the initialisation is not completed or fails, CONSULT shows **B** message on the screen.


No

- ECM is malfunctioning.

1. Replace ECM.
2. Perform initialisation with CONSULT.  
For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0 (GASOLINE)”.

Yes

END.  
(System initialisation was not completed.)

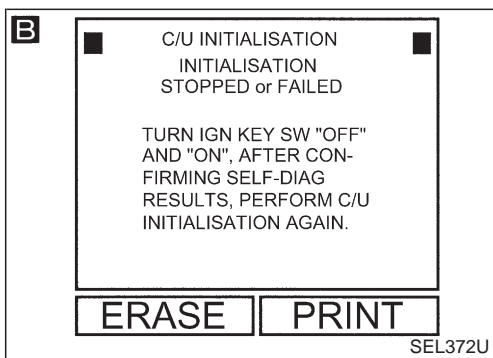




# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE 7

Self-diagnostic results:




“MINGLE NOISE” displayed on CONSULT screen

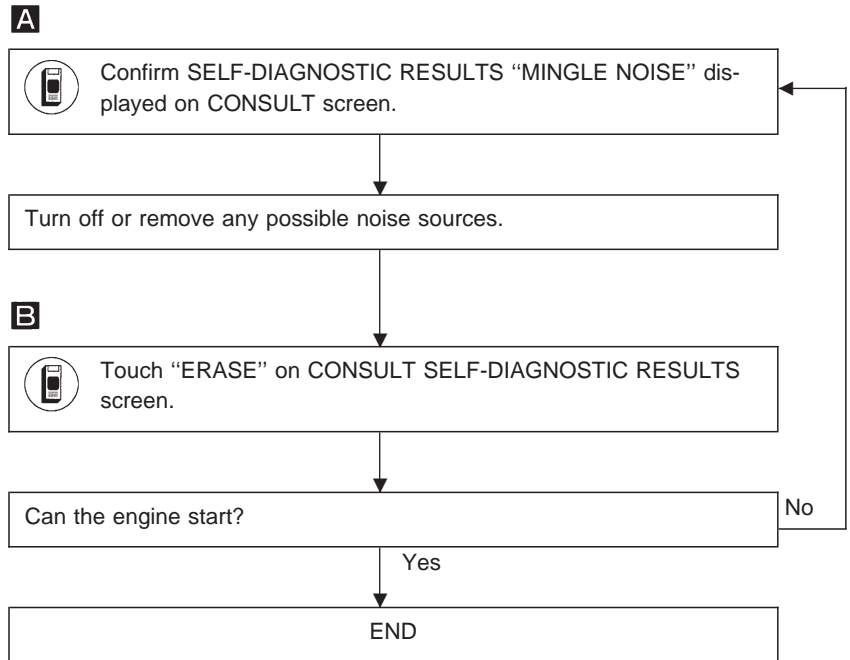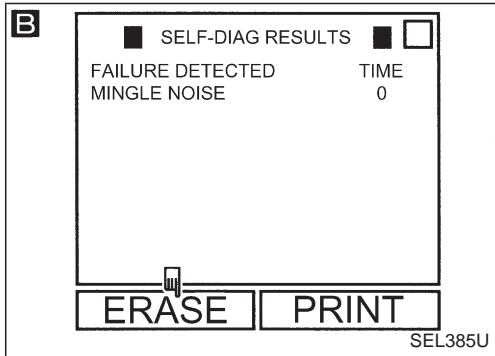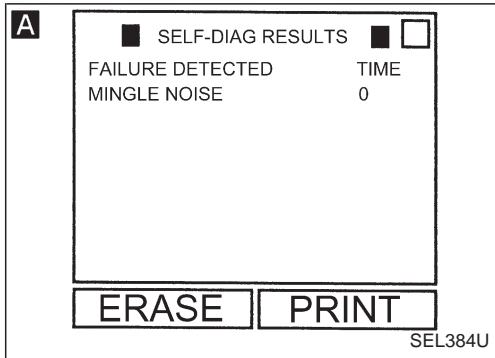

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE 8

Self-diagnostic results:  
**“LOCK MODE” displayed on CONSULT screen**

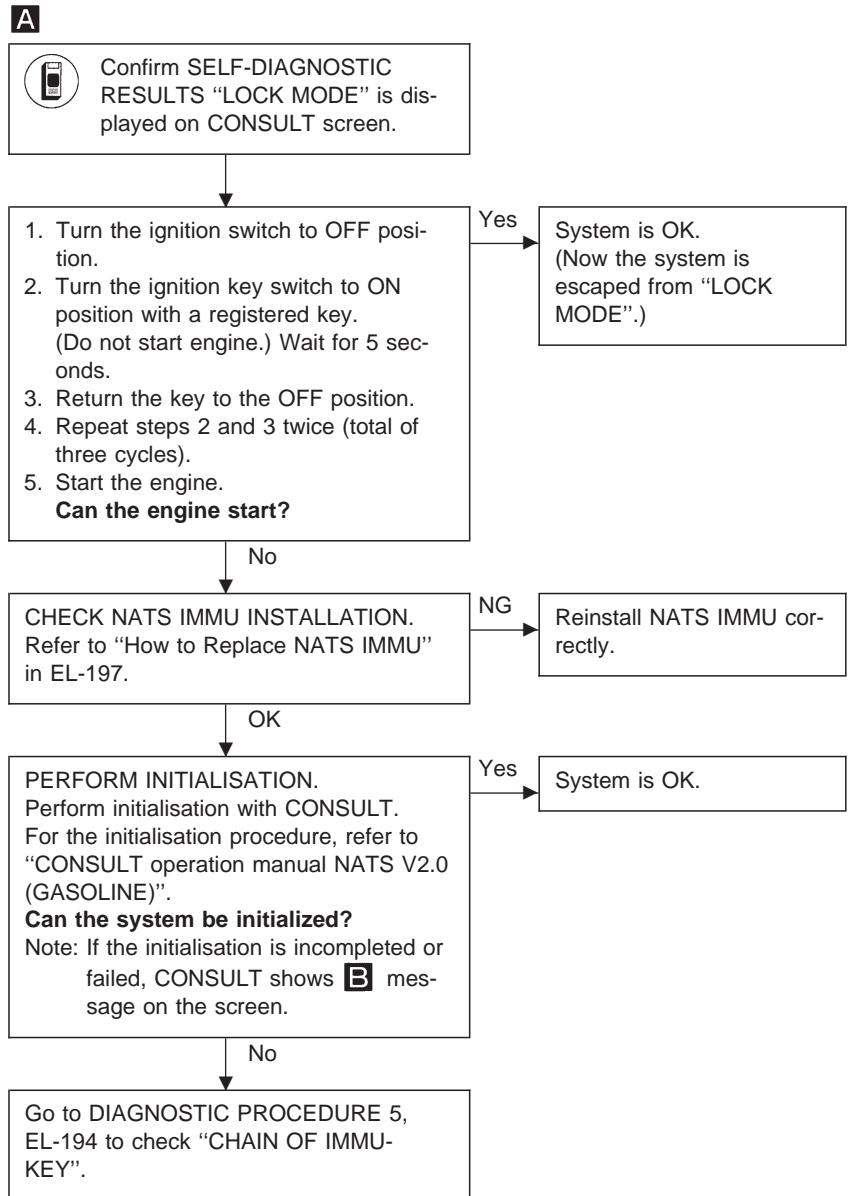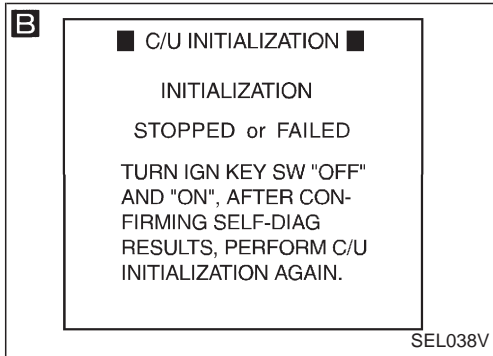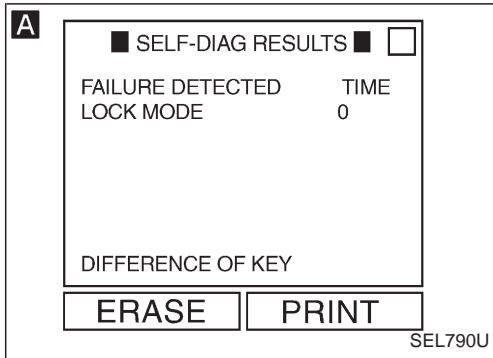


# NATS (Nissan Anti-Theft System)/Gasoline engine for LHD models

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE 9

#### Security indicator check

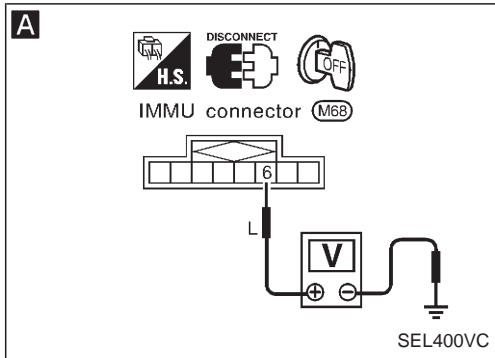

**A**

#### CHECK INDICATOR CIRCUIT.

1. Disconnect NATS IMMU connector.
2. Check voltage between NATS IMMU terminal ⑥ and ground.

**Battery voltage should exist.**

NG

Check the following.


- 7.5A fuse (No. ⑥, located in the fuse block)
- Security indicator
- Harness for open or short between fuse and security indicator
- Harness for open or short between NATS IMMU and security indicator

OK

#### PERFORM INITIALISATION.

Perform initialisation with CONSULT.

For the initialisation procedure, refer to "CONSULT operation manual NATS V2.0 (GASOLINE)".

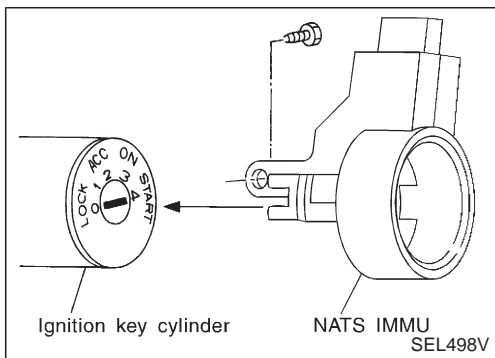

## How to Replace NATS IMMU

### NOTE:




- If NATS IMMU is not installed correctly, NATS system will not operate properly and SELF-DIAG RESULTS on CONSULT screen will show "LOCK MODE" or "CHAIN OF IMMU-KEY".







# NATS (Nissan Anti-Theft System)/Diesel engine

## Component Parts and Harness Connector Location

LHD models

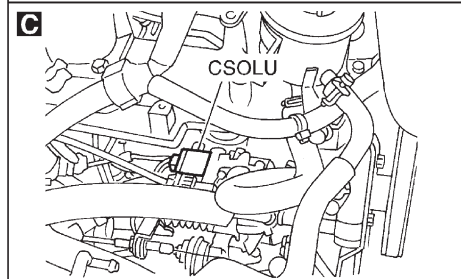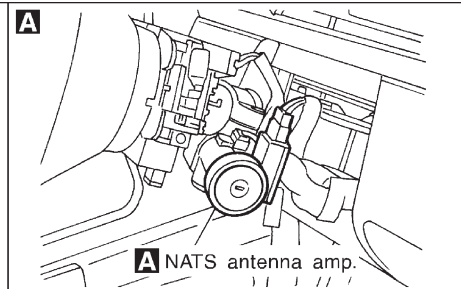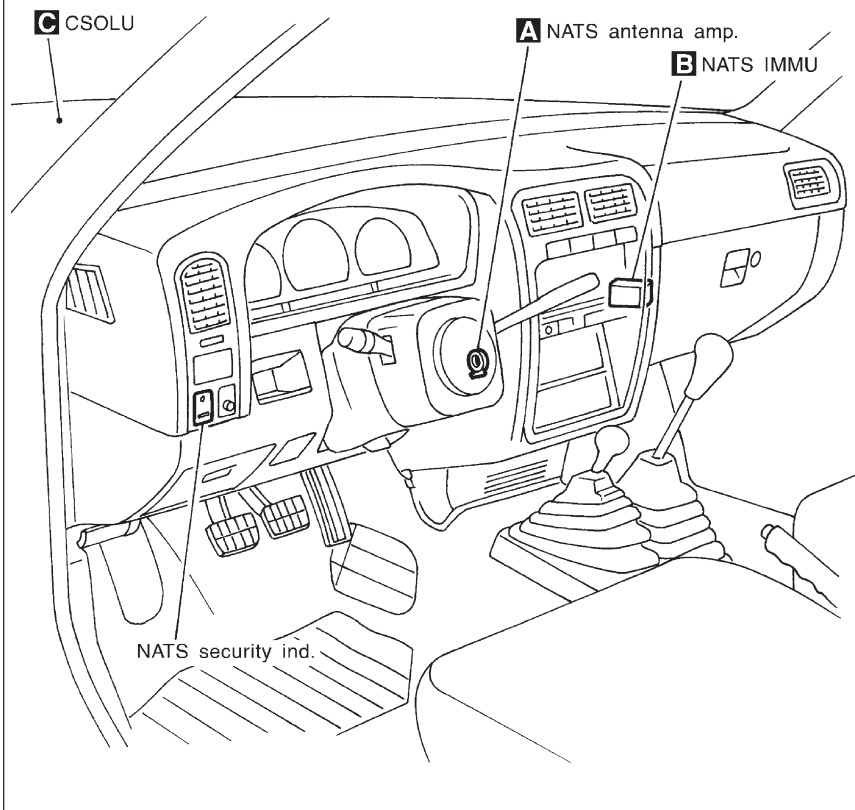

RHD models

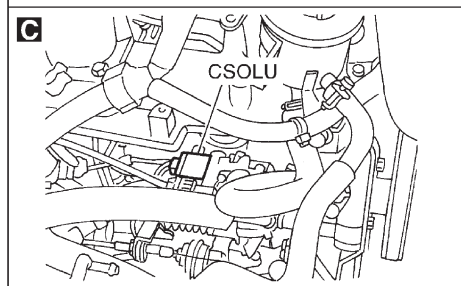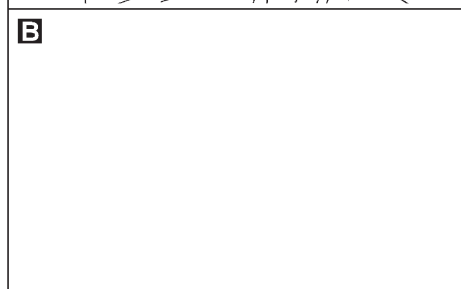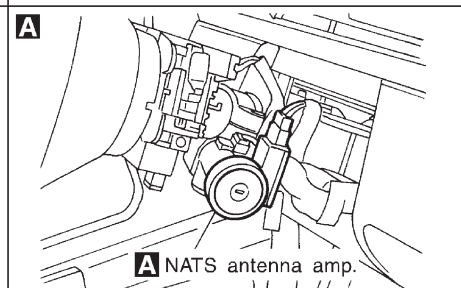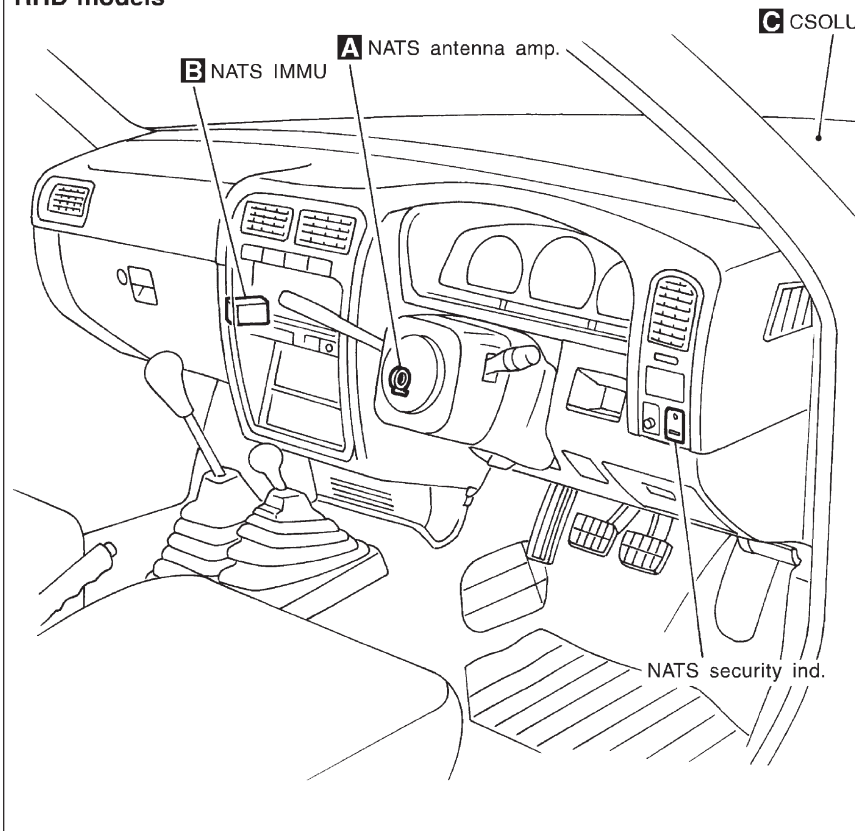

SEL650V

# NATS (Nissan Anti-Theft System)/Diesel engine

## System Description

NATS has the following immobiliser functions:

- Since only NATS ignition keys, whose IDs. have been registered into the NATS immobiliser control unit (NATS IMMU), allow the engine to run, operation of a stolen vehicle without a NATS registered key is prevented by NATS.
- Both of the originally supplied ignition key IDs have been NATS registered.  
If requested by the vehicle owner, a maximum of four key IDs can be registered into the NATS components.
- The NATS security indicator (NATS security ind.) blinks when the ignition switch is in “OFF” or “ACC” position. Therefore, NATS warns outsiders that the vehicle is equipped with the anti-theft system.
- If NATS detects trouble, the NATS security indicator comes on while engine is running or ignition switch is in “ON” position.
- When servicing NATS (trouble diagnoses, NATS initialisation and additional registration of other NATS ignition key IDs), CONSULT hardware and CONSULT NATS software is necessary.
- There are two types of NATS initialisation, one is “SYSTEM INITIALISATION” and another is “IMMU INITIALISATION”.


When NATS initialisation has been completed, the ID of the inserted ignition key is automatically NATS registered. Then, if necessary, additional registration of other NATS ignition key IDs can be carried out. Regarding the procedures of NATS initialisation and NATS ignition key ID registration, refer to CONSULT operation manual, NATS V2.0 (Diesel).

- **When servicing a malfunction of the NATS (indicated by lighting of NATS security ind.) or registering another NATS ignition key ID no., it may be necessary to re-register original key identification. Therefore, be sure to receive all keys from vehicle owner.**

## System Composition

The immobiliser function of the NATS consists of the following:


- NATS ignition key
- NATS antenna amp. located in the ignition key cylinder
- NATS immobiliser control unit (NATS IMMU)
- Coded solenoid unit installed in the injection pump assembly (CSOLU)
- NATS security indicator (NATS security ind.)

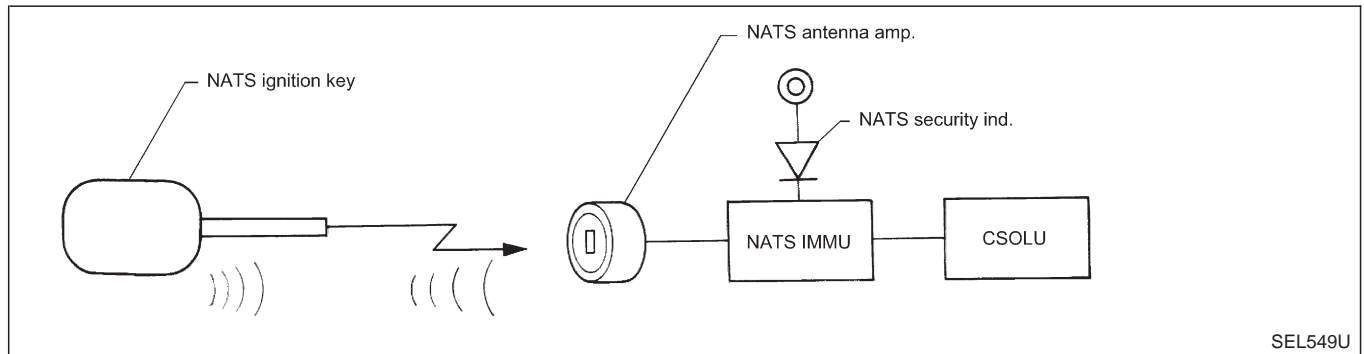

# NATS (Nissan Anti-Theft System)/Diesel engine

## Wiring Diagram — NATS —/LHD Models

EL-NATS-02


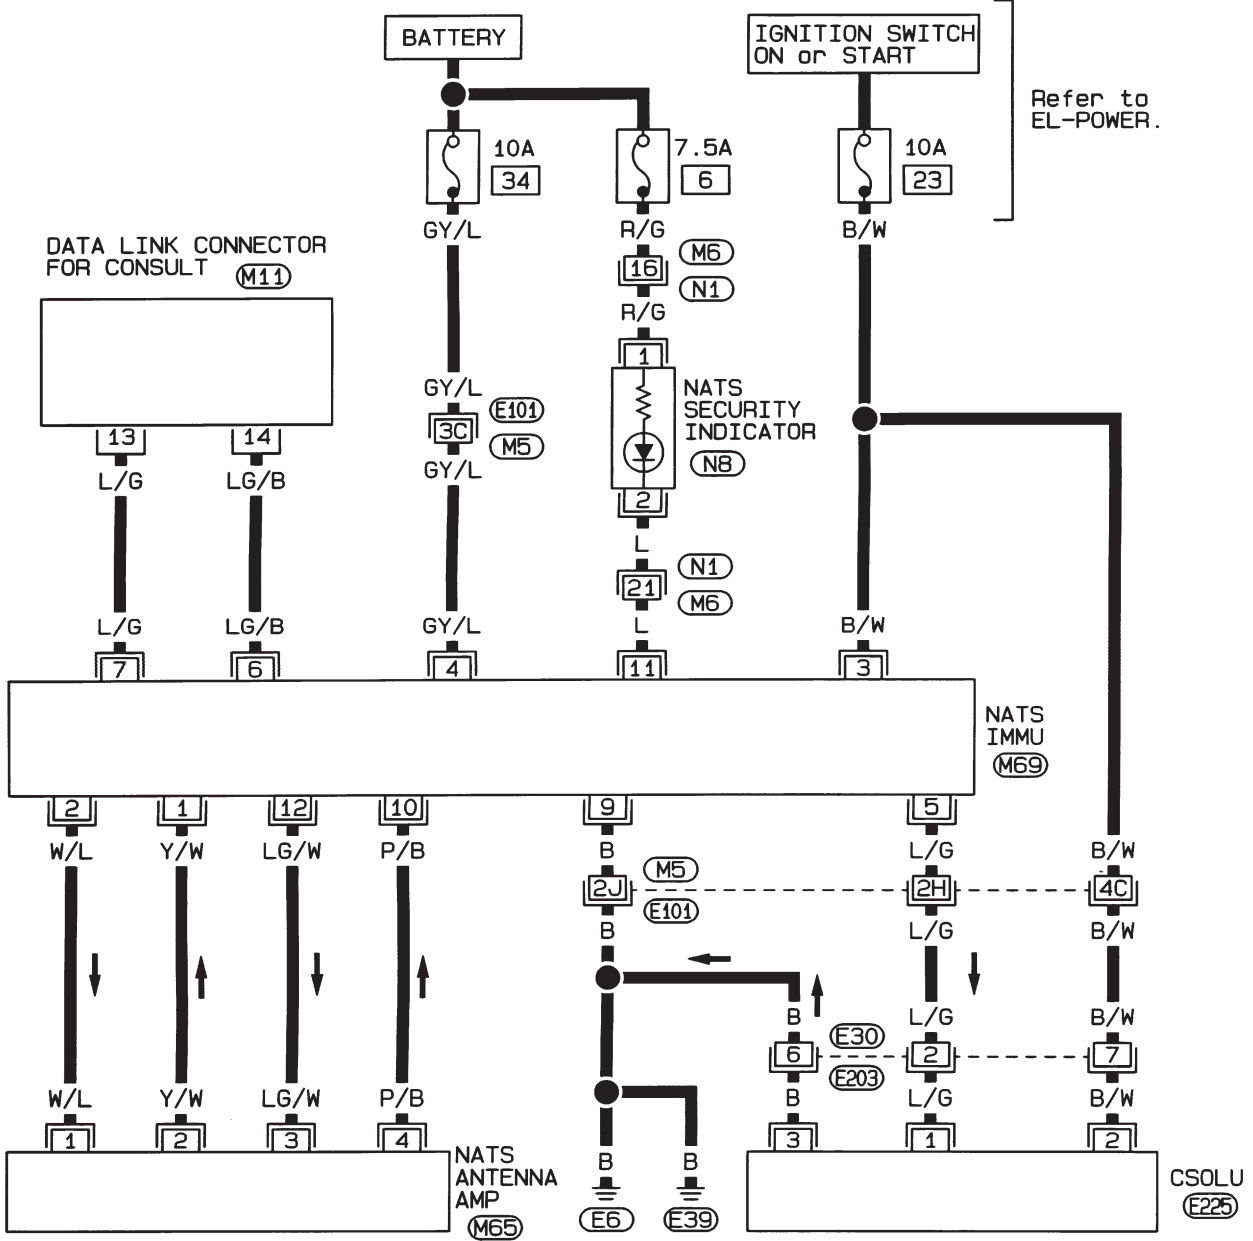


Refer to EL-POWER.

NATS IMMU (M69)

NATS ANTENNA AMP (M65)

CSOLU (E225)







Refer to last page (Foldout page).

M5, E101

# NATS (Nissan Anti-Theft System)/Diesel engine

## Wiring Diagram — NATS —/RHD Models


EL-NATS-03

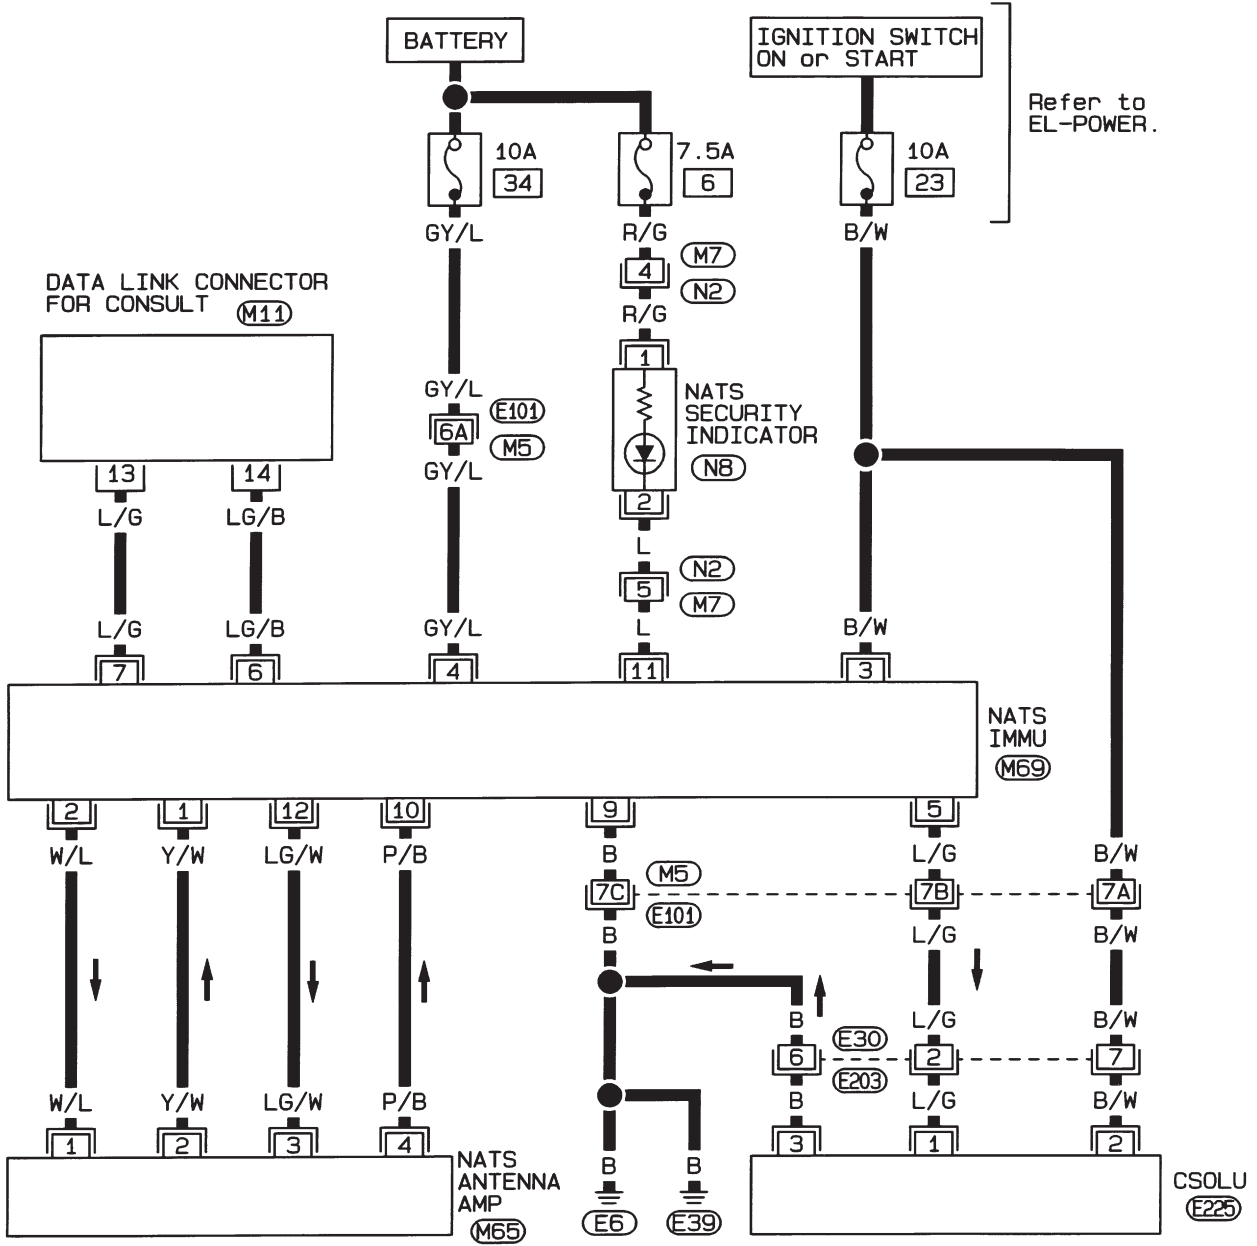

Refer to last page (Foldout page).

(M5), (E101)


# NATS (Nissan Anti-Theft System)/Diesel engine

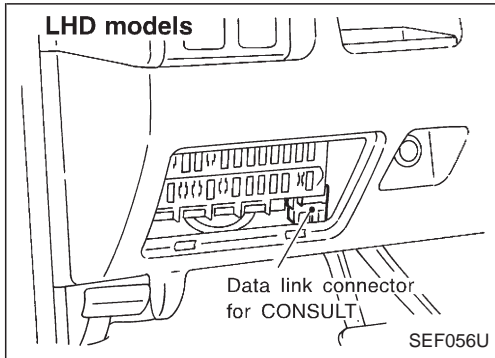

## CONSULT

### CONSULT INSPECTION PROCEDURE


1. Turn off ignition switch.
2. Connect "CONSULT" to Data link connector for CONSULT.

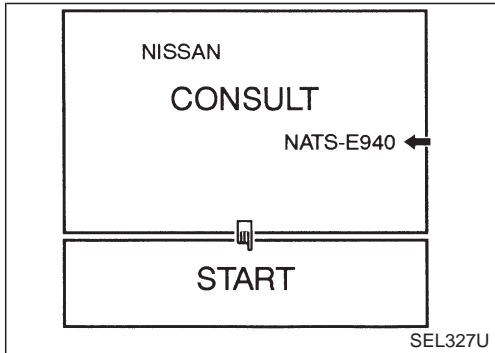


3. Insert NATS program card into CONSULT.

←: Program card  
NATS-E940

4. Turn on ignition switch.
5. Touch "START".

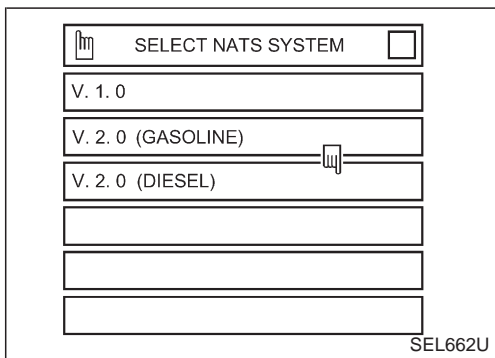


6. Touch "V.2.0 (DIESEL)".

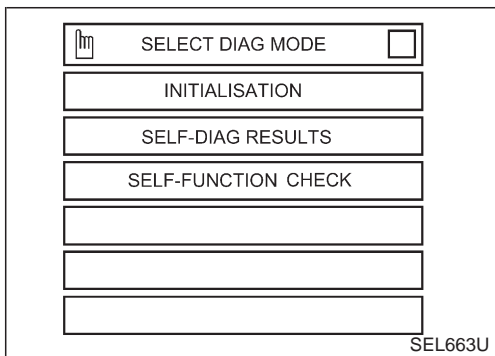

7. Perform each diagnostic test mode according to each service procedure.

**For further information, see the CONSULT Operation Manual, NATS V2.0 (Diesel).**

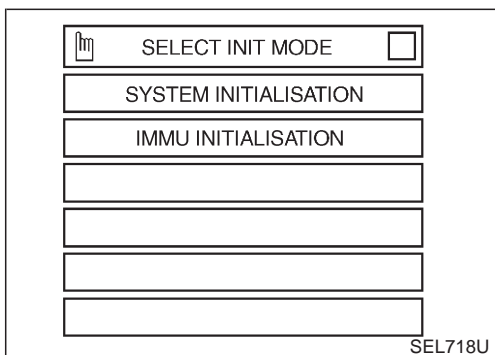

#### NOTE:

Two types of initialisation (system initialisation and IMMU initialisation) are available. For details, refer to "INITIALISATION" in next page.

# NATS (Nissan Anti-Theft System)/Diesel engine

## CONSULT (Cont'd)

### CONSULT DIAGNOSTIC TEST MODE FUNCTION

CONSULT diagnostic test mode	Description
C/U INITIALISATION	Two types of initialisation are available. For details, refer to "INITIALISATION" shown below.
SELF-FUNCTION CHECK	IMMU checks its own NATS communication interface.
SELF-DIAGNOSTIC RESULTS	Self-diagnostic results can be read and erased quickly.

### INITIALISATION


Initialisation type	Description
SYSTEM INITIALISATION	All registered ignition key IDs in IMMU and CSOLU can be registered. <b>It takes around 16 minutes.</b> When the following component is replaced, this initialisation is required. <ul style="list-style-type: none"> <li>● IMMU</li> <li>● CSOLU</li> </ul>
IMMU INITIALISATION	All registered ignition key IDs in IMMU can be initialised and new IDs can be registered. When the following component is replaced or new NATS ignition key is registered, this initialisation is required. <ul style="list-style-type: none"> <li>● NATS ignition key</li> </ul>

#### NOTE:

When any of initialisation is performed, all of ID codes previously registered will be erased. So all of NATS ignition keys must be registered again.

If unregistered key is used to try to start the engine, the system may show "KEY ID [DIFFERENCE]" as a self-diagnostic result on CONSULT screen.

### HOW TO READ SELF-DIAGNOSTIC RESULTS

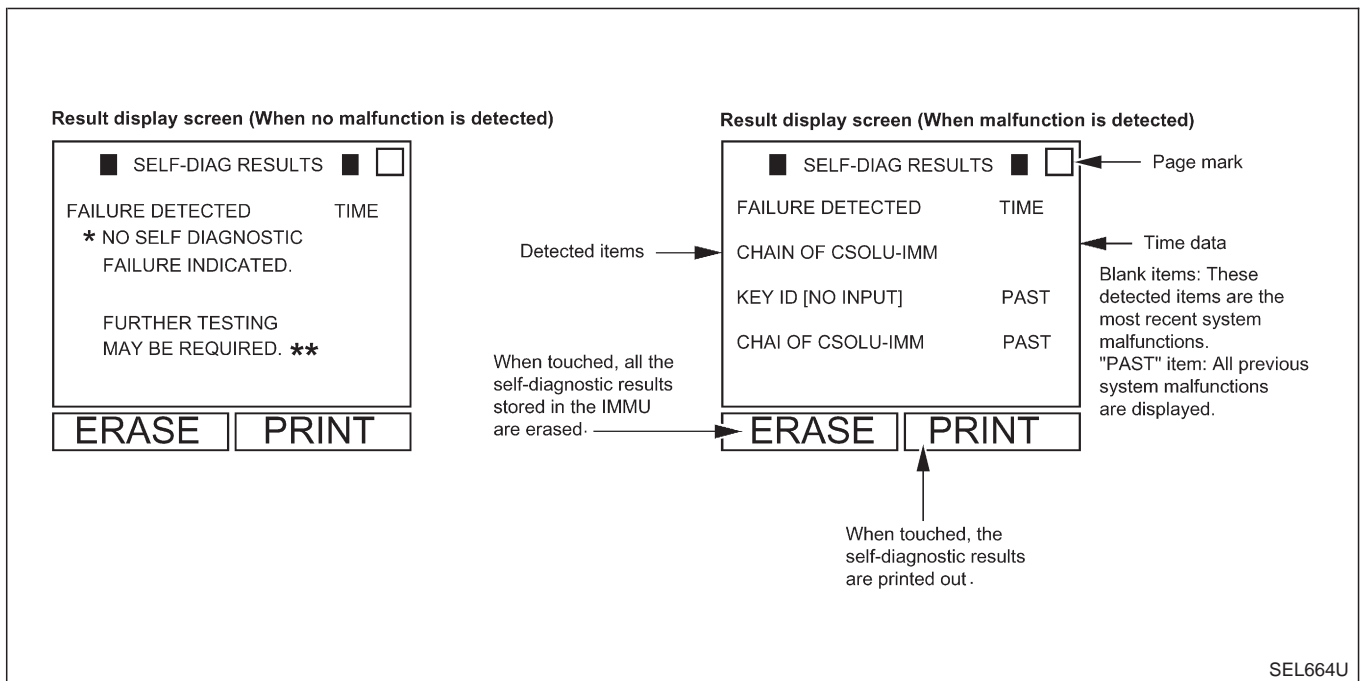

## NATS (Nissan Anti-Theft System)/Diesel engine

### CONSULT (Cont'd)

#### SELF-DIAGNOSTIC RESULTS ITEM CHART

Detected items (Screen terms)	Description	Reference page
IMMU	IMMU is malfunctioning.	EL-207
CSOLU	IMMU received the signal from CSOLU that CSOLU is malfunctioning.	EL-207
CHAIN OF CSOLU-IMM	Communication impossible between CSOLU and IMMU.	EL-208
KEY ID [DIFFERENCE]	IMMU can receive the key ID signal but the result of ID verification between key ID and IMMU is NG.	EL-210
KEY ID [NO INPUT]	IMMU cannot receive the key ID signal. In the case of multiple malfunctions, just this item can be displayed prior to the other malfunctioning items.	EL-211
ID DSCORD, IMM-CSLU	The result of ID verification between IMMU and CSOLU is NG. System initialisation is required.	EL-213


**NOTE:**

When CONSULT shows “IMPOSSIBLE TO PROCEED” displayed on its screen, it means that CONSULT fails to access to the NATS. In this case, perform diagnostic procedure 7, EL-214.

# NATS (Nissan Anti-Theft System)/Diesel engine

## Trouble Diagnoses

### WORK FLOW

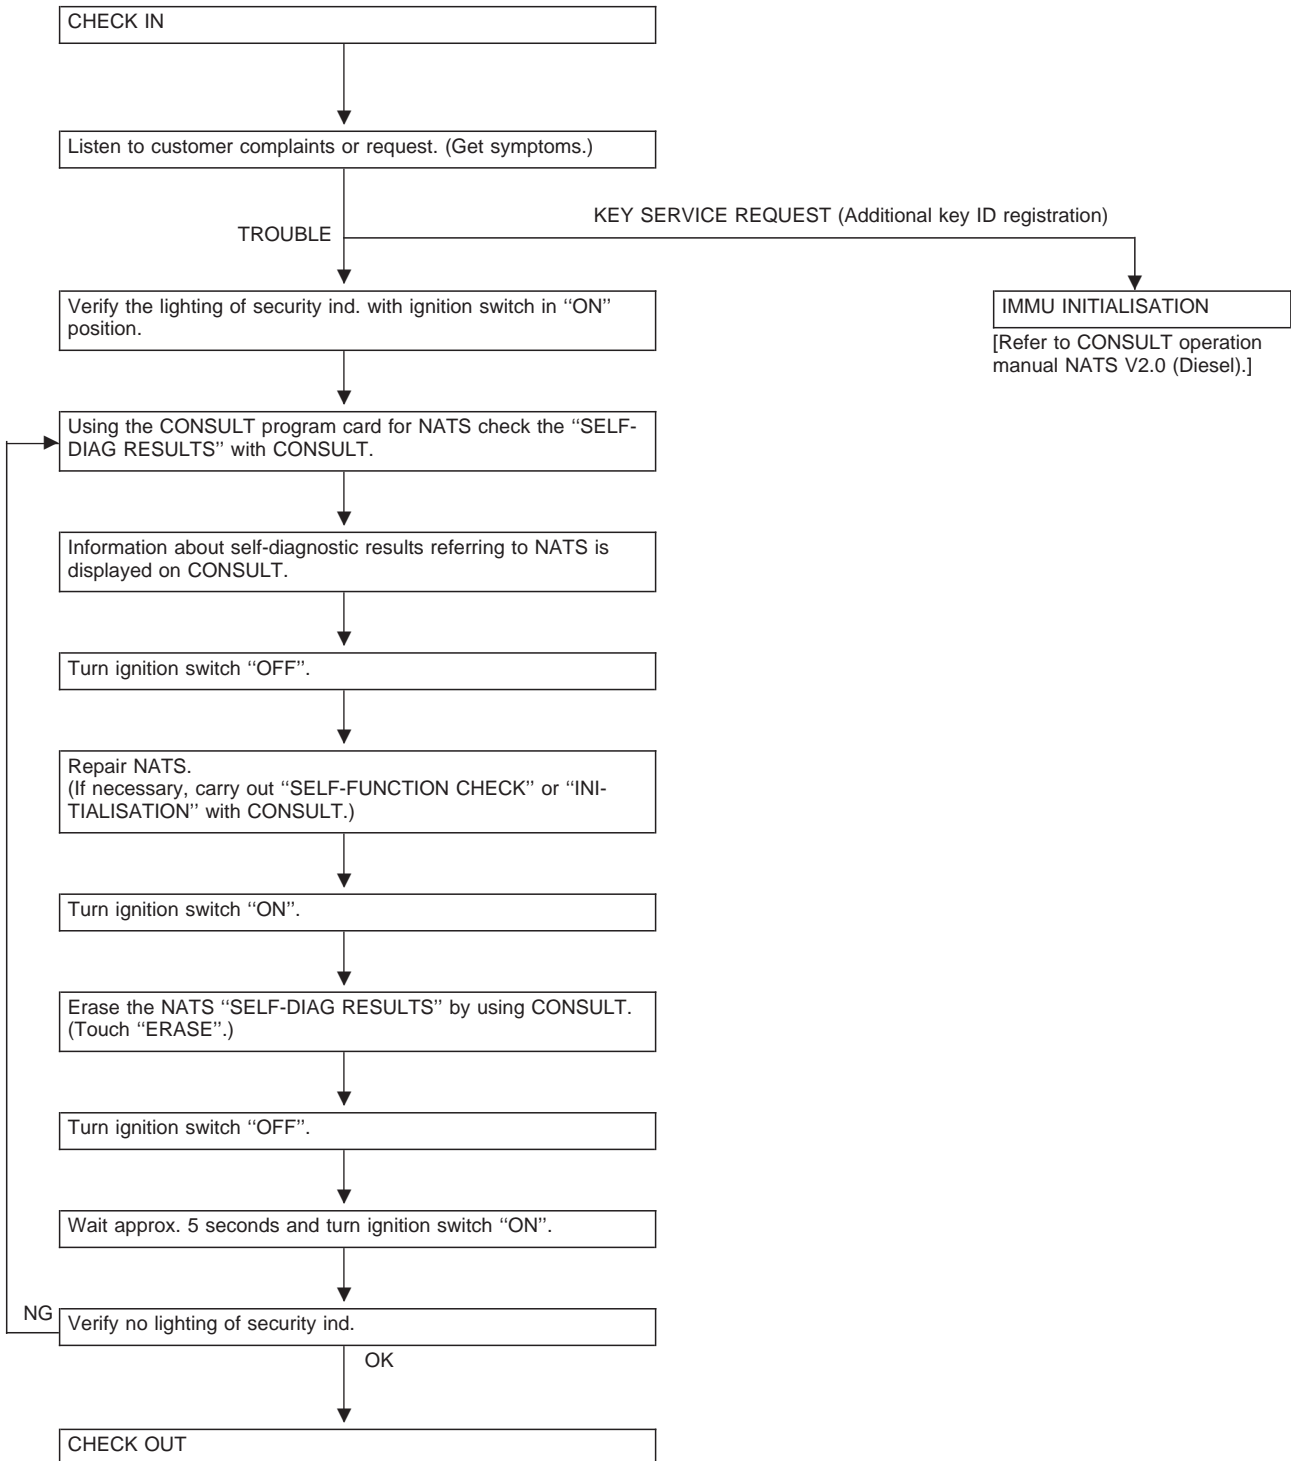



# NATS (Nissan Anti-Theft System)/Diesel engine

## Trouble Diagnoses (Cont'd)

### SYMPTOM CHART

Symptom	Displayed "SELF-DIAG RESULTS" on CONSULT screen	Diagnostic Procedure (Reference page)	System (Malfunctioning part or mode)
<ul style="list-style-type: none"> <li>● No lighting/lighting of security indicator with ignition switch in "ON" position</li> <li>● Hard to start engine</li> </ul>	IMMU	PROCEDURE 1 (EL-207)	IMMU
<ul style="list-style-type: none"> <li>● Lighting of security indicator with ignition switch in "ON" position</li> <li>● Hard to start engine</li> </ul>	CSOLU	PROCEDURE 2 (EL-207)	CSOLU
	CHAIN OF CSOLU-IMM	PROCEDURE 3 (EL-208)	Open circuit in ignition line of CSOLU
			Open circuit in ground line of CSOLU
			Open or short circuit in communication line between IMMU and CSOLU
KEY ID [NO INPUT]	PROCEDURE 5 (EL-211)	IMMU	
		CSOLU	
		Open or short circuit in communication line between ANT/AMP and IMMU	
		Open circuit in power source line of ANT/AMP circuit	
		Open circuit in ground of ANT/AMP circuit	
ID DISCORD, IMM-CSLU	PROCEDURE 6 (EL-213)	Malfunction of key ID chip	
		IMMU	
		Antenna amp.	
<ul style="list-style-type: none"> <li>● Hard to start engine</li> <li>● Lighting of security indicator with ignition switch in "ON" position (See note)</li> </ul>	KEY ID [DIFFERENCE]	PROCEDURE 4 (EL-210)	System initialisation has not yet been completed.
			CSOLU
			IMMU
<ul style="list-style-type: none"> <li>● Hard to start engine</li> <li>● No lighting of security indicator.</li> <li>● Impossible to proceed with the CONSULT diagnoses</li> </ul>	After touch "START", CONSULT screen displays "IMPOSSIBLE TO PROCEED".	PROCEDURE 7 (EL-214)	Unregistered key
			Open or short circuit in communication line between IMMU and CONSULT data link connector
			Open or short circuit in antenna amp. power source circuit between IMMU and antenna amp.
			Open circuit in power source line of IMMU circuit
			Open circuit in ignition line of IMMU circuit
			Open circuit in ground line of IMMU circuit
<ul style="list-style-type: none"> <li>● NATS security ind. does not blink with ignition switch in "OFF" or "ACC".</li> <li>● Engine starts properly.</li> </ul>	—	PROCEDURE 8 (EL-216)	IMMU
			NATS security ind.
			Open circuit between fuse and NATS IMMU
			Continuation of initialisation mode

NOTE: NATS security ind. may light off for 1 minute after ignition switch is turned to "OFF" position.


# NATS (Nissan Anti-Theft System)/Diesel engine

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE 1

#### Self-diagnostic results:

#### “IMMU” displayed on CONSULT screen

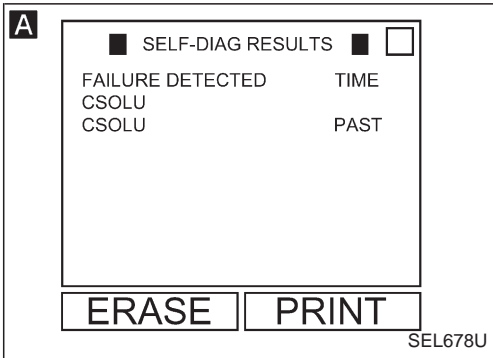


**A**



Confirm SELF-DIAGNOSTIC RESULTS “IMMU” displayed on CONSULT screen.



- IMMU is malfunctioning.
  1. Replace IMMU.
  2. Perform system initialisation with CONSULT.  
For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0 (Diesel)”.

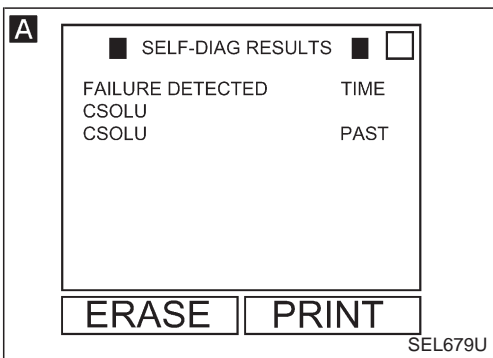

### DIAGNOSTIC PROCEDURE 2

#### Self-diagnostic results:

#### “CSOLU” displayed on CONSULT screen

**A**



Confirm SELF-DIAGNOSTIC RESULTS “CSOLU” displayed on CONSULT screen.



- CSOLU is malfunctioning.
  1. Replace CSOLU. (See NOTE.)
  2. Perform system initialisation with CONSULT.  
For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0 (Diesel)”.

#### NOTE:

When replacing CSOLU, it cannot be removed from injection pump assembly because of its anti-theft construction. The injection pump assembly should be removed complete with CSOLU, and a Link Service rebuilt unit (complete with CSOLU) installed in its place.









# NATS (Nissan Anti-Theft System)/Diesel engine

## Trouble Diagnoses (Cont'd)






### DIAGNOSTIC PROCEDURE 3

Self-diagnostic results:




**“CHAIN OF CSOLU-IMM” displayed on CONSULT screen**

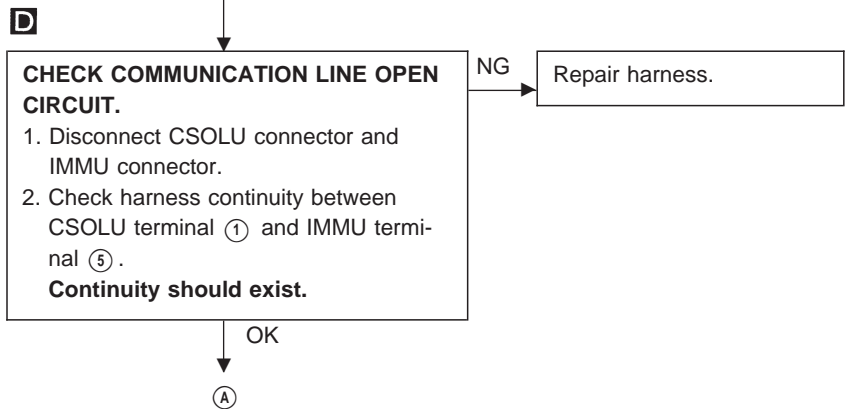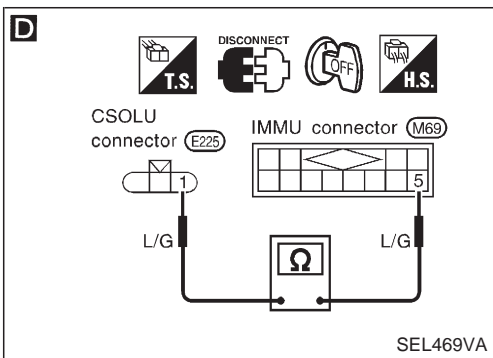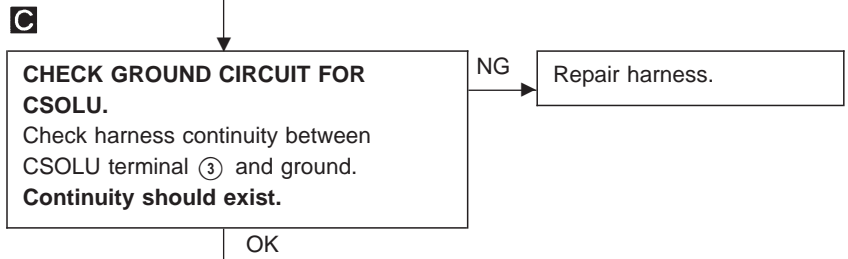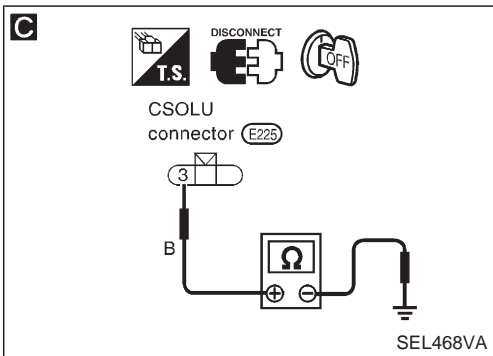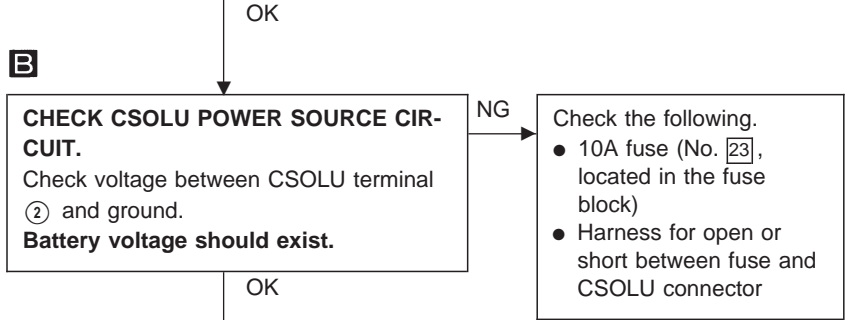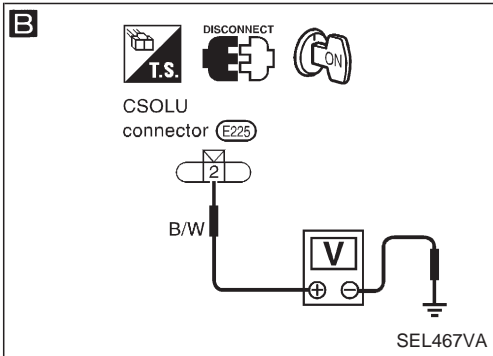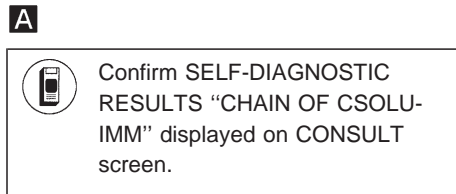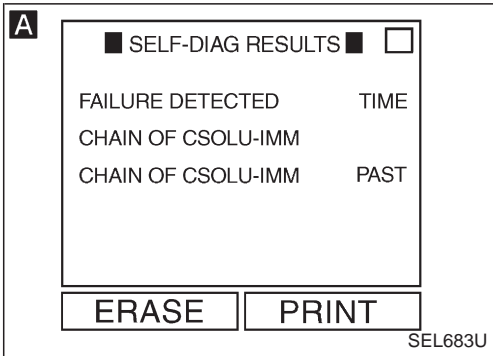

# NATS (Nissan Anti-Theft System)/Diesel engine Trouble Diagnoses (Cont'd)

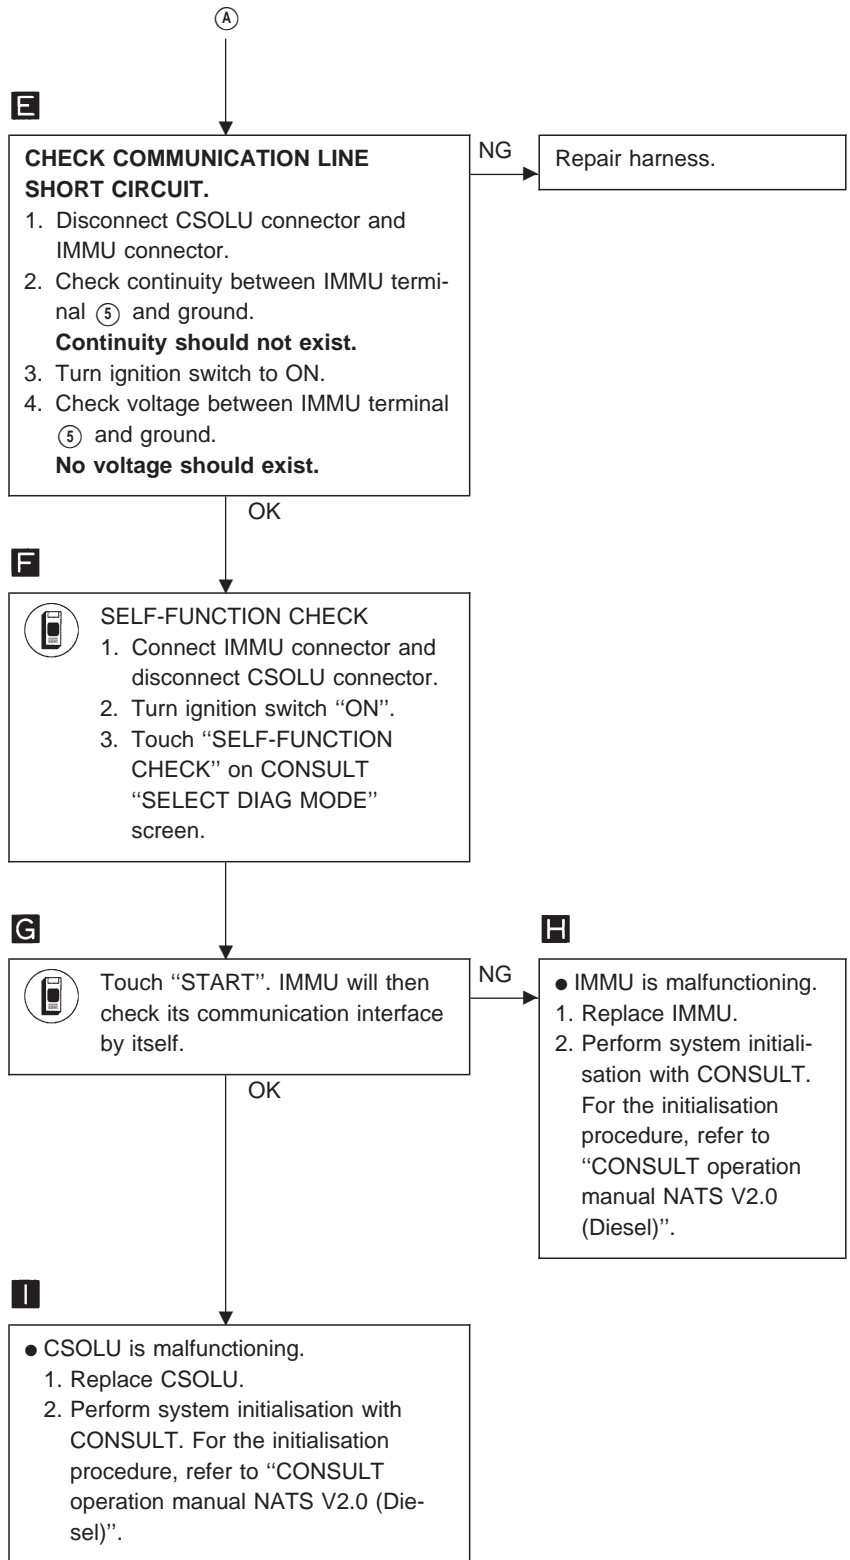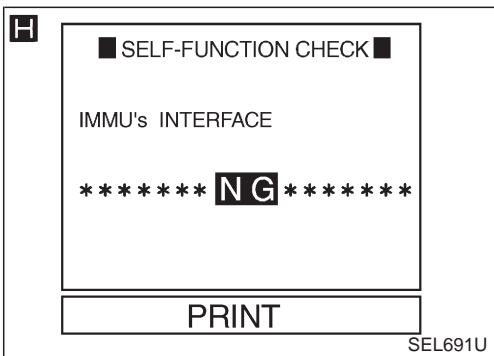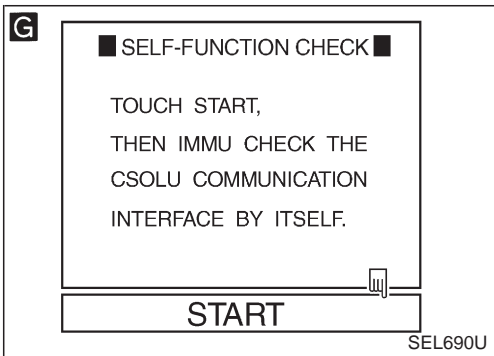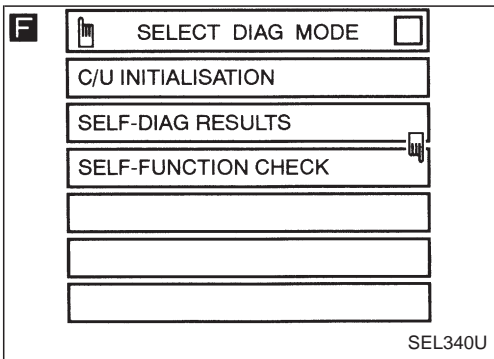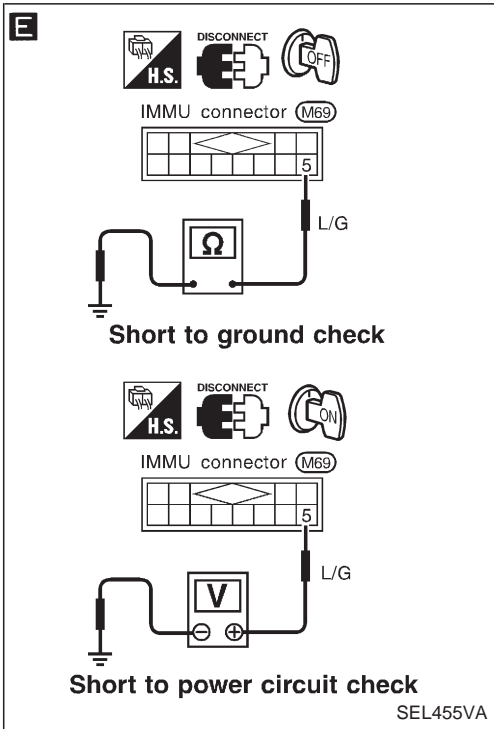

# NATS (Nissan Anti-Theft System)/Diesel engine Trouble Diagnoses (Cont'd)

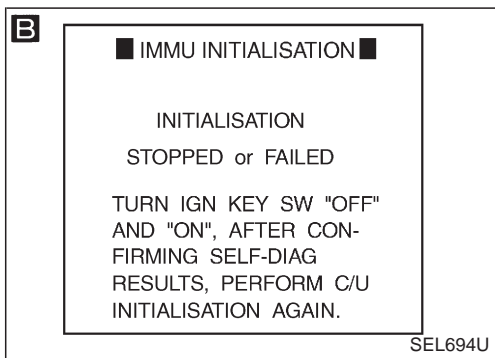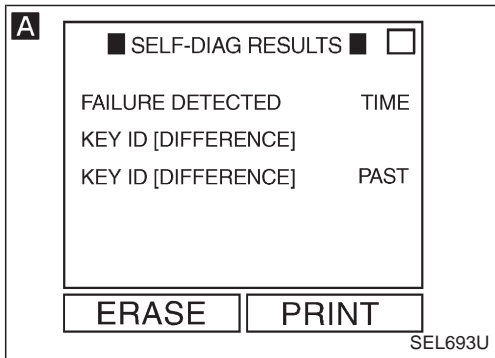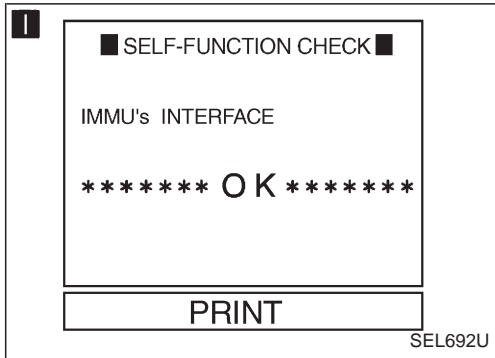

## DIAGNOSTIC PROCEDURE 4

### Self-diagnostic results:

**“KEY ID [DIFFERENCE]” displayed on CONSULT screen**

**A**

Confirm SELF-DIAGNOSTIC RESULTS “KEY ID [DIFFERENCE]” is displayed on CONSULT screen.

1. Turn the ignition switch to OFF position and wait 1 minute.  
(After 1 minute, security indicator will blink.)
  2. Turn the ignition key switch to ON position with a registered key.  
(Do not start engine.) Wait 5 seconds.
  3. Return the key to the OFF position.
  4. Repeat steps 2 and 3 twice (total of three cycles).
  5. Start the engine.
- Can the engine start?**

Yes → System is OK.

No

PERFORM IMMU INITIALISATION.  
Perform IMMU initialisation with CONSULT.  
For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0 (Diesel)”.

**Can the system be initialised?**  
Note: If the initialisation is incompleted or failed, CONSULT shows **B** message on the screen.

Yes → System is OK.

No

Go to DIAGNOSTIC PROCEDURE 5, EL-211 to check “KEY ID [NO INPUT]”.






# NATS (Nissan Anti-Theft System)/Diesel engine

## Trouble Diagnoses (Cont'd)


### DIAGNOSTIC PROCEDURE 5

#### Self-diagnostic results:

“KEY ID [NO INPUT]” displayed on CONSULT screen

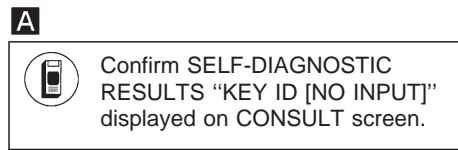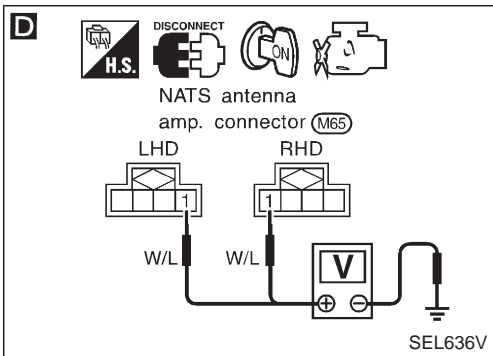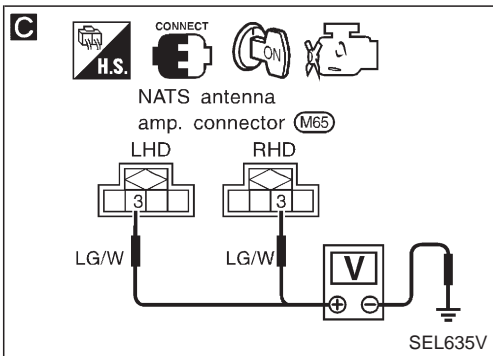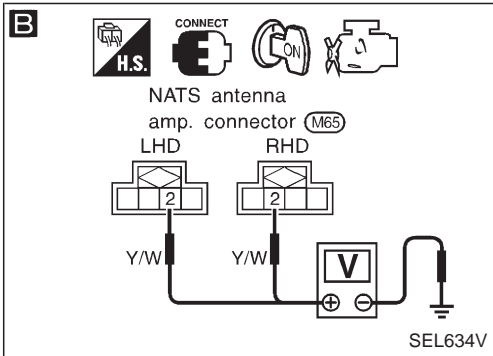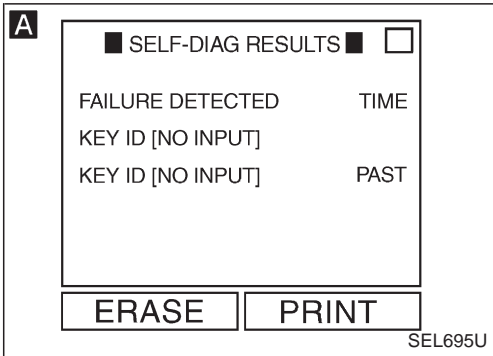

OK

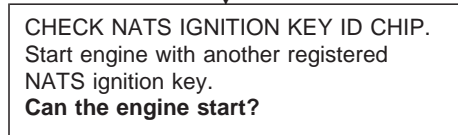


Yes

● Ignition key ID chip is malfunctioning.

1. Replace the ignition key.
2. Perform IMMU initialisation with CONSULT. For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0 (Diesel)”.


No

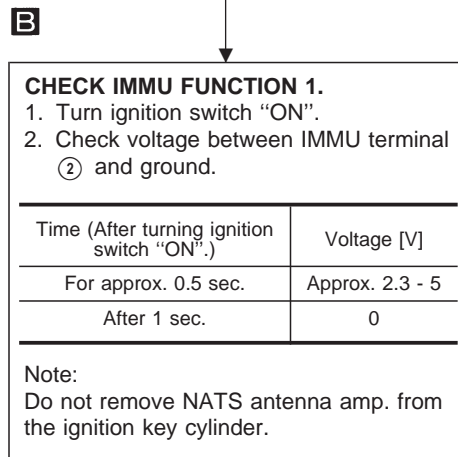

NG


Check harness for open or short between IMMU and NATS antenna amp. If harness is OK, replace IMMU. After replacing IMMU, perform system initialisation with CONSULT. For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0 (Diesel)”.

OK

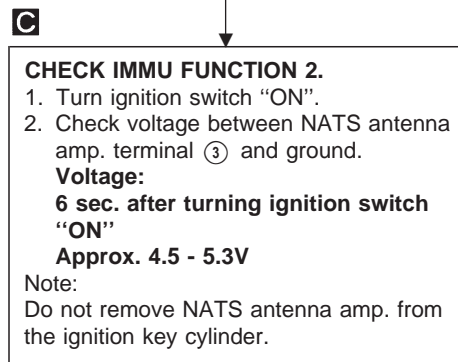

NG

OK

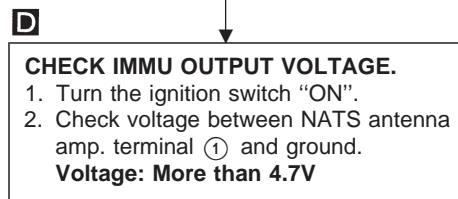


NG

OK

Ⓐ

## NATS (Nissan Anti-Theft System)/Diesel engine Trouble Diagnoses (Cont'd)

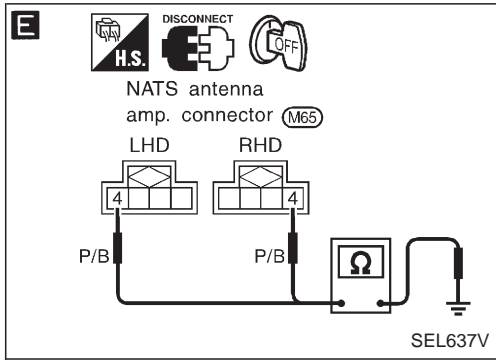

**E**

### CHECK ANTENNA AMP. GROUND LINE CIRCUIT.

1. Turn ignition switch "OFF".
2. Check continuity between NATS antenna amp. terminal ④ and ground.  
**Continuity should exist.**

NG

Check harness for open or short between NATS antenna amp. and IMMU. If harness is OK, replace IMMU. After replacing IMMU, perform system initialisation with CONSULT. For the initialisation procedure, refer to "CONSULT operation manual NATS V2.0 (Diesel)".

OK

NATS antenna amp. is malfunctioning. When replacing the amp. hold on to amp. body. Take care not to pull on amp. harness.

# NATS (Nissan Anti-Theft System)/Diesel engine

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE 6

#### Self-diagnostic results:

#### “ID DSCORD, IMM-CSLU” displayed on CONSULT screen

**A**

■ SELF-DIAG RESULTS ■	
FAILURE DETECTED	TIME
ID DSCORD, IMM-CSLU	
ID DSCORD, IMM-CSLU	PAST

ERASE PRINT

SEL696U

**B**

■ SYSTEM INITIALISATION ■

CONSULT CAN NOT PERFORM INITIALISATION IN THIS CONDITION.

TURN THE IGN KEY SW "OFF" AND "ON", THEN OPERATE SYSTEM INITIALISATION PROMPTLY.

SEL698U

**C**

■ SYSTEM INITIALISATION ■

INITIALISATION STOPPED or FAILED

TURN IGN KEY SW "OFF" AND "ON", AFTER CONFIRMING SELF-DIAG RESULTS, PERFORM C/U INITIALISATION AGAIN.

SEL697U

**D**

■ SELF-DIAG RESULTS ■	
FAILURE DETECTED	TIME
CSOLU	
CSOLU	PAST

ERASE PRINT


SEL678U

**E**

■ SELF-DIAG RESULTS ■	
FAILURE DETECTED	TIME
CSOLU	
CSOLU	PAST

ERASE PRINT

SEL679U

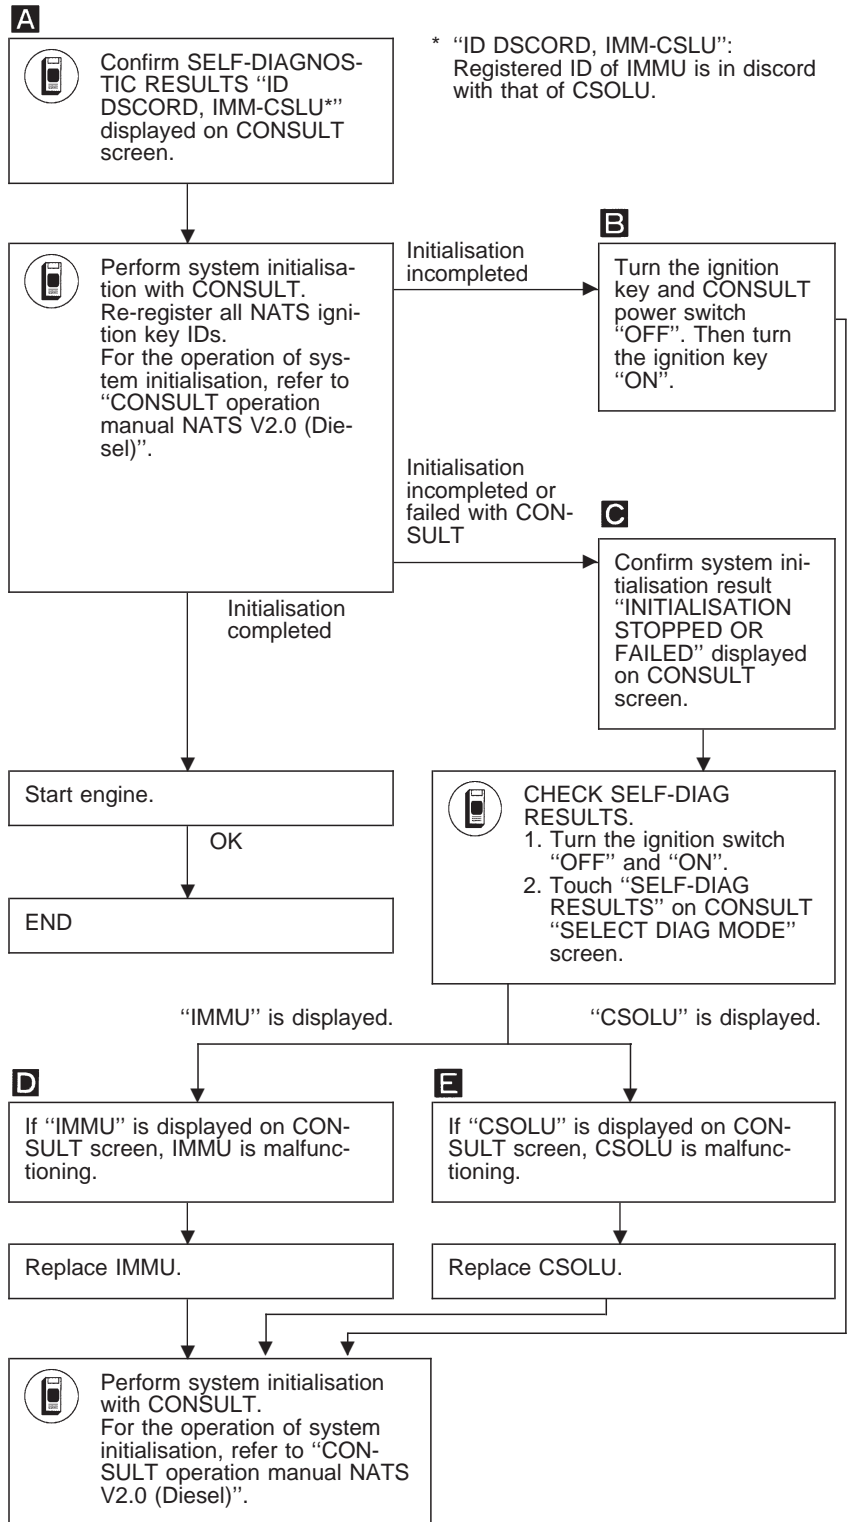



# NATS (Nissan Anti-Theft System)/Diesel engine

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE 7

#### Self-diagnostic results:

**“IMPOSSIBLE TO PROCEED” displayed on CONSULT screen**

**A**

**IMPOSSIBLE TO PROCEED**

1. Turn off both IGN KEY SW and CONSULT.

2. Try to start from the beginning again.

SEL719U

**B**

DISCONNECT H.S. OFF T.S.

IMMU connector (M69) Data link connector for CONSULT

L/G LG/B L/G LG/B

SEL470VA

**C**

DISCONNECT H.S. OFF

IMMU connector (M69)

L/G LG/B

**Short to ground check**

DISCONNECT H.S. ON

IMMU connector (M69)

L/G LG/B

**Short to power circuit check**

SEL471VA

**D**

DISCONNECT H.S. ON

NATS antenna amp. connector (M65)

LHD RHD

W/L W/L

SEL636V

**A**

**CHECK CONSULT SCREEN.**

1. Touch “V.2.0 (DIESEL)” on “SELECT NATS SYSTEM” screen.
2. Confirm “IMPOSSIBLE TO PROCEED” displayed on CONSULT screen.

**B**

**CHECK OPEN CIRCUIT BETWEEN IMMU AND CONSULT.**

1. Disconnect IMMU connector and CONSULT from data link connector.

2. Check continuity between the following IMMU terminals and data link connector terminals.

IMMU terminal	Data link connector terminal	Continuity
⑦	⑬	Yes
⑥	⑭	Yes

**C**

**CHECK SHORT CIRCUIT BETWEEN IMMU AND CONSULT.**

1. Disconnect IMMU connector and CONSULT from data link connector.
2. Check continuity between IMMU connector terminal ⑥, ⑦ and ground. **Continuity should not exist.**
3. Turn ignition switch to ON.
4. Check voltage between IMMU terminal ⑥, ⑦ and ground. **No voltage should exist.**







**D**

**CHECK NATS ANTENNA AMP. POWER SOURCE CIRCUIT.**

1. Disconnect NATS antenna amp. connector.
2. Turn ignition switch “ON”.
3. Check voltage between antenna amp. terminal ① and ground. **Voltage: More than 4.7V**

OK

# NATS (Nissan Anti-Theft System)/Diesel engine Trouble Diagnoses (Cont'd)

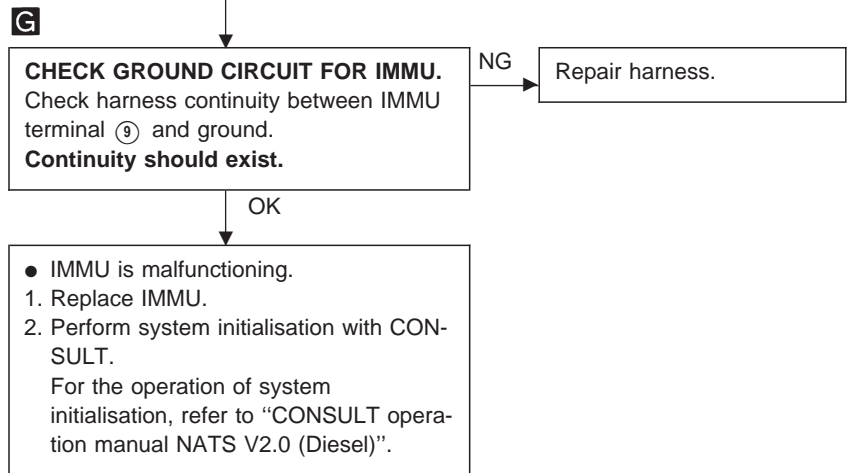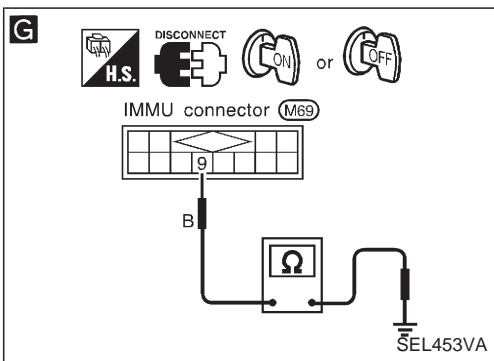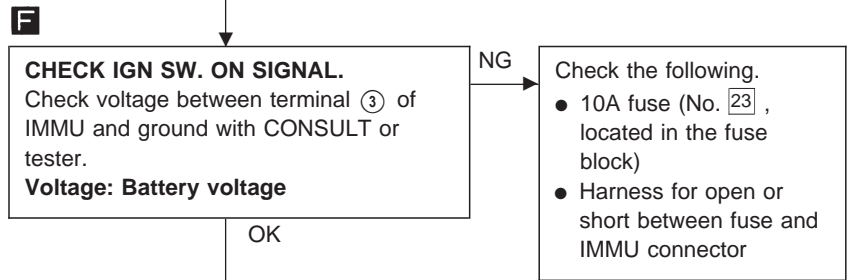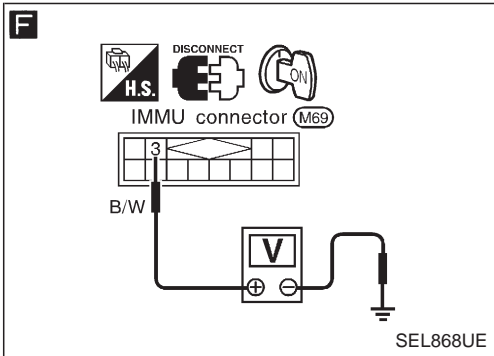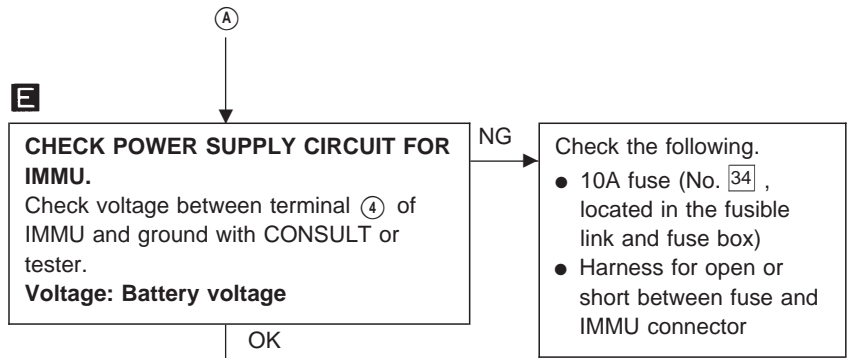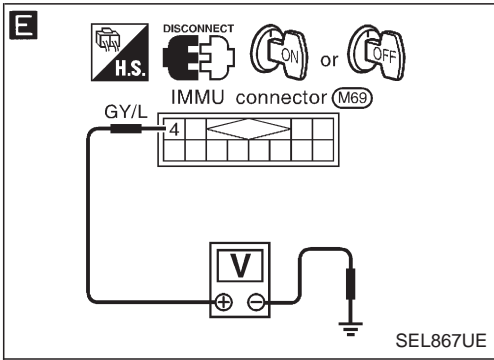


# NATS (Nissan Anti-Theft System)/Diesel engine

## Trouble Diagnoses (Cont'd)

### DIAGNOSTIC PROCEDURE 8

#### “NATS SECURITY IND. DOES NOT LIGHT UP”

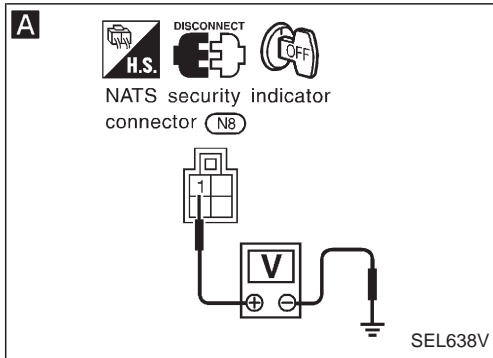

**A**

**CHECK INDICATOR POWER SUPPLY CIRCUIT.**  
Check voltage between security indicator terminal ① and ground.  
**Battery voltage should exist.**

NG

Check the following.

- 7.5A fuse (No. 6, located in the fuse block)
- Harness for open or short between fuse and security indicator

OK

Check security indicator.

NG

Replace security indicator.

OK

**PERFORM INITIALISATION.**  
Perform IMMU initialisation with CONSULT.  
For the initialisation procedure, refer to “CONSULT operation manual NATS V2.0 (Diesel)”.  
**Does security indicator operate after initialisation has completed?**

No


Check harness for open or short between NATS IMMU and security indicator.

Yes


END

# LOCATION OF ELECTRICAL UNITS

## Engine Compartment

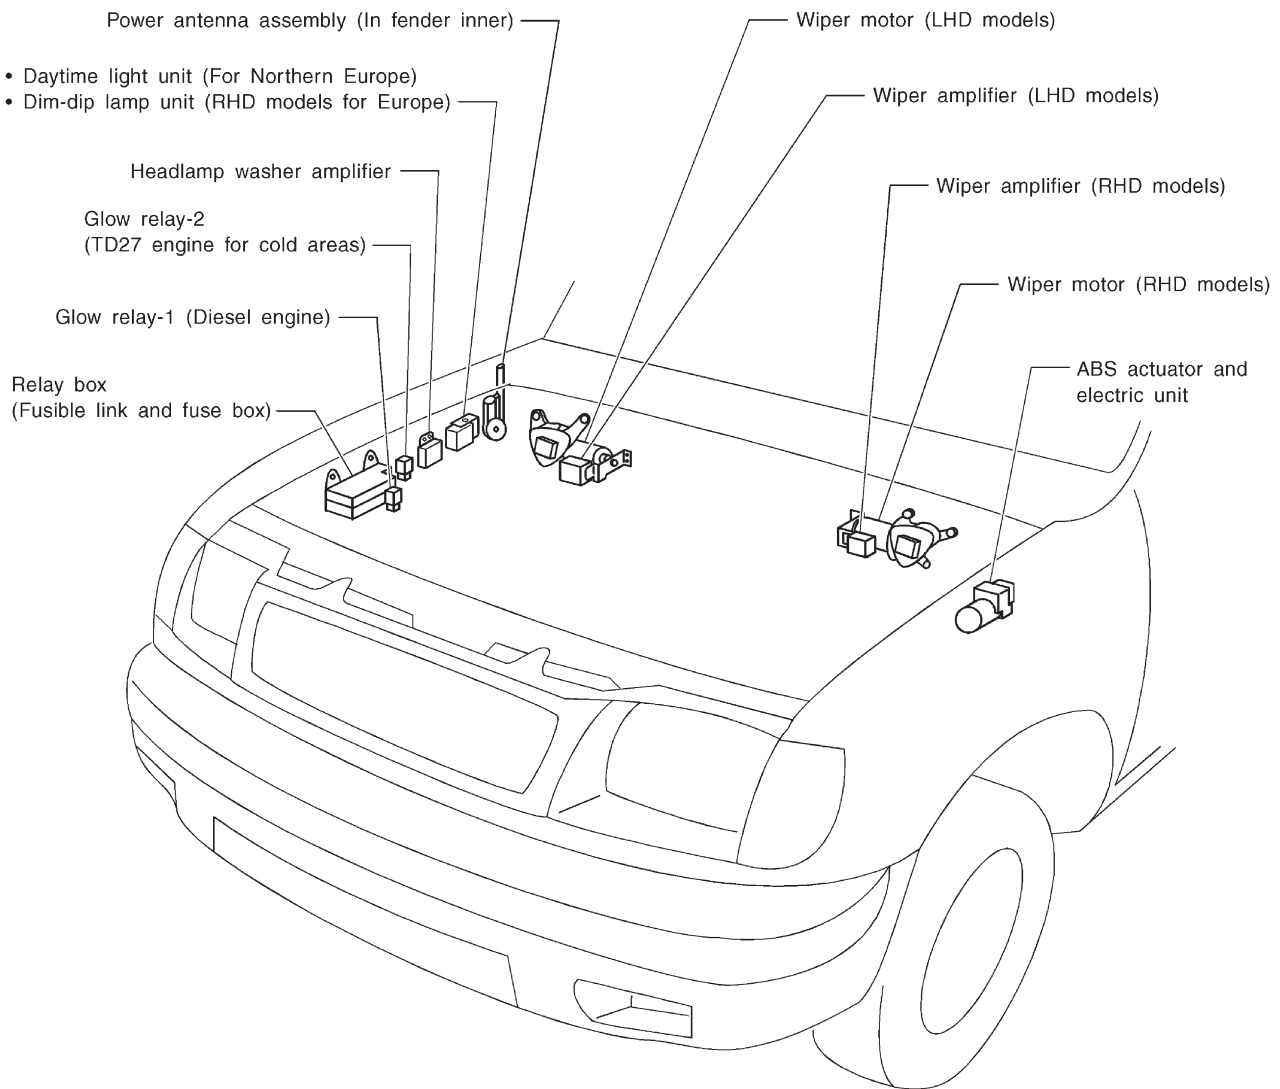


## RELAY BOX

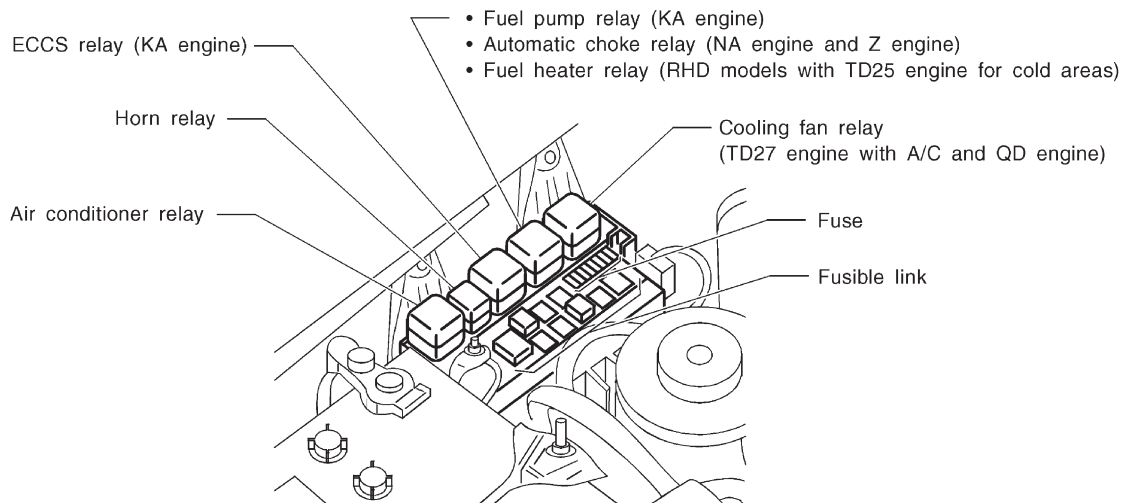

# LOCATION OF ELECTRICAL UNITS

## Passenger Compartment


### LHD MODELS

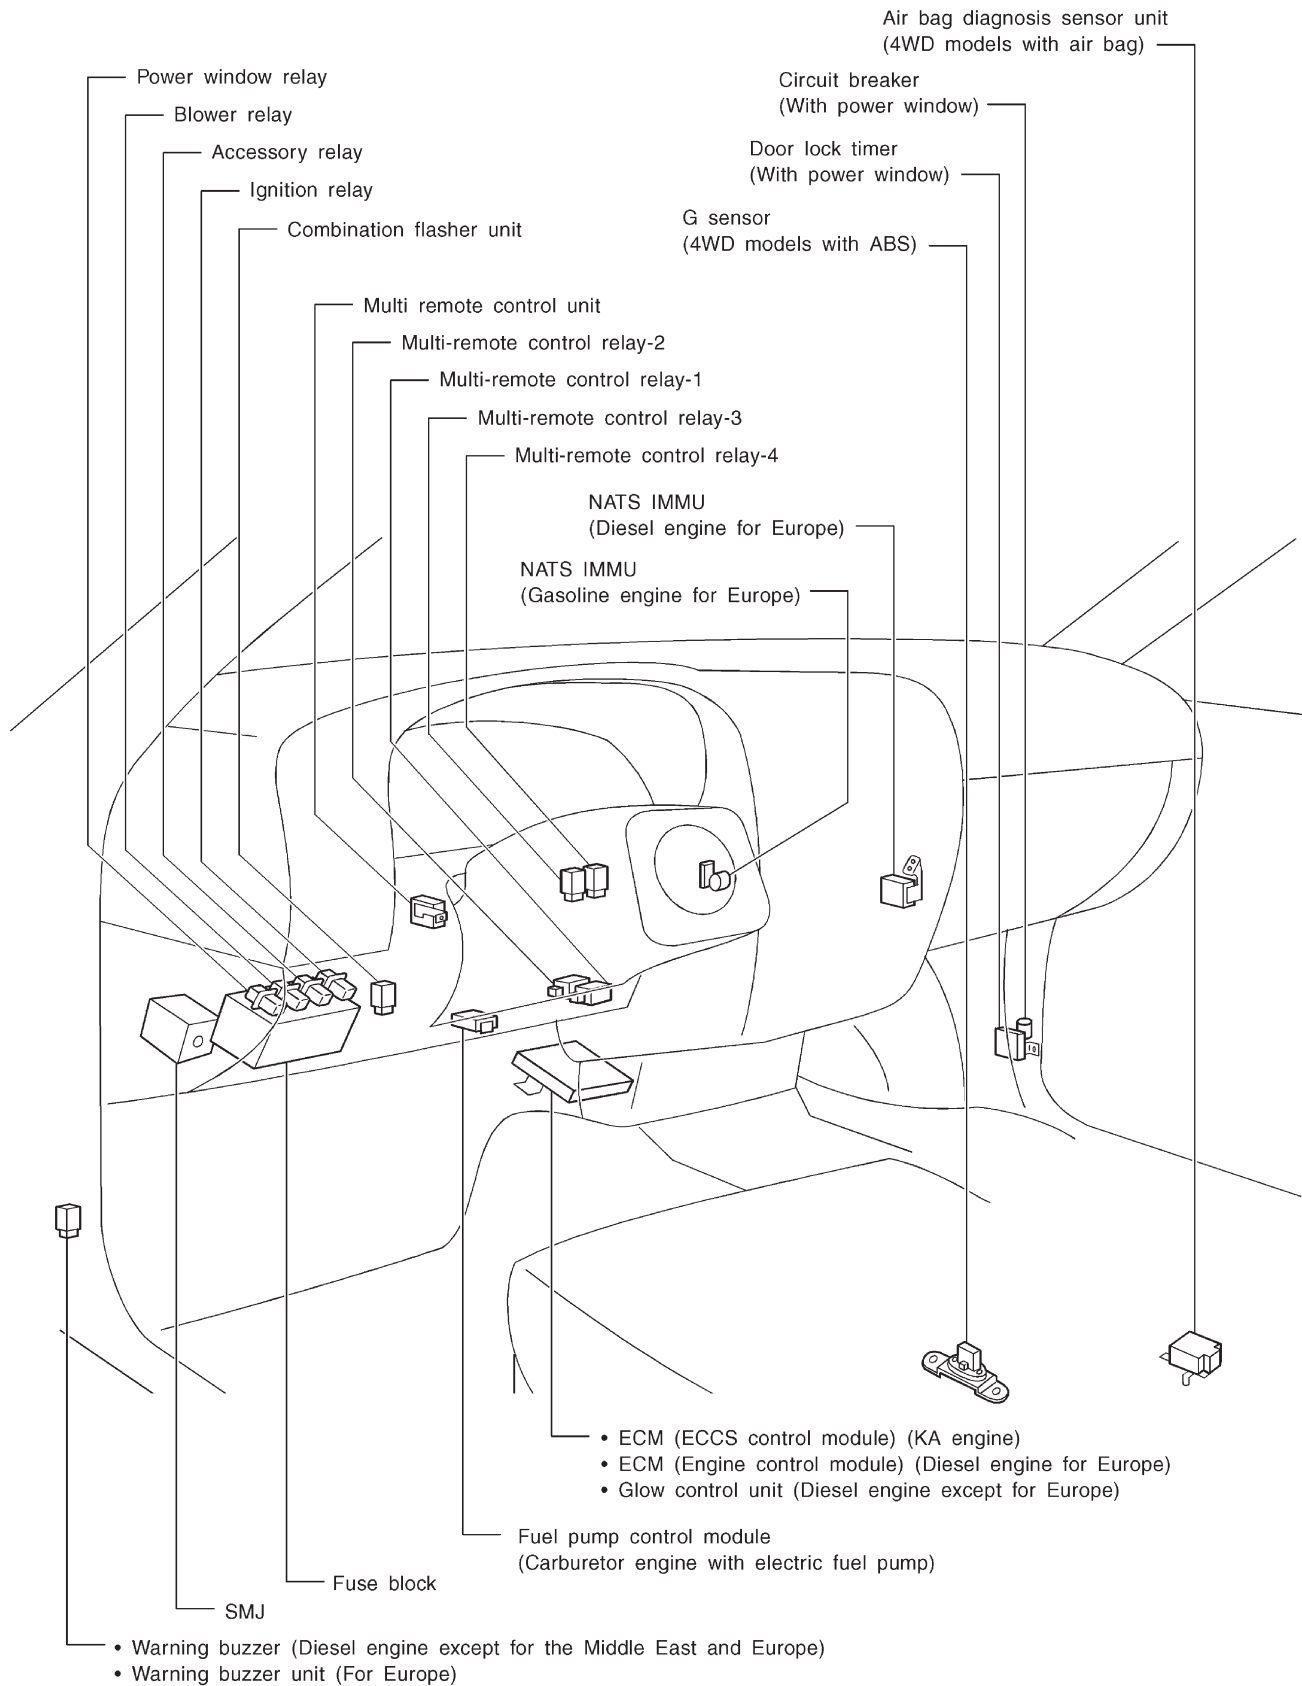

# LOCATION OF ELECTRICAL UNITS

## Passenger Compartment (Cont'd)

RHD MODELS

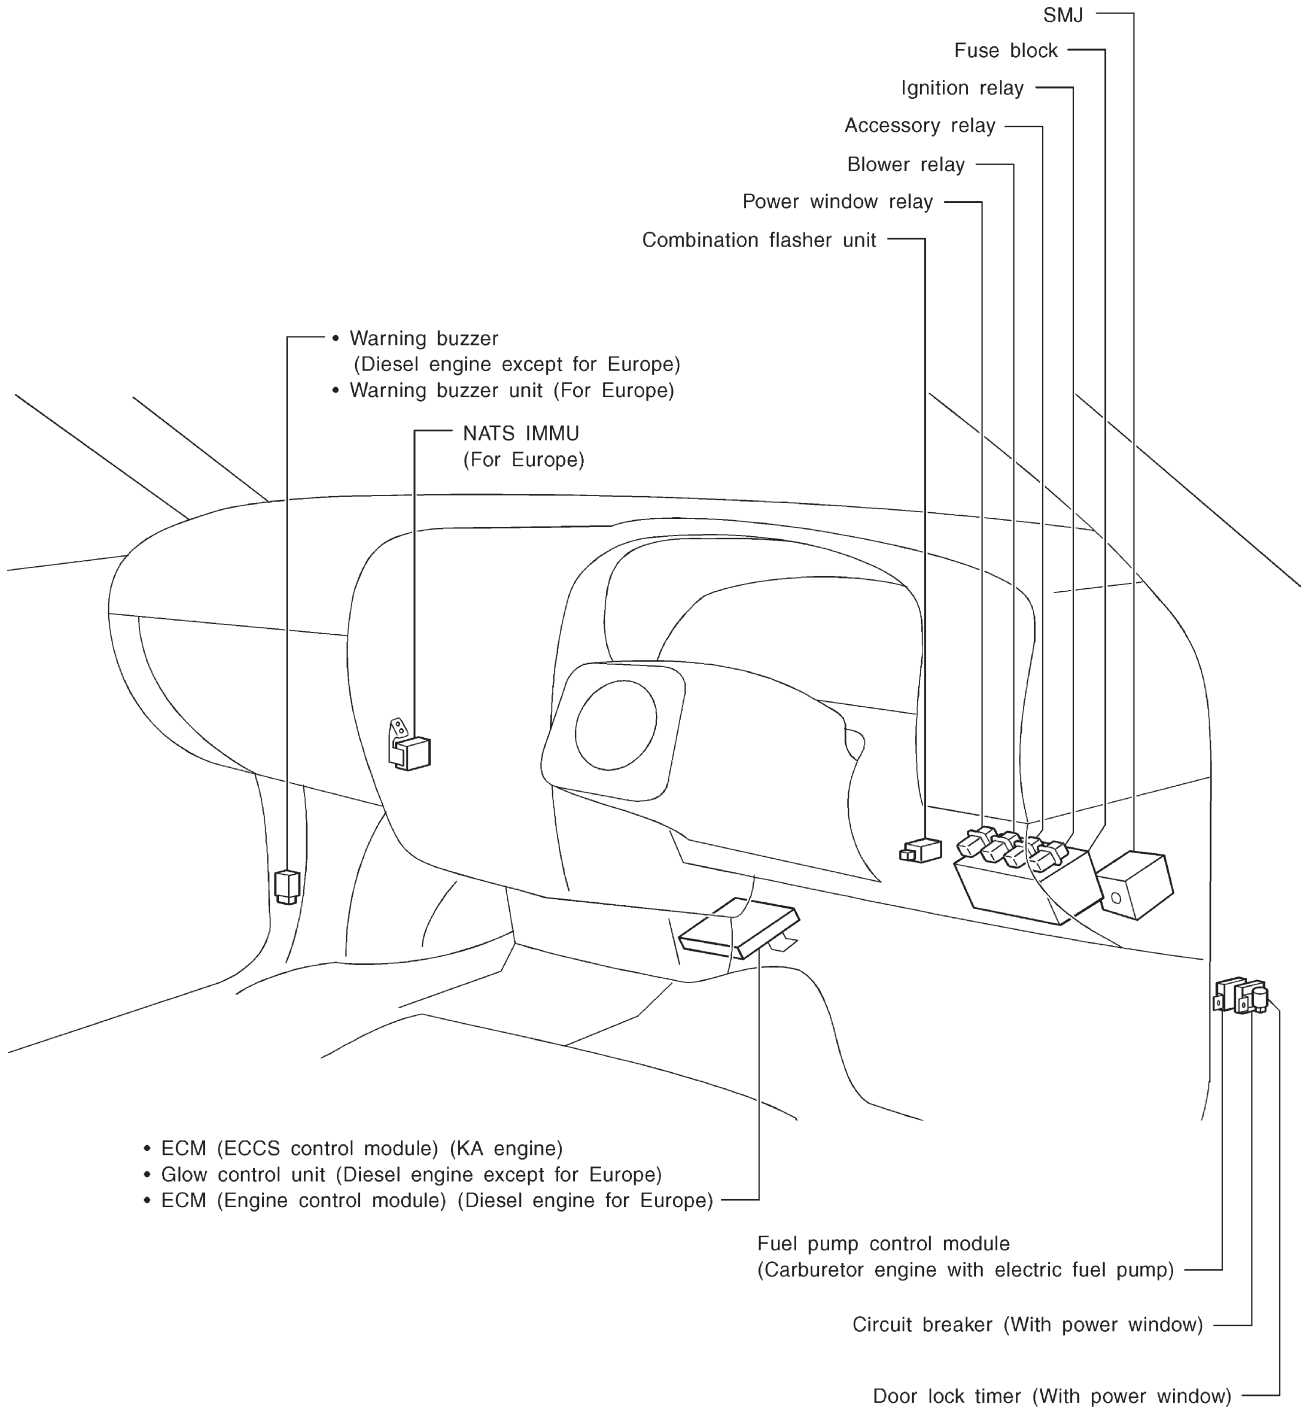


HEL393A


# HARNESS LAYOUT

## LHD MODELS

### Outline

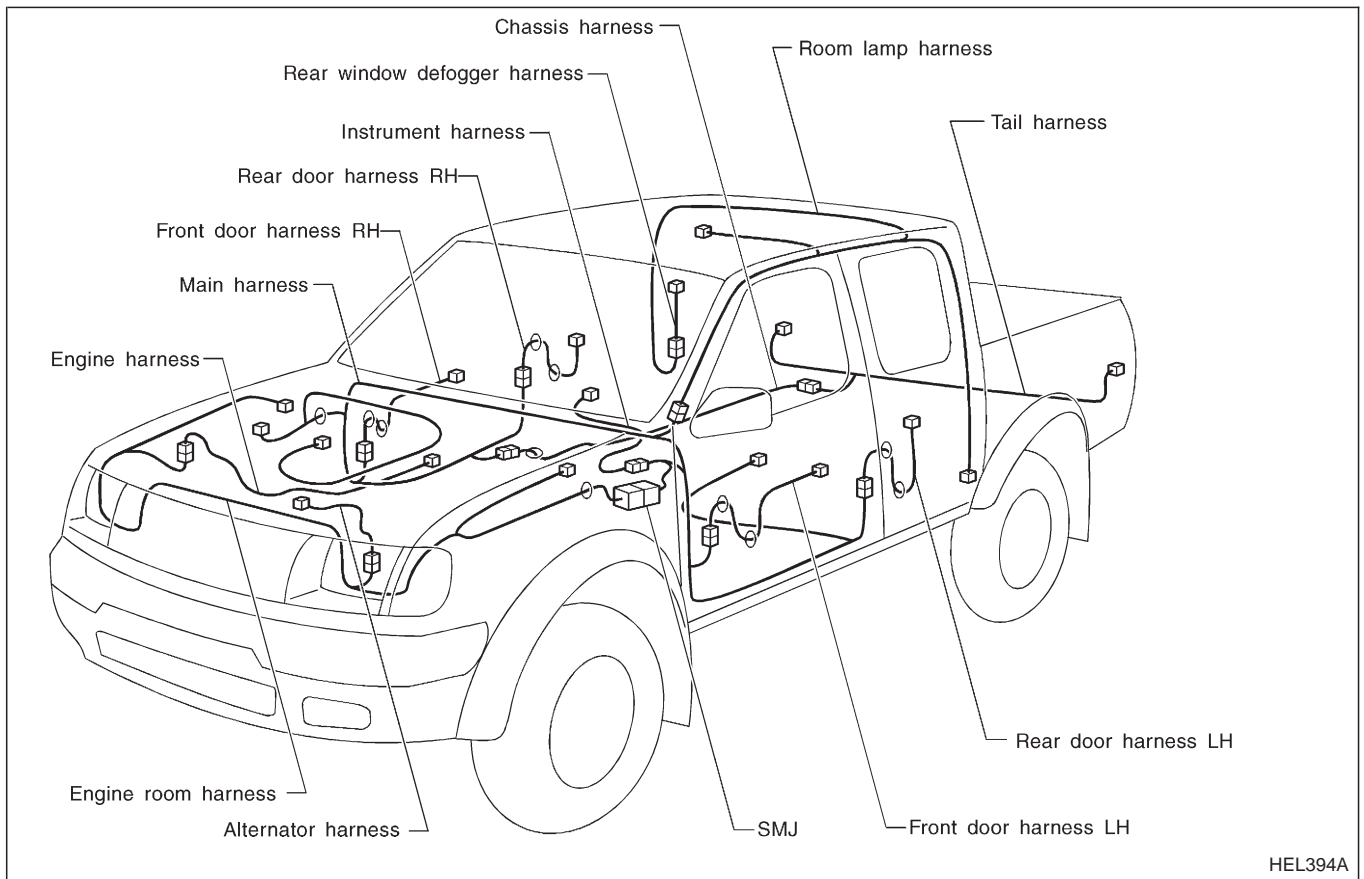

## RHD MODELS

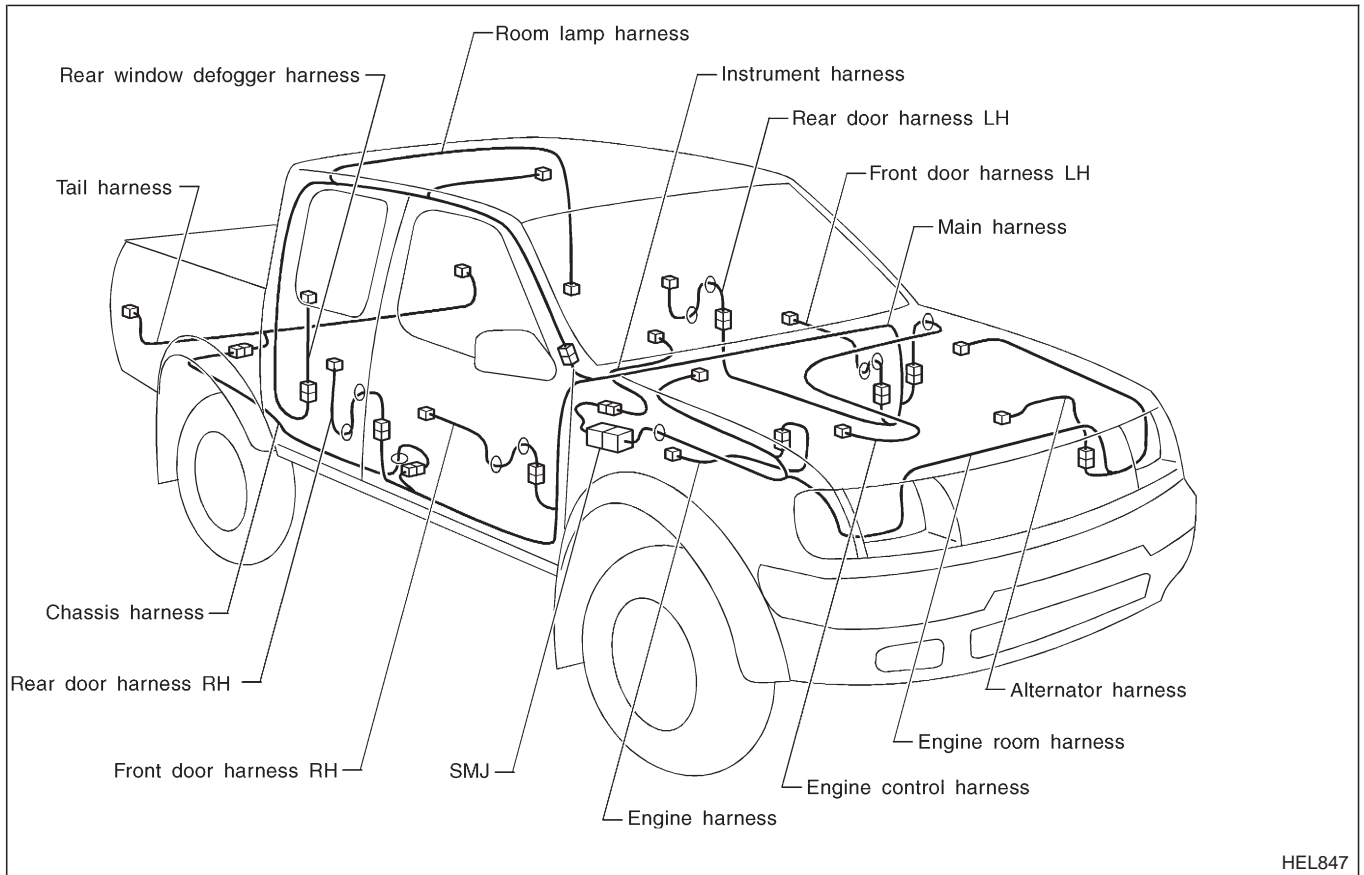






# HARNESS LAYOUT

## Main Harness

### INSTRUMENT PANEL — LHD MODELS FOR EUROPE

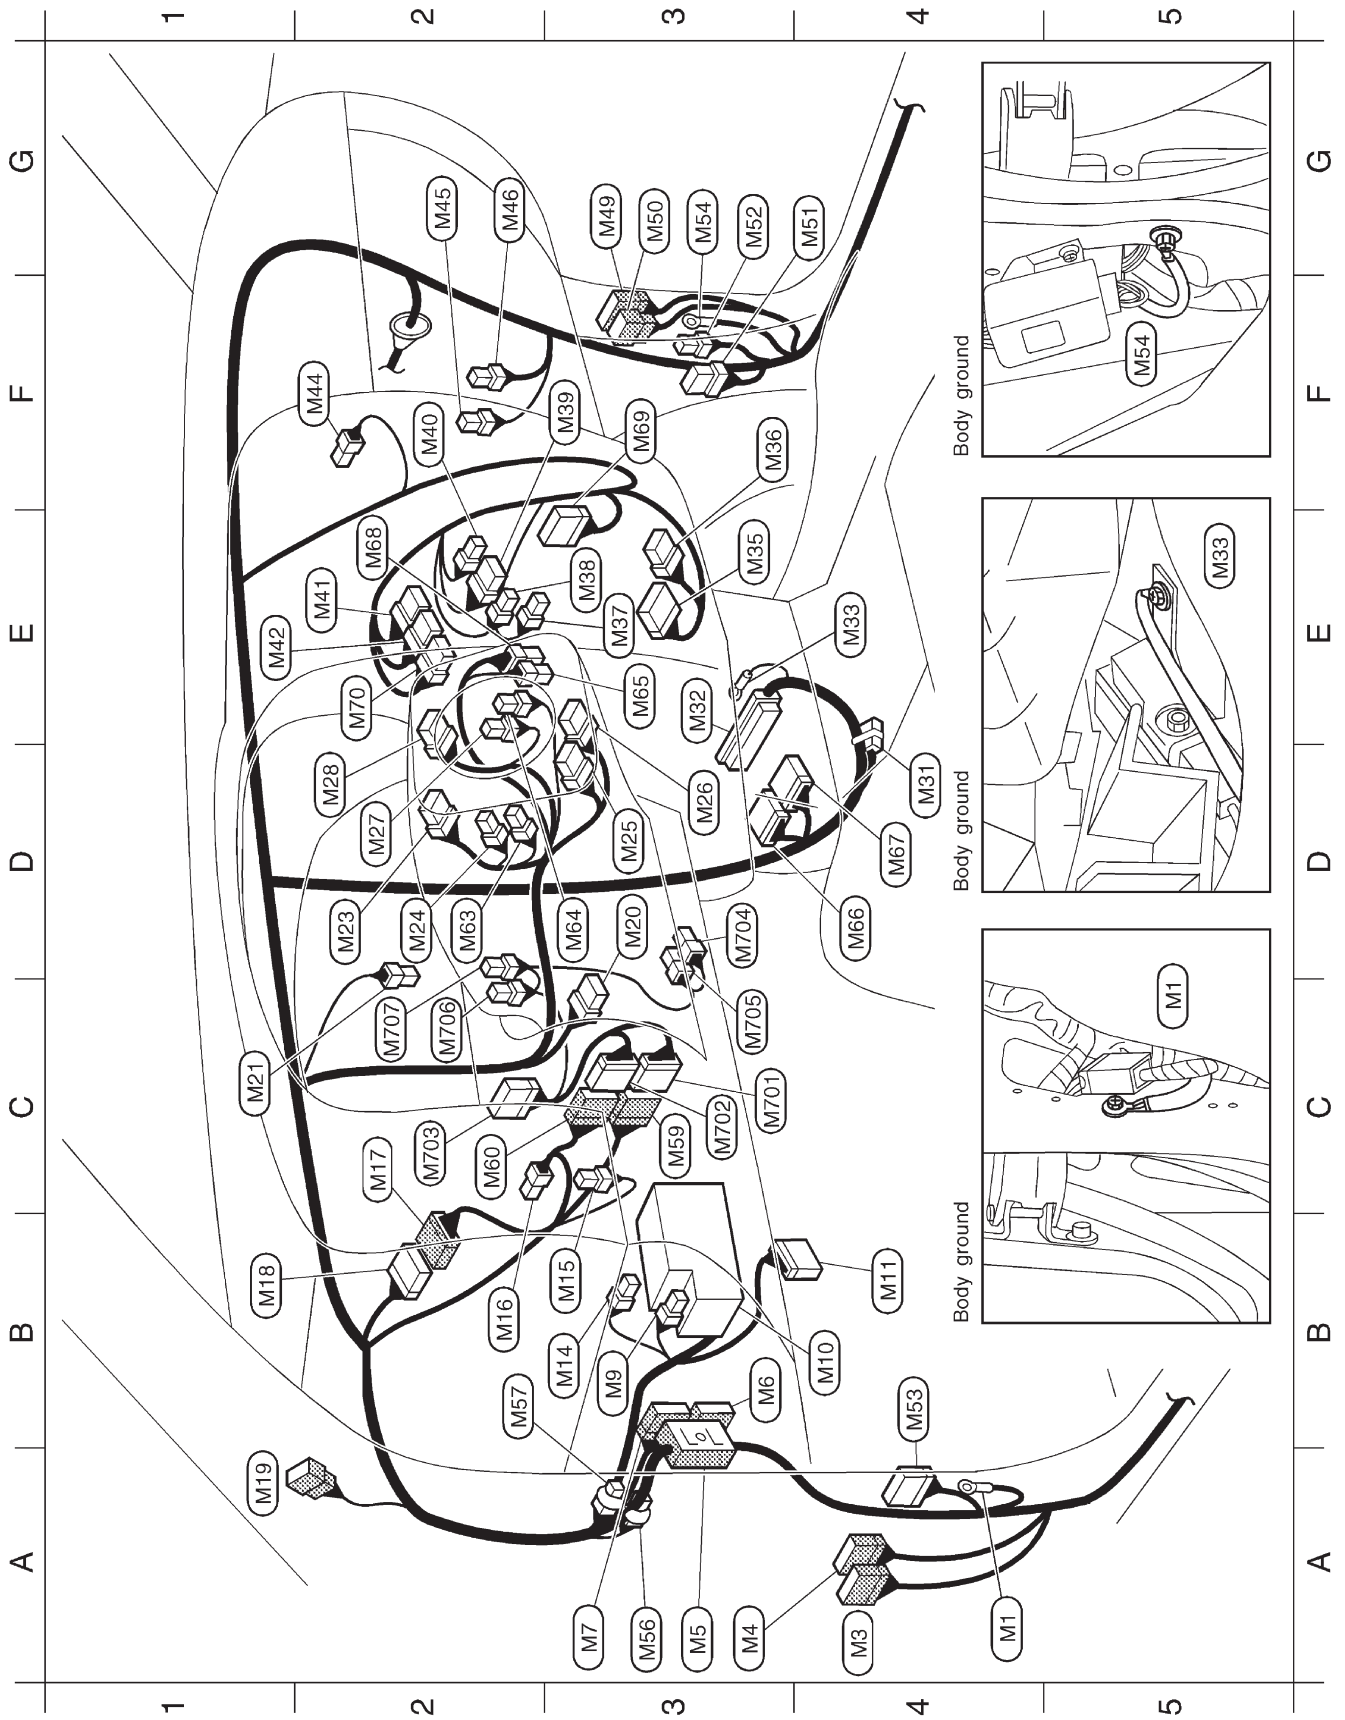


# HARNESS LAYOUT

## Main Harness (Cont'd)

G4 (M51)	W/8	: Door lock timer
G3 (M52)	W/2	: Circuit breaker
B4 (M53)	B/12	: Warning buzzer unit
G3 (M54)	—	: Body ground
A3 (M56)	-/2	: Diode (For multi-remote control system)
B2 (M57)	-/2	: Diode (For multi-remote control system)
C3 (M59)	BR/10	: To (M701) (4WD models)
C2 (M60)	W/12	: To (M702) or jumping connector (4WD models)
D2 (M63)	W/3	: Rear fog lamp switch
D3 (M64)	W/2	: Key switch
E3 (M65)	W/4	: NATS antenna amp. (TD engine)
D4 (M66)	GY/20	: ECM (Engine control module) (TD engine)
D4 (M67)	GY/16	: ECM (Engine control module) (TD engine)
E2 (M68)	W/8	: NATS IMM (KA engine)
F3 (M69)	W/12	: NATS IMM (TD engine)
E2 (M70)	L/8	: Headlamp washer switch

### Sub-harness (For multi-remote control system)

C3 (M701)	BR/10	: To (M59)
C3 (M702)	W/12	: To (M60)
C2 (M703)	W/12	: Multi-remote control unit
D3 (M704)	B/5	: Multi-remote control relay-1
C3 (M705)	BR/6	: Multi-remote control relay-2
C2 (M706)	B/5	: Multi-remote control relay-3
C2 (M707)	B/5	: Multi-remote control relay-4

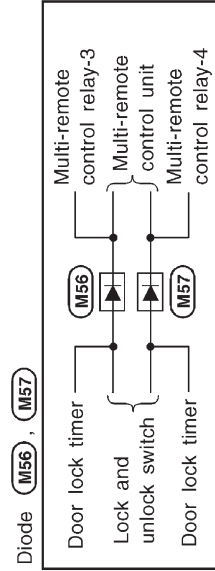


A4 (M1)	—	: Body ground
A4 (M3)	W/12	: To (D1)
A3 (M4)	W/12	: To (D2)
A3 (M5)	SMJ	: To (E101)
B3 (M6)	W/24	: To (N1)
A3 (M7)	W/20	: To (N2)
B3 (M9)	L/4	: Power window relay
B4 (M10)	—	: Fuse block
B4 (M11)	GY/14	: Data link connector for CONSULT
B3 (M14)	W/3	: Fuse block
B3 (M15)	B/3	: Combination flasher unit
B2 (M16)	B/2	: Stop lamp switch
C2 (M17)	Y/12	: To (M18) (4WD models with air bag)
B1 (M18)	Y/12	: To (M17) (4WD models with air bag)
A1 (M19)	W/6	: To (RT)
D3 (M20)	W/6	: Ignition switch
C1 (M21)	W/1	: Parking brake switch (Stick type)
D2 (M23)	BR/8	: Lighting switch • Turn signal lamp switch
D2 (M24)	BR/4	: Lighting switch
D3 (M25)	Y/6	: Spiral cable (4WD models with air bag)
D3 (M26)	W/6	: Spiral cable (2WD models with air bag)
D2 (M27)	B/1	: Horn switch
D2 (M28)	GY/8	: Wiper and washer switch
D4 (M31)	GY/6	: Joint connector (KA engine)
E3 (M32)	W/64	: ECM (ECCS control module) (KA engine)
E4 (M33)	—	: Body ground (KA engine)
E3 (M35)	W/10	: Radio
F3 (M36)	W/6	: Radio (Models with 4-speakers and KA engine for Europe)
E3 (M37)	B/2	: Cigarette lighter
E3 (M38)	W/3	: A/C switch
F3 (M39)	W/6	: Fan switch
F2 (M40)	W/2	: Fan switch illumination
E2 (M41)	W/8	: Hazard switch
E1 (M42)	W/6	: Rear window defogger switch
F2 (M44)	BR/4	: Thermo control amplifier
G2 (M45)	BR/4	: Fan resistor
G2 (M46)	W/2	: Blower motor
G3 (M49)	W/12	: To (D31)
G3 (M50)	W/6	: To (D32)

# HARNESS LAYOUT

## Main Harness (Cont'd)

### INSTRUMENT PANEL — RHD MODELS

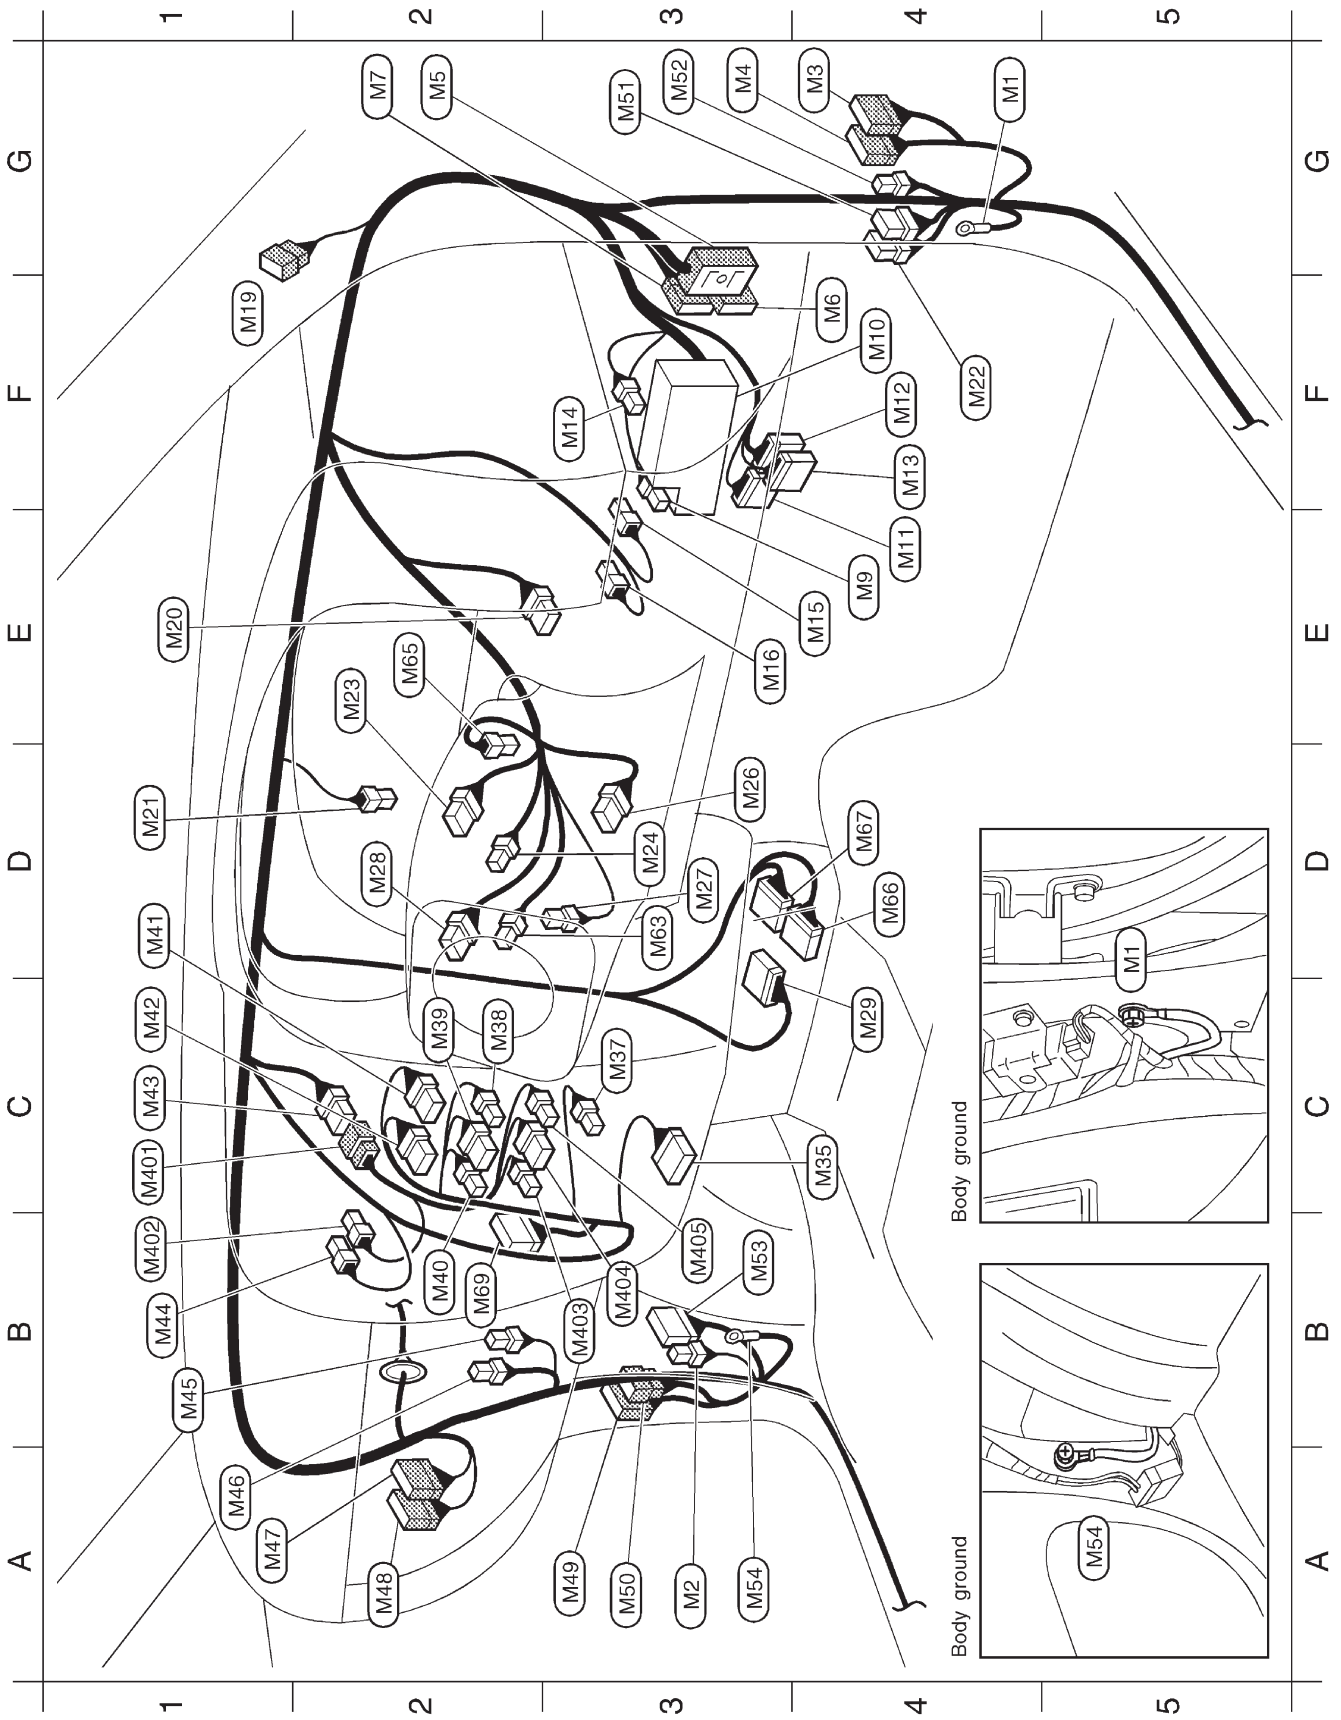


# HARNESS LAYOUT

## Main Harness (Cont'd)

A3 (M50) W/6 : To (D32) (With power window)  
 G3 (M51) W/8 : Door lock timer (Double cab ST grade)  
 G3 (M52) W/2 : Circuit breaker (Double cab ST grade)  
 B3 (M53) B/12 : Warning buzzer unit (For Europe)  
 A3 (M54) — : Body ground  
 D3 (M63) W/3 : Rear fog lamp switch (For Europe)  
 E2 (M65) W/4 : NATS antenna amp. (For Europe)  
 D4 (M66) GY/20 : ECM (Engine control module)(Diesel engine for Europe)  
 D4 (M67) GY/16 : ECM (Engine control module)(Diesel engine for Europe)  
 B2 (M69) W/12 : NATS IMMU (For Europe)

### Engine compartment

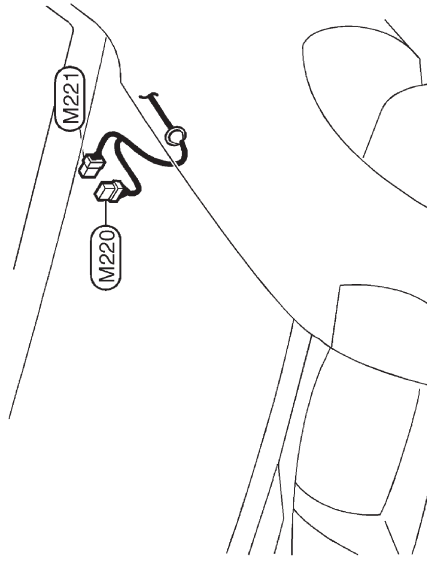

(M220) GY/8 : Wiper amplifier or jumping connector  
 (Diesel engine models for Europe and Australia)  
 (M221) W/6 : Wiper motor (Except KA engine)

### Sub-harness (Except for Europe and Australia)


C1 (M401) B/8 : To (M43)  
 B1 (M402) BR/4 : Thermo control amplifier (Models with A/C)  
 B3 (M403) W/2 : Fan switch illumination  
 B3 (M404) W/6 : Fan switch  
 B3 (M405) W/3 : A/C switch (Models with A/C)

G4 (M1) — : Body ground  
 A3 (M2) W/2 : Warning buzzer (Diesel engine except for Europe and Australia)  
 G4 (M3) W/12 : To (D1)  
 G3 (M4) W/12 : To (D2) (With power window)  
 G2 (M5) SMJ : To (E101)  
 F4 (M6) W/24 : To (N1)  
 G2 (M7) W/20 : To (N2) (For Europe)  
 E4 (M9) L/4 : Power window relay  
 F4 (M10) — : Fuse block  
 E4 (M11) GY/14 : Data link connector for CONSULT (KA engine and for Europe)  
 F4 (M12) B/12 : Check connector (NA engine)  
 F4 (M13) B/10 : Check connector (Z engine)  
 F3 (M14) W/3 : Fuse block  
 E4 (M15) B/3 : Combination flasher unit  
 E3 (M16) B/2 : Stop lamp switch  
 F1 (M19) W/6 : To (R1)  
 E1 (M20) W/6 : Ignition switch  
 D1 (M21) W/1 : Parking brake switch (Stick type)  
 F4 (M22) W/6 : Fuel pump control module (NA engine and Z engine)  
 E2 (M23) BR/8 : Lighting switch • Turn signal lamp switch  
 D3 (M24) BR/4 : Lighting switch  
 D3 (M26) W/6 : Spiral cable (For Europe)  
 D3 (M27) B/1 : Horn switch  
 D2 (M28) GY/8 : Wiper and washer switch  
 C4 (M29) W/12 : Glow control unit (Diesel engine except for Europe)  
 C4 (M35) W/10 : Radio  
 C3 (M37) B/2 : Cigarette lighter  
 C2 (M38) W/3 : A/C switch (For Europe and Australia)  
 C2 (M39) W/6 : Fan switch (For Europe and Australia)  
 B2 (M40) W/2 : Fan switch illumination (For Europe and Australia)  
 D1 (M41) W/8 : Hazard switch  
 C1 (M42) W/6 : Rear window defogger switch  
 (For Europe and double cab for Australia)  
 C1 (M43) B/8 : To (M401) (Except for Europe and Australia)  
 B1 (M44) BR/4 : Thermo control amplifier (For Europe and Australia)  
 B1 (M45) BR/4 : Fan resistor  
 A1 (M46) W/2 : Blower motor  
 A1 (M47) W/10 : To (F55) (KA engine)  
 A2 (M48) W/24 : To (F54) (KA engine)  
 A3 (M49) W/12 : To (D31)

# HARNESS LAYOUT

## Main Harness (Cont'd)

### BODY SIDE — LHD MODELS

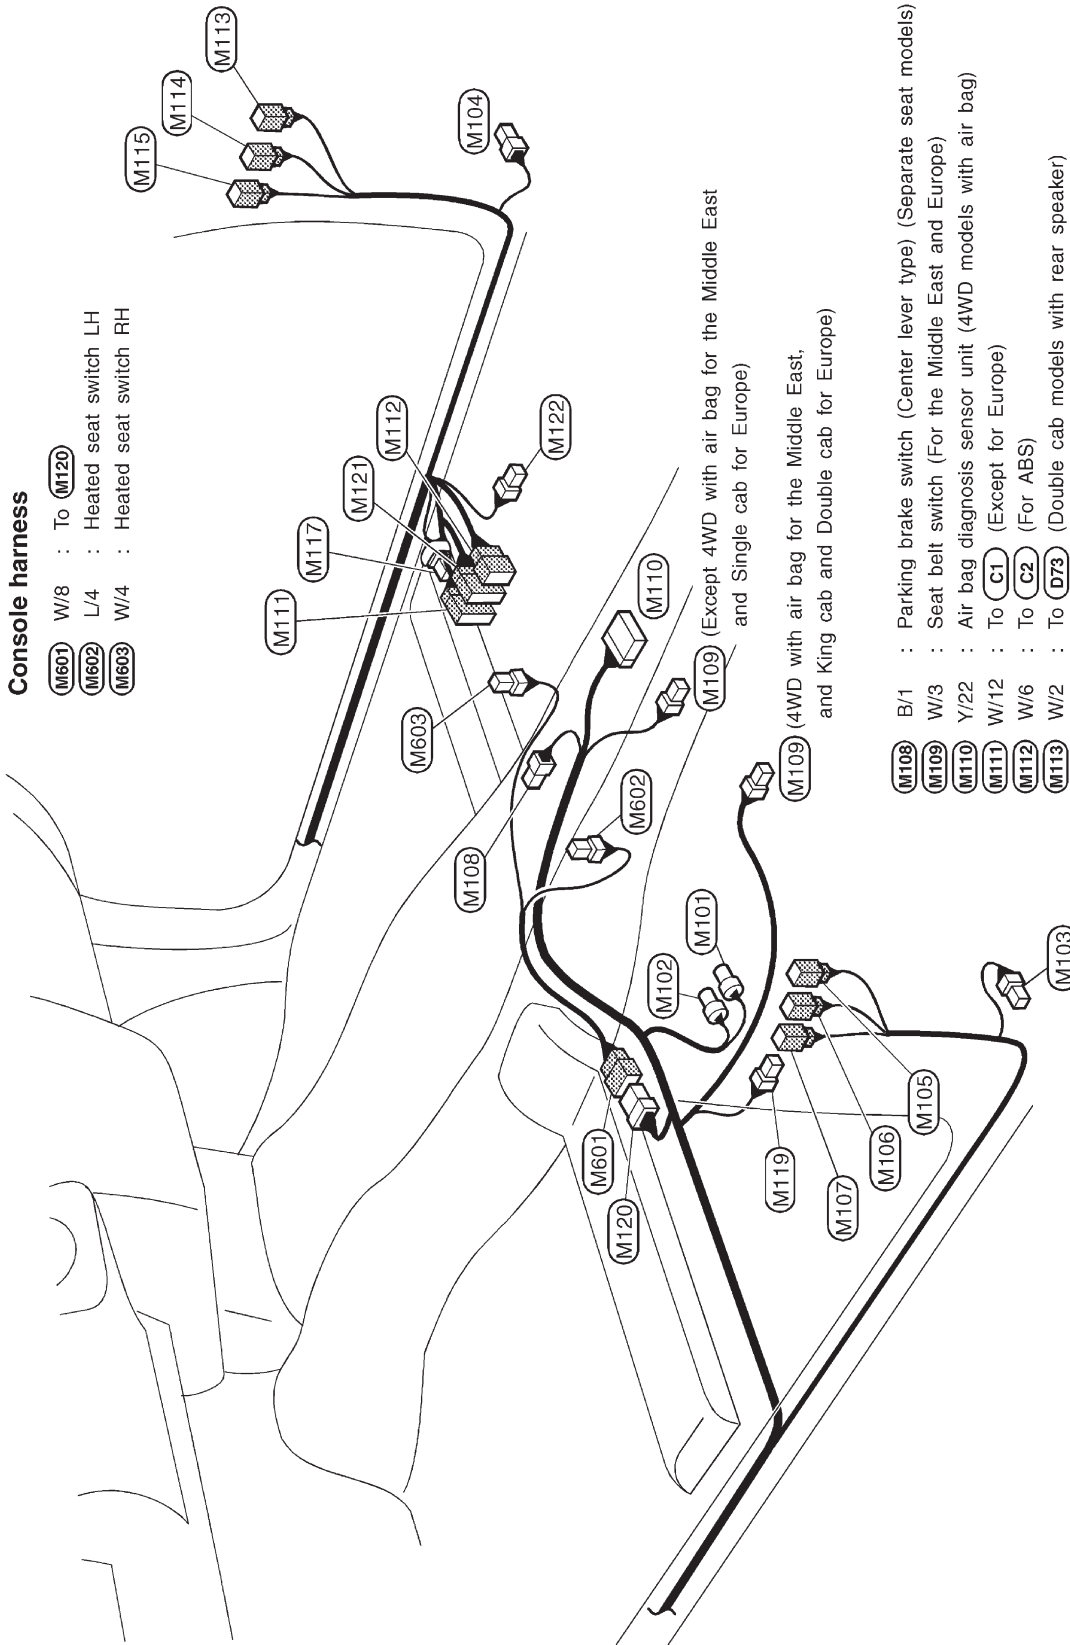

#### Console harness

- M601 W/8 : To M120
- M602 L/4 : Heated seat switch LH
- M603 W/4 : Heated seat switch RH


- M108 B/1 : Parking brake switch (Center lever type) (Separate seat models)
- M109 W/3 : Seat belt switch (For the Middle East and Europe)
- M110 Y/22 : Air bag diagnosis sensor unit (4WD models with air bag)
- M111 W/12 : To C1 (Except for Europe)
- M112 W/6 : To C2 (For ABS)
- M113 W/2 : To D73 (Double cab models with rear speaker)
- M114 W/2 : To D72 (Double cab models with power window)
- M115 W/3 : To D71 (Double cab models with power window)
- M117 W/2 : Condenser (GL and S-GL grade for the Middle East)
- M118 B/3 : Door switch driver side (For Europe)
- M119 W/3 : To heated seat sub-harness LH (For Europe)
- M120 W/8 : To M601 (For Europe)
- M121 W/16 : To C9 (For Europe)
- M122 W/3 : To heated seat sub-harness RH (For Europe)

- M101 GY/2 : G sensor (For ABS) (4WD models)
- M102 BR/2 : G sensor (For ABS) (4WD models)
- M103 B/1 : Door switch driver side (Except for Europe)
- M104 B/1 : Door switch passenger side (4WD models for Europe)
- M105 W/2 : To D53 (Double cab models with rear speaker)
- M106 W/2 : To D52 (Double cab models with power window)
- M107 W/3 : To D51 (Double cab models with power window)

# HARNESS LAYOUT

## Main Harness (Cont'd)

### BODY SIDE — RHD MODELS

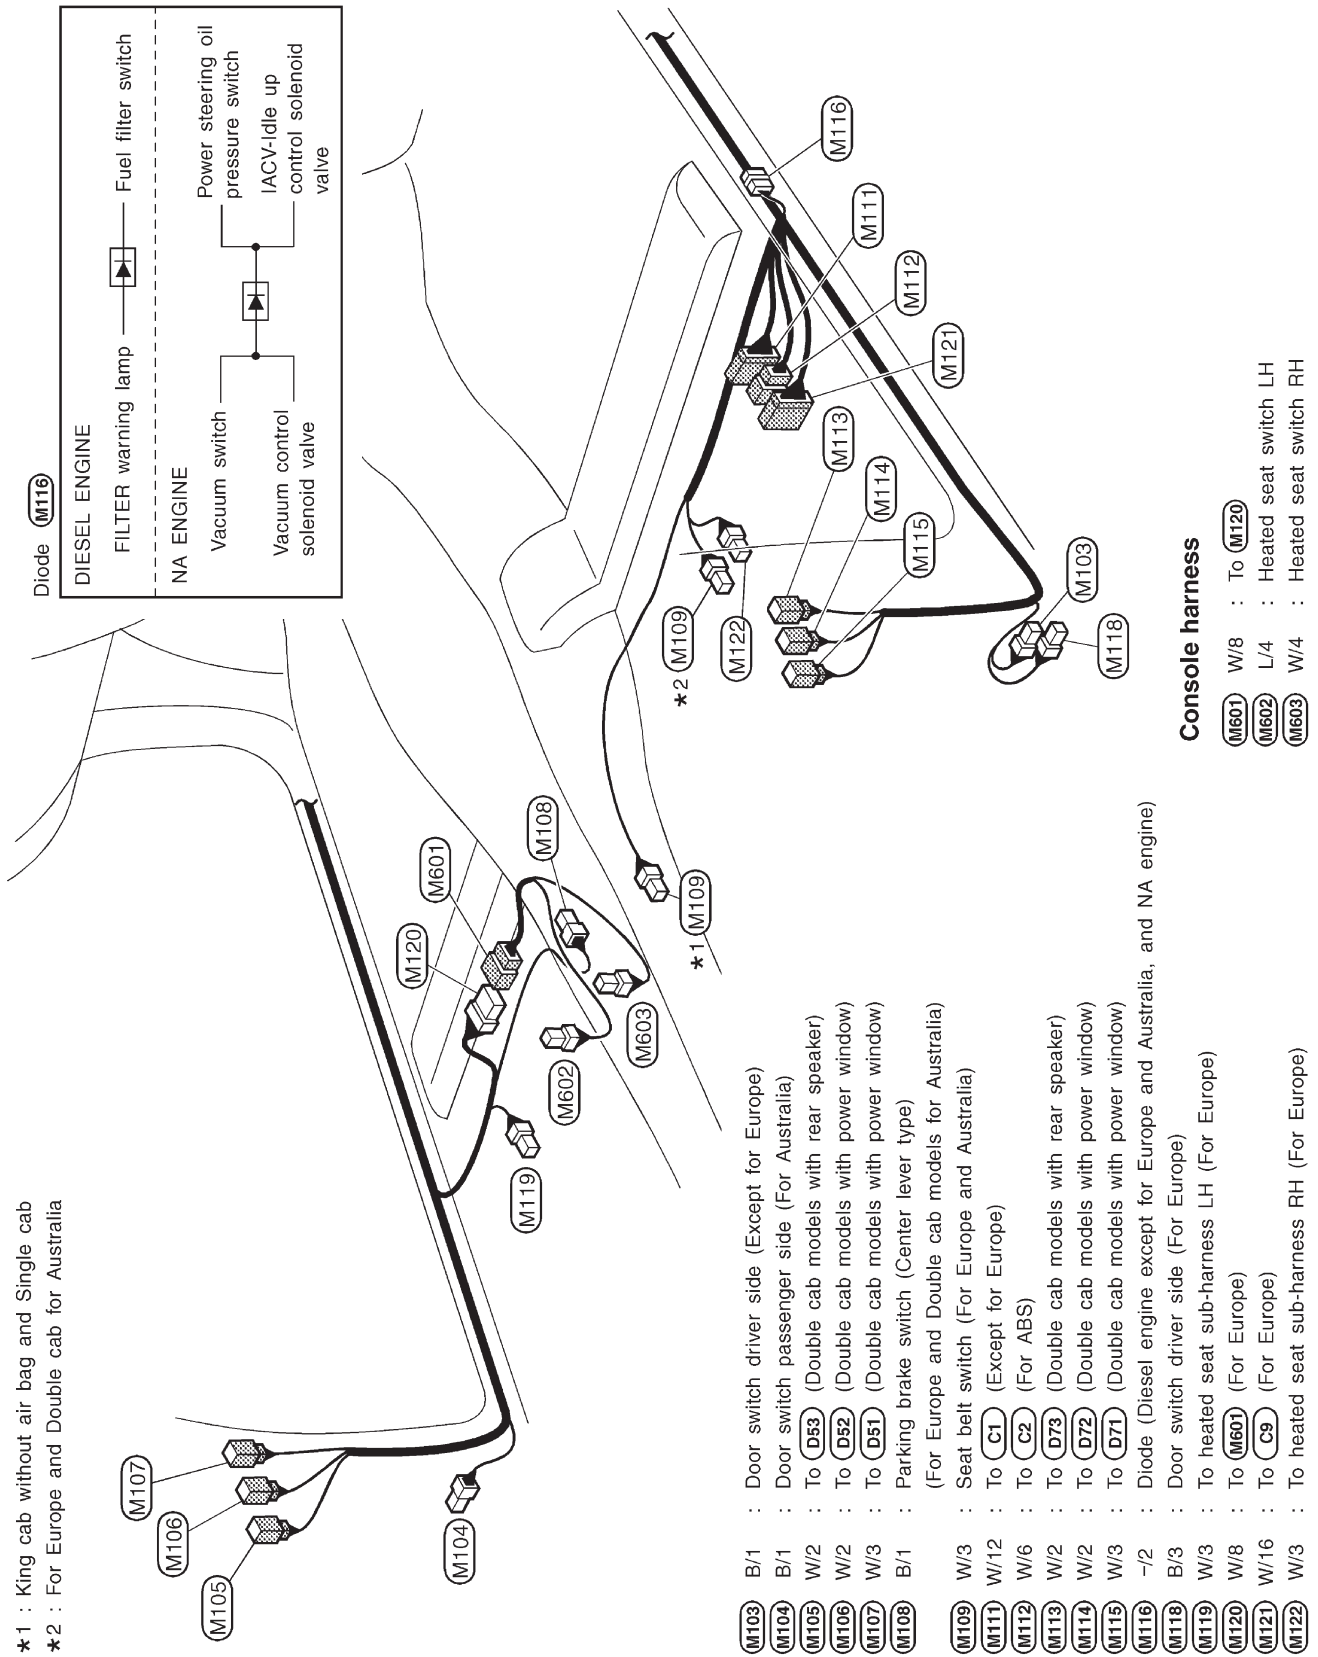

\*1 : King cab without air bag and Single cab  
 \*2 : For Europe and Double cab for Australia


- (M103) B/1 : Door switch driver side (Except for Europe)
- (M104) B/1 : Door switch passenger side (For Australia)
- (M105) W/2 : To D53 (Double cab models with rear speaker)
- (M106) W/2 : To D52 (Double cab models with power window)
- (M107) W/3 : To D51 (Double cab models with power window)
- (M108) B/1 : Parking brake switch (Center lever type)  
 (For Europe and Double cab models for Australia)
- (M109) W/3 : Seat belt switch (For Europe and Australia)
- (M111) W/12 : To C1 (Except for Europe)
- (M112) W/6 : To C2 (For ABS)
- (M113) W/2 : To D73 (Double cab models with rear speaker)
- (M114) W/2 : To D72 (Double cab models with power window)
- (M115) W/3 : To D71 (Double cab models with power window)
- (M116) -/2 : Diode (Diesel engine except for Europe and Australia, and NA engine)
- (M118) B/3 : Door switch driver side (For Europe)
- (M119) W/3 : To heated seat sub-harness LH (For Europe)
- (M120) W/8 : To (M601) (For Europe)
- (M121) W/16 : To C9 (For Europe)
- (M122) W/3 : To heated seat sub-harness RH (For Europe)



# HARNESS LAYOUT

## Main Harness (Cont'd)

### ENGINE COMPARTMENT — KA24E ENGINE (LHD models)

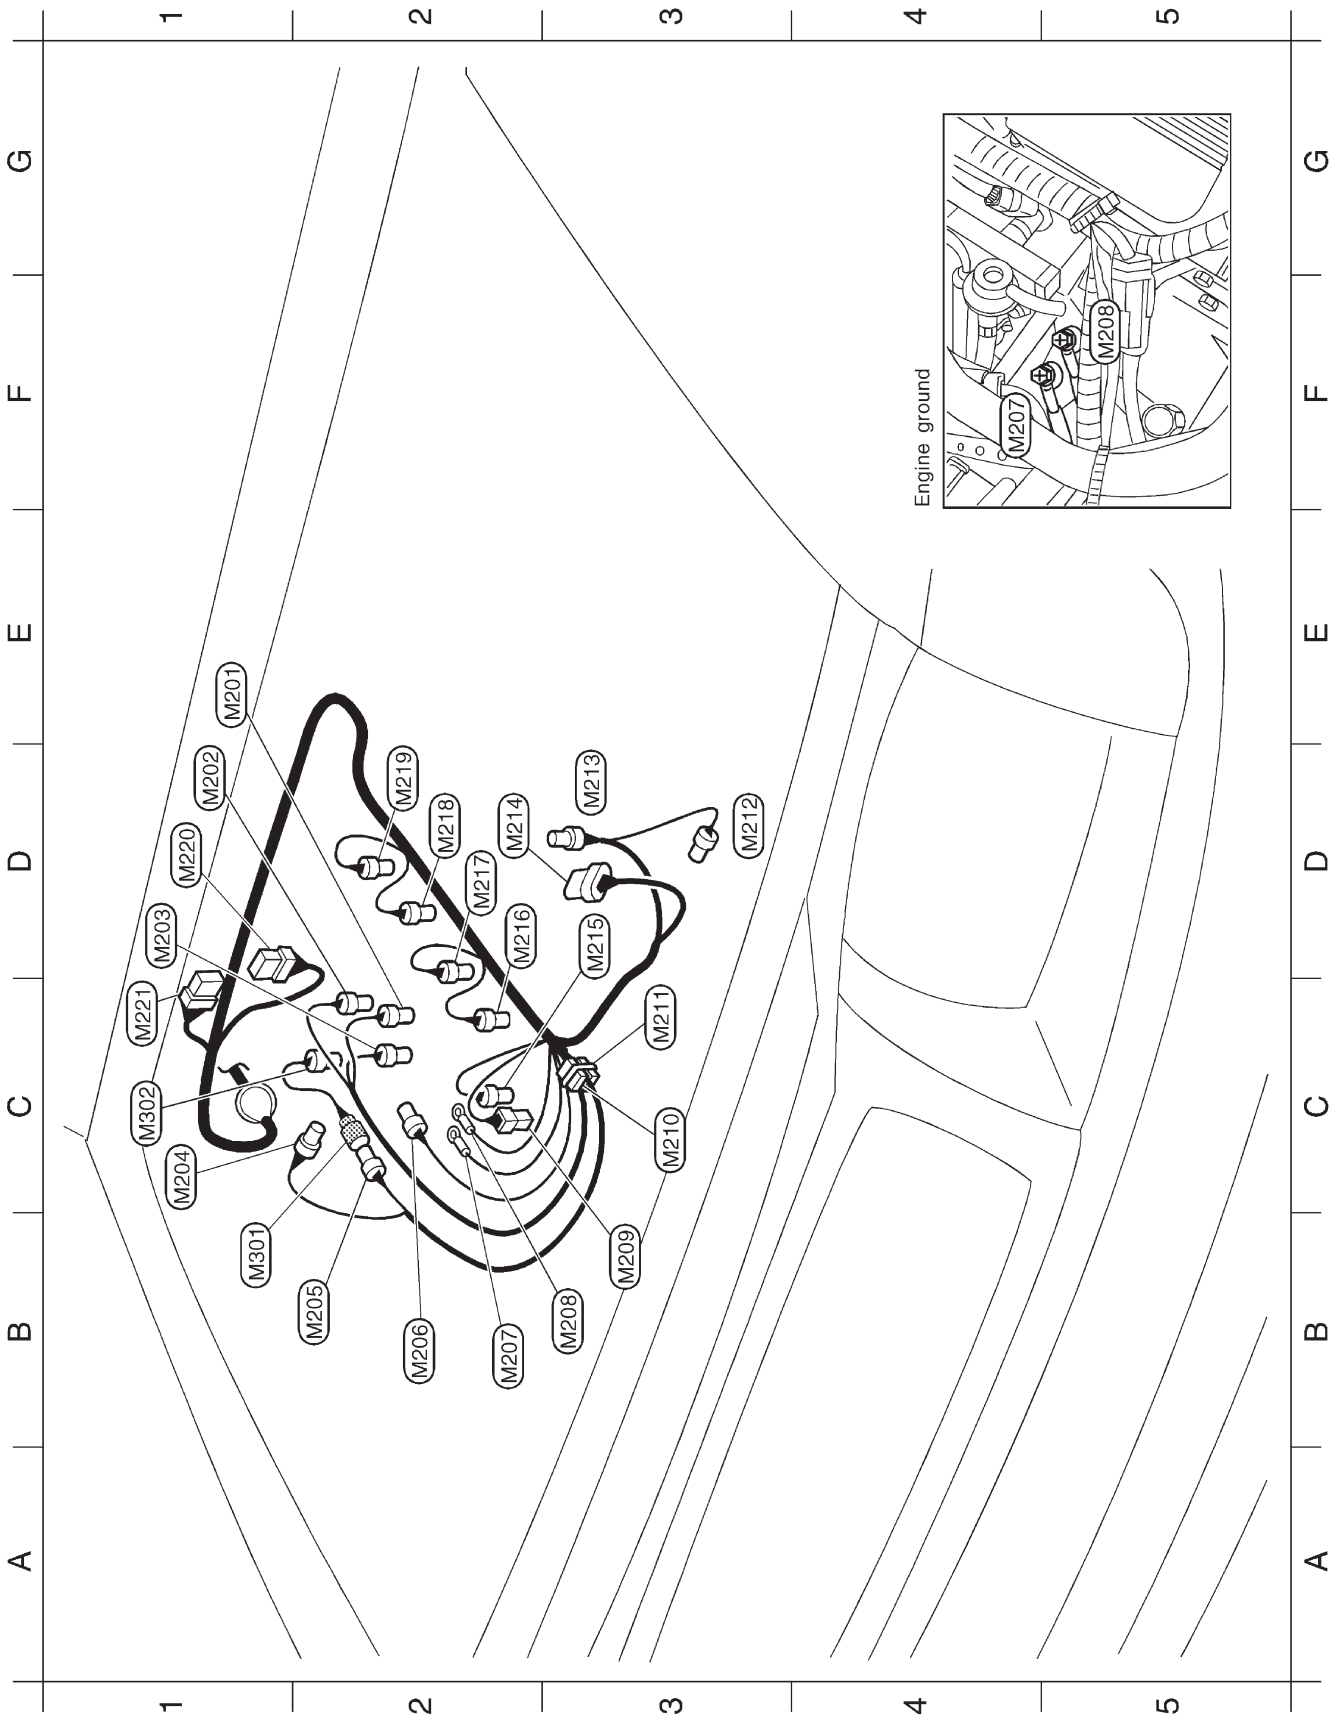

# HARNESS LAYOUT


## Main Harness (Cont'd)

### Sub-harness


B1 (M301) GY/3 : To (M205)  
 C1 (M302) BR/3 : Throttle position sensor

E1 (M201) BR/2 : Swirl control valve control solenoid valve  
 D1 (M202) B/2 : EVAP canister purge control solenoid valve  
 D1 (M203) GY/4 : IACV-AAC valve • IACV-FICD solenoid valve  
 C1 (M204) GY/3 : Mass air flow sensor  
 B2 (M205) GY/3 : To (M301)  
 B2 (M206) GY/2 : Intake air temperature sensor  
 B2 (M207) — : Engine ground  
 B3 (M208) — : Engine ground  
 B3 (M209) B/1 : Thermal transmitter  
 C3 (M210) W/2 : Condenser  
 C3 (M211) -/2 : Resistor  
 D3 (M212) B/1 : Compressor  
 D3 (M213) GY/2 : Distributor  
 D2 (M214) GY/6 : Distributor  
 D8 (M215) GY/2 : Engine coolant temperature sensor  
 D2 (M216) B/2 : Injector No.1  
 D2 (M217) B/2 : Injector No.2  
 D2 (M218) B/2 : Injector No.3  
 D2 (M219) B/2 : Injector No.4  
 D1 (M220) GY/8 : Wiper amplifier or jumping connector (SE grade and for Europe)  
 C1 (M221) W/6 : Wiper motor

Resistor (M211)

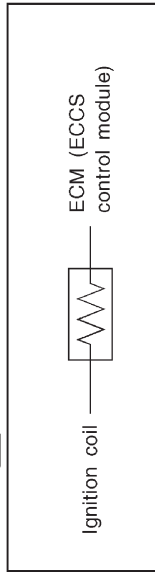

Condenser (M210)

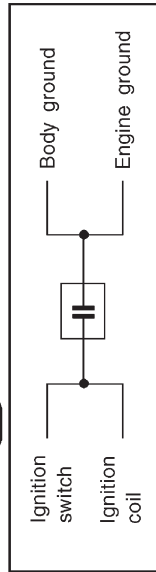



# HARNESS LAYOUT

## Main Harness (Cont'd)

ENGINE COMPARTMENT — EXCEPT KA24E ENGINE (LHD models)



# HARNES LAYOUT

## Main Harness (Cont'd)


### Sub-harness (Diesel engine)

E2	(M220)	GY/8	: Wiper amplifier (AX grade)	E2	(M311)	B/1	: To (M261) (QD engine)
D2	(M221)	W/6	: Wiper motor	E3	(M312)	L/2	: To (M262) (TD engine)
B2	(M251)	W/1	: Glow relay-1 (Diesel engine)	F2	(M313)	—	: Glow plug
B2	(M252)	W/1	: Glow relay-1 (Diesel engine)				
C2	(M253)	G/2	: Glow relay-1 (Diesel engine)				
C1	(M254)	W/1	: Glow relay-2 (TD27 engine for cold areas)				
C1	(M255)	W/1	: Glow relay-2 (TD27 engine for cold areas)				
C1	(M256)	G/2	: Glow relay-2 (TD27 engine for cold areas)				
C3	(M257)	BR/2	: Fuel return control solenoid valve (NA engine)				
C3	(M258)	GY/2	: Vacuum switch (NA engine)				
D3	(M259)	BR/2	: Fuel filter switch (Diesel engine)				
D3	(M260)	GY/3	: Carburetor (NA engine and Z engine)				
E2	(M261)	B/1	: To (M311) (QD engine)				
E3	(M262)	L/2	: To (M312) (TD engine)				
F3	(M263)	B/2	: Dropping resistor (TD27 engine for cold areas)				
C3	(M264)	B/2	: EGRC-solenoid valve (Throttle chamber)(For Europe)				
C3	(M265)	BR/2	: EGRC-solenoid valve (EGR valve)(For Europe)				

# HARNESS LAYOUT

## Engine Room Harness

LHD MODELS — GASOLINE ENGINE

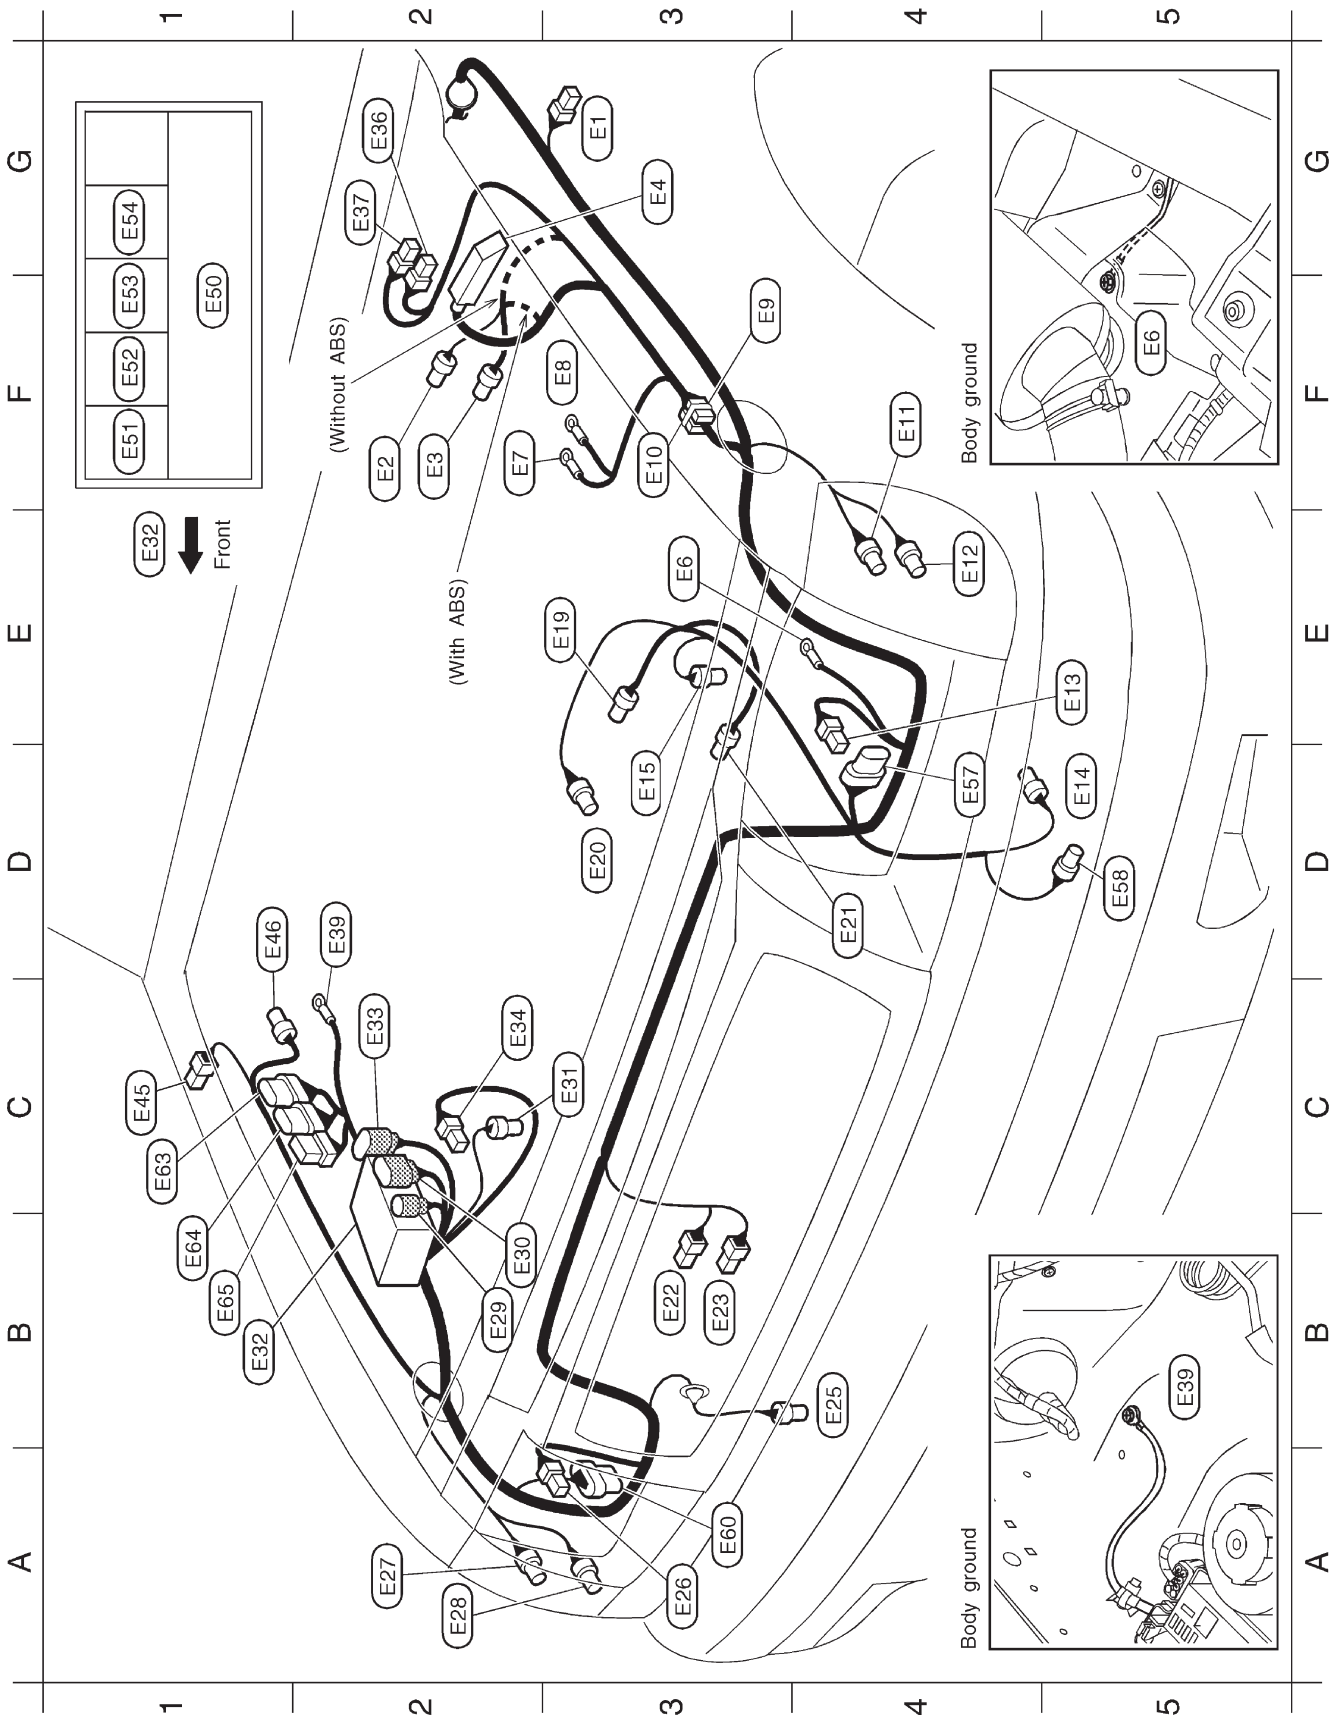


# HARNESS LAYOUT

## Engine Room Harness (Cont'd)


- C1 (E63) GY/8 : Daytime light unit (With daytime light system)  
 B1 (E64) GY/6 : Daytime light unit (With daytime light system)  
 B1 (E65) W/6 : Headlamp washer amplifier (For Europe)

### PASSENGER COMPARTMENT

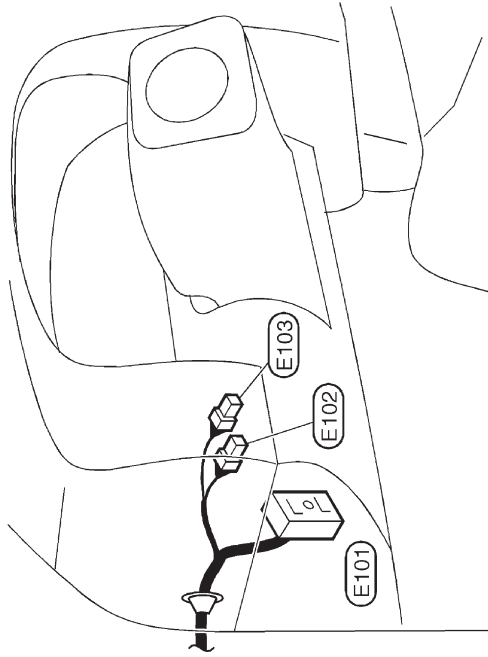


- (E101) SMJ : To (M5)  
 (E102) W/4 : Fuse block  
 (E103) B/2 : Fuse block

#### Resistor (E9)

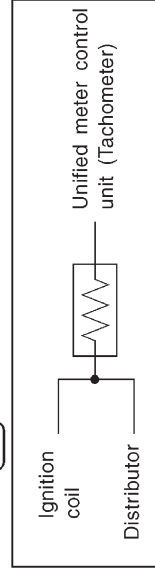

#### Condenser (E10)

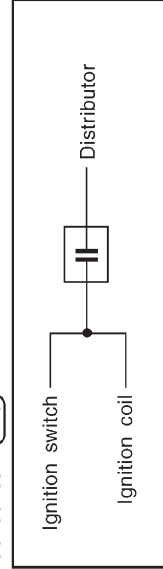


- G3 (E1) B/2 : Side turn signal lamp LH (For Europe and China)  
 F2 (E2) GY/2 : Brake fluid level switch  
 F2 (E3) GY/3 : Heated oxygen sensor (KA engine)  
 G3 (E4) B/31 : ABS actuator and electric unit (For ABS)  
 E3 (E6) — : Body ground  
 F2 (E7) — : Ignition coil (NA engine and Z engine)  
 F3 (E8) — : Ignition coil (NA engine and Z engine)  
 F3 (E9) -/2 : Resistor (NA engine and Z engine)  
 F3 (E10) W/2 : Condenser (NA engine and Z engine)  
 F4 (E11) GY/3 : Front combination lamp LH (Except for Europe and China)  
 E4 (E12) BR/3 : Front combination lamp LH (For Europe and China)  
 E5 (E13) B/3 : Headlamp LH  
 D5 (E14) GY/2 : Washer motor  
 D3 (E15) BR/2 : Front wheel sensor LH (For ABS)  
 E3 (E19) GY/3 : Distributor (NA engine and Z engine)  
 D3 (E20) B/2 : Vacuum control solenoid valve (NA engine)  
 D4 (E21) B/1 : Compressor (NA engine and Z engine)  
 B3 (E22) B/1 : Horn low  
 B3 (E23) B/1 : Horn high  
 B4 (E25) B/4 : Triple-pressure switch  
 A3 (E26) B/3 : Headlamp RH  
 A2 (E27) GY/3 : Front combination lamp RH (Except for Europe and China)  
 A2 (E28) BR/3 : Front combination lamp RH (For Europe and China)  
 B2 (E29) GY/2 : To (E204)  
 B2 (E30) B/8 : To (E203)  
 C3 (E31) GY/2 : Front wheel sensor RH (For ABS)  
 B1 (E32) — : Relay box (Fusible link and fuse box)  
 C2 (E33) GY/8 : To (E205)  
 C2 (E34) B/1 : Battery  
 G2 (E36) B/1 : ISC-FI pot control solenoid valve (NA engine and Z engine)  
 G2 (E37) B/1 : ISC-FI pot control solenoid valve (NA engine and Z engine)  
 D2 (E39) — : Body ground  
 C1 (E45) B/2 : Side turn signal lamp RH (For Europe and China)  
 D1 (E46) GY/3 : Power antenna (For the Middle East)  
 F1 (E50) — : Fusible link and fuse box  
 F1 (E51) L/4 : Air conditioner relay  
 F1 (E52) W/3 : Horn relay  
 F1 (E53) L/4 : ECCS relay (KA engine)  
 G1 (E54) B/5 : Automatic choke relay (NA engine and Z engine)  
 L/4 : Fuel pump relay (KA engine)  
 D4 (E57) GY/6 : Headlamp aiming motor LH (For Europe)  
 D5 (E58) GY/2 : Headlamp washer motor (For Europe)  
 A3 (E60) GY/6 : Headlamp aiming motor RH (For Europe)

# HARNESS LAYOUT

## Engine Room Harness (Cont'd)

LHD MODELS — DIESEL ENGINE

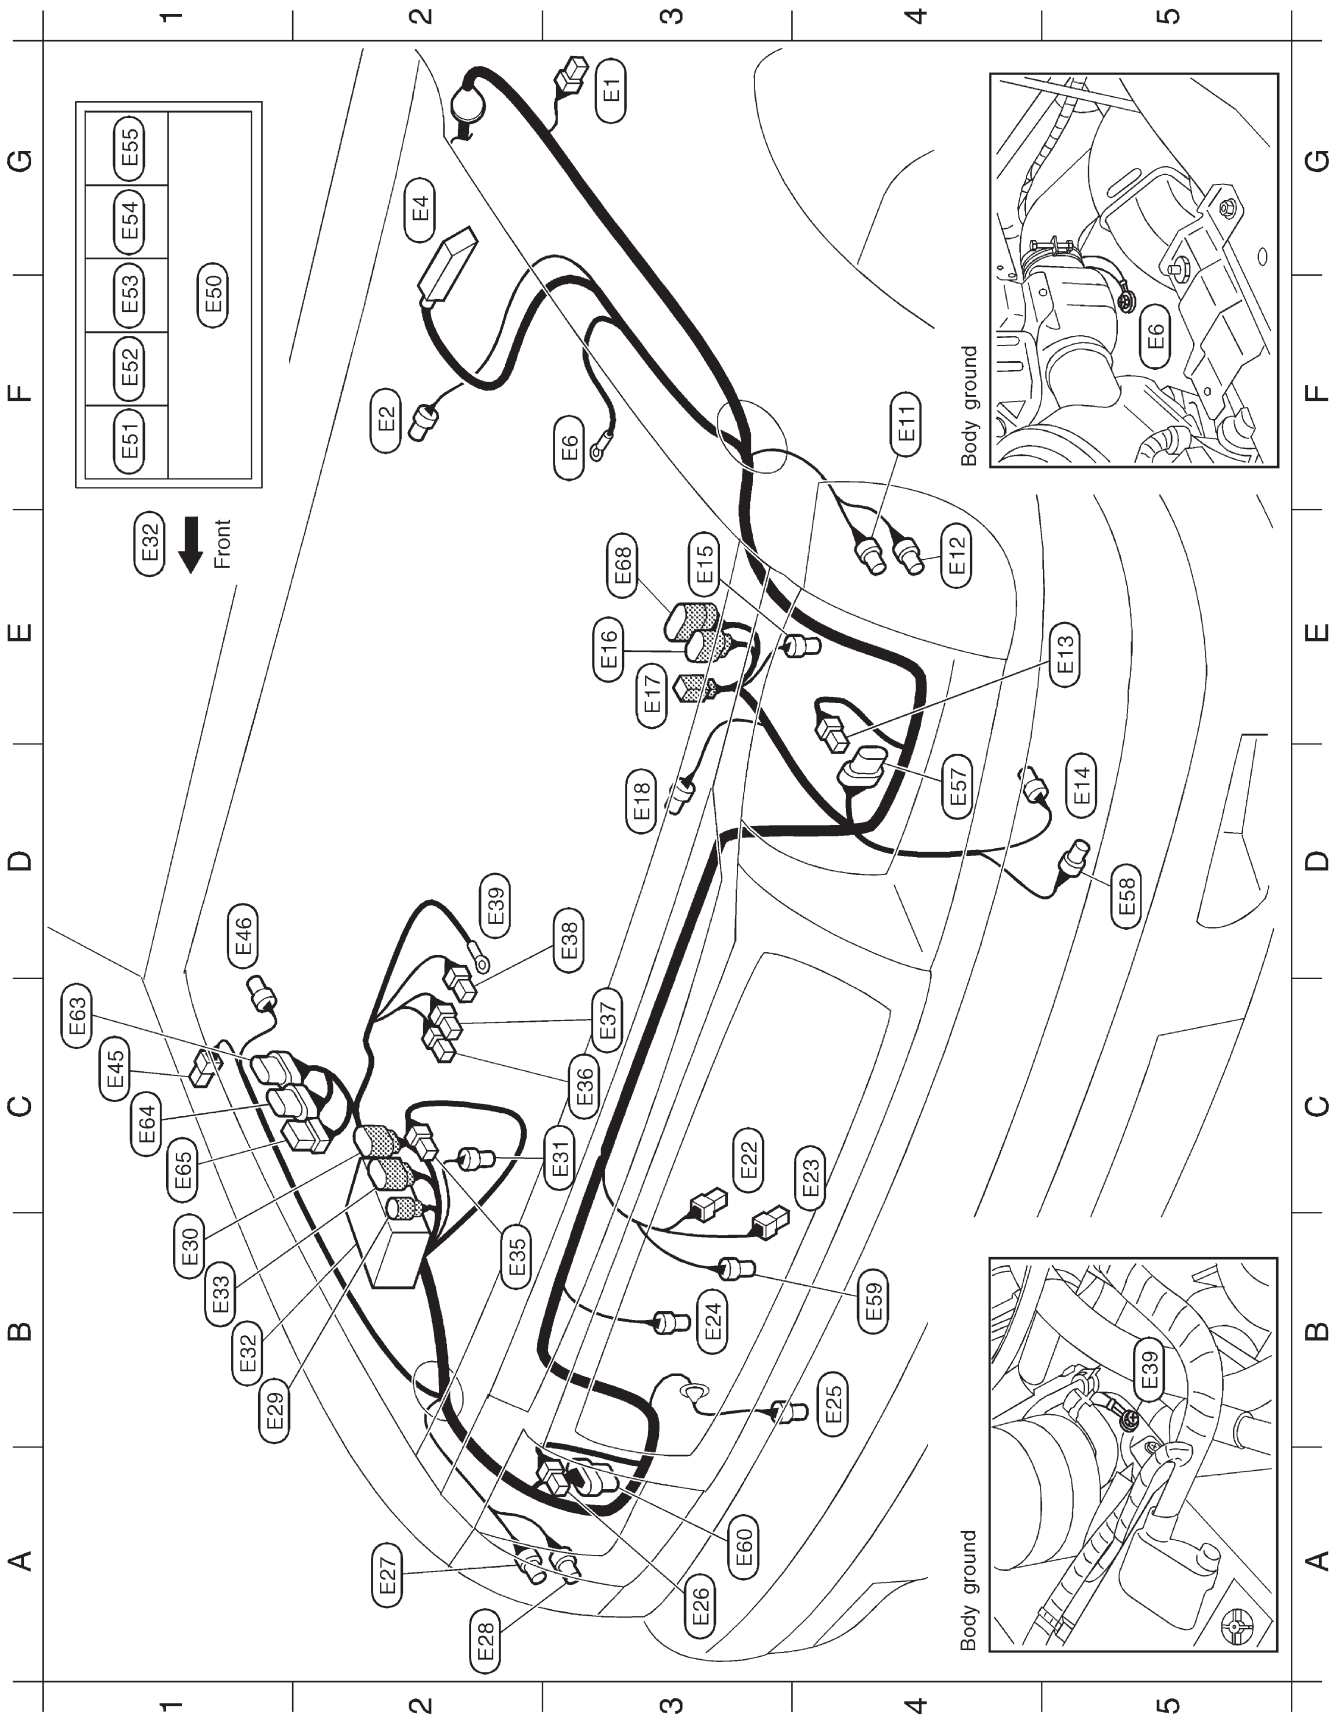


# HARNESS LAYOUT

## Engine Room Harness (Cont'd)

- D4 (E57) GY/6 : Headlamp aiming motor LH (For Europe)
- D5 (E58) GY/2 : Headlamp washer motor (For Europe)
- B4 (E59) BR/2 : Not used  
(For Europe except 2WD models with ABS)
- A3 (E60) GY/6 : Headlamp aiming motor RH (For Europe)
- C1 (E63) GY/6 : Daytime light unit (With daytime light system)
- C1 (E64) GY/8 : Daytime light unit (With daytime light system)
- C1 (E65) W/6 : Headlamp washer amplifier (For Europe)
- E3 (E68) GY/10 : To (A13) (For Europe)

### PASSENGER COMPARTMENT

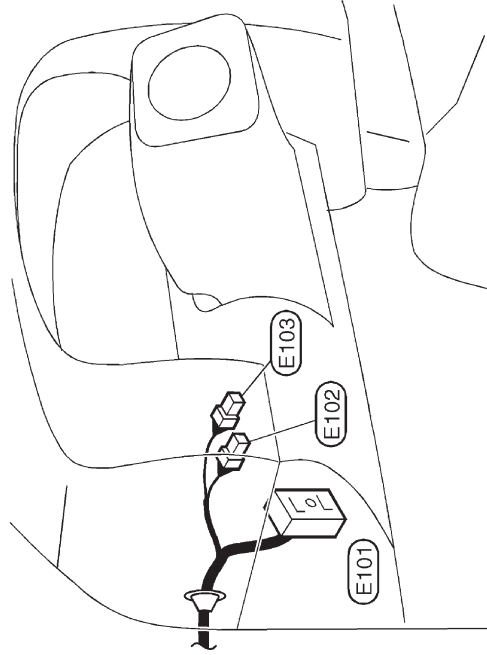


- (E101) SMJ : To (M5)
- (E102) W/4 : Fuse block
- (E103) B/2 : Fuse block

- G3 (E1) B/2 : Side turn signal lamp LH (For Europe)
- F2 (E2) GY/2 : Brake fluid level switch
- G2 (E4) B/31 : ABS actuator and electric unit (For ABS)
- F3 (E6) — : Body ground
- F4 (E11) GY/3 : Front combination lamp LH (Except for Europe)
- E4 (E12) BR/3 : Front combination lamp LH (For Europe)
- E5 (E13) B/3 : Headlamp LH
- D5 (E14) GY/2 : Washer motor
- E3 (E15) BR/2 : Front wheel sensor LH (For ABS)
- E3 (E16) GY/8 : To (A3) (Except for Europe)
- E3 (E17) B/2 : To (A2)
- D3 (E18) GY/2 : Thermostat (Except TD27 engine for cold areas and TD engine 2WD models with ABS for Europe)
- C3 (E22) B/1 : Horn low
- C4 (E23) B/1 : Horn high (Except TD27 engine for cold areas)
- B3 (E24) GY/2 : Cooling fan motor (Except TD27 engine for cold areas and TD engine 2WD models with ABS for Europe)
- B4 (E25) B/4 : Triple-pressure switch
- A3 (E26) B/3 : Headlamp RH
- A2 (E27) GY/3 : Front combination lamp RH (Except for Europe)
- A2 (E28) BR/3 : Front combination lamp RH (For Europe)
- B2 (E29) GY/2 : To (E204)
- B1 (E30) B/8 : To (E203) (For Europe)
- C3 (E31) GY/2 : Front wheel sensor RH (For ABS)
- B1 (E32) — : Relay box (Fusible link and fuse box)
- B1 (E33) GY/8 : To (E205)
- B2 (E35) B/1 : To (E206)
- C3 (E36) B/1 : IACV-FICD solenoid valve
- C3 (E37) B/1 : IACV-FICD solenoid valve
- D3 (E38) GY/1 : Vacuum warning switch
- D2 (E39) — : Body ground
- C1 (E45) B/2 : Side turn signal lamp RH (For Europe)
- D1 (E46) GY/3 : Not used (For Europe except 2WD models with ABS)
- F1 (E50) — : Fusible link and fuse box
- F1 (E51) L/4 : Air conditioner relay
- F1 (E52) W/3 : Horn relay
- F1 (E53) L/4 : Not used (For Europe except 2WD models with ABS)
- G1 (E54) L/4 : Not used (For Europe except 2WD models with ABS)
- G1 (E55) L/4 : Cooling fan relay (Except TD27 engine for cold areas and TD engine 2WD models with ABS for Europe)

# HARNESS LAYOUT

## Engine Room Harness (Cont'd)


RHD MODELS — GASOLINE ENGINE

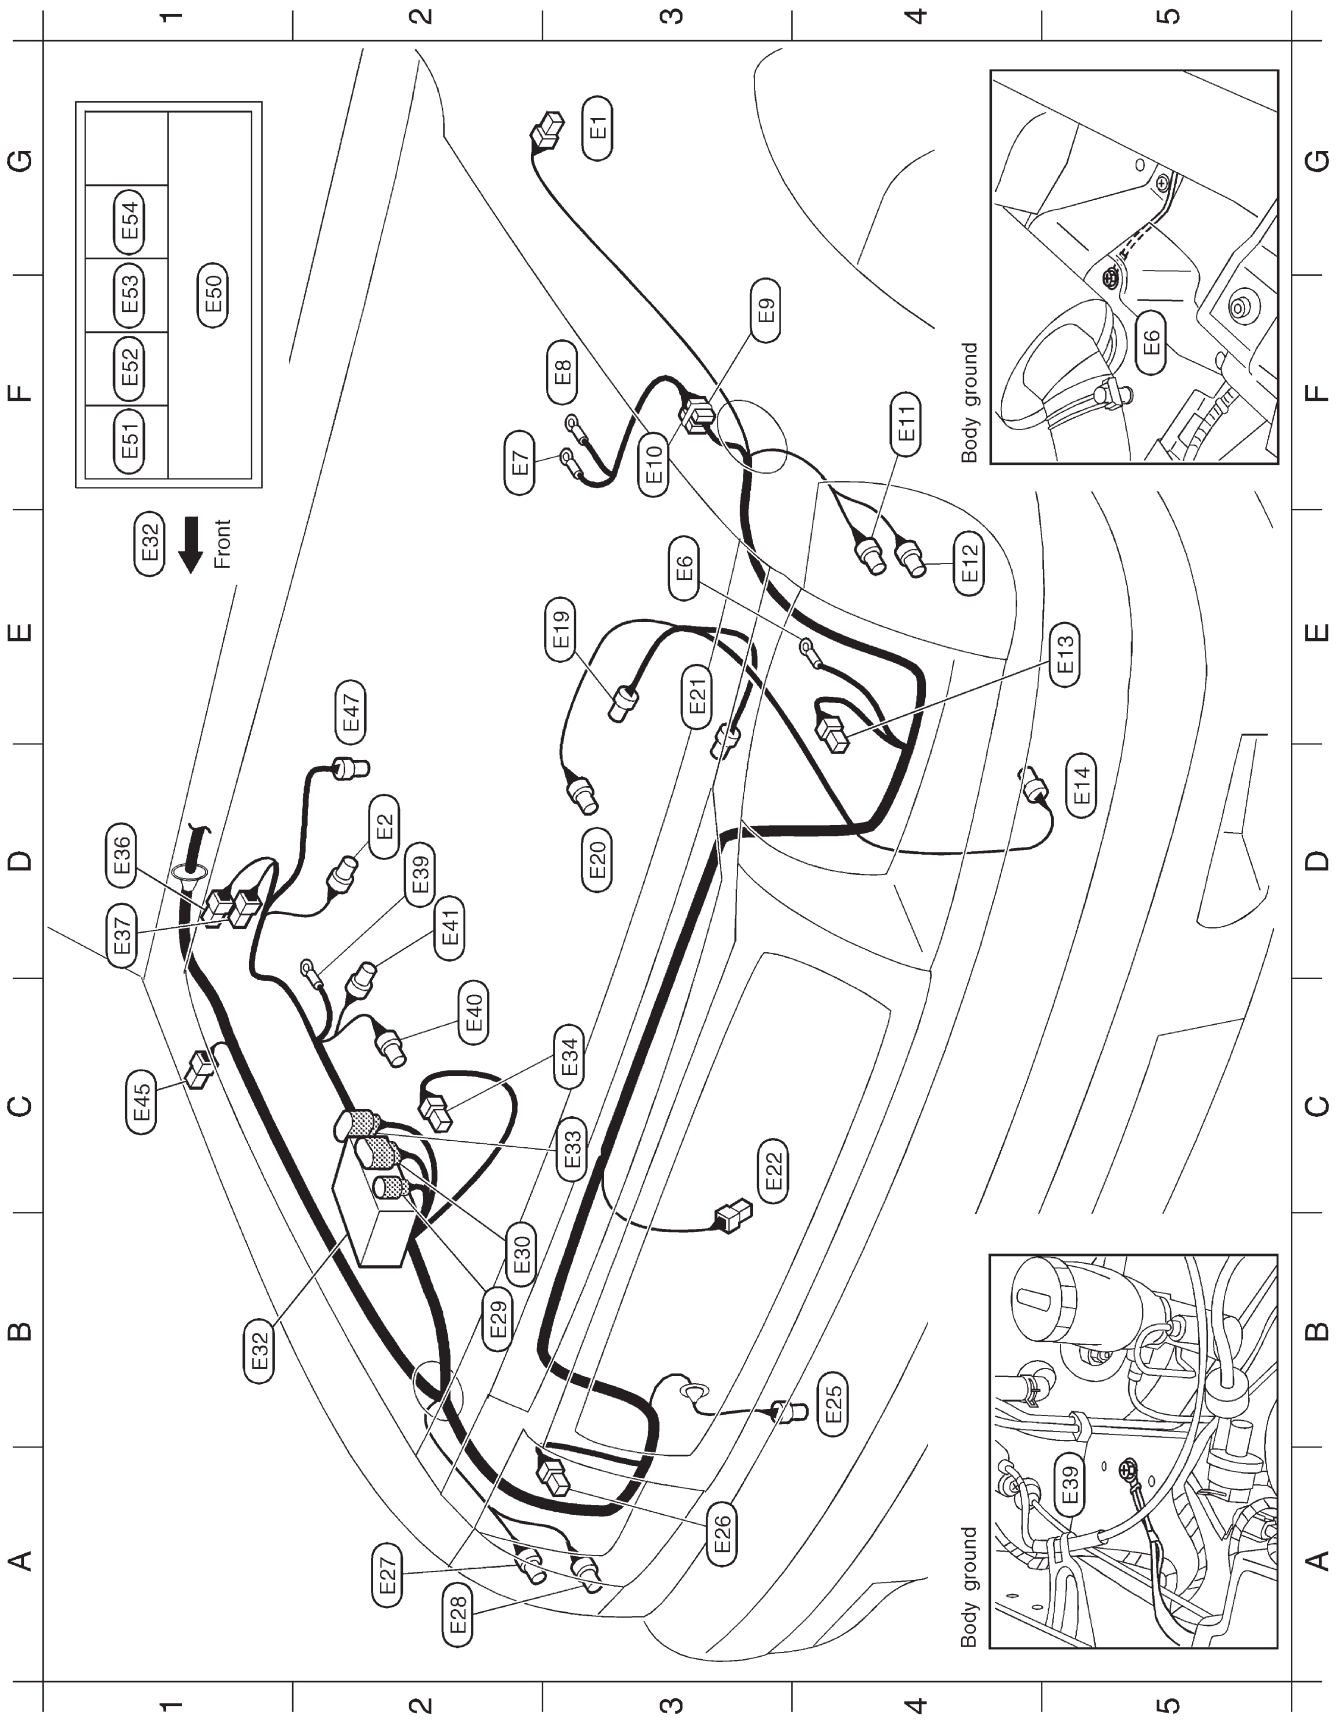

# HARNESS LAYOUT


## Engine Room Harness (Cont'd)

G3	(E1)	B/2	: Side turn signal lamp LH (For Australia)
D2	(E2)	GY/2	: Brake fluid level switch
E3	(E6)	—	: Body ground
F2	(E7)	—	: Ignition coil (NA engine and Z engine)
F3	(E8)	—	: Ignition coil (NA engine and Z engine)
F3	(E9)	-/2	: Resistor (NA engine and Z engine)
F3	(E10)	W/2	: Condenser (NA engine and Z engine)
F4	(E11)	GY/3	: Front combination lamp LH (Except for Australia)
E4	(E12)	BR/3	: Front combination lamp LH (For Australia)
E5	(E13)	B/3	: Headlamp LH
D6	(E14)	GY/2	: Washer motor
E3	(E19)	GY/3	: Distributor (NA engine and Z engine)
D3	(E20)	B/2	: Vacuum control solenoid valve (NA engine)
E3	(E21)	B/1	: Compressor (Except for Australia)
C3	(E22)	B/1	: Horn low
B4	(E25)	B/4	: Triple-pressure switch
A3	(E26)	B/3	: Headlamp RH
A2	(E27)	GY/3	: Front combination lamp RH (Except for Australia)
A2	(E28)	BR/3	: Front combination lamp RH (For Australia)
B2	(E29)	GY/2	: To (E204)
B2	(E30)	B/8	: To (E203)
B1	(E32)	—	: Relay box (Fusible link and fuse box)
C3	(E33)	GY/8	: To (E205)
C3	(E34)	B/1	: Battery
D1	(E36)	B/1	: ISC-FI pot control solenoid valve (Except for Australia)
D1	(E37)	B/1	: ISC-FI pot control solenoid valve (Except for Australia)
D2	(E39)	—	: Body ground
C2	(E40)	BR/2	: Fuel return control solenoid valve (NA engine)
D2	(E41)	GY/2	: Vacuum switch (NA engine)
C1	(E45)	B/2	: Side turn signal lamp RH (For Australia)
E2	(E47)	GY/3	: Carburetor (NA engine and Z engine)
F1	(E50)	—	: Fusible link and fuse box
F1	(E51)	L/4	: Air conditioner relay
F1	(E52)	W/3	: Horn relay
F1	(E53)	L/4	: ECCS relay (KA engine)
G1	(E54)	B/5	: Automatic choke relay (NA engine and Z engine)
		L/4	: Fuel pump relay (KA engine)

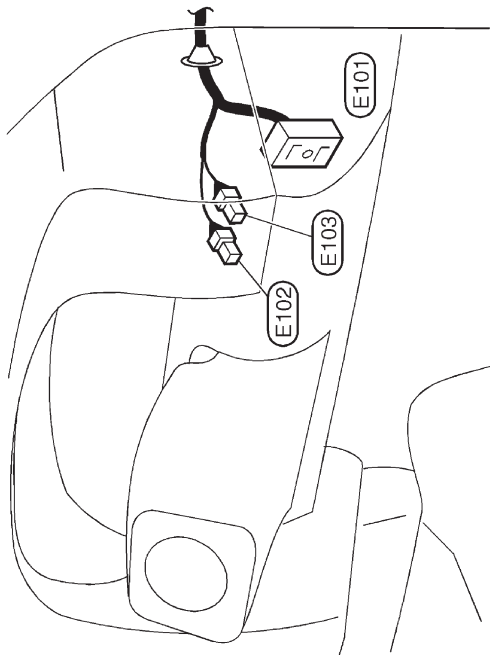


(E101) SMJ : To (M5)  
 (E102) W/4 : Fuse block  
 (E103) B/2 : Fuse block

Resistor (E9)

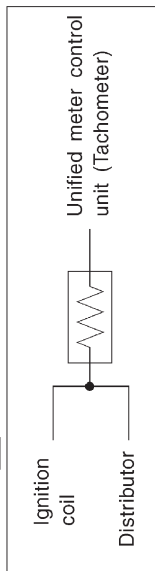

Condenser (E10)

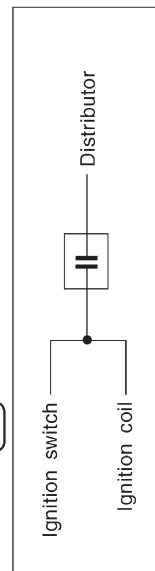




# HARNESS LAYOUT

## Engine Room Harness (Cont'd)

RHD MODELS — DIESEL ENGINE

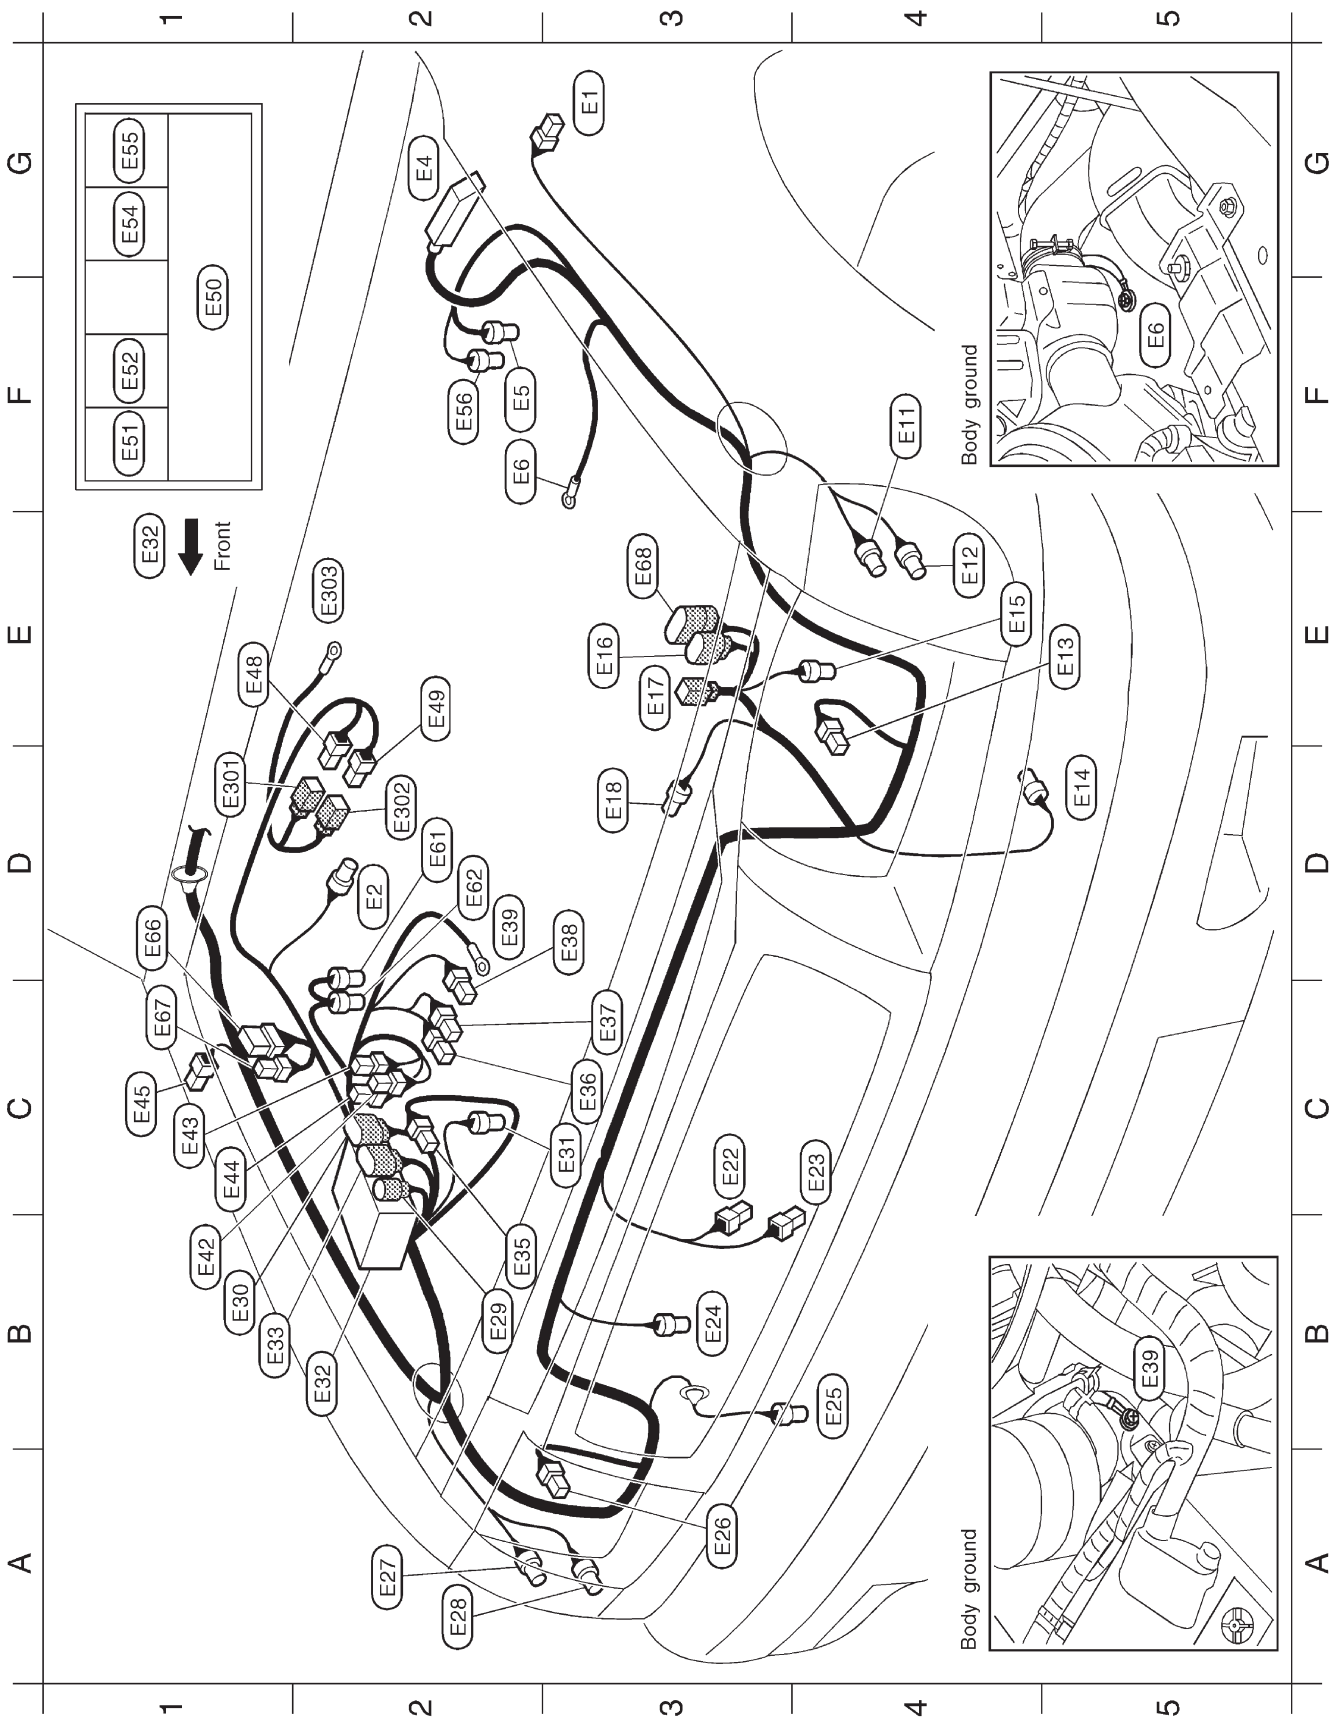


# HARNESS LAYOUT

## Engine Room Harness (Cont'd)

- F1 (E50) — : Fusible link and fuse box
- F1 (E51) L/4 : Air conditioner relay
- F1 (E52) W/3 : Horn relay
- G1 (E54) L/4 : Fuel heater relay (For Europe)
- G1 (E55) L/4 : Cooling fan relay (TD25 engine except 2WD models with ABS and QD engine)
- F2 (E56) GY/4 : Fuel filter (For fuel heater)(For Europe)
- D2 (E61) B/2 : EGRC-solenoid valve (Throttle chamber)(For Europe)
- D2 (E62) BR/2 : EGRC-solenoid valve (EGR valve)(For Europe)
- D1 (E66) GY/6 : Dim-dip lamp unit (For Europe)
- C1 (E67) GY/4 : Dim-dip lamp unit (For Europe)
- E3 (E68) GY/10 : To (A13) (For Europe)

### PASSENGER COMPARTMENT

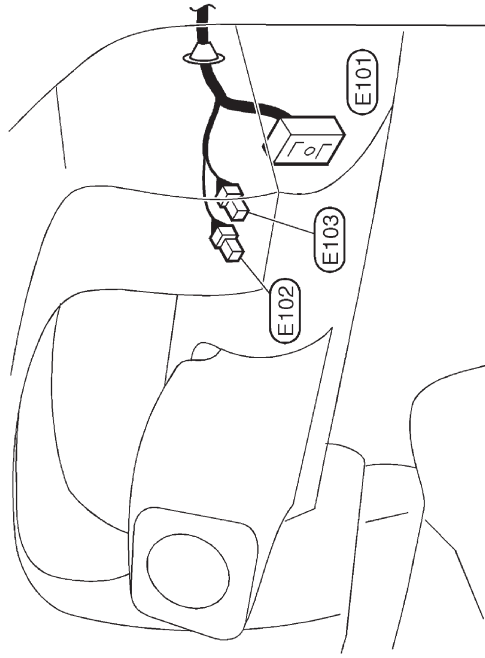

- (E101) SMJ : To (M5)
- (E102) W/4 : Fuse block
- (E103) B/2 : Fuse block


### Sub-harness

- D1 (E301) B/1 : To (E48) (QD engine)
- D2 (E302) L/2 : To (E49) (TD engine)
- E2 (E303) — : Glow plug

- G3 (E1) B/2 : Side turn signal lamp LH (For Australia)
- D2 (E2) GY/2 : Brake fluid level switch
- G2 (E4) B/31 : ABS actuator and electric unit (For ABS)
- F2 (E5) BR/2 : Fuel filter switch
- F2 (E6) — : Body ground
- F4 (E11) GY/3 : Front combination lamp LH (Except for Europe and Australia)
- E4 (E12) BR/3 : Front combination lamp LH (For Europe and Australia)
- E5 (E13) B/3 : Headlamp LH
- D5 (E14) GY/2 : Washer motor
- E4 (E15) BR/2 : Front wheel sensor LH (For ABS)
- E3 (E16) GY/8 : To (A3) (Except for Europe)
- E3 (E17) B/2 : To (A2)
- D3 (E18) GY/2 : Thermoswitch
- (TD25 engine except 2WD models with ABS and QD engine)
- C3 (E22) B/1 : Horn low
- C4 (E23) B/1 : Horn high (For Europe)
- B3 (E24) GY/2 : Cooling fan motor
- (TD25 engine except 2WD models with ABS and QD engine)
- B4 (E25) B/4 : Triple-pressure switch
- A3 (E26) B/3 : Headlamp RH
- A2 (E27) GY/3 : Front combination lamp RH (Except for Europe and Australia)
- A2 (E28) BR/3 : Front combination lamp RH (For Europe and Australia)
- B2 (E29) GY/2 : To (E204)
- B1 (E30) B/8 : To (E203) (For Europe)
- C3 (E31) GY/2 : Front wheel sensor RH (For ABS)
- B2 (E32) — : Relay box (Fusible link and fuse box)
- B1 (E33) GY/8 : To (E205)
- B2 (E35) B/1 : To (E206)
- C3 (E36) B/1 : IACV-FICD solenoid valve
- C3 (E37) B/1 : IACV-FICD solenoid valve
- D3 (E38) GY/1 : Vacuum warning switch (Except for Australia)
- D2 (E39) — : Body ground
- B1 (E42) W/1 : Glow relay-1
- C1 (E43) W/1 : Glow relay-1
- C1 (E44) G/2 : Glow relay-1
- C1 (E45) B/2 : Side turn signal lamp RH (For Europe and Australia)
- E1 (E48) B/1 : To (E301) (QD engine)
- E2 (E49) L/2 : To (E302) (TD engine)

# HARNESS LAYOUT

## Engine Control Harness

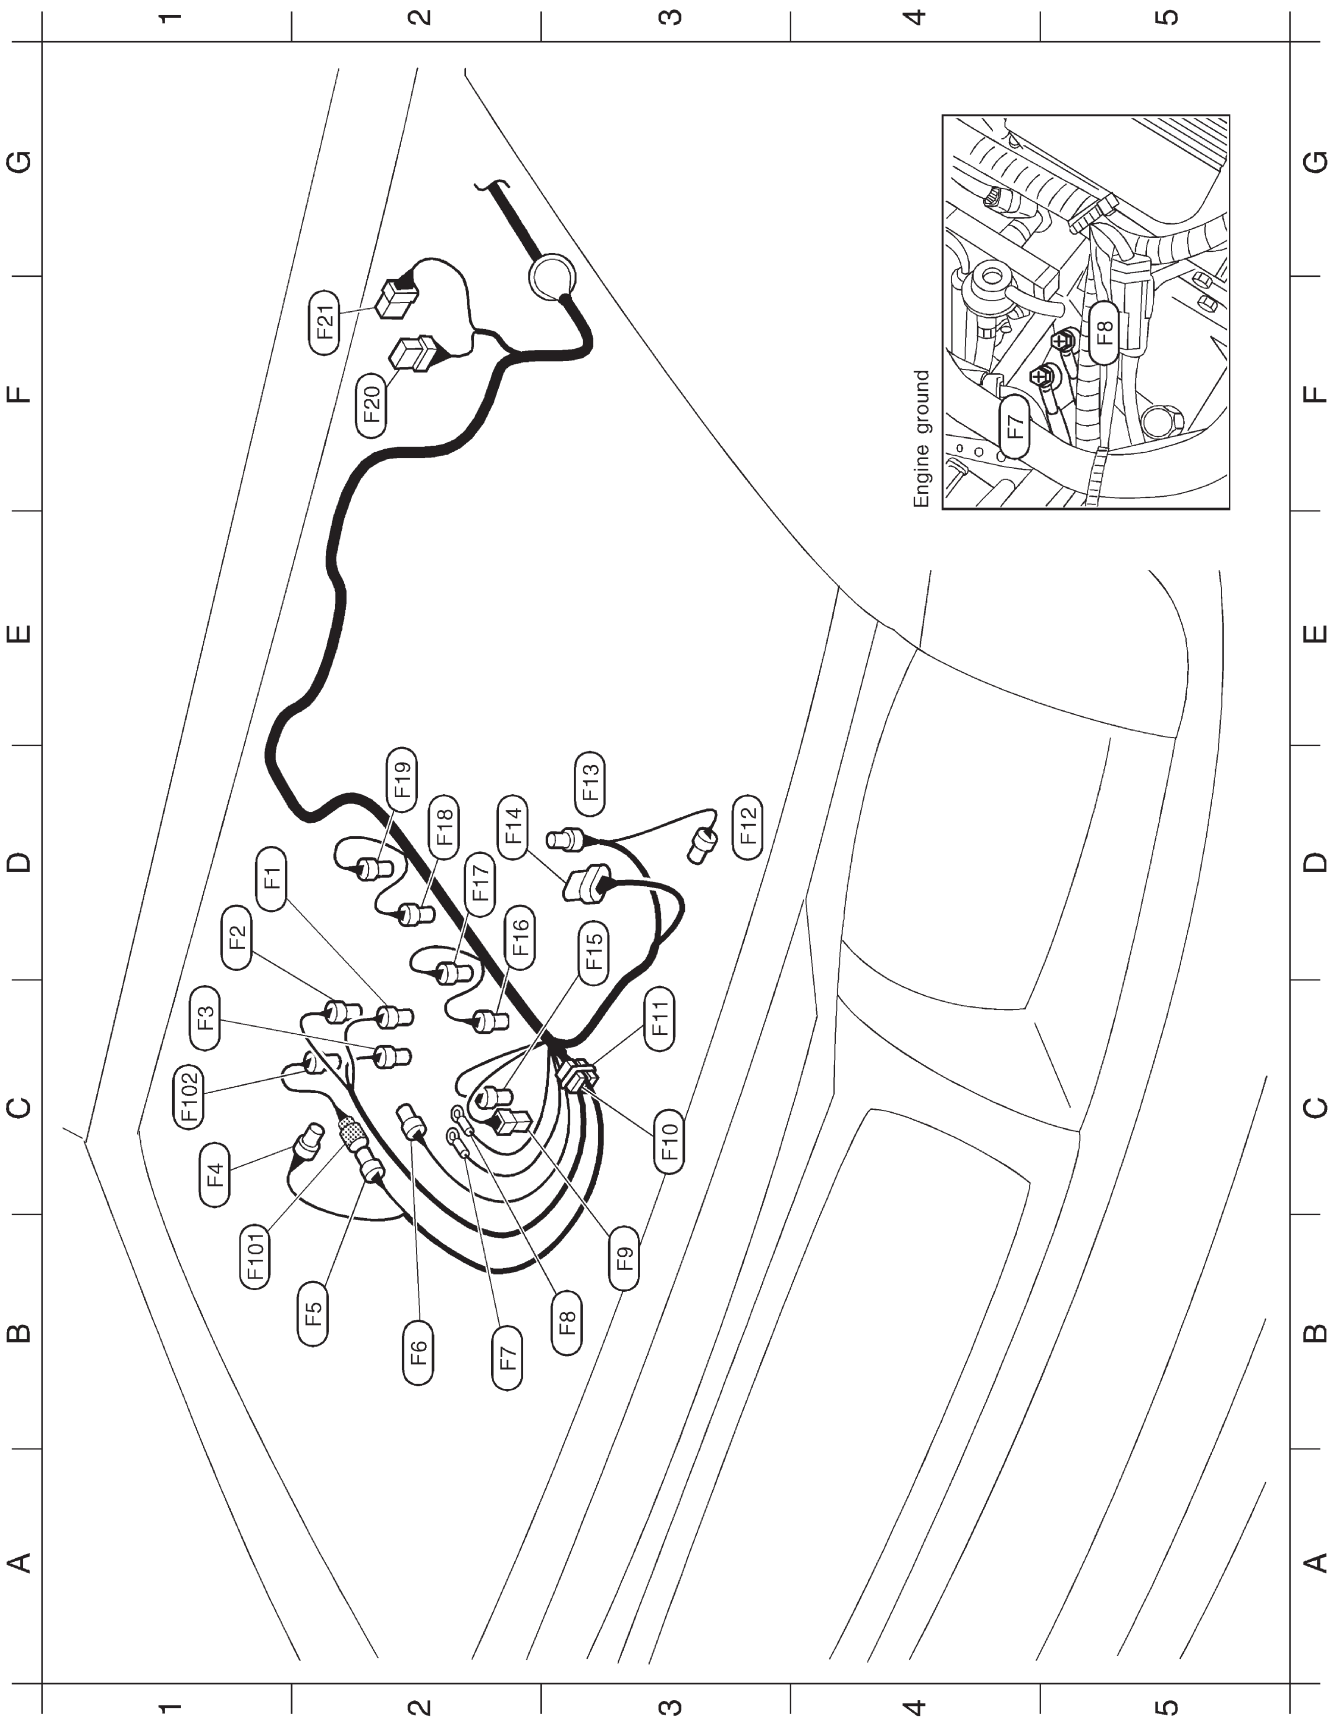

# HARNESS LAYOUT


## Engine Control Harness (Cont'd)

- D1 (F1) BR/2 : Swirl control valve control solenoid valve
- D1 (F2) B/2 : EVAP canister purge control solenoid valve
- C1 (F3) GY/4 : IACV-AAC valve • IACV-FICD solenoid valve
- C1 (F4) GY/3 : Mass air flow sensor
- B2 (F5) GY/3 : To (F101)
- B2 (F6) GY/2 : Intake air temperature sensor
- B2 (F7) — : Engine ground
- B3 (F8) — : Engine ground
- B3 (F9) B/1 : Thermal transmitter
- C3 (F10) W/2 : Condenser
- C3 (F11) -/2 : Resistor
- D3 (F12) B/1 : Not used
- D3 (F13) GY/2 : Distributor
- D2 (F14) GY/6 : Distributor
- D3 (F15) GY/2 : Engine coolant temperature sensor
- D2 (F16) B/2 : Injector No.1
- D2 (F17) B/2 : Injector No.2
- D2 (F18) B/2 : Injector No.3
- D2 (F19) B/2 : Injector No.4
- F2 (F20) GY/8 : Wiper amplifier or jumping connector
- F2 (F21) W/6 : Wiper motor


- (F51) GY/8 : ECM (ECCS control module)
- (F52) — : Body ground
- (F53) GY/6 : Joint connector
- (F54) W/24 : To (M48)
- (F55) W/10 : To (M47)

### Sub-harness


- B1 (F101) GY/3 : To (F5)
- C1 (F102) BR/3 : Throttle position sensor

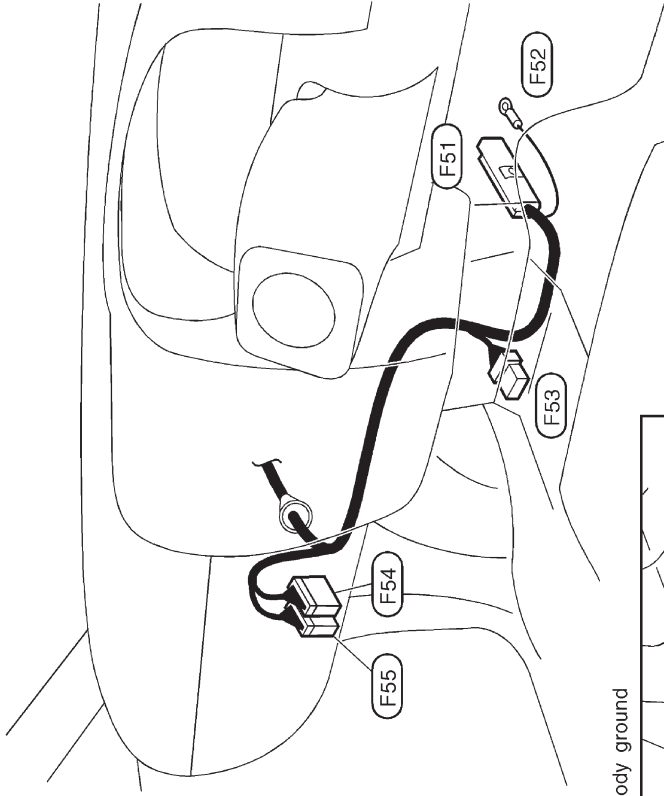


Body ground

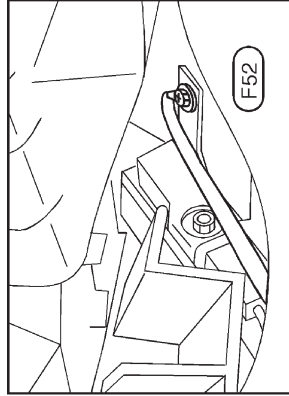

Resistor (F11)

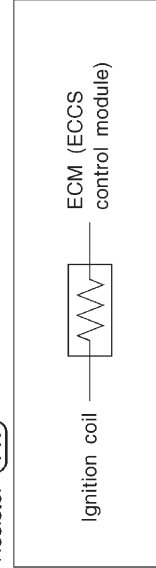


Condenser (F10)

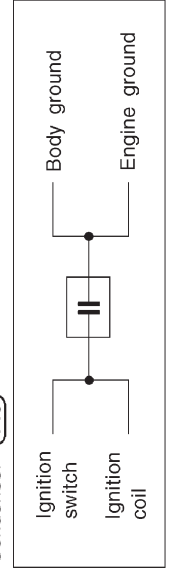

# HARNESS LAYOUT

## Engine Harness

KA ENGINE

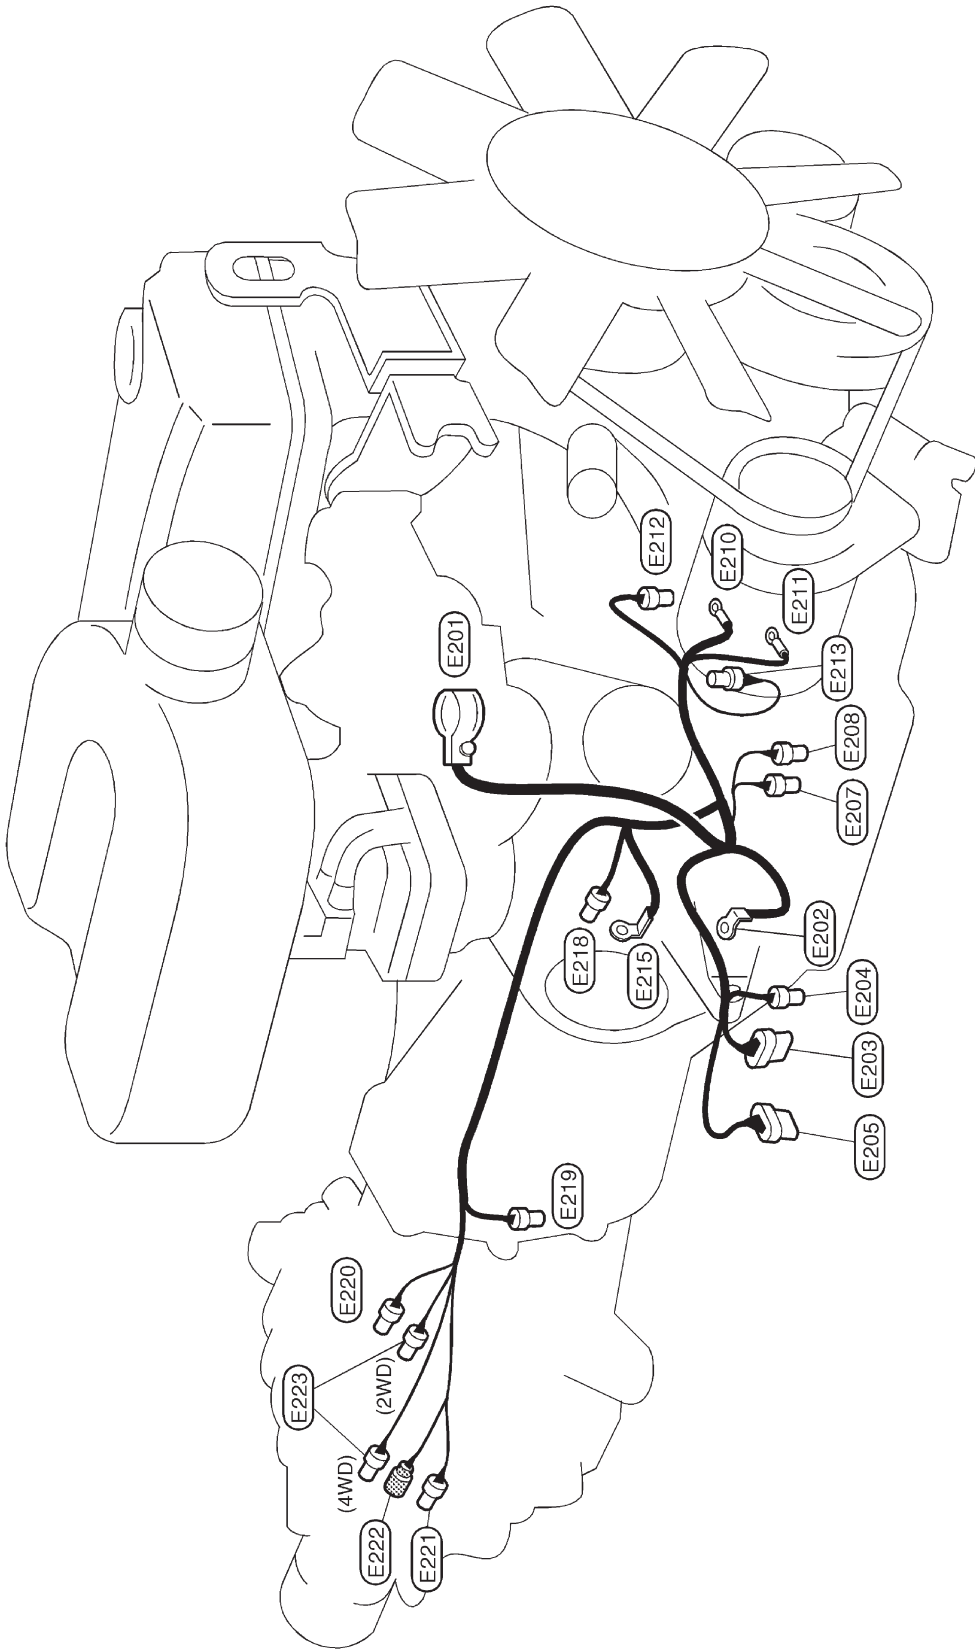


- (E213) B/1 : Oil pressure switch
- (E215) — : Starter motor
- (E218) GY/1 : Starter motor
- (E219) GY/2 : Back-up lamp switch
- (E220) B/2 : Neutral position switch
- (E221) GY/1 : Transfer switch (4WD models)
- (E222) GY/1 : Transfer switch (4WD models)
- (E223) GY/2 : Vehicle speed sensor

- (E201) — : Battery
- (E202) — : Fusible link and fuse box
- (E203) B/8 : To (E30)
- (E204) GY/2 : To (E29)
- (E205) GY/8 : To (E33)
- (E207) GY/2 : Power steering oil pressure switch (RHD 4WD models)
- (E208) B/2 : Power steering oil pressure switch (Except RHD 4WD models)
- (E210) — : Alternator (B)
- (E211) — : Alternator (E)
- (E212) GY/2 : Alternator (S.L)

# HARNESS LAYOUT

## Engine Harness (Cont'd)


TD ENGINE

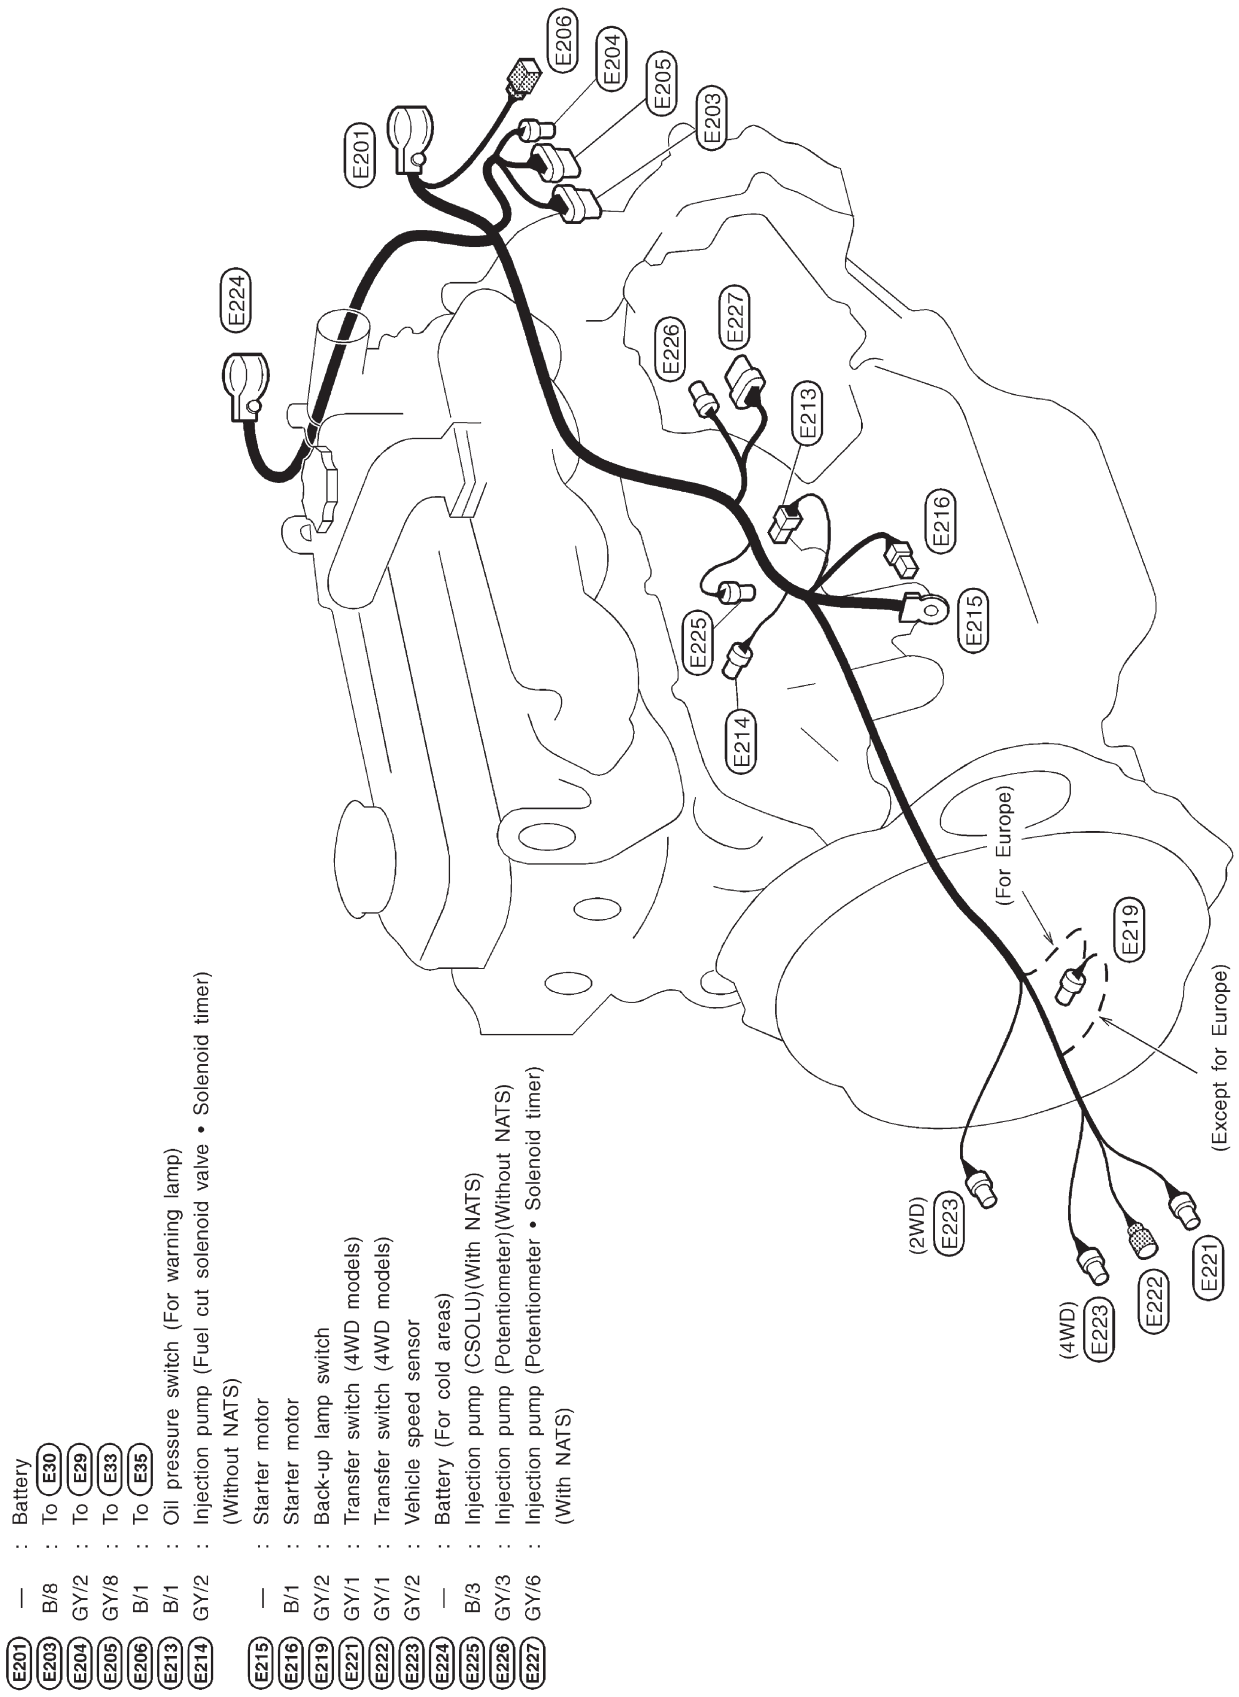

- E201 : Battery
- E203 : To E30
- E204 : To E29
- E205 : To E33
- E206 : To E35
- E213 : Oil pressure switch (For warning lamp)
- E214 : Injection pump (Fuel cut solenoid valve • Solenoid timer) (Without NATS)
- E215 : Starter motor
- E216 : Starter motor
- E219 : Back-up lamp switch
- E221 : Transfer switch (4WD models)
- E222 : Transfer switch (4WD models)
- E223 : Vehicle speed sensor
- E224 : Battery (For cold areas)
- E225 : Injection pump (CSOLU)(With NATS)
- E226 : Injection pump (Potentiometer)(Without NATS)
- E227 : Injection pump (Potentiometer • Solenoid timer) (With NATS)


# HARNESS LAYOUT

## Alternator Harness

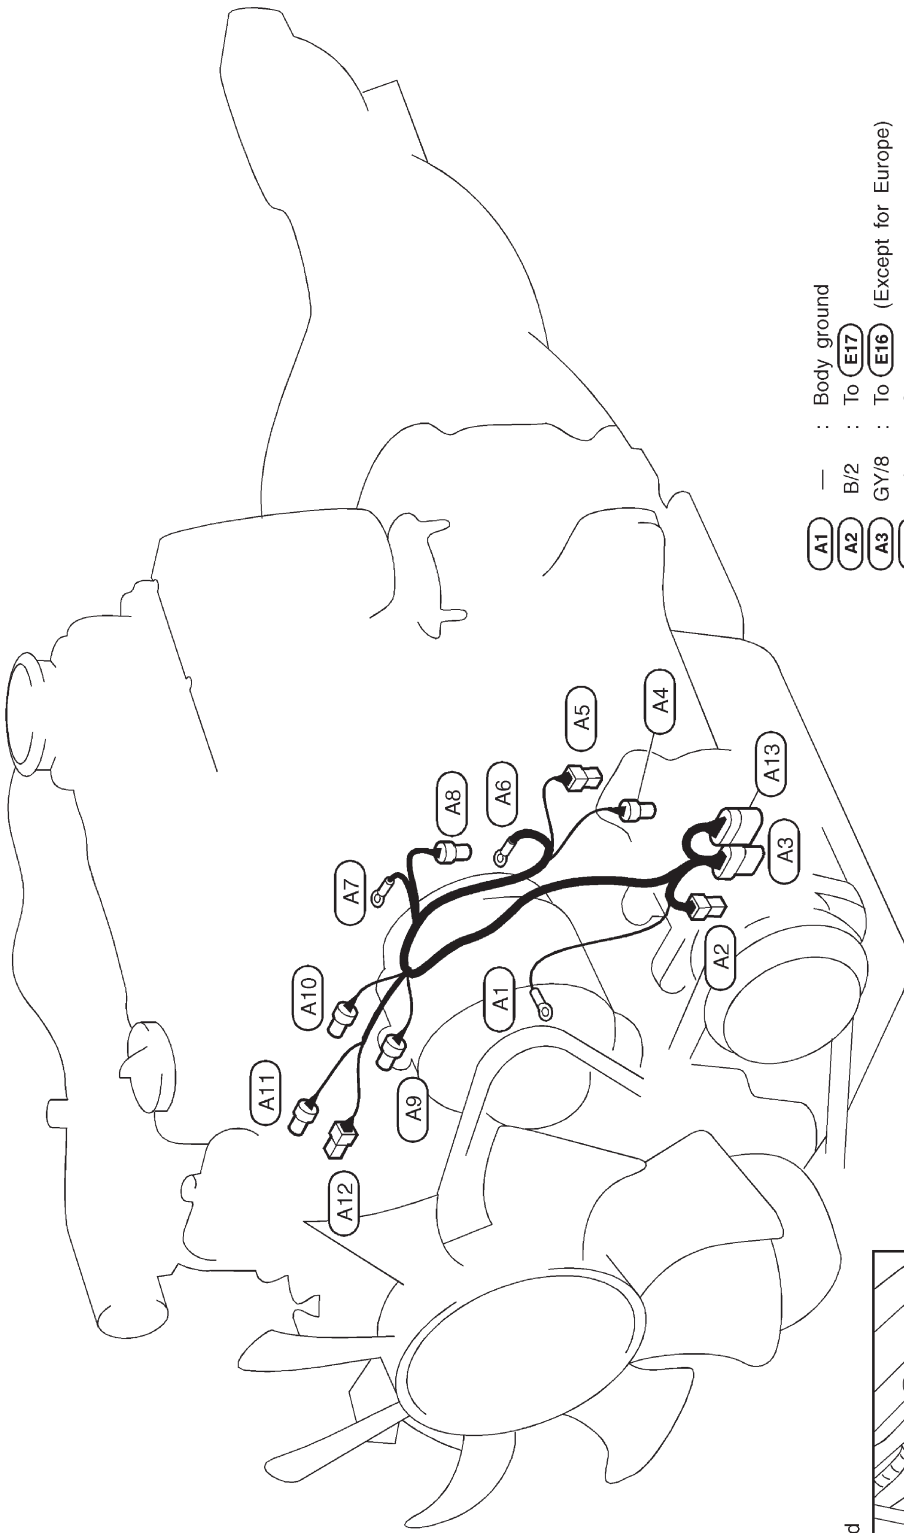

(A1)	—	: Body ground
(A2)	B/2	: To (E17) (Except for Europe)
(A3)	GY/8	: To (E16) (Except for Europe)
(A4)	B/1	: Compressor
(A5)	B/1	: Oil pressure switch (For fuel heater)
(A6)	—	: Alternator (B)
(A7)	—	: Alternator (E)
(A8)	GY/2	: Alternator (S,L)
(A9)	GY/2	: Not used (Except for Europe)
(A10)	BR/2	: Revolution sensor
(A11)	GY/2	: Engine coolant temperature sensor
(A12)	B/1	: Thermal transmitter
(A13)	GY/10	: To (E68) (For Europe)


Body ground

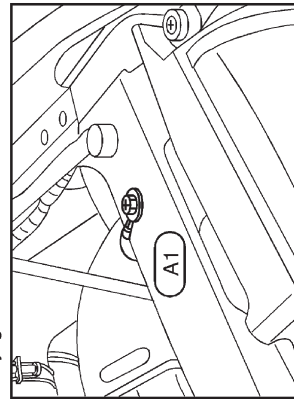

# HARNESS LAYOUT


## LHD MODELS

### Instrument Harness

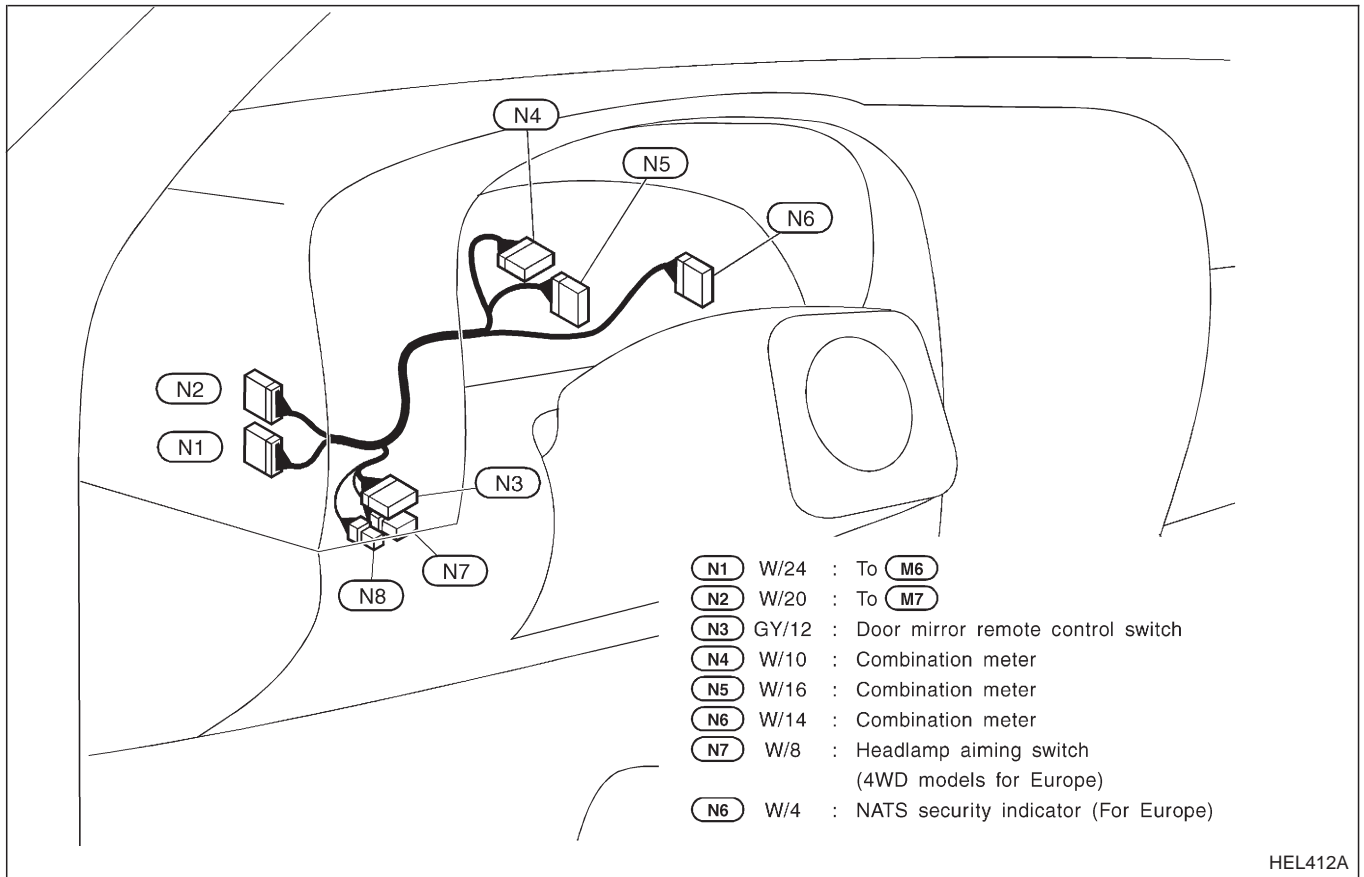

HEL412A

## RHD MODELS

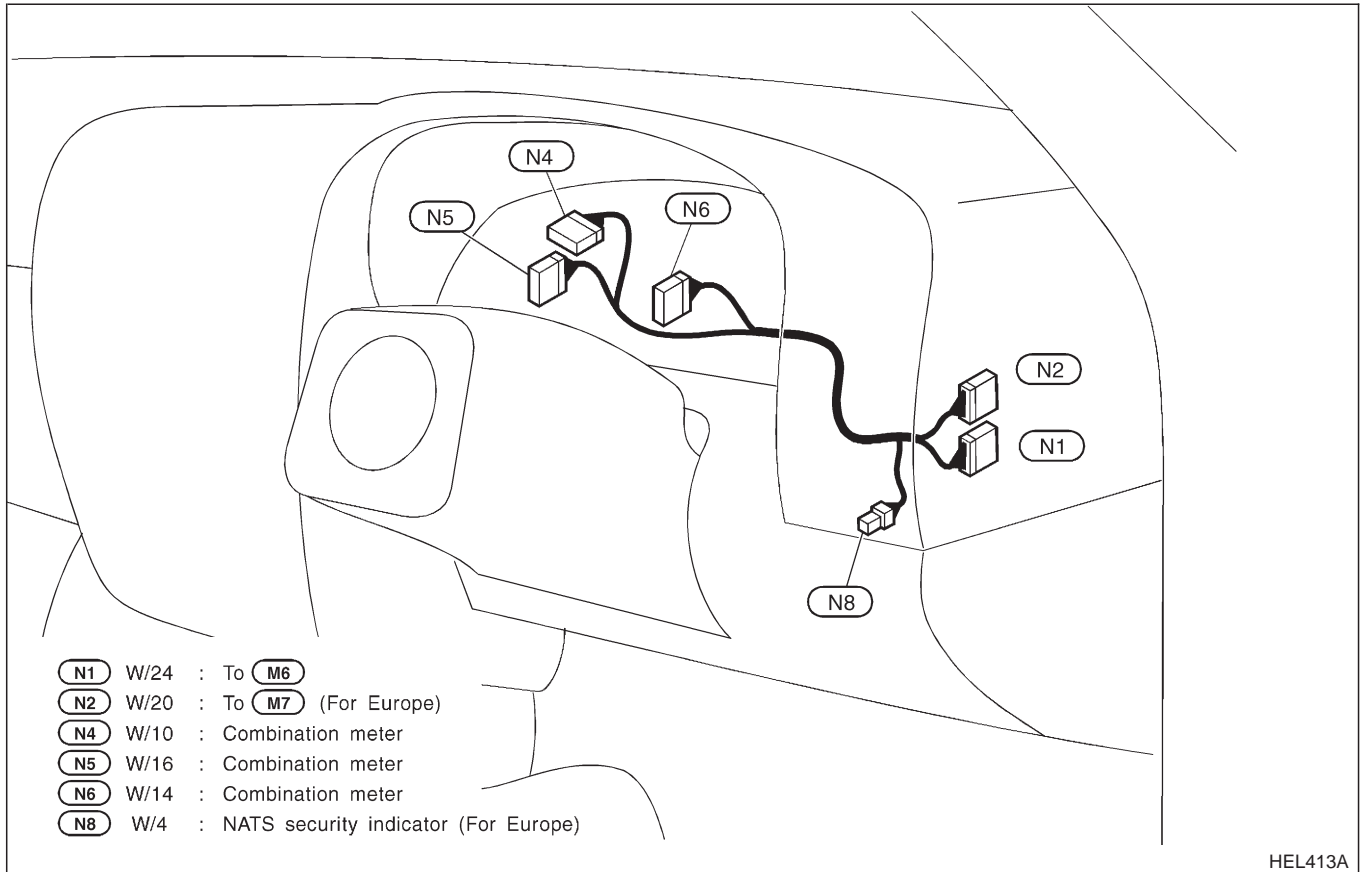


HEL413A




# HARNES LAYOUT

## SINGLE AND KING CAB

## Room Lamp Harness/LHD Models

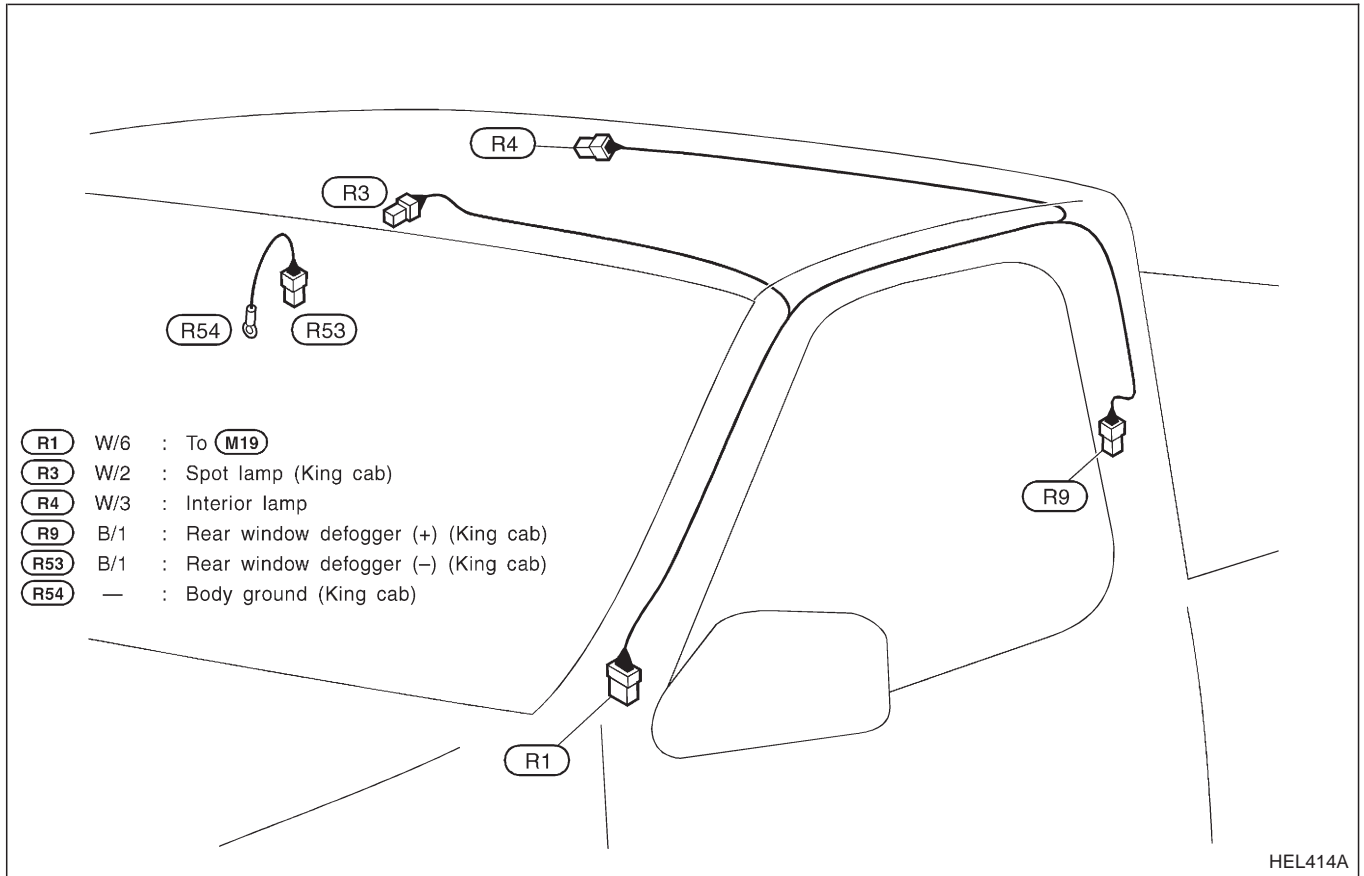


## DOUBLE CAB

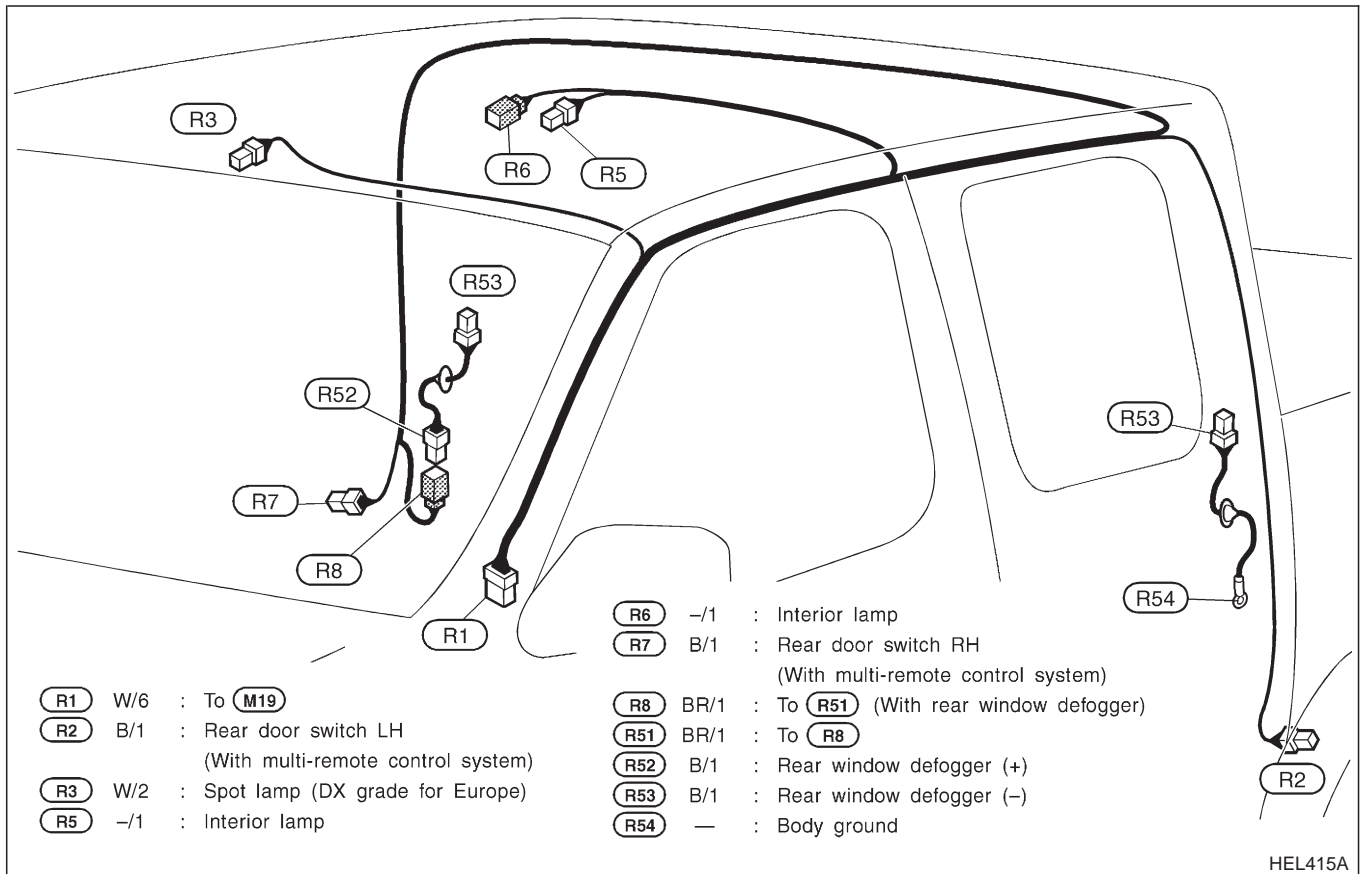

# HARNESS LAYOUT


## SINGLE AND KING CAB

## Room Lamp Harness/RHD Models

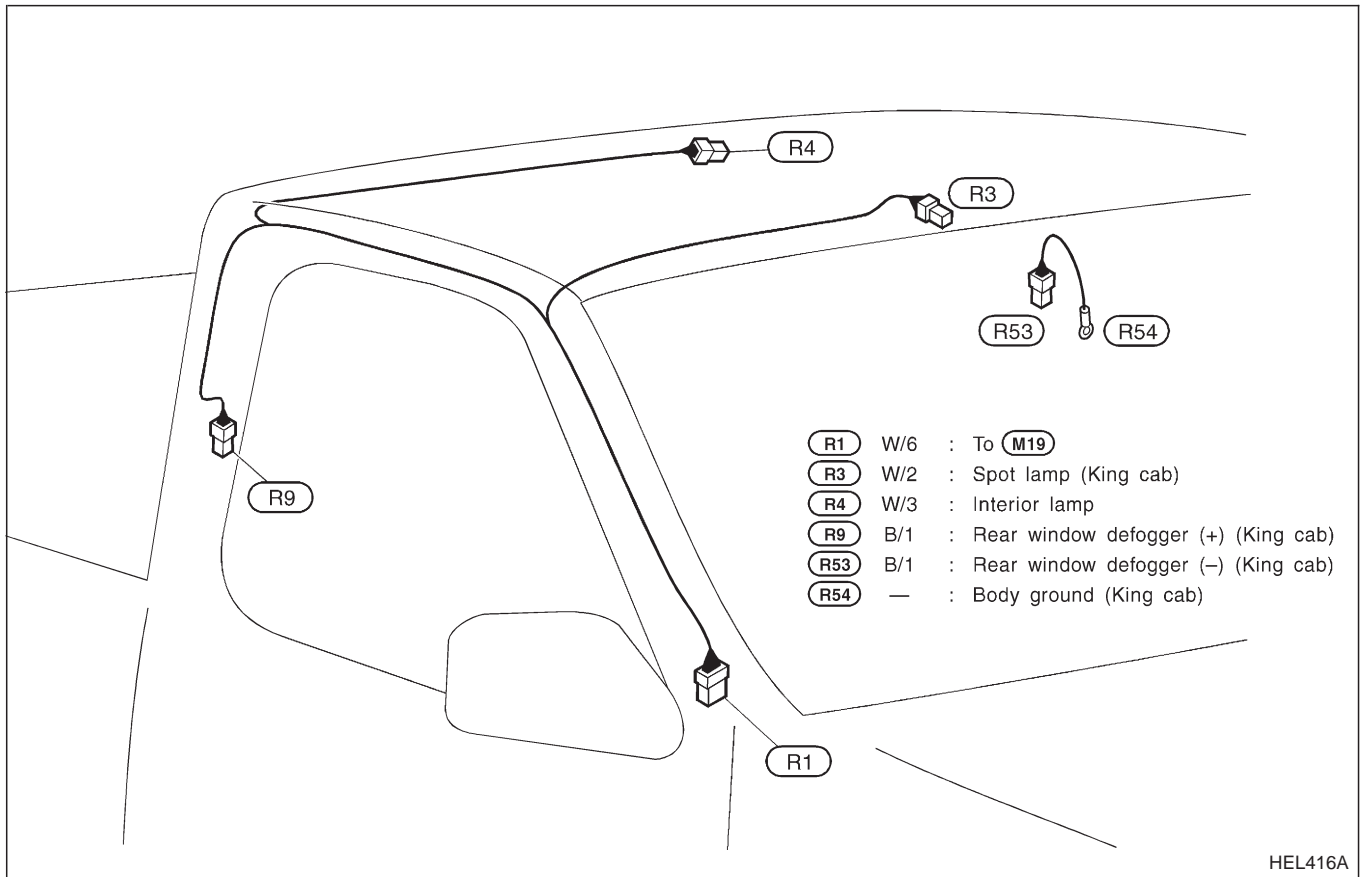

HEL416A

## DOUBLE CAB

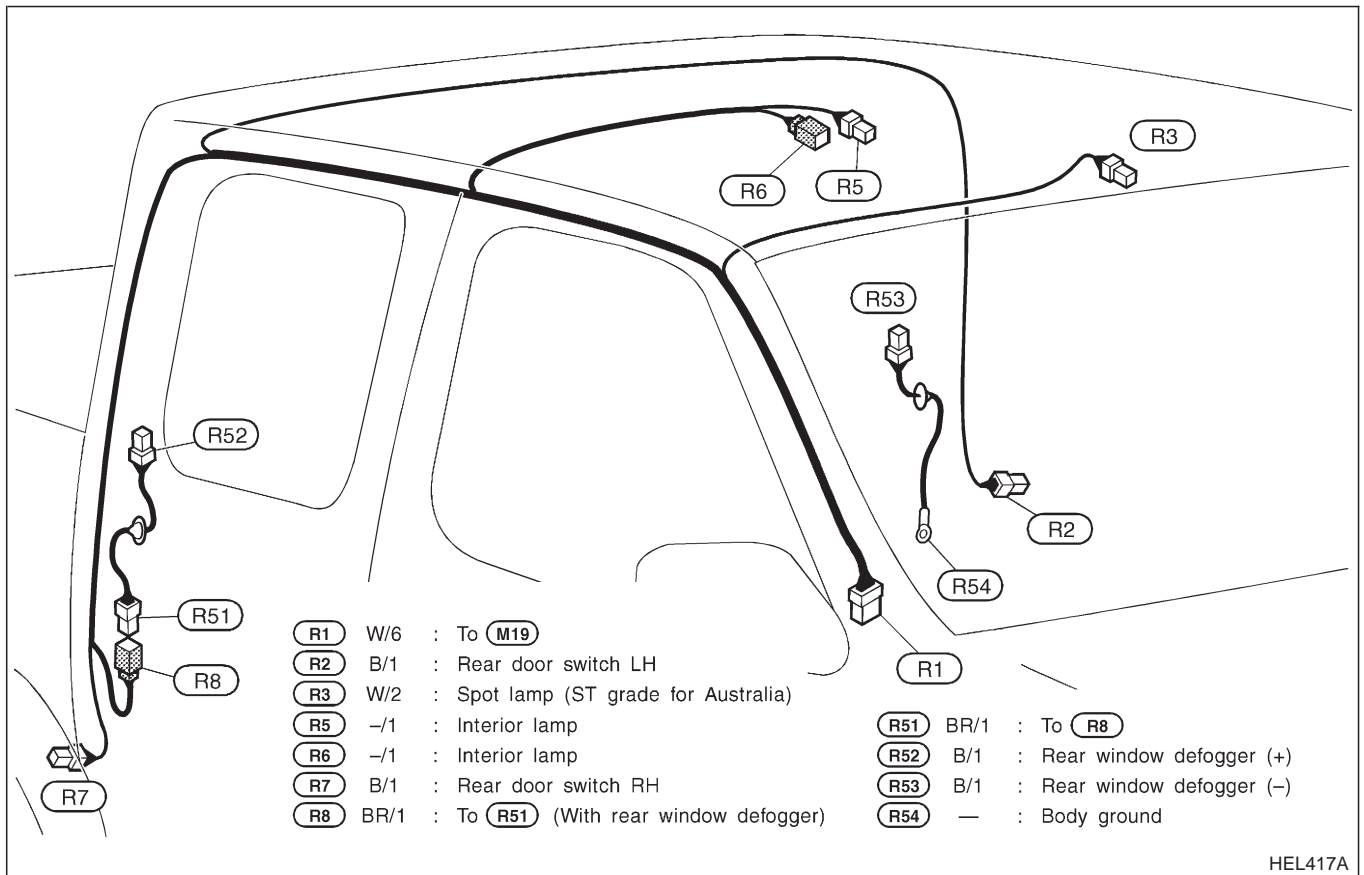

HEL417A

# HARNESS LAYOUT


## Chassis Harness and Tail Harness

### Tail harness

- T1** : W/6 : Rear combination lamp RH  
(A-chassis models and except for Europe and Australia)
- T2** : W/8 : Rear combination lamp RH  
(For Europe, Australia and China except A-chassis models)
- T3** : GY/2 : License plate lamp RH (With step bumper)
- T4** : GY/8 : To **C7**
- T5** : GY/2 : License plate lamp RH (Without step bumper)
- T6** : GY/2 : License plate lamp LH (Without step bumper)
- T7** : B/2 : License plate lamp LH (With step bumper)
- T8** : W/6 : Rear combination lamp LH  
(A-chassis models and except for Europe and Australia)
- T9** : W/8 : Rear combination lamp LH  
(For Europe, Australia and China except A-chassis models)
- T10** : GY/2 : Rear fog lamp (RHD A-chassis models for Europe)
- T11** : B/2 : To **C8** (For Europe)
- T12** : GY/2 : Rear fog lamp (LHD A-chassis models for Europe)

### Chassis harness

- C1** : W/12 : To **M111** (Except for Europe)
- C2** : W/6 : To **M112** (With ABS)
- C3** : GY/6 : Fuel tank gauge unit (With electric fuel pump)
- C4** : GY/3 : Fuel tank gauge unit (With mechanical fuel pump)
- C5** : GY/4 : To rear wheel sensor sub-harness (For ABS)(4WD models)
- C6** : GY/2 : Rear wheel sensor (For ABS)(2WD models)
- C7** : GY/8 : To **T4**
- C8** : B/2 : To **T11** (For Europe)
- C9** : W/16 : To **M121** (For Europe)

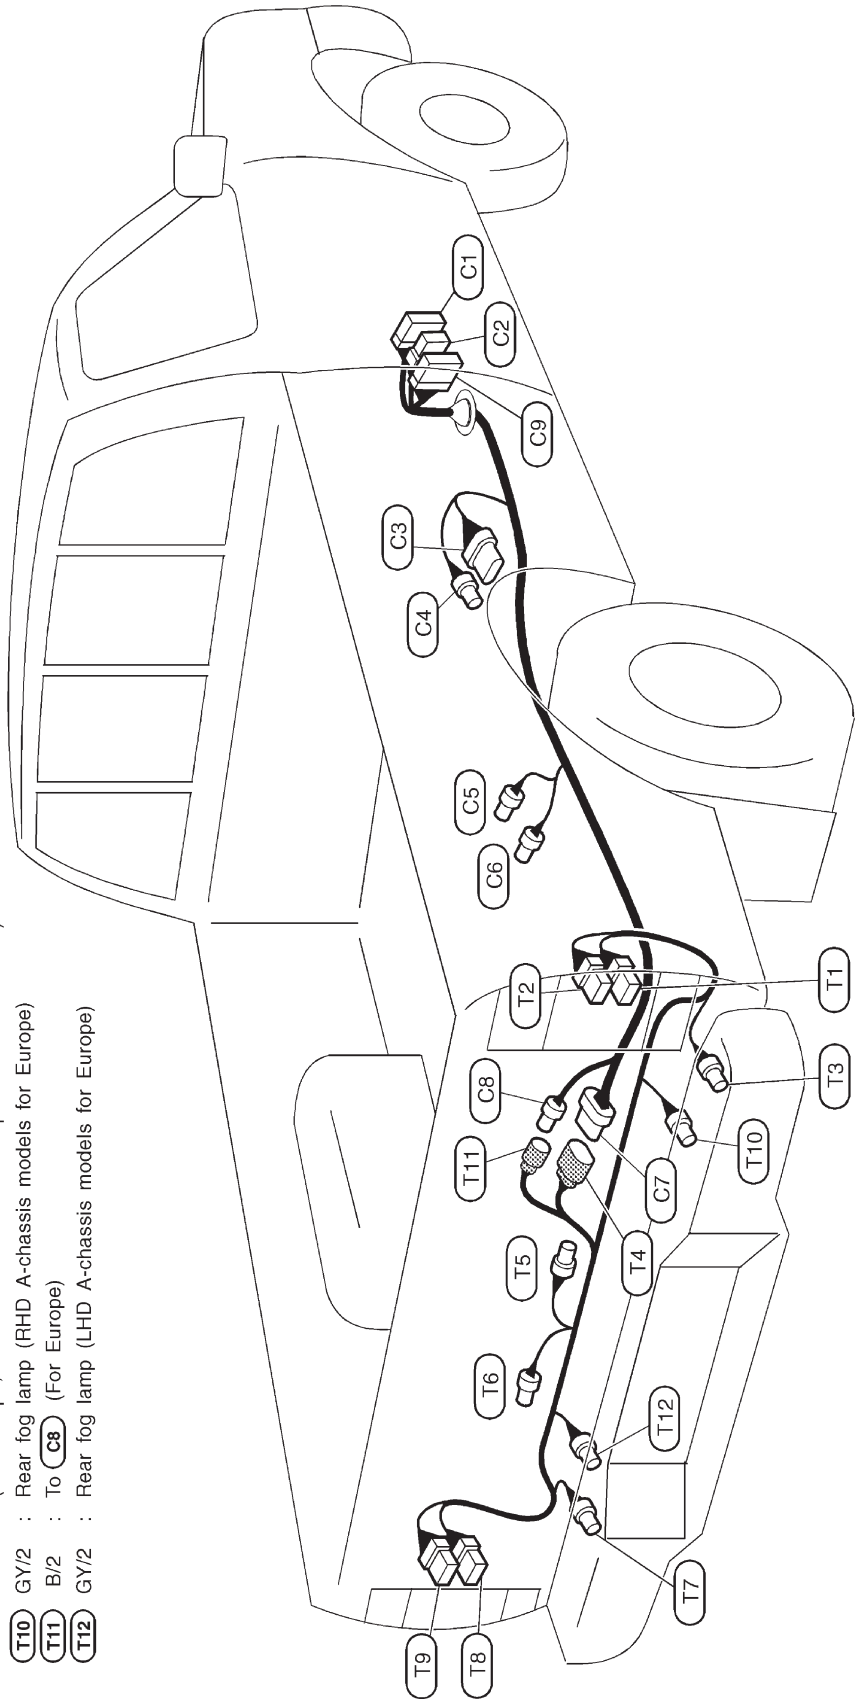


# HARNESS LAYOUT

## LHD MODELS

### Front Door Harness (LH side)


- |  |  |
|--|--|
| (D1) W/12 : To (M3)  | (D6) W/12 : Power window main switch<br>(With front power window only)                     |
| (D2) W/12 : To (M4) (With power window)  | (D7) B/2 : Power window regulator (With power window)                                      |
| (D3) BR/2 : Front speaker  | (D8) GY/2 : Lock knob switch (With power door lock<br>without multi-remote control system) |
| (D4) GY/5 : Door mirror actuator (Double cab and<br>King cab models with power window) | (D9) BR/3 : Not used (With multi-remote control system)                                    |
| (D5) W/16 : Power window main switch<br>(With front and rear power window)             | (D10) GY/4 : Door lock actuator (With multi-remote control system)                         |

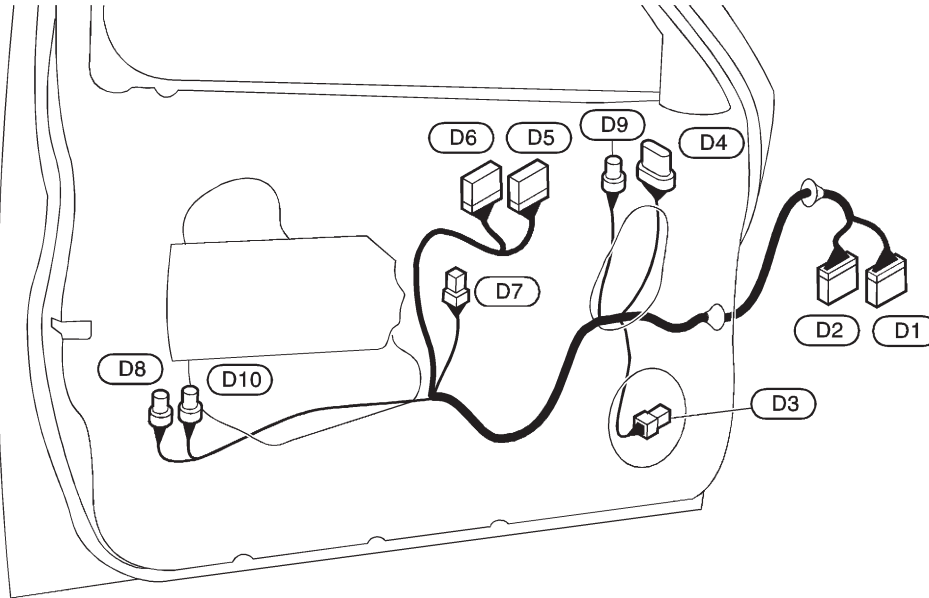

HEL419A

## RHD MODELS

- |   |
|---|
| (D31) W/12 : To (M49)                                   |
| (D32) W/6 : To (M50) (With power window)                |
| (D33) BR/2 : Front speaker                              |
| (D35) W/8 : Power window sub-switch (With power window) |
| (D37) B/2 : Power window regulator (With power window)  |
| (D38) GY/4 : Door lock actuator (With power door lock)  |

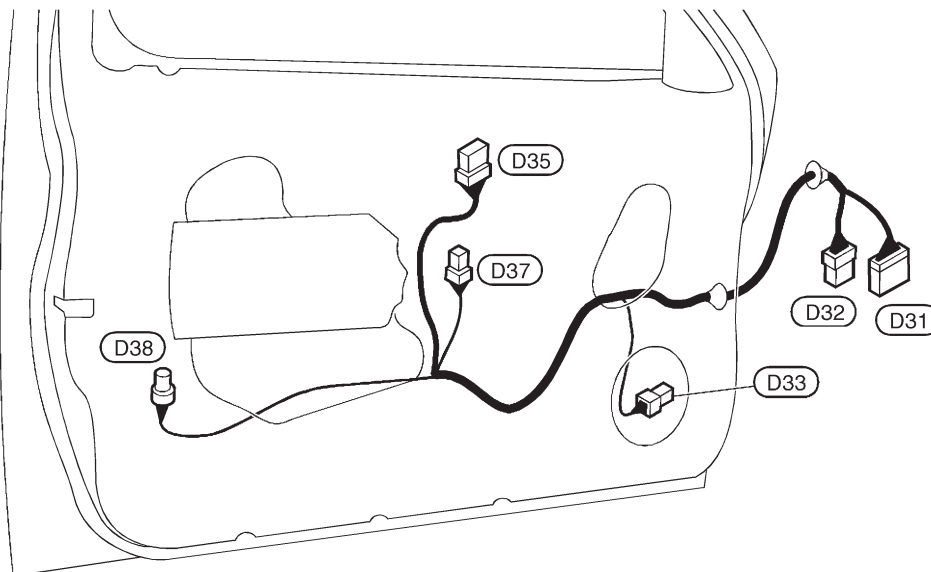


HEL420A

# HARNESS LAYOUT

## LHD MODELS

## Front Door Harness (RH side)


- (D31) W/12 : To (M49)
- (D32) W/6 : To (M50) (With power window)
- (D33) BR/2 : Front speaker
- (D34) GY/5 : Door mirror actuator (With power window)
- (D35) W/8 : Power window sub-switch (With power window)
- (D37) B/2 : Power window regulator (With power window)
- (D38) GY/4 : Door lock actuator (With power door lock)

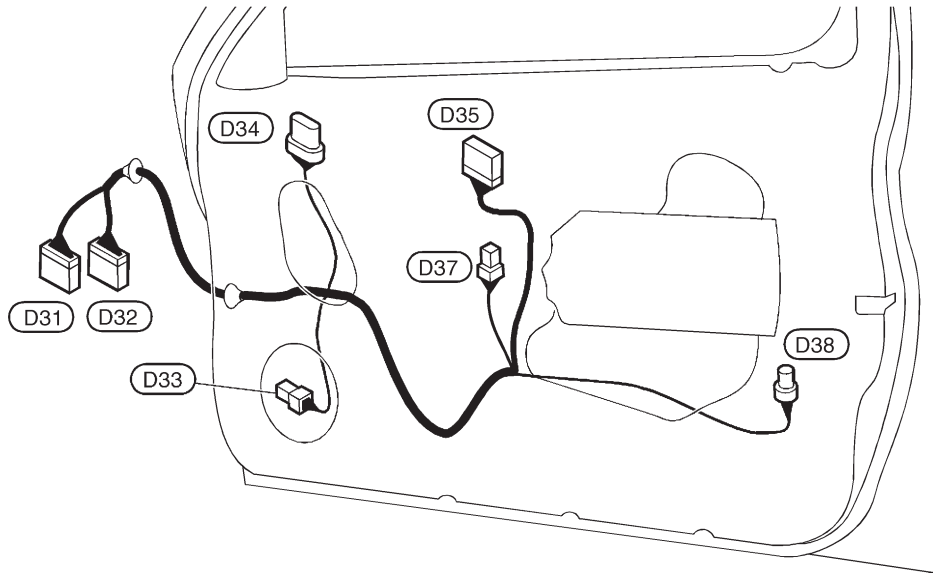

HEL880

## RHD MODELS

- (D1) W/12 : To (M3)
- (D2) W/12 : To (M4) (With power window)
- (D3) BR/2 : Front speaker
- (D5) W/16 : Power window main switch (With front and rear power window)
- (D7) B/2 : Power window regulator (With power window)
- (D8) GY/2 : Lock knob switch (With power door lock)

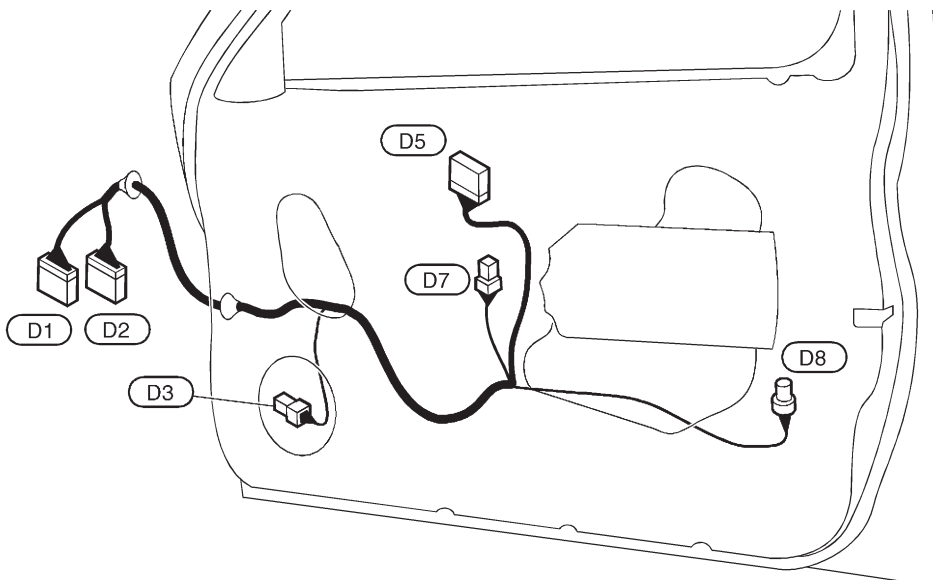


HEL881

# HARNESS LAYOUT

## LH SIDE

## Rear Door Harness


- (D51) W/3 : To (M107)
- (D52) W/2 : To (M106)
- (D53) W/2 : To (M105)
- (D54) B/2 : Rear speaker
- (D55) B/2 : Power window regulator
- (D56) GY/4 : Door lock actuator
- (D57) W/8 : Power window sub-switch

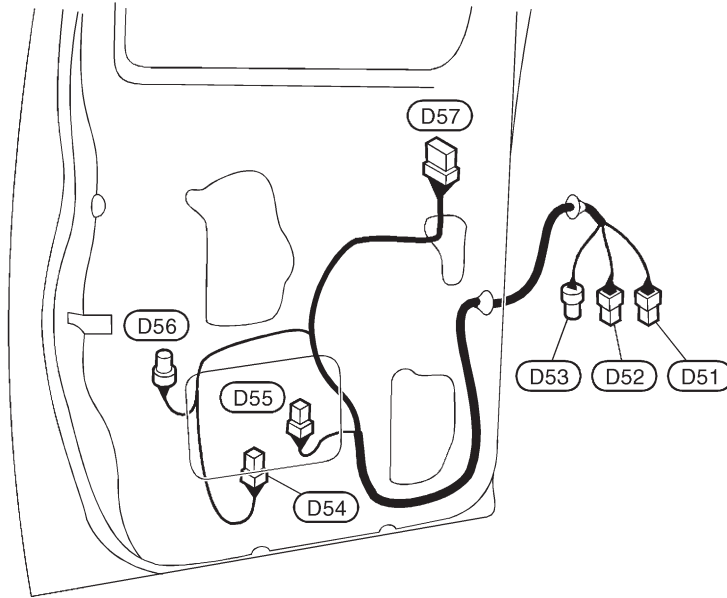

HEL421A

## RH SIDE

- (D71) W/3 : To (M115)
- (D72) W/2 : To (M114)
- (D73) W/2 : To (M113)
- (D74) B/2 : Rear speaker
- (D75) B/2 : Power window regulator
- (D76) GY/4 : Door lock actuator
- (D77) W/8 : Power window sub-switch

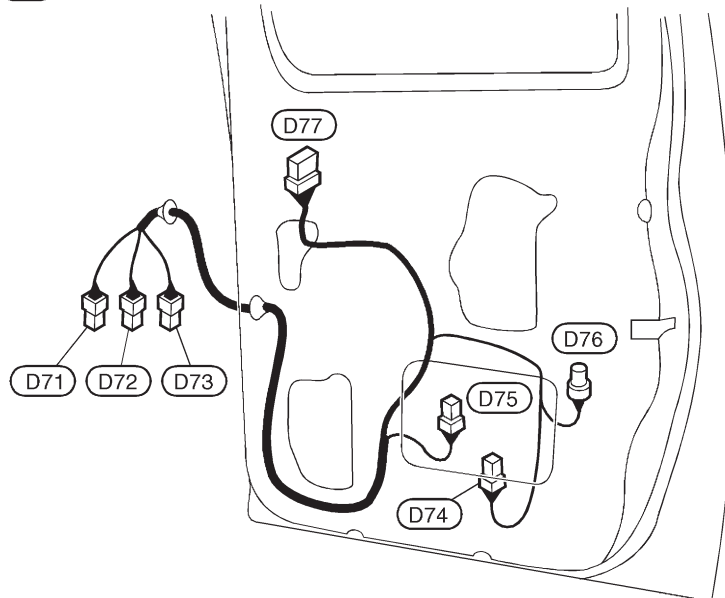

HEL422A

## BULB SPECIFICATIONS

---

### Headlamp

	Wattage (W)
High/low (Semi-sealed beam)	60/55 (H4)

### Exterior Lamp

	Wattage (W)	
Front combination lamp	Front turn signal	21
	Parking	5
Side turn signal lamp		5
Rear combination lamp	Turn signal	21
	Stop/Tail	21/5
	Back-up	21
	Fog (Except A-chassis)	21
Rear fog lamp (A-chassis)		21
License plate lamp	Standard bumper	5
	Step bumper	21

### Interior Lamp

	Wattage (W)
Interior room lamp	10
Spot lamp	8

## WIRING DIAGRAM CODES (CELL CODES)

Use the chart below to find out what each wiring diagram code stands for.

Refer to the wiring diagram code in the alphabetical index to find the location (page number) of each wiring diagram.

Code	Section	Wiring Diagram Name
AAC/V	EC	IACV-AAC Valve
ABS	BR	Anti-lock Brake System
A/C, M	HA	Manual Air Conditioner
AUDIO	EL	Audio
BACK/L	EL	Back-up Lamp
BUZZER	EL	Warning Buzzer
CHARGE	EL	Charging System
CHOKE	EC	Automatic Choke
CIGAR	EL	Cigarette Lighter
CLOCK	EL	Clock
CMPS	EC	Camshaft Position Sensor
COOL/F	LC	Cooling Fan Control
DEF	EL	Rear Window Defogger
DIMDIP	EL	Headlamp — With Dim-dip Lamp System
D/LOCK	EL	Power Door Lock
DTRL	EL	Headlamp — With Daytime Light System
ECTS	EC	Engine Coolant Temperature Sensor
EGRC/V	EC	EGRC — Solenoid Valve
FCUT	EC	Fuel Cut Solenoid Valve
F/HEAT	EC	Fuel Heater System
FICD	EC	IACV-FICD Solenoid Valve
FIPT	EC	ISC-FI Pot
FPCM	EC	Fuel Pump Control Module
F/PUMP	EC	Fuel Pump
F/RTN	EC	Fuel Return Control Solenoid Valve
GLOW	EC	Quick-glow System
H/AIM	EL	Headlamp Aiming Control
HEATER	HA	Heater
H/LAMP	EL	Headlamp
HLC	EL	Headlamp Washer
HO2S	EC	Heated Oxygen Sensor
HORN	EL	Horn
H/SEAT	EL	Heated Seat
IATS	EC	Intake Air Temperature Sensor
IDLE	EC	IACV-Idle Up Control

Code	Section	Wiring Diagram Name
IGN	EC	Ignition System
IGN/SG	EC	Ignition Signal
ILL	EL	Illumination
INJECT	EC	Injector
INT/L	EL	Interior and Spot Lamps
MAFS	EC	Mass Air Flow Sensor
MAIN	EC	Main Power Supply and Ground Circuit
METER	EL	Speedometer, Tachometer, Temp. and Fuel Gauges
MIL/DL	EC	MIL and Data Link Connector For CONSULT
MIRROR	EL	Power Door Mirror
MULTI	EL	Multi-remote Control System
NATS	EL	Nissan Anti-theft System
P/ANT	EL	Power Antenna
PGC/V	EC	Canister Purge Control Solenoid Valve
PLA	EC	Partial Load Advance Control
PNP/SW	EC	Park/Neutral Position Switch
POWER	EL	Power Supply Routing
PST/SW	EC	Power Steering Oil Pressure Switch
R/FOG	EL	Rear Fog Lamp
SRS	RS	Supplemental Restraint System
S/SIG	EC	Start Signal
START	EL	Starting System
STOP/L	EL	Stop Lamp
SWL/V	EC	Swirl Control Valve Control Solenoid Valve
TAIL/L	EL	Parking, License and Tail Lamps
TPS	EC	Throttle Position Sensor
TURN	EL	Turn Signal and Hazard Warning Lamps
VSS	EC	Vehicle Speed Sensor
WARN	EL	Warning Lamps
WINDOW	EL	Power Window
WIPER	EL	Front Wiper and Washer