
BE0HO-03

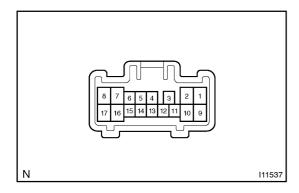


#### **INSPECTION**

## 1. LHD models: INSPECT WIPER AND WASHER SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	7 – 16	Continuity
INT	7 – 16	Continuity
LO	7 – 17	Continuity
HI	8 – 17	Continuity
Washer OFF	-	No continuity
Washer ON	2 – 11	Continuity

If continuity is not as specified, replace the switch.

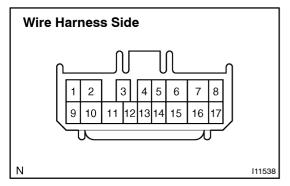


# 2. LHD models: INSPECT WIPER AND WASHER SWITCH CIRCUIT Connector disconnected:

Disconnect the connector from the motor and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity
17 – Ground	Ignition switch LOCK or ACC	No voltage
17 – Ground	Ignition switch ON	Battery voltage


If circuit is not as specified, inspect the circuits connected to other parts.

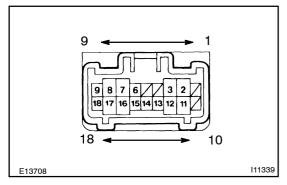

## 3. RHD models: INSPECT WIPER AND WASHER SWITCH CONTINU-

Switch position	Tester connection	Specified condition
OFF	3 - 12 (Australia) 7 - 16 (Europe)	Continuity
INT	3 - 12 (Australia) 7 - 16 (Europe)	Continuity
LO	3 – 11 (Australia) 7 – 17 (Europe)	Continuity
НІ	2 – 11 (Australia) 8 – 17 (Europe)	Continuity
Washer OFF	-	No continuity
Washer ON	8 - 17 (Australia) 2 - 11 (Europe)	Continuity

If continuity is not as specified, replace the switch.

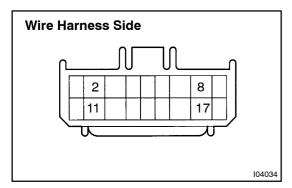


# 4. RHD models: INSPECT WIPER AND WASHER SWITCH CIRCUIT Connector disconnected:

Disconnect the connector from the motor and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
8 – Ground (Australia) 2 – Ground (Europe)	Constant	Continuity
11 – Ground (Australia) 17 – Ground (Europe)	Ignition switch LOCK or ACC	No voltage
11 – Ground (Australia) 17 – Ground (Europe)	Ignition switch ON	Battery voltage

If circuit is not as specified, inspect the circuits connected to other parts.

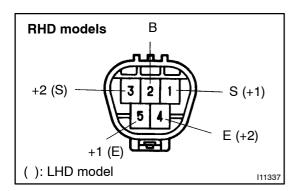

### 5. INSPECT WIPER MOTOR OPERATION Low speed:

(): LHD models

Connect the positive (+) lead from the battery to terminal 5 (1) and the negative (-) lead to terminal 4 (5), check that the motor operates at low speed.


If operation is not as specified, replace the motor.

## 6. INSPECT WIPER MOTOR OPERATION High speed:

#### (): LHD models

Connect the positive (+) lead from the battery to terminal 3 (4) and the negative (-) lead to terminal 4 (5), check that the motor operates at high speed.

If operation is not as specified, replace the motor.

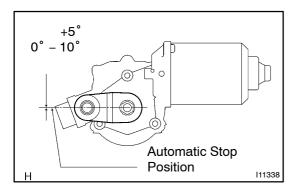


### 7. INSPECT WIPER MOTOR OPERATION Stopping at stop position:

#### (): LHD models

- (a) Operate the motor at low speed and stop the motor operation anywhere except at the stop position by disconnecting positive (+) lead from terminal 5 (1).
- (b) Connect terminals 1 and 5 (3).
- (c) Connect the positive (+) lead from the battery to terminal 2 and negative (-) lead to terminal 4 (5), check that the motor stops running at the stop position after the motor operates again.

If operation is not as specified, replace the motor.

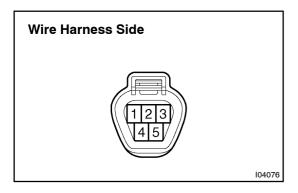


## 8. INSPECT WIPER MOTOR CIRCUIT Connector disconnected:

Disconnect the connector from the motor and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
4 – Ground	Constant	Continuity
2 – Ground	Ignition switch LOCK or ACC	No voltage
2 – Ground	Ignition switch ON	Battery voltage

If circuit is not as specified, inspect the circuits connected to other parts.

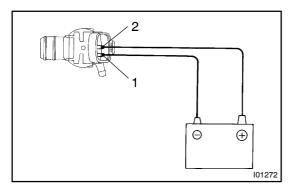


#### 9. INSPECT WASHER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, check that the motor operates.

#### **NOTICE:**

These tests must be performed quickly (within 20 seconds) to prevent the coil from burning out.

If operation is not as specified, replace the motor.

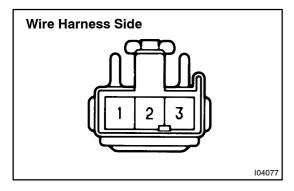

### 10. INSPECT WASHER MOTOR CIRCUIT Connector disconnected:

Disconnect the connector from the motor and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Ignition switch ON	Battery voltage

If circuit is not as specified, inspect the power source, wire harness and wiper switch.