

MECHANICAL SYSTEM TESTS

1. PERFORM MECHANICAL SYSTEM TESTS

(a) Measure the stall speed.

The object of this test is to check the overall performance of the transaxle and engine by measuring the stall speeds in the D position.

NOTICE:

- **Driving test should be done on a paved road (a nonskid road).**
- **Perform the test at the normal operating ATF (Automatic Transmission Fluid) temperature 50 to 80°C (122 to 176°F).**
- **Do not continuously run this test for longer than 10 seconds.**
- **To ensure safety, do this test in a wide, clear level area which provides good traction.**
- **The stall test should always be carried out in pairs. One technician should observe the conditions of wheels or wheel stoppers outside the vehicle while the other is doing the test.**

- (1) Chock the 4 wheels.
- (2) Connect an OBD II scan tool or intelligent tester to the DLC3.
- (3) Fully apply the parking brake.
- (4) Keep your left foot pressed firmly on the brake pedal.
- (5) Start the engine.
- (6) Shift into the D position. Press all the way down on the accelerator pedal with your right foot.
- (7) Quickly read the stall speed at this time.

Stall speed:

2,100 +- 150 rpm

Evaluation:

Problem	Possible cause
(a) Stall engine speed is low in D position	<ul style="list-style-type: none"> • Engine power output may be insufficient • Stator one-way clutch not operating properly <p>HINT: If the value is less than the specified value by 600 rpm or more, the torque converter could be faulty.</p>
(b) Stall engine speed is high in D position	<ul style="list-style-type: none"> • Line pressure is too low • Forward clutch slipping • U/D (Underdrive) brake slipping • U/D (Underdrive) one-way clutch is not operating properly • No.1 one-way clutch not operating properly • Improper fluid level

(b) Measure the time lag.

- (1) When the shift lever is shifted while the engine is idling, there will be a certain time lapse or lag before the shock can be felt. This is used for checking the condition of the clutch and brake.

NOTICE:


- **Perform the test at the normal operating ATF (Automatic Transmission Fluid) temperature: 50 to 80°C (122 to 176°F).**

- **Be sure to allow 1 minute interval between tests.**
 - **Perform the test three times, and measure the time lags. Calculate the average value of the three time lags.**
- (2) Connect an OBD II scan tool or intelligent tester to the DLC3.
 - (3) Fully apply the parking brake.
 - (4) Start and warm up the engine and check idle speed.
Idle speed:
approx. 700 rpm (In N position and A/C OFF)
 - (5) Shift the lever from N to D position. Using a stop watch, measure the time from when the lever is shifted until the shock is felt.
Time lag:
N → D less than 1.2 seconds
 - (6) In the same way, measure the time lag for N → R.
Time lag:
N → R less than 1.5 seconds

Evaluation (If N → D or N → R time lag is longer than the specified):

Problem	Possible cause
N → D time lag is longer	<ul style="list-style-type: none"> • Line pressure is too low • Forward clutch worn • No.1 one-way clutch is not operating properly • U/D (Underdrive) one-way clutch is not operating • U/D (Underdrive) brake worn
N → R time lag is longer	<ul style="list-style-type: none"> • Line pressure is too low • Reverse clutch worn • 1st and reverse brake worn • U/D (Underdrive) brake worn

HYDRAULIC TEST

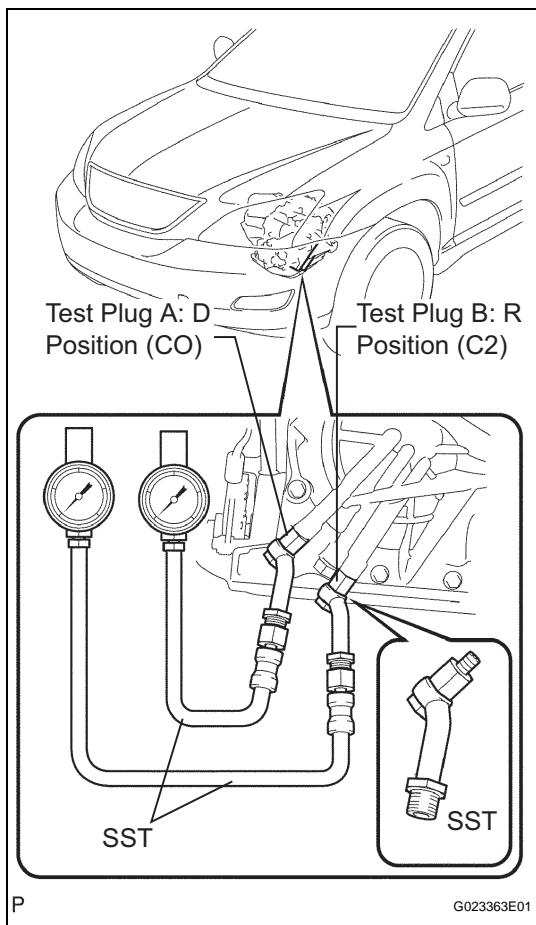

1. PERFORM HYDRAULIC TEST

(a) Measure the line pressure.

NOTICE:

- Perform the test at the normal operating ATF (Automatic Transmission Fluid) temperature: 50 to 80°C (122 to 176°F).
- The line pressure test should always be carried out in pairs. One technician should observe the conditions of wheels or wheel stoppers outside the vehicle while the other is performing the test.
- Be careful to prevent SST hose from interfering with the exhaust pipe.
- This Check must be conducted after checking and adjusting engine.
- Perform under condition that A/C is OFF.
- When conducting stall test, do not continue more than 10 seconds.

- (1) Warm up the ATF (Automatic Transmission Fluid).
- (2) Lift the vehicle up.
- (3) Remove the engine under cover.
- (4) Connect intelligent tester to DLC3.
- (5) Remove the test plug A on the transaxle case front left side and install the SST.

SST 09992-00095 (09992-00231, 09992-00271)

NOTICE:


There is a difference in installation point between D position and R position.

- (6) Start the engine.
- (7) Using intelligent tester, shift to D position and hold 3rd gear by active test, and measure the line pressure in idling.

Specified line pressure:

Condition	D position kPa (kgf / cm ² , psi)
Idling	372 to 412 kPa (3.8 to 4.2 kgf/cm ² , 54 to 60 psi)

- (8) Turn the ignition switch off.

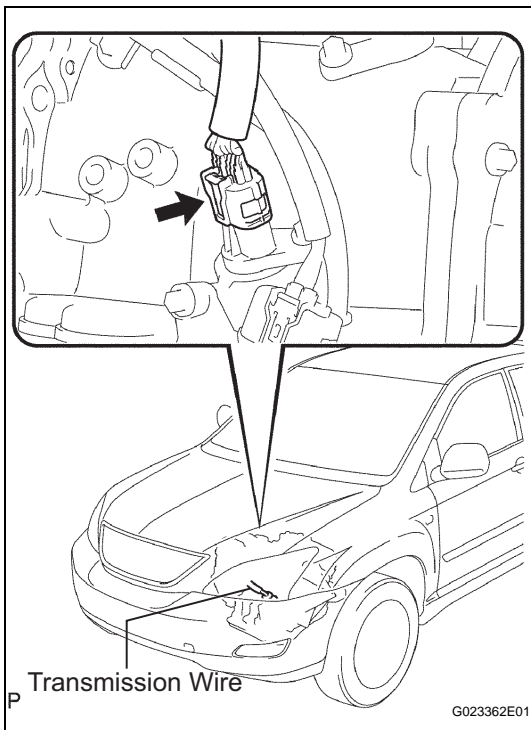

- (9) Disconnect the connector of the transmission wire.
HINT:
Disconnect the connector only when performing the D position stall test.

- (10) Start the engine.
- (11) Firmly depress the brake pedal, shift to the D position, depress the accelerator pedal all the way down and check the line pressure while the stall test is performed.

Specified line pressure:

Condition	R position kPa (kgf / cm ² , psi)
Stall test	931 to 1,031 kPa (9.5 to 10.5 kgf/cm ² , 135 to 150 psi)

- (12) Turn the ignition switch off.
- (13) Remove the SST, install the test plug A.
- (14) Remove the test plug B, install the SST and start engine.

SST 09992-00095 (09992-00231, 09992-00271)

- (15) Connect the transmission wire connector, depress the brake pedal firmly, shift to the R position and check that the line pressure while the engine is idling and during the stall test.

Specified line pressure:

Condition	R position kPa (kgf / cm ² , psi)
Idling	672 to 742 kPa (6.9 to 7.6 kgf/cm ² , 97 to 108 psi)
Stall test	1,768 to 1,968 kPa (18.0 to 20.1 kgf/cm ² , 256 to 285 psi)

- (16) Remove the SST, install the test plug B.
- (17) Clear the DTC.



Evaluation:

Problem	Possible cause
Measured values are higher than specified in all positions	<ul style="list-style-type: none"> • Shift solenoid valve (SLT) defective • Regulator valve defective
Measured values are lower than specified in all positions	<ul style="list-style-type: none"> • Shift solenoid valve (SLT) defective • Regulator valve defective • Oil pump defective • U/D (Underdrive) direct clutch defective
Pressure is low in the D position only	<ul style="list-style-type: none"> • D position circuit fluid leak • Forward clutch defective
Pressure is low in the R position only	<ul style="list-style-type: none"> • R position circuit fluid leak • Reverse clutch defective • 1st and reverse brake defective