


# DIRECT CLUTCH

## COMPONENTS

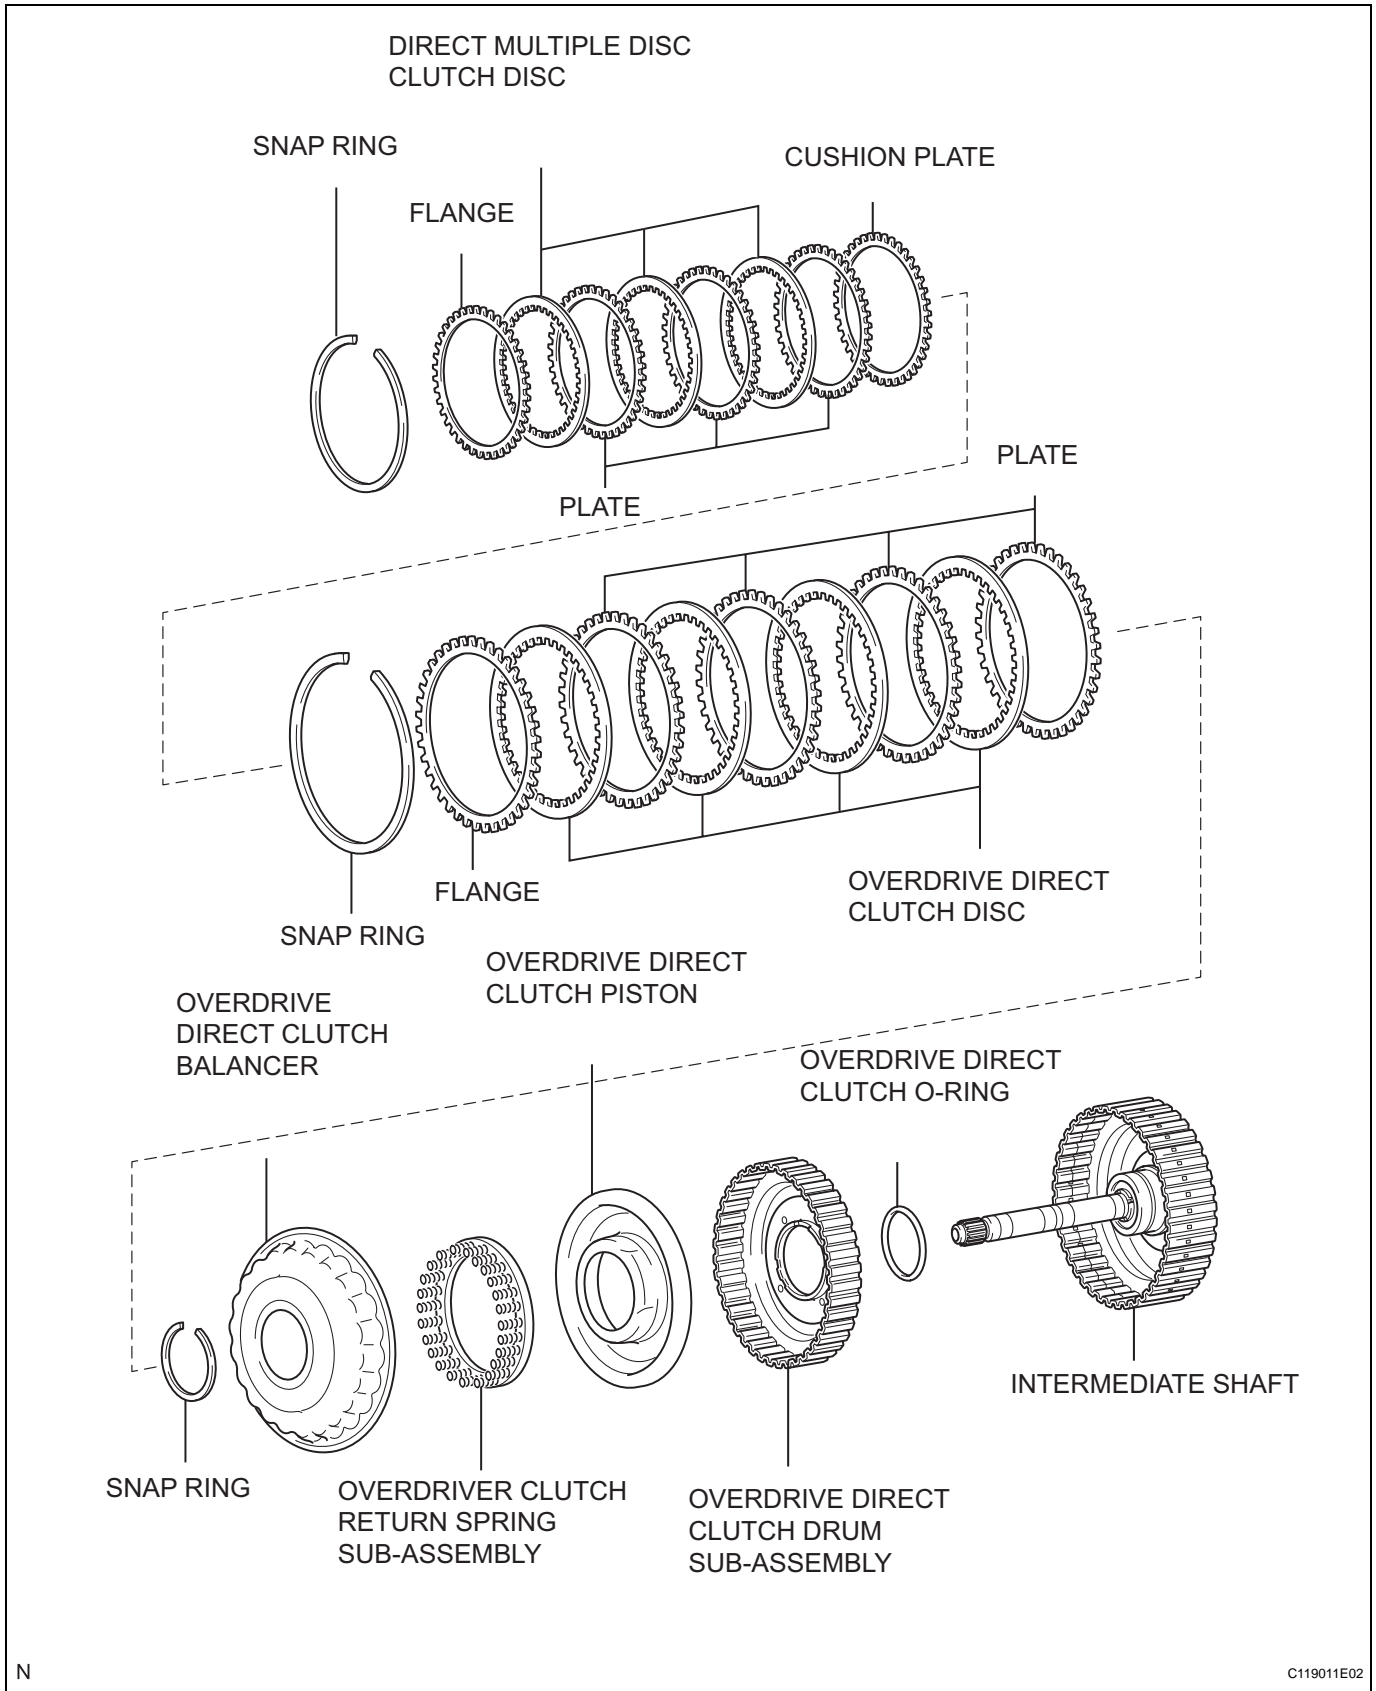

AX

## DISASSEMBLY

### 1. INSPECT PACK CLEARANCE OF REVERSE CLUTCH

HINT:

(See page AX-268)


### 2. INSPECT PACK CLEARANCE OF DIRECT CLUTCH AND OVERDRIVE CLUTCH

HINT:


(See page AX-268)

### 3. REMOVE DIRECT MULTIPLE DISC CLUTCH DISC

- (a) Using a screwdriver, remove the snap ring from the intermediate shaft.

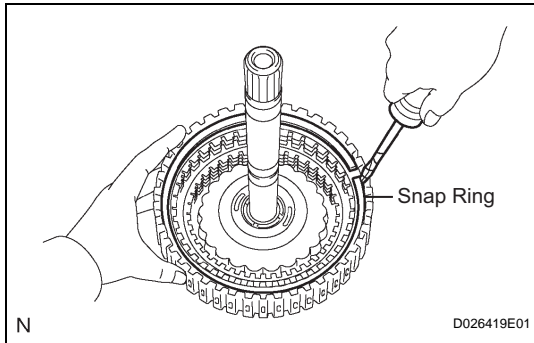


- (b) Remove the flange, 3 discs, 3 plates and cushion plate from the intermediate shaft.

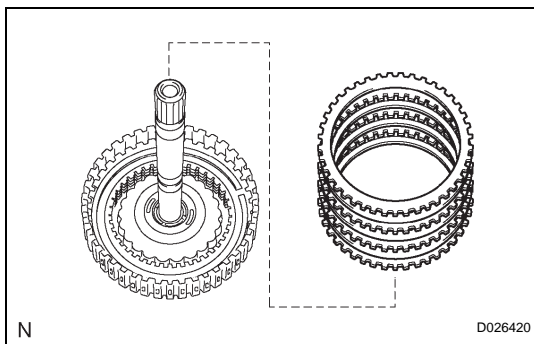

### 4. REMOVE OVERDRIVE DIRECT CLUTCH DISC

- (a) Using a screwdriver, remove the snap ring from the intermediate shaft.

- (b) Remove the flange, 4 discs and 4 plates from the intermediate shaft.

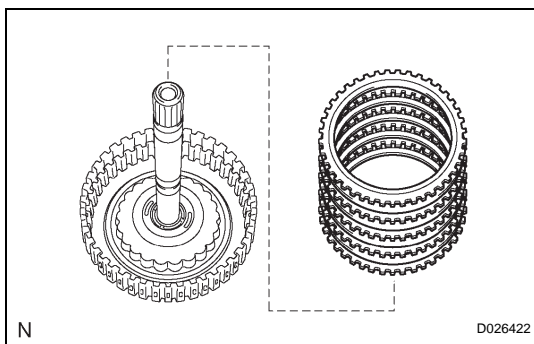

### 5. REMOVE OVERDRIVE CLUTCH RETURN SPRING SUB-ASSEMBLY


- (a) Place SST on the clutch balancer and compress the spring with a press.


**SST 09387-00020**

- (b) Using a snap ring expander, remove the snap ring from the direct clutch drum.

**NOTICE:**


- Stop the press when the spring seat is lowered to the place 1 to 2 mm (0.039 to 0.078 in.) from the snap ring groove.

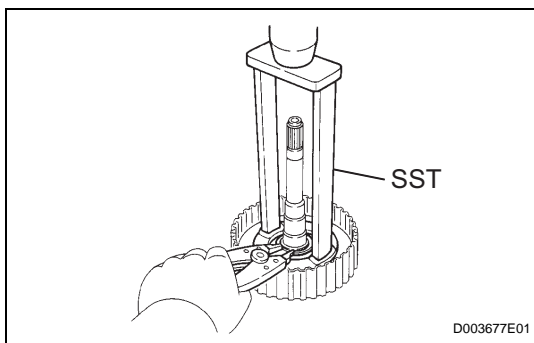

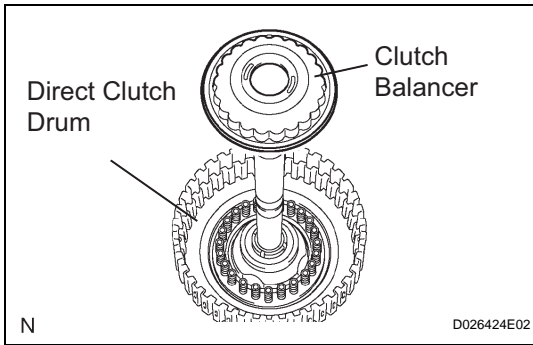


- This prevents the spring seat from being deformed.
- Do not expand the snap ring excessively.

(c) Remove the clutch balancer from the direct clutch drum.

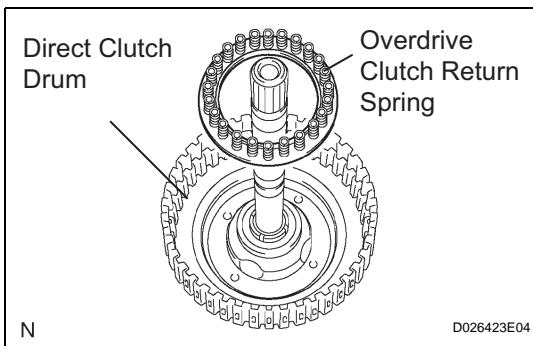


(d) Remove the overdrive clutch return spring from the direct clutch drum.

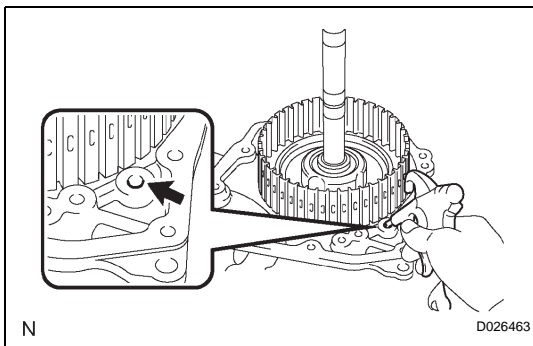


**6. REMOVE OVERDRIVE DIRECT CLUTCH PISTON**

- Install the intermediate shaft on the transaxle rear cover.
- Holding the direct clutch piston with your hand, apply compressed air (392 kPa, 4.0 kgf/cm<sup>2</sup>, 57 psi) to the transaxle rear cover to remove the direct clutch piston.

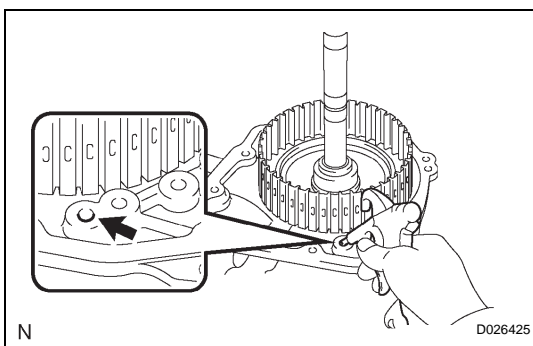


**7. REMOVE OVERDRIVE DIRECT CLUTCH DRUM SUB-ASSEMBLY**

- Holding the direct clutch drum by hand, apply compressed air (392 kPa, 4.0 kgf/cm<sup>2</sup>, 57 psi) to the transaxle rear cover to remove the direct clutch drum.

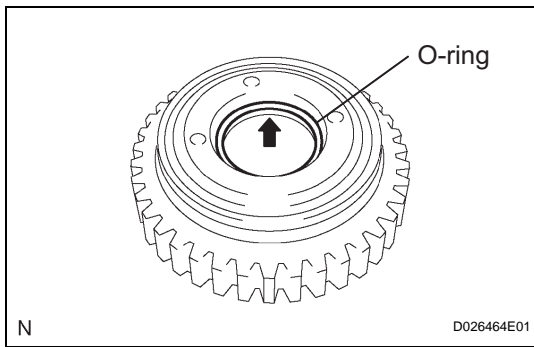


- 8. REMOVE OVERDRIVE DIRECT CLUTCH O-RING**  
 (a) Using a screwdriver, remove the O-ring from the direct clutch drum.

**INSPECTION**

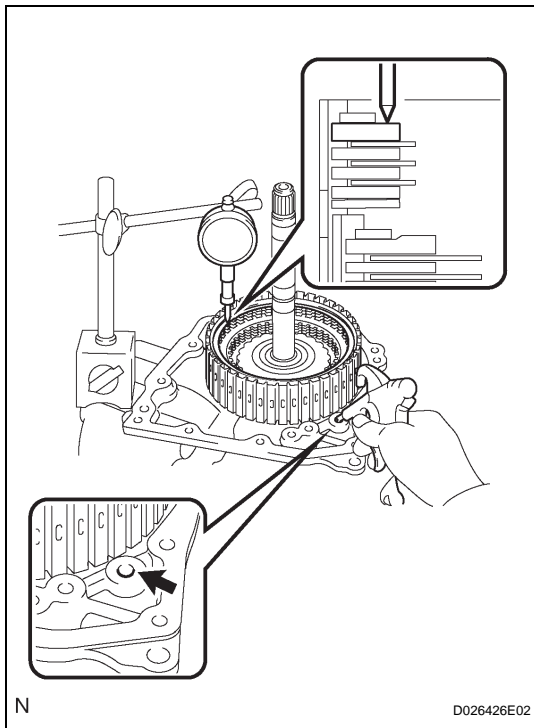


- 1. INSPECT PACK CLEARANCE OF REVERSE CLUTCH**  
 (a) Install the intermediate shaft and needle roller bearing onto the transaxle rear cover.  
 (b) Using a dial indicator, measure the reverse clutch pack clearance while applying and releasing compressed air (392 kPa, 4.0 kgf/cm<sup>2</sup>, 57 psi).  
**Pack clearance:**  
**0.60 to 0.82 mm (0.02362 to 0.03228 in.)**  
 If the pack clearance is not as specified, inspect the discs, plates and flange.

AX

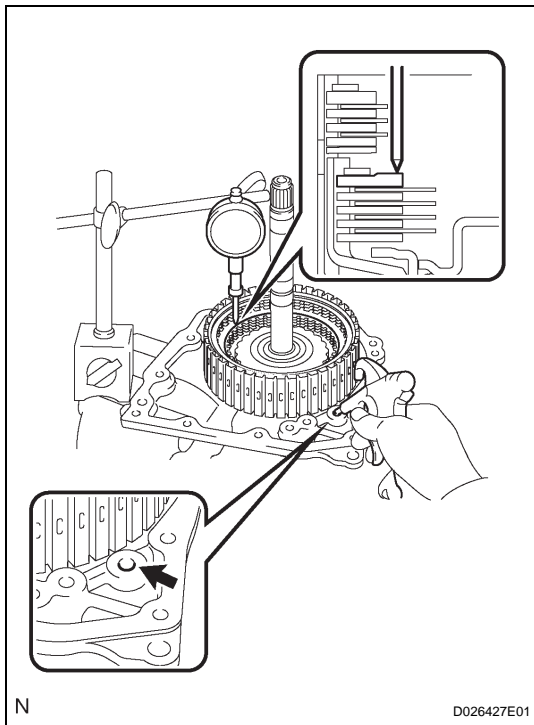

- 2. INSPECT PACK CLEARANCE OF DIRECT CLUTCH AND OVERDRIVE CLUTCH**  
 (a) Using a dial indicator, measure the direct clutch and overdrive clutch pack clearance while applying and releasing compressed air (392 kPa, 4.0 kgf/cm<sup>2</sup>, 57 psi).  
**Pack clearance:**  
**0.61 to 0.83 mm (0.02401 to 0.03268 in.)**  
 If the pack clearance is not as specified, inspect the discs, plates and flange.

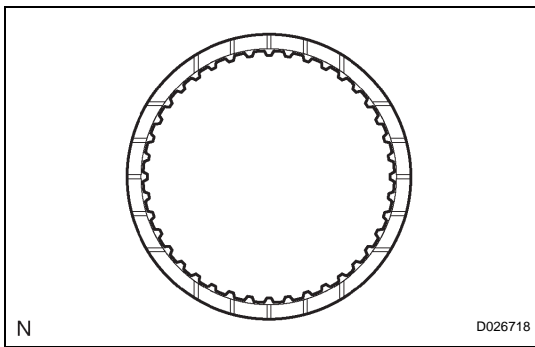


**3. INSPECT DIRECT MULTIPLE DISC CLUTCH DISC**

- (a) Check if the sliding surfaces of the disc, plate and flange are worn or burnt.  
If necessary, replace them.

HINT:

- If the lining of the disc comes off or discolors, or if a part of the groove is worn, replace all discs.
- Before installing new discs, immerse them in ATF for at least 15 minutes.

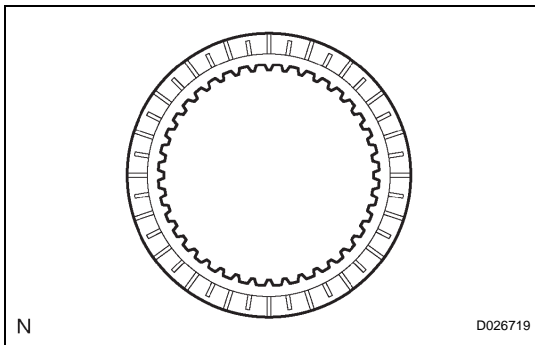


**4. INSPECT OVERDRIVE DIRECT CLUTCH DISC**

- (a) Check if the sliding surface of the disc, plate and flange are worn or burnt.  
If necessary, replace them.

HINT:


- If the lining of the disc comes off or discolors, or if a part of the groove is worn, replace all discs.
- Before installing new discs, immerse them in ATF for at least 15 minutes.

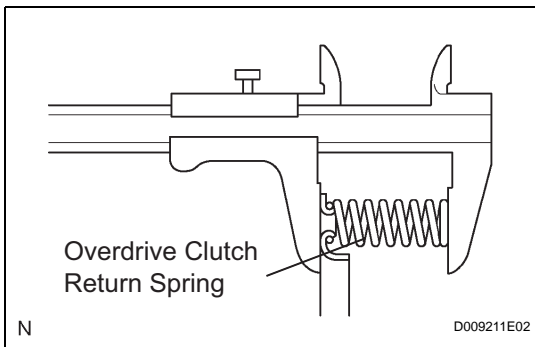

**5. INSPECT OVERDRIVE CLUTCH RETURN SPRING SUB-ASSEMBLY**

- (a) Using vernier calipers, measure the free length of the spring together with the spring seat.

**Standard free length:  
25.91 mm (1.0201 in.)**

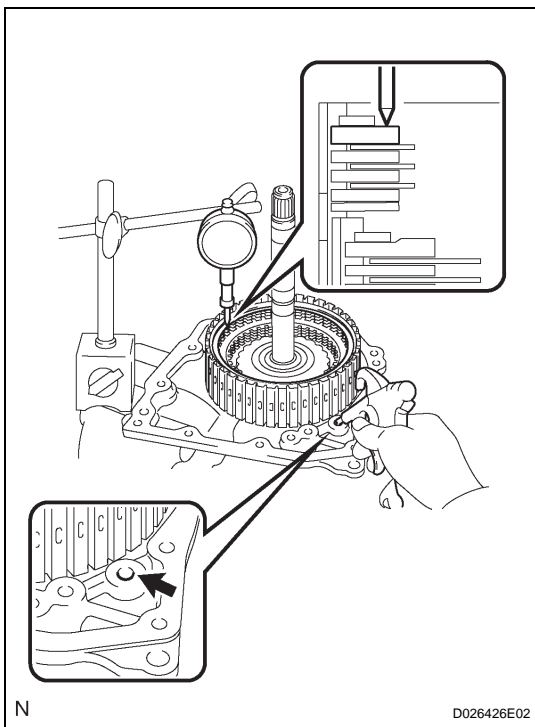

**6. INSPECT PACK CLEARANCE OF REVERSE CLUTCH**

- (a) Install the intermediate shaft onto the transaxle rear cover.  
(b) Using a dial indicator, measure the direct clutch pack clearance while applying and releasing compressed air (392 kPa, 4.0 kgf/cm<sup>2</sup>, 57 psi).

**Clearance:  
0.60 to 0.82 mm (0.02362 to 0.03228 in.)**

If the pack clearance is less than the minimum, parts may have been assembled incorrectly, so check and reassemble again. If the clearance is not as specified, select another flange.

HINT:

There are 7 flanges of different thickness.

**Flange thickness: mm (in.)**

No.	Thickness	No.	Thickness
1	3.0 (0.118)	5	3.4 (0.134)
2	3.1 (0.122)	6	3.5 (0.138)
3	3.2 (0.126)	7	3.6 (0.142)
4	3.3 (0.130)	-	-

**7. INSPECT PACK CLEARANCE OF DIRECT CLUTCH AND OVERDRIVE CLUTCH**

- (a) Using a dial indicator, measure the direct clutch & overdrive clutch pack clearance while applying and releasing compressed air (392 kPa, 4.0 kgf/cm<sup>2</sup>, 57 psi).

**Clearance:**

**0.61 to 0.83 mm (0.02401 to 0.03268 in.)**

If the pack clearance is less than the minimum, parts may have been assembled incorrectly, so check and reassemble again. If the clearance is not as specified, select another flange.

**HINT:**

There are 7 different thicknesses of flanges available.




**Flange thickness: mm (in.)**

No.	Thickness	No.	Thickness
0	2.5 (0.098)	4	2.9 (0.114)
1	2.6 (0.102)	5	3.0 (0.118)
2	2.7 (0.106)	6	3.1 (0.122)
3	2.8 (0.110)	-	-

- (b) Check that the disc rotates when rotating the disc after inserting the rear planetary sun gear.

**NOTICE:**

**Do not place the rear planetary sun gear in a vise.**

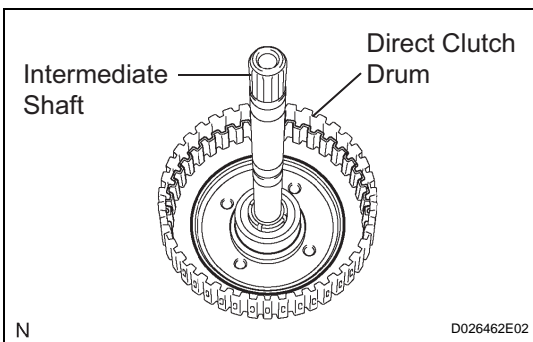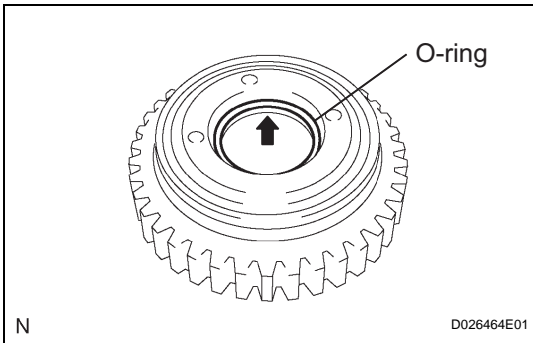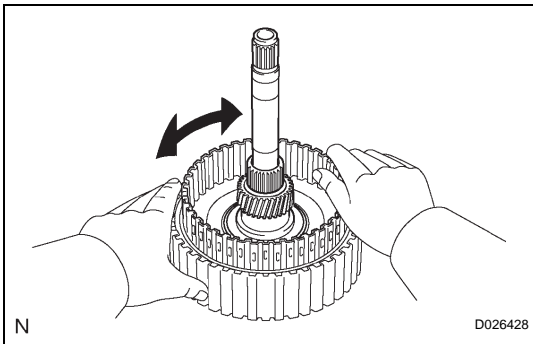

**REASSEMBLY**

**1. INSTALL OVERDRIVE DIRECT CLUTCH O-RING**

- (a) Coat an O-ring with ATF, and install it to the direct clutch drum.

**NOTICE:**


**Make sure that the O-ring is not twisted or pinched when it is installed.**

**2. INSTALL OVERDRIVE DIRECT CLUTCH DRUM SUB-ASSEMBLY**

- (a) Coat the direct clutch drum with ATF, and install it to the intermediate shaft.


**NOTICE:**

- **Be careful not to damage the O-ring.**
- **Be careful not to damage the lip of the direct clutch drum.**

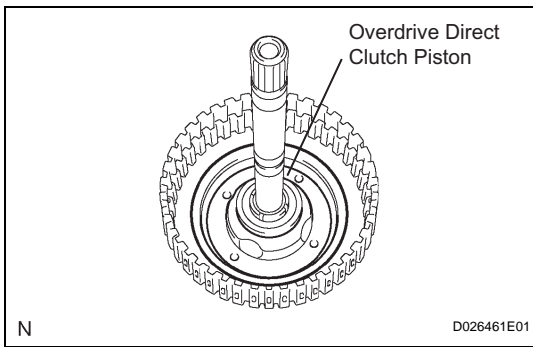

**3. INSTALL OVERDRIVE DIRECT CLUTCH PISTON**

- (a) Coat the overdrive direct clutch piston with ATF, and install it to the direct clutch drum.

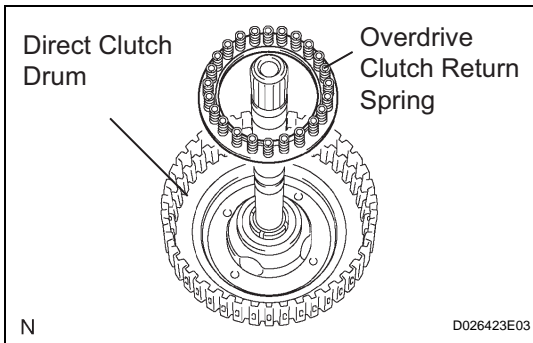


**4. INSTALL OVERDRIVE CLUTCH RETURN SPRING SUB-ASSEMBLY**

- (a) Install the overdrive clutch return spring to the direct clutch drum.

**NOTICE:**

**Installing the spring sub-assembly, check that all of the springs are fit in piston correctly.**


- (b) Coat the clutch balancer with ATF.

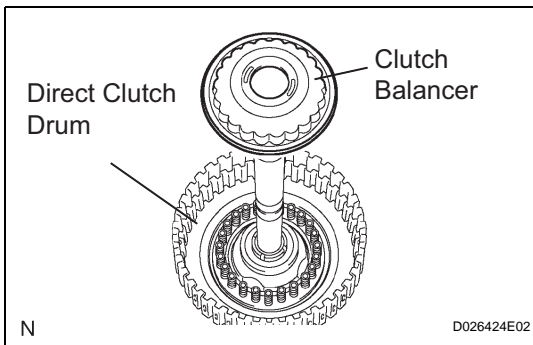

- (c) Install the clutch balancer to the direct clutch drum.

**NOTICE:**

- Be careful not to damage the lip of the direct clutch balancer.
- Make sure that the lip of the seal is not pinched and that it has no other defects.
- Apply sufficient ATF to the sealing lip before installing the clutch balancer.

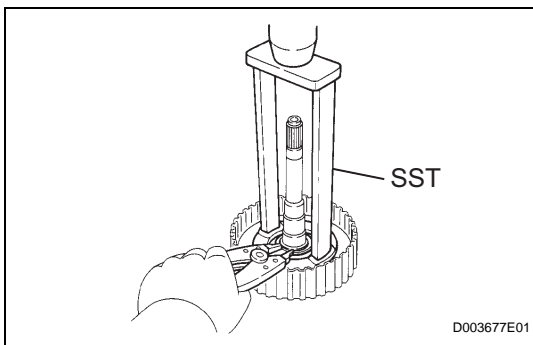

- (d) Place SST on the clutch balancer and compress the overdrive clutch return spring with a press.


**SST 09387-00020**

- (e) Using a snap ring expander, install the snap ring to the direct clutch drum.

- (f) Be sure that the end gap of the snap ring is not aligned with the spring retainer claw.

**NOTICE:**


- Stop the press when the spring seat is lowered to the place 1 to 2 mm (0.039 to 0.078 in.) from the snap ring groove.
- This prevents the spring seat from being deformed.
- Do not expand the snap ring excessively.

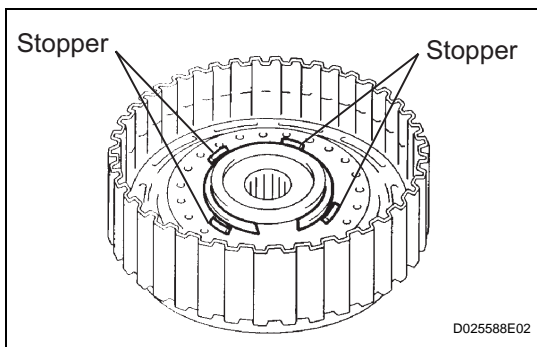

(g) Set the end gap of the snap ring in the piston shown in the illustration.

**NOTICE:**

**The end gap of the snap ring should not align with any of the stoppers.**

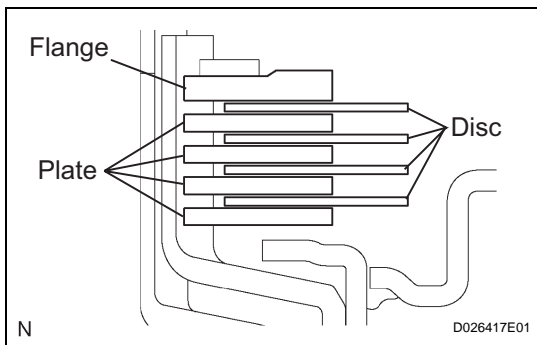


**5. INSTALL OVERDRIVE DIRECT CLUTCH DISC**

- (a) Coat the 4 discs with ATF.
- (b) Install the 4 plates, 4 discs and flange to the intermediate shaft.

**NOTICE:**

**Make sure that the plates, discs, and flange are installed as shown in the illustration.**

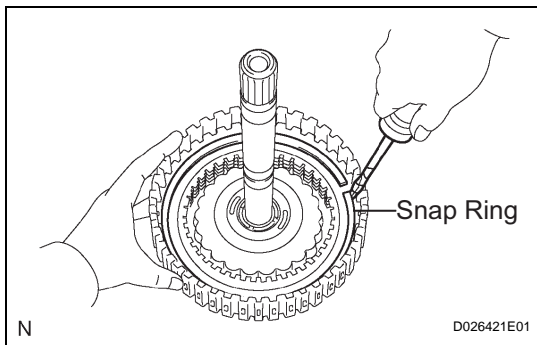


- (c) Using a screwdriver, install the snap ring.
- (d) Check that the end gap of the snap ring is not aligned with one of the cutouts.

**NOTICE:**

**The snap ring should be fully engaged in the groove of the drum.**

AX

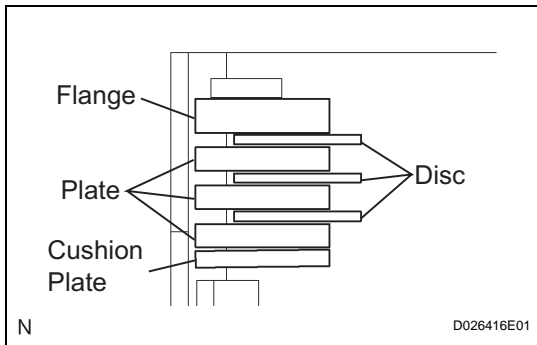


**6. INSTALL DIRECT MULTIPLE DISC CLUTCH DISC**

- (a) Coat the 3 disc with ATF.
- (b) Install the cushion plate, 3 plates, 3 disc and flange to the intermediate shaft.

**NOTICE:**

- **Install the cushion plate with the mark on the white surface facing to plate.**
- **Be careful about the order of discs, plate and flange assembly.**

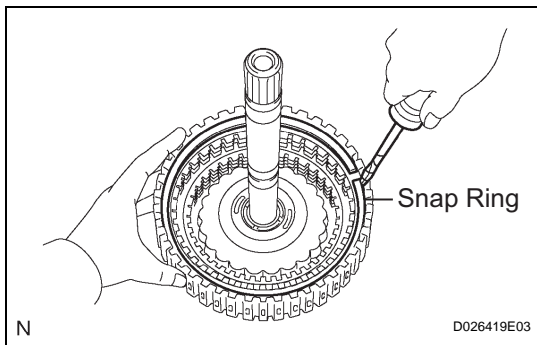

- (c) Using a screwdriver, install the snap ring.
- (d) Check that the end gap of the snap ring is not aligned with one of the cutouts.

**NOTICE:**

**The slap ring should be fixed certainly in the groove of the drum.**