

<b>DTC</b>	<b>B1180/17</b>	<b>Short in Driver Side Squib 2nd Step Circuit</b>
------------	-----------------	--

**DESCRIPTION**

The driver side squib 2nd step circuit consists of the center airbag sensor assembly, the spiral cable and the steering pad.


The circuit instructs the SRS to deploy when deployment conditions are met.

DTC B1180/17 is recorded when a short circuit is detected in the driver side squib 2nd step circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B1180/17	<ul style="list-style-type: none"> <li>• Short circuit between D2+ wire harness and D2- wire harness of driver side squib 2nd step</li> <li>• Driver side squib 2nd step malfunction</li> <li>• Spiral cable malfunction</li> <li>• Center airbag sensor assembly malfunction</li> </ul>	<ul style="list-style-type: none"> <li>• Steering pad (Driver side squib 2nd step)</li> <li>• Spiral cable</li> <li>• Center airbag sensor assembly</li> <li>• Instrument panel wire</li> </ul>

**RS**

**WIRING DIAGRAM**

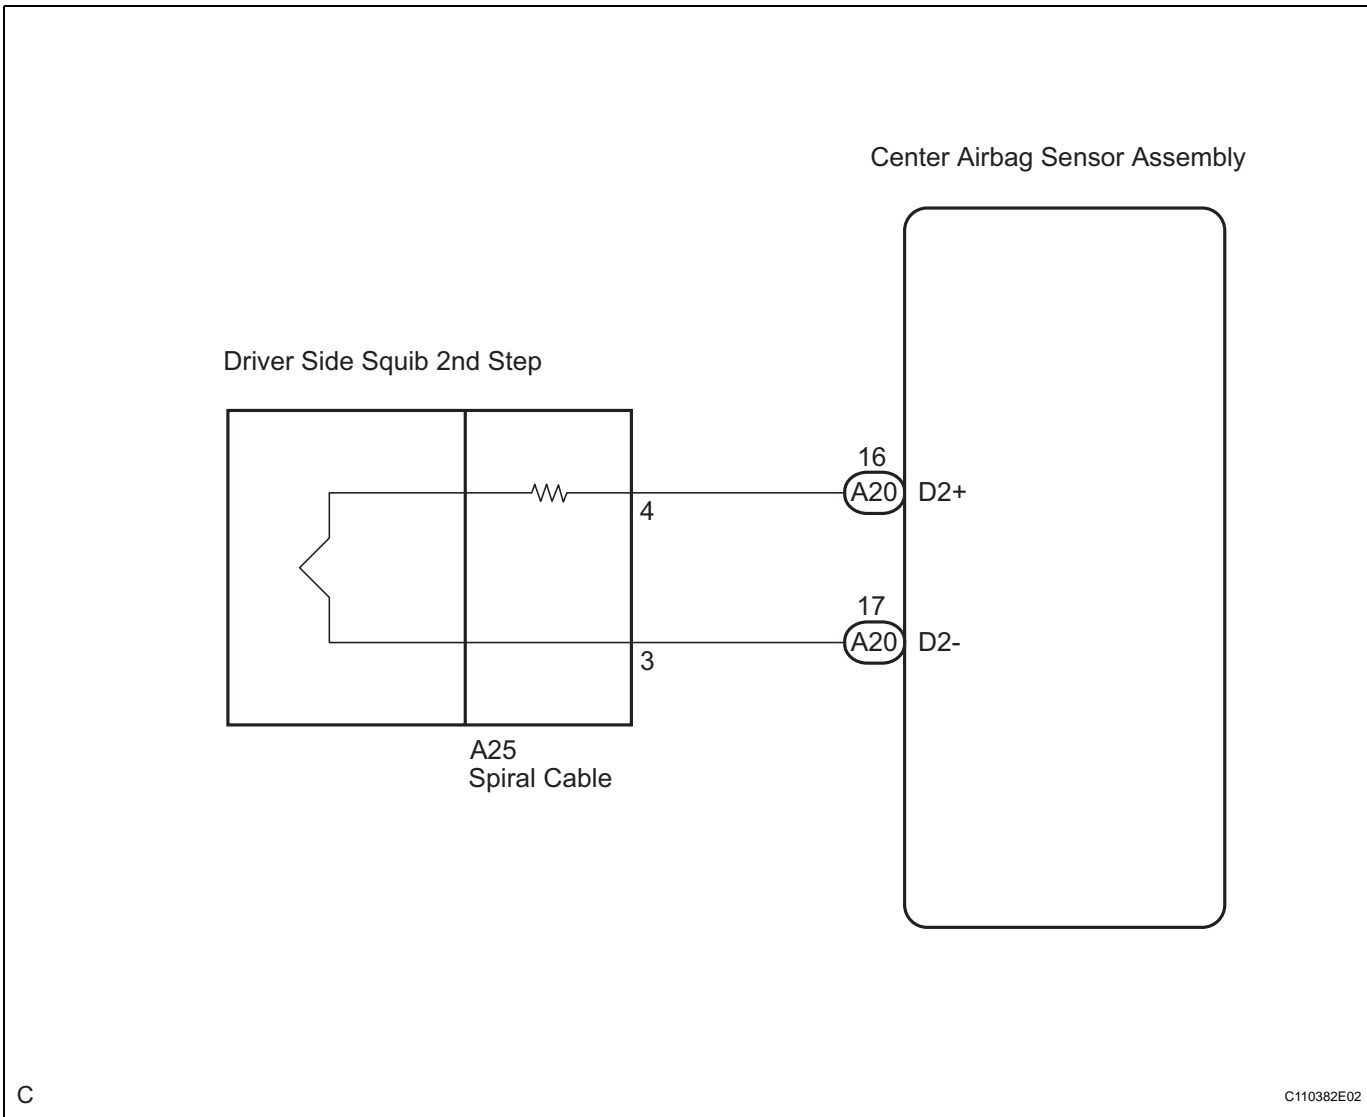

## 1 CHECK STEERING PAD (DRIVER SIDE SQUIB 2ND STEP)

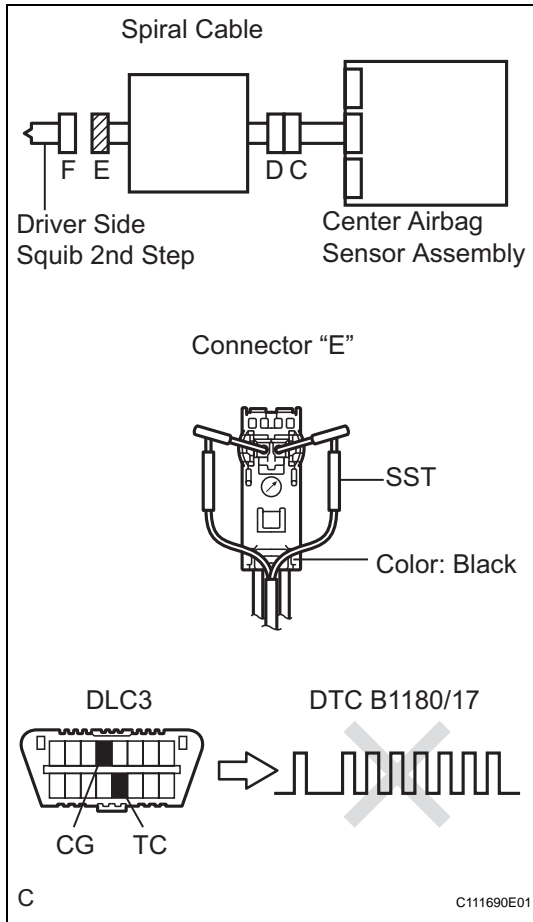

- Turn the ignition switch to the LOCK position.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Disconnect the connectors from the steering pad.
- Connect the white wire side of SST (resistance 2.1  $\Omega$ ) to the spiral cable.

**CAUTION:**

**Never connect a tester to the steering pad (Driver side squib 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.**

**NOTICE:**

**Do not forcibly insert the SST into the terminals of the connector when connecting.**

**Insert the SST straight into the terminals of the connector.**

**SST 09843-18060**

- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the DTCs stored in memory (See Page RS-32).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (See Page RS-32).

**OK:**

**DTC B1180/17 is not output.**

**HINT:**

Codes other than DTC B1180/17 may be output at this time, but they are not related to this check.

NG

Go to step 2

OK

## REPLACE STEERING PAD

## 2 CHECK CONNECTORS

- Turn the ignition switch to the LOCK position.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Disconnect the SST (resistance 2.1  $\Omega$ ) from the spiral cable.
- Check that the spiral cable connectors (on the steering pad side) are not damaged.


**OK:**

**The lock button is not disengaged, and the claw of the lock is not deformed or damaged.**

**NG** **REPLACE SPIRAL CABLE**

**OK**

**3 CHECK DRIVER SIDE SQUIB 2ND STEP CIRCUIT**

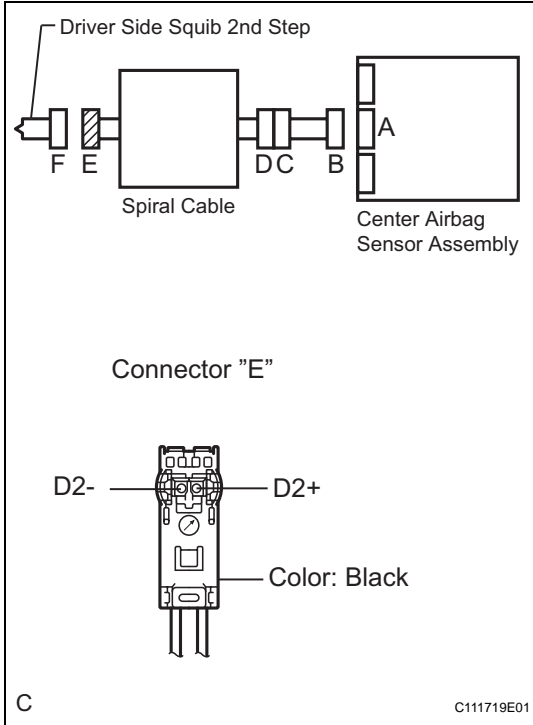

- (a) Disconnect the connector from the center airbag sensor assembly.
- (b) Release the activation prevention mechanism built into connector "B" (See page RS-25).
- (c) Measure the resistance according to the value(s) in the table below.

**Resistance**


Tester connection	Condition	Specified condition
D2+ - D2-	Always	1 MΩ or higher

**RS**

**NG** **Go to step 5**

**OK**

**4 CHECK CENTER AIRBAG SENSOR ASSEMBLY**

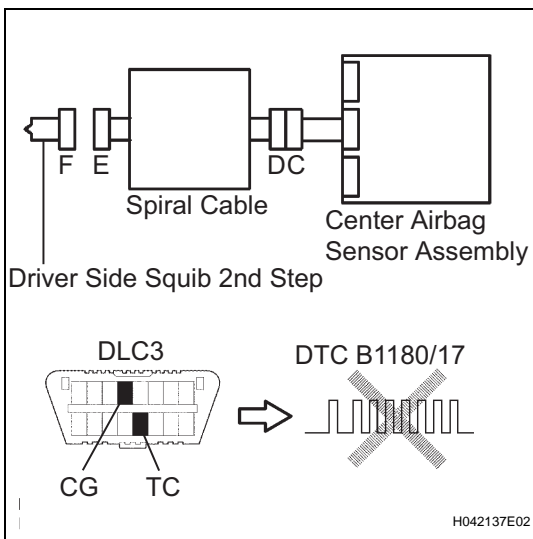

- (a) Connect the connectors to the steering pad and the center airbag sensor assembly.
- (b) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (c) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (d) Clear the DTCs stored in memory (See page RS-32).
- (e) Turn the ignition switch to the LOCK position.
- (f) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- (g) Check the DTCs (See page RS-32).

**OK:**

**DTC B1180/17 is not output.**

**HINT:**

Codes other than DTC B1180/17 may be output at this time, but they are not related to this check.


**NG** **REPLACE CENTER AIRBAG SENSOR ASSEMBLY**

OK

USE SIMULATION METHOD TO CHECK

**5 CHECK INSTRUMENT PANEL WIRE**

RS

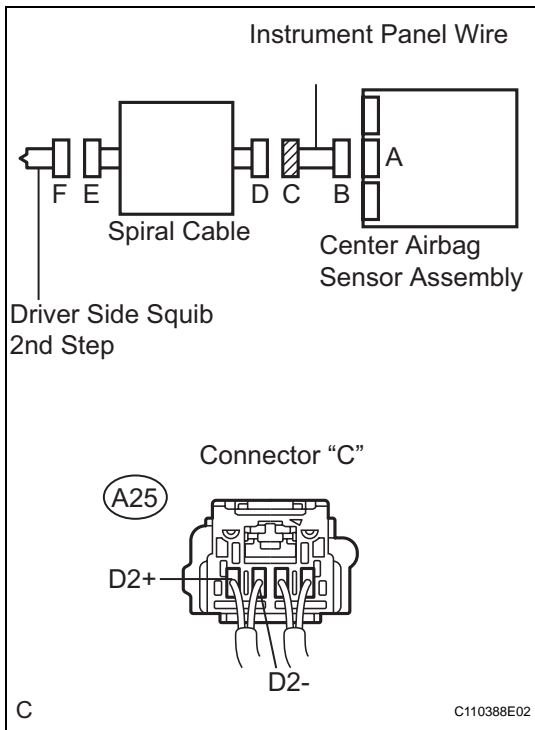

(a) Disconnect the instrument panel wire connector from the spiral cable.

HINT:

The activation prevention mechanism of connector "B" has already been released.

(b) Measure the resistance according to the value(s) in the table below.

**Resistance**


Tester connection	Condition	Specified condition
A25-4 (D2+) - A25-3 (D2-)	Always	1 MΩ or higher

NG

**REPAIR OR REPLACE INSTRUMENT PANEL WIRE**

OK

**6 CHECK SPIRAL CABLE**

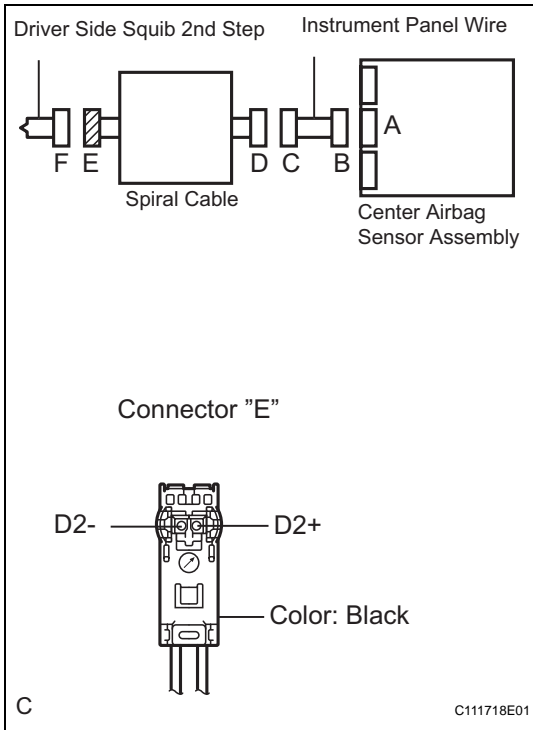

- (a) Release the activation prevention mechanism built into connector "D" (See page [RS-25](#)).
- (b) Measure the resistance according to the value(s) in the table below.

**Resistance**

Tester connection	Condition	Specified condition
D2+ - D2-	Always	1 MΩ or higher

**NG** → **REPLACE SPIRAL CABLE**

**OK**

**USE SIMULATION METHOD TO CHECK**

**RS**