

AUTOMATIC TRANSMISSION

CONTENTS

GENERAL	2	TROUBLESHOOTING	2
Outline of Changes	2		

GENERAL

OUTLINE OF CHANGES

The following service procedures for items which are different from before have been established to correspond to the following changes:


- MPI engine vehicles have been introduced.
- The downshift pattern for the GDI engine vehicles has been changed.
- On GDI engine vehicles, the ECU has been changed from the A/T-ECU to the engine-A/T-ECU.
- Due to the abolishment of the vehicle speed sensor on all models, the vehicle speed sensor system check has been replaced with the vehicle speed output system check.

TROUBLESHOOTING


SHIFT PATTERN

<MPI>

UPSHIFT PATTERN

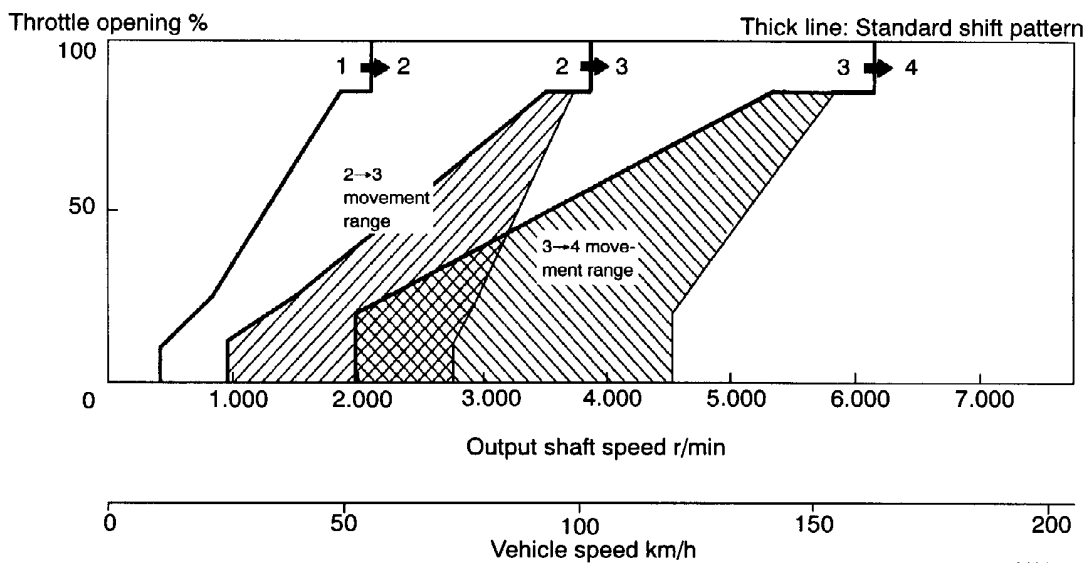


DOWNSHIFT PATTERN

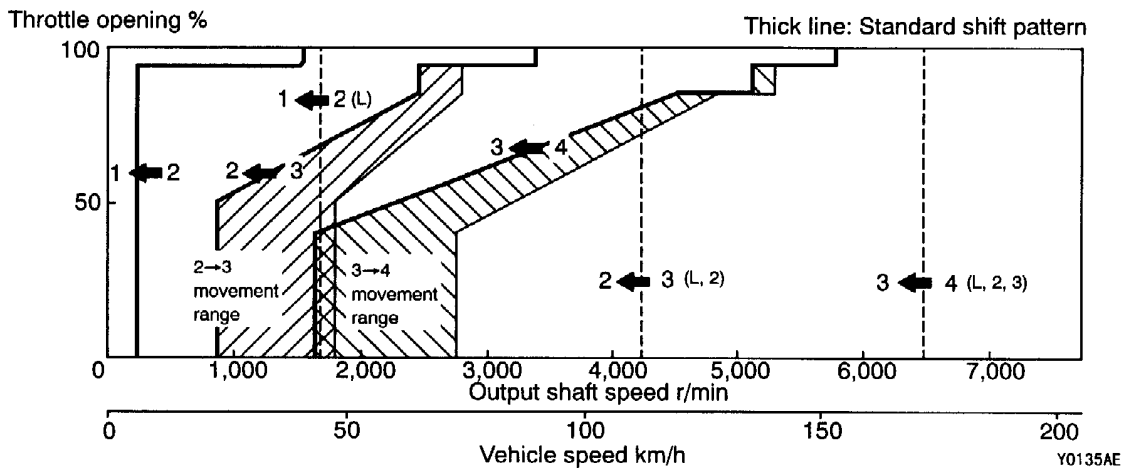

<GDI>

DOWNSHIFT PATTERN

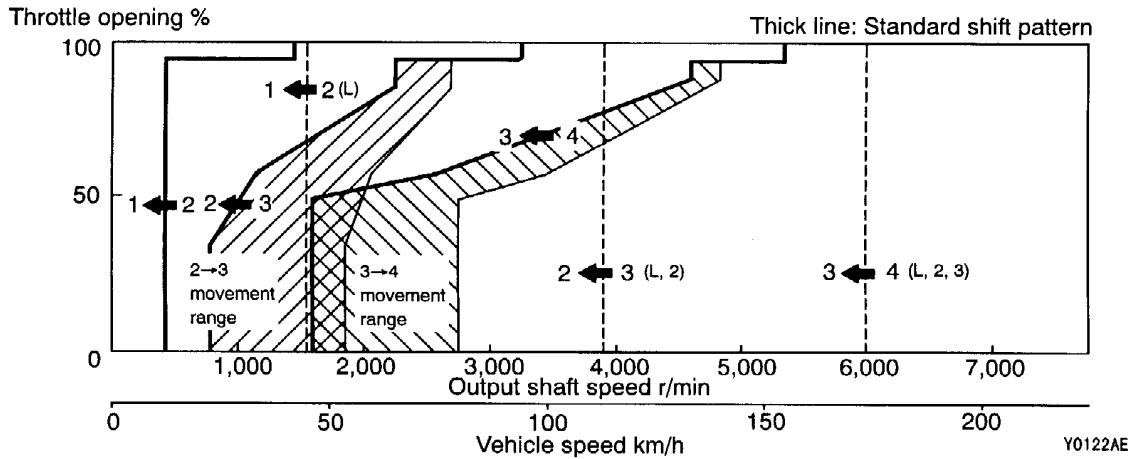

INSPECTION CHART FOR DIAGNOSIS CODE


Code	Diagnosis item	Reference page
11	Throttle position sensor system (TPS)	Short circuit
12	Accelerator pedal position sensor system (APS)	Open circuit
14		Sensor maladjustment
15	A/T fluid temperature sensor system	Open circuit
21	Crank angle sensor system	Open circuit
22	Input shaft speed sensor system	Short circuit/open circuit
23	Output shaft speed sensor system	Short circuit/open circuit
25	Wide open throttle switch system	Short circuit
26	Stop lamp switch system	Short circuit/open circuit
31	Low and reverse solenoid valve system	Short circuit/open circuit
32	Underdrive solenoid valve system	Short circuit/open circuit
33	Second solenoid valve system	Short circuit/open circuit
34	Overdrive solenoid valve system	Short circuit/open circuit
36	Damper control clutch solenoid valve system	Short circuit/open circuit
41	1st gear ratio does not meet the specification	23-9
42	2st gear ratio does not meet the specification	23-9
43	3rd gear ratio does not meet the specification	23-9
44	4th gear ratio does not meet the specification	23-9
46	Reverse gear ratio does not meet the specification	23-9
51	Abnormal communication with engine-A/T-ECU	23-10
52	Damper control clutch solenoid valve system	Defective system

Code	Diagnosis item	Reference page
54	A/T Control relay system	Short circuit to earth/ open circuit 23-10
56	N range lamp system	Short circuit to earth 23-10

INSPECTION PROCEDURES FOR DIAGNOSIS CODES


Code No. 11, 12, 14 Throttle position sensor system (TPS) <MPI>, accelerator pedal position sensor system (APS) <GDI>	Probable cause
<p>If the TPS or APS output voltage is 4.8 V or higher when the engine is idling, the output is judged to be too high and diagnosis code No. 11 is output. If the TPS or APS output voltage is 0.2 V or lower at times other than when the engine is idling, the output is judged to be too low and diagnosis code No. 12 is output. If the TPS or APS output voltage is 0.2 V or lower or if it is 1.2 V or higher when the engine is idling, the TPS or APS adjustment is judged to be incorrect and diagnosis code No. 14 is output.</p>	<ul style="list-style-type: none"> • Malfunction of the throttle position sensor <MPI> • Malfunction of the accelerator pedal position sensor <GDI> • Malfunction of connector • Malfunction of the engine-A/T-ECU

*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

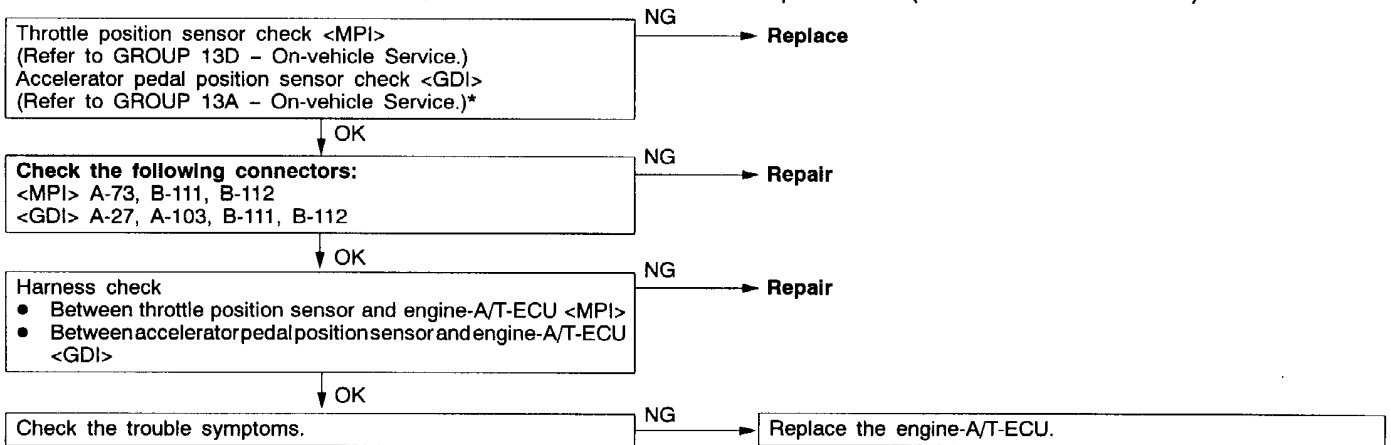


Code No. 15 A/T fluid temperature sensor system	Probable cause
<p>If the A/T fluid temperature sensor output voltage is 2.6 V or more even after driving for 10 minutes or more (if the A/T fluid temperature does not increase), it is judged that there is an open circuit in the A/T fluid temperature sensor and diagnosis code No. 15 is output.</p>	<ul style="list-style-type: none"> • Malfunction of the A/T fluid temperature sensor • Malfunction of connector • Malfunction of the engine-A/T-ECU

*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

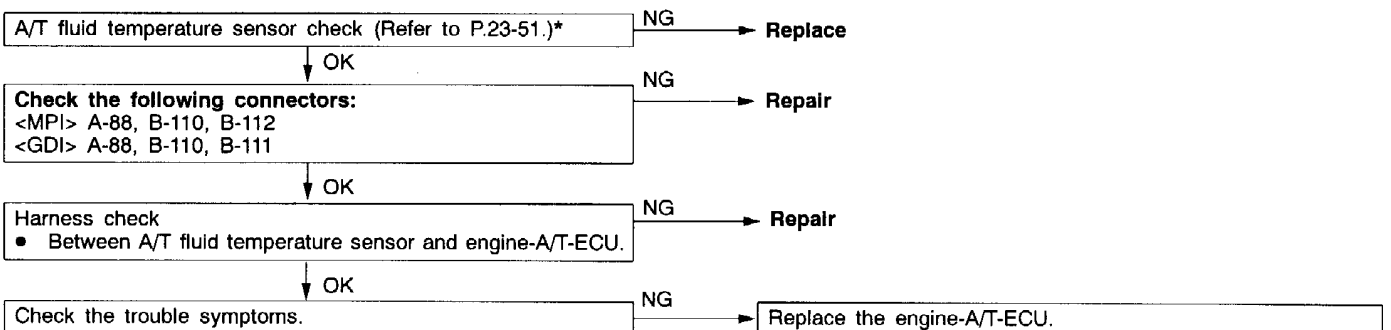


Code No. 21 Crank angle sensor system	Probable cause
If no output pulse is detected from the crank angle sensor for 5 seconds or more while driving at 25 km/h or more, it is judged that there is an open circuit in the crank angle sensor and diagnosis code No. 21 is output.	<ul style="list-style-type: none"> ● Malfunction of the crank angle sensor ● Malfunction of connector ● Malfunction of the engine-A/T-ECU

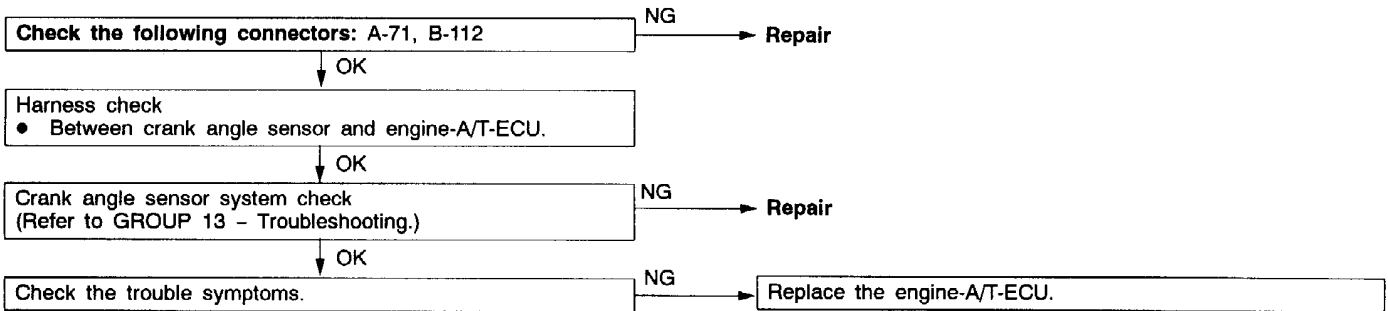

Code No. 22 Input shaft speed sensor system	Probable cause
If no output pulse is detected from the input shaft speed sensor for 1 second or more while driving in 3rd or 4th gear at a speed of 30 km/h or more, there is judged to be an open circuit or short-circuit in the input shaft speed sensor and diagnosis code No. 22 is output. If diagnosis code No. 22 is output four times, the transmission is locked into 3rd gear (D range) or 2nd gear as a fail-safe measure, and the N range lamp flashes at a frequency of 1 Hz.	<ul style="list-style-type: none"> ● Malfunction of the input shaft speed sensor ● Malfunction of the underdrive clutch retainer ● Malfunction of connector ● Malfunction of the engine-A/T-ECU

*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).


★: Refer to the Transmission Workshop Manual.

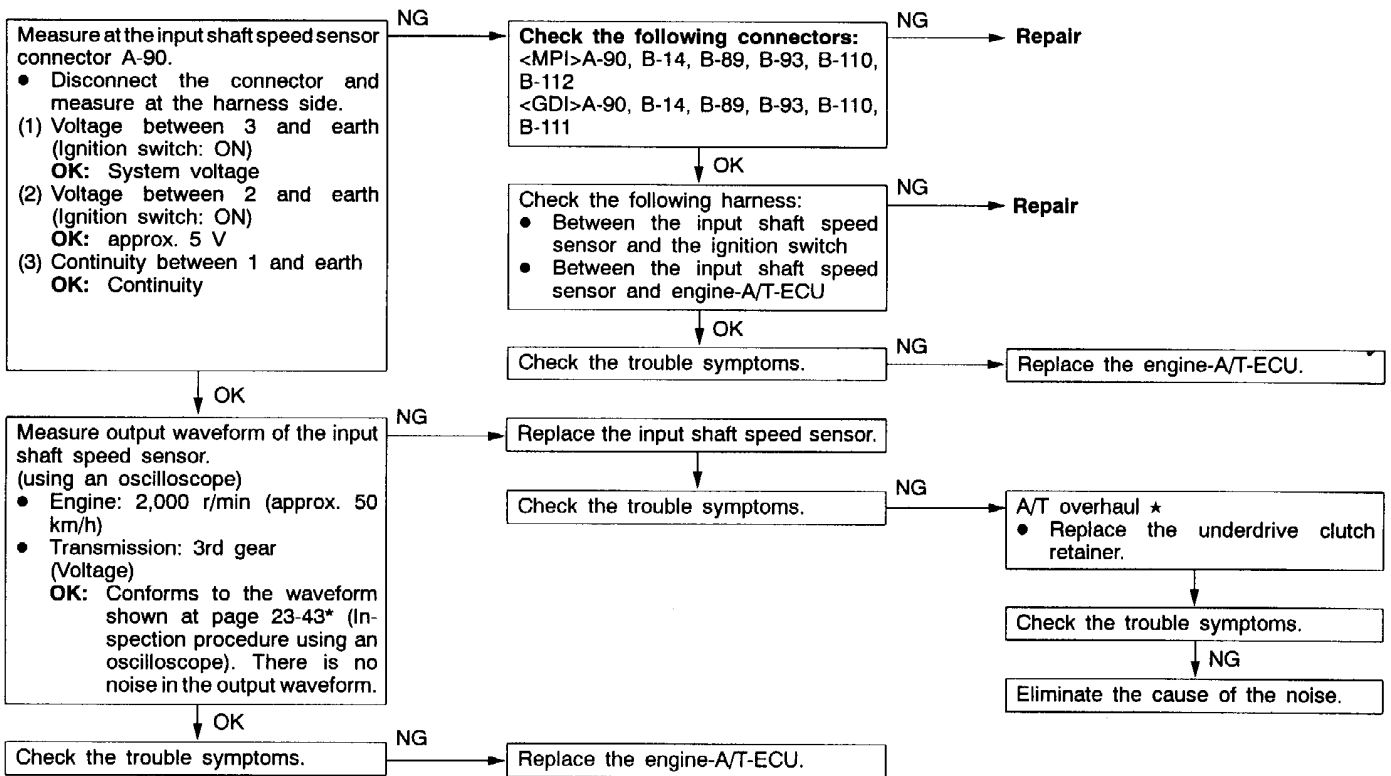

Code No. 23 Output shaft speed sensor system	Probable cause
<p>If the output from the output shaft speed sensor is continuously 50% lower than the vehicle speed for 1 second or more while driving in 3rd or 4th gear at a speed of 30 km/h or more, there is judged to be an open circuit or short-circuit in the output shaft speed sensor and diagnosis code No. 23 is output. If diagnosis code No. 23 is output four times, the transmission is locked into 3rd gear (D range) or 2nd gear as a fail-safe measure, and the N range lamp flashes at a frequency of 1 Hz.</p>	<ul style="list-style-type: none"> ● Malfunction of the output shaft speed sensor ● Malfunction of the transfer drive gear or driven gear ● Malfunction of connector ● Malfunction of the engine-A/T-ECU


*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

★: Refer to the Transmission Workshop Manual.

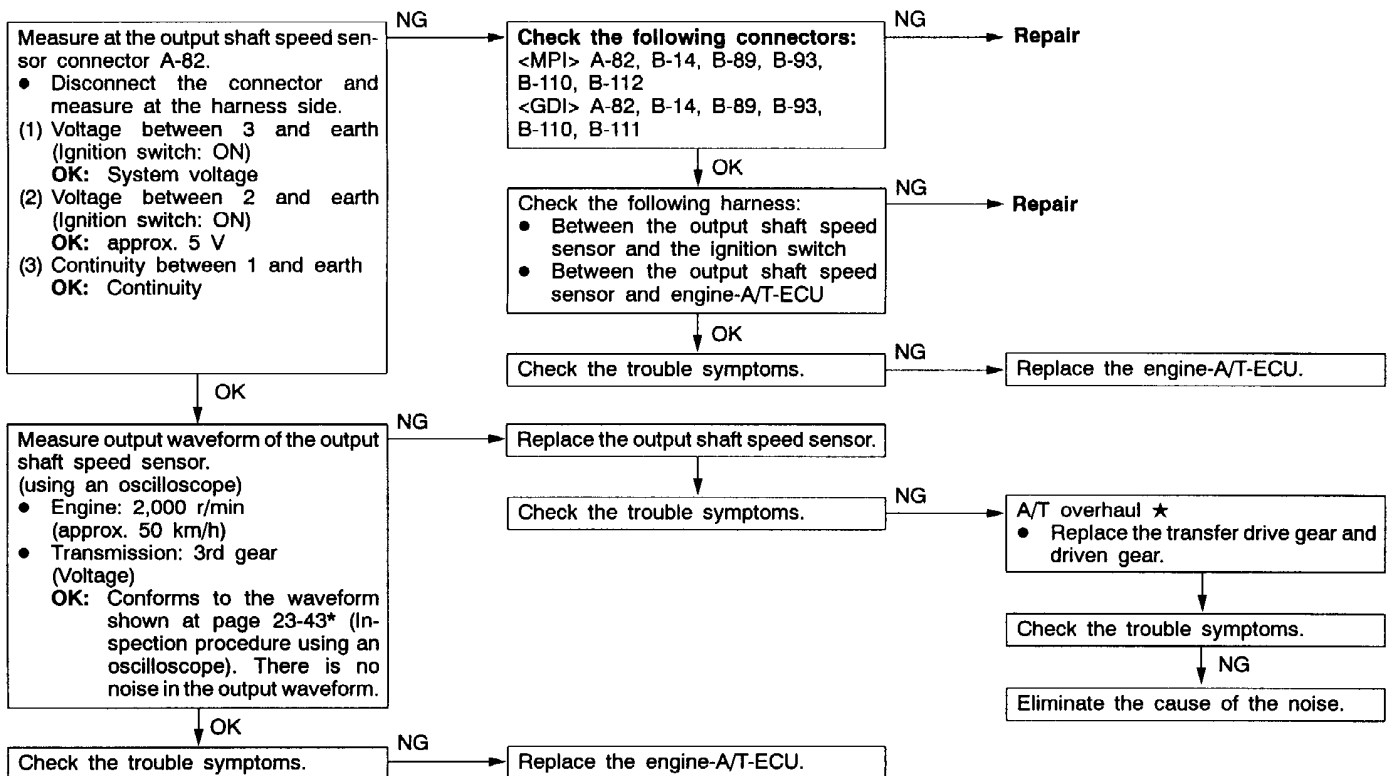


Code No. 25 Wide open throttle switch system	Probable cause
<p>If the wide open throttle switch is on for 1 second or more with the throttle valve opening angle at 70% or less, it is judged that there is a short circuit in the wide open throttle switch and diagnosis code No. 25 is output.</p>	<ul style="list-style-type: none"> ● Malfunction of the wide open throttle switch ● Malfunction of connector ● Malfunction of the engine-A/T-ECU

*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

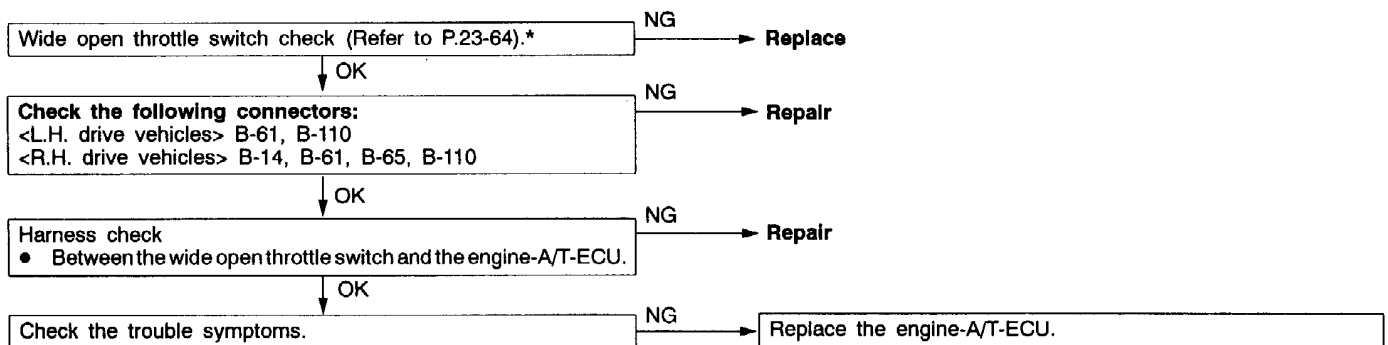


Code No. 26 Stop lamp switch system	Probable cause
If the stop lamp switch is on for 5 minutes or more while driving, it is judged that there is a short circuit in the stop lamp switch and diagnosis code No. 26 is output.	<ul style="list-style-type: none"> ● Malfunction of the stop lamp switch ● Malfunction of connector ● Malfunction of the engine-A/T-ECU

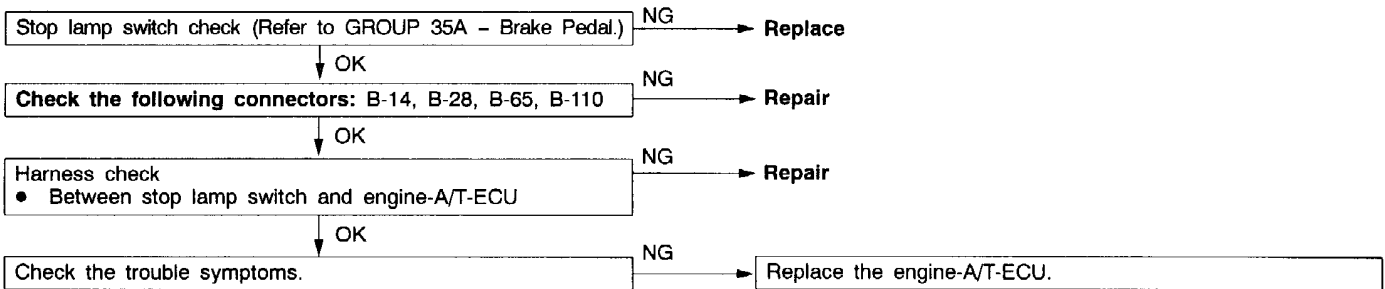


Code No. 31 Low and reverse solenoid valve system	Probable cause
Code No. 32 Underdrive solenoid valve system	
Code No. 33 Second solenoid valve system	
Code No. 34 Overdrive solenoid valve system	
If the resistance value for a solenoid valve is too large or too small, it is judged that there is a short-circuit or an open circuit in the solenoid valve and the respective diagnosis code is output. The transmission is locked into 3rd gear as a fail-safe measure, and the N range lamp flashes at a frequency of 1 Hz.	<ul style="list-style-type: none"> ● Malfunction of solenoid valve ● Malfunction of connector ● Malfunction of the engine-A/T-ECU

*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

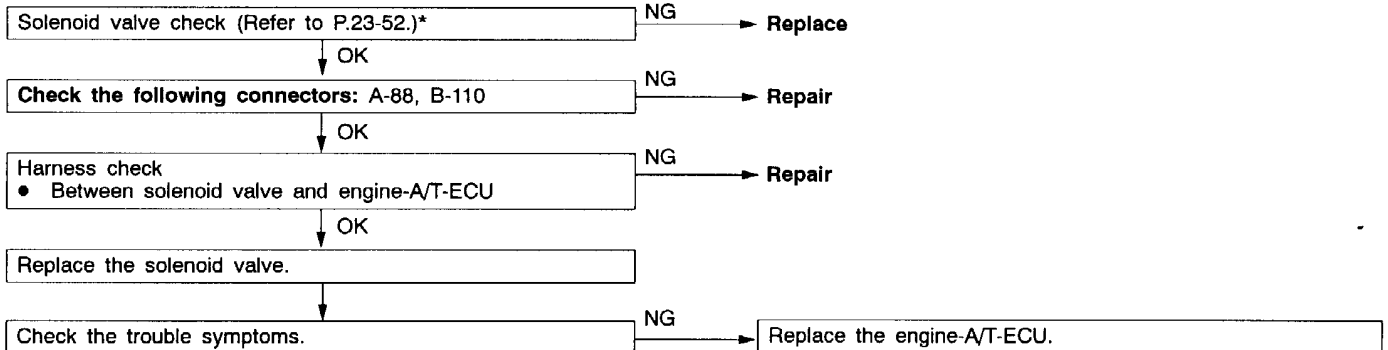

Code No. 36, 52 Damper clutch control solenoid valve system	Probable cause
<p>If the resistance value for the damper clutch control solenoid valve is too large or too small, it is judged that there is a short-circuit or an open circuit in the damper clutch control solenoid valve and diagnosis code No. 36 is output. If the drive duty rate for the damper clutch control solenoid valve is 100 % for a continuous period of 4 seconds or more, it is judged that there is an abnormality in the damper clutch control system and diagnosis code No. 52 is output. When diagnosis code No. 36 is output, the transmission is locked into 3rd gear as a fail-safe measure, and the N range lamp flashes at a frequency of 1 Hz.</p>	<ul style="list-style-type: none"> ● Malfunction of the damper clutch control solenoid valve ● Malfunction of connector ● Malfunction of the engine-A/T-ECU


*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

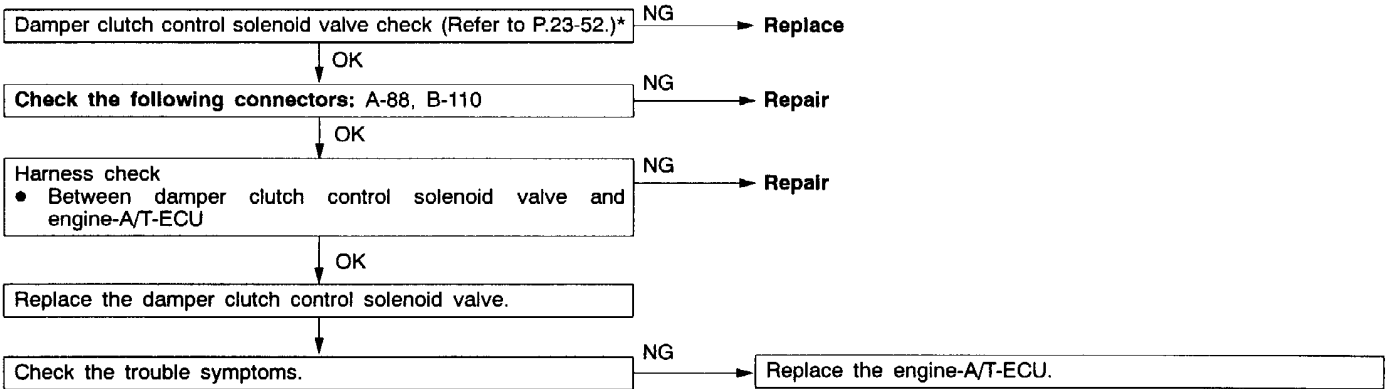

Code No. 41 1st gear ratio does not meet the specification	Probable cause
Code No. 42 2nd gear ratio does not meet the specification	
Code No. 43 3rd gear ratio does not meet the specification	
Code No. 44 4th gear ratio does not meet the specification	
Code No. 46 Reverse gear ratio does not meet the specification	
<p>If the output from the output shaft speed sensor multiplied by each gear ratio is not the same as the output from the input shaft speed sensor after shifting to each gear has been completed, each diagnosis code is output. If each diagnosis code is output four times, the transmission is locked into 3rd gear as a fail-safe measure, and the N range lamp flashes at a frequency of 1 Hz.</p>	<ul style="list-style-type: none"> • Malfunction of the input shaft speed sensor • Malfunction of the output shaft speed sensor • Malfunction of the underdrive clutch retainer • Malfunction of the transfer drive gear or driven gear • Malfunction of the low and reverse brake system (for code No.41, 46) • Malfunction of the underdrive clutch system (for code No.41 42, 43) • Malfunction of the second brake system (for code No.42, 44) • Malfunction of the overdrive clutch system (for code No.43, 44) • Malfunction of the reverse clutch system (for code No.46) • Noise generated

*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

★: Refer to the Transmission Workshop Manual.

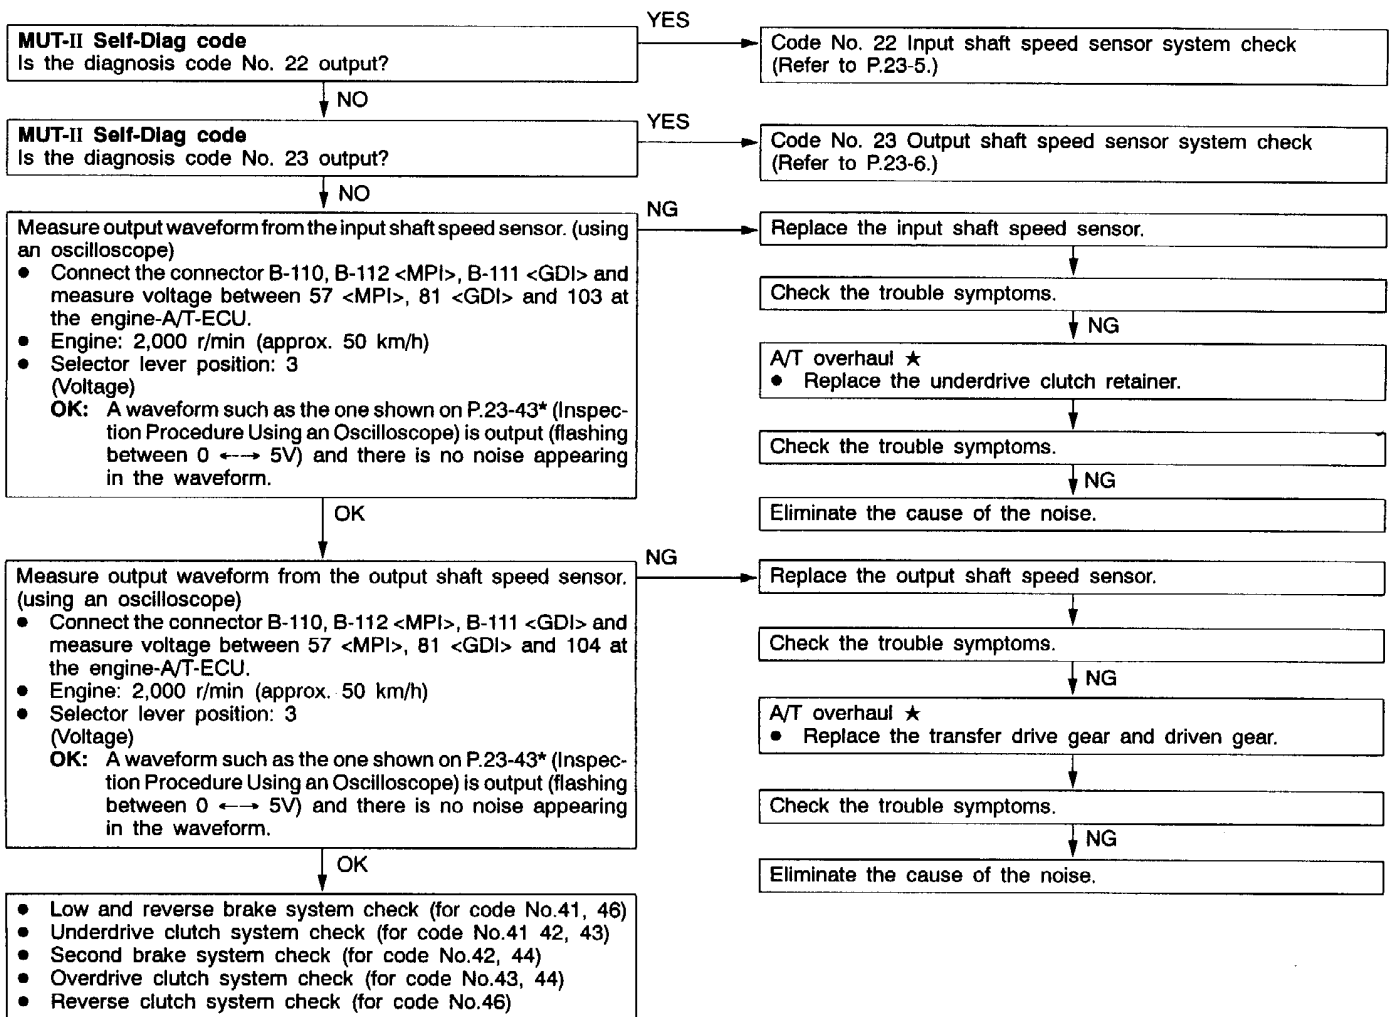


Code No. 51 Abnormal communication with engine-A/T-ECU	Probable cause
If normal communication is not possible for a continuous period of 1 second or more when the ignition switch is at the ON position, the battery voltage is 10 V or more and the engine speed is 450 r/min or more, diagnosis code No. 51 is output. Diagnosis code No. 51 is also output if the data being received is abnormal for a continuous period of 4 seconds under the same conditions.	<ul style="list-style-type: none"> ● Malfunction of connector ● Malfunction of the engine-A/T-ECU


Replace the engine-A/T-ECU.

Code No. 54 A/T control relay system	Probable cause
If the A/T control relay voltage is less than 7 V after the ignition switch has been turned ON, it is judged that there is an open circuit or a short-circuit in the A/T control relay earth and diagnosis code No. 54 is output. Then the transmission is locked into 3rd gear as a fail-safe measure, and the N range lamp flashes at a frequency of 1 Hz.	<ul style="list-style-type: none"> ● Malfunction of the A/T control relay ● Malfunction of connector ● Malfunction of the engine-A/T-ECU

*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

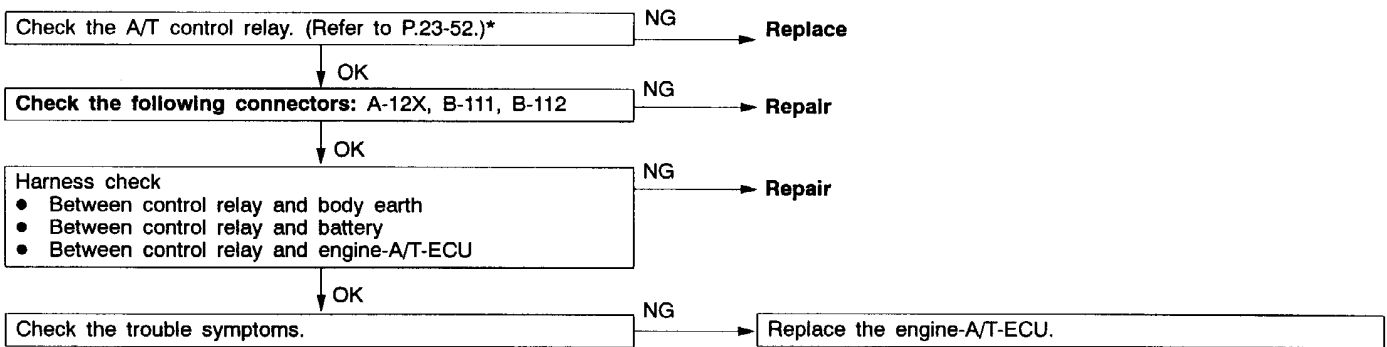

Code No. 56 N range lamp system	Probable cause
If the N range signal is off after an N range lamp illumination instruction (ON instruction) has been given, it is judged that there is a short-circuit in the N range lamp earth and diagnosis code No. 56 is output.	<ul style="list-style-type: none"> ● Malfunction of the N range lamp bulb ● Malfunction of connector ● Malfunction of the engine-A/T-ECU

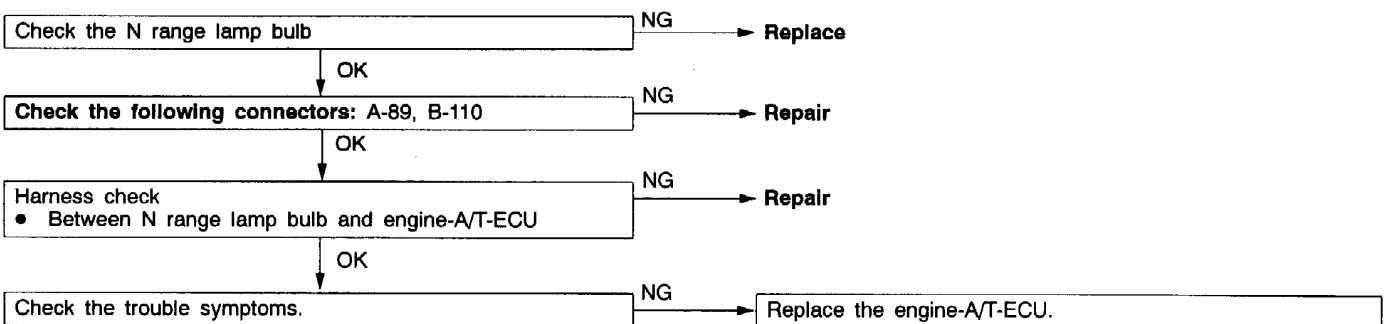

INSPECTION CHART FOR TROUBLE SYMPTOMS

Trouble symptom		Inspection procedure No.	Reference page
MUT-II can not communication with is any systems.		1	23-25*
MUT-II can not communication with is the engine-A/T-ECU.		2	23-12
Driving impossible	Starting impossible	3	23-27*
	Does not move forward	4	23-27*
	Does not reverse	5	23-28*
	Does not move (forward or reverse)	6	23-28*
Malfunction when starting	Engine stalling when shifting	7	23-29*
	Shocks when changing from N to D and large time lag	8	23-29*
	Shocks when changing from N to R and large time lag	9	23-30*
	Shocks when changing from N to D, N to R and large time lag	10	23-31*
Malfunction when shifting	Shocks and running up	11	23-31*
Displaced shifting points	All points	12	23-32*
	Some points	13	23-33*
Does not shift	No diagnosis codes	14	23-33*
Malfunction while driving	Poor acceleration	15	23-34*
	Vibration	16	23-34*
Inhibitor switch system		17	23-13
Dual pressure switch system		18	23-14
Vehicle speed output system		19	23-14


NOTE

*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS

INSPECTION PROCEDURE 2


MUT-II can not communicate with engine-A/T-ECU	Probable cause
It is suspected that this malfunction is caused by an open circuit in engine-A/T-ECU power supply circuit or diagnosis output circuit.	<ul style="list-style-type: none"> • Malfunction of harness or connector • Malfunction of engine-A/T-ECU

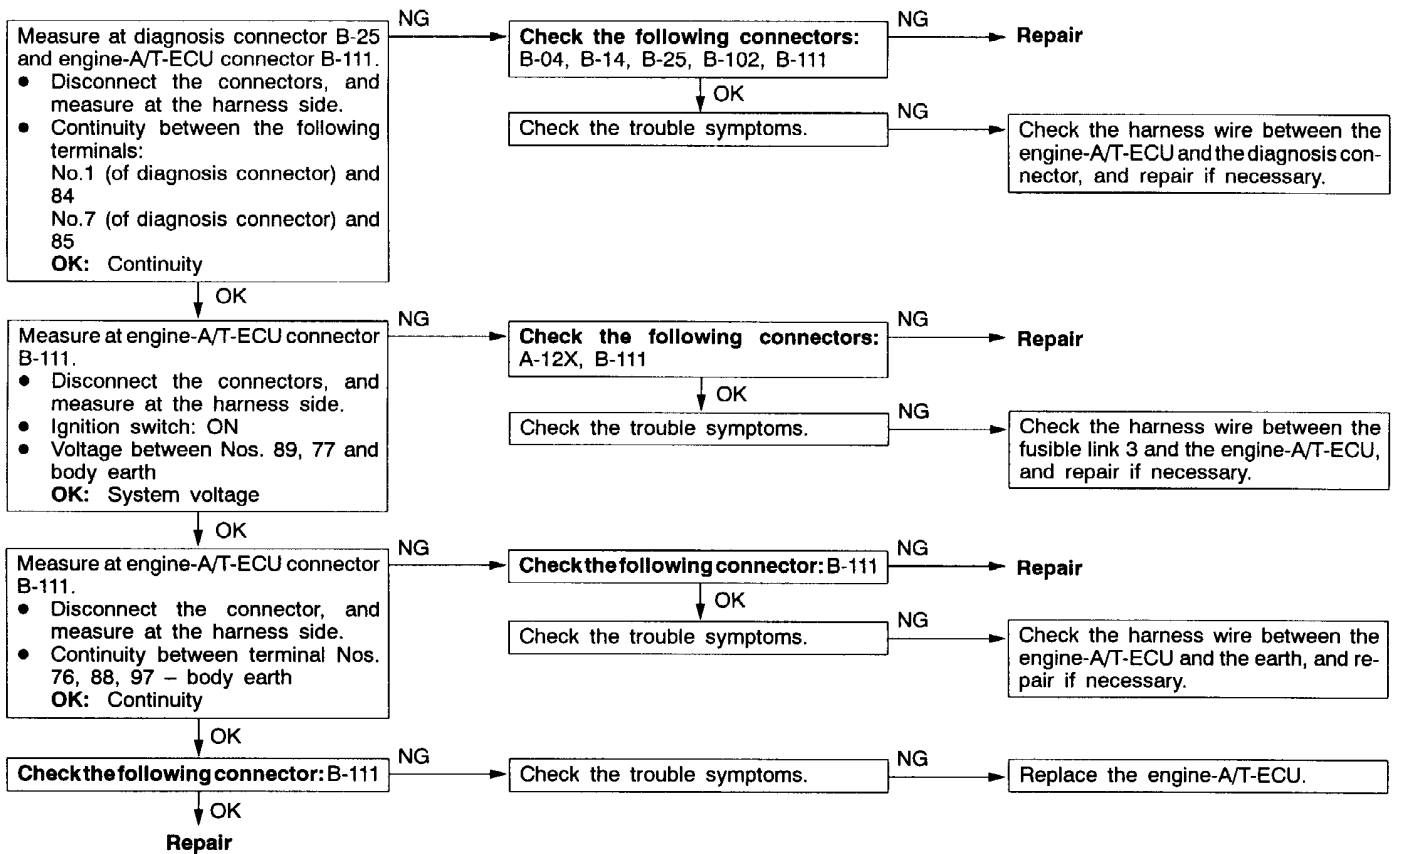

INSPECTION PROCEDURE 17

Inhibitor switch system	Probable cause
The cause is probably a malfunction of the inhibitor switch circuit, ignition switch circuit or a defective engine-A/T-ECU.	<ul style="list-style-type: none"> ● Malfunction of the inhibitor switch ● Malfunction of the ignition switch ● Malfunction of connector ● Malfunction of the engine-A/T-ECU


*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

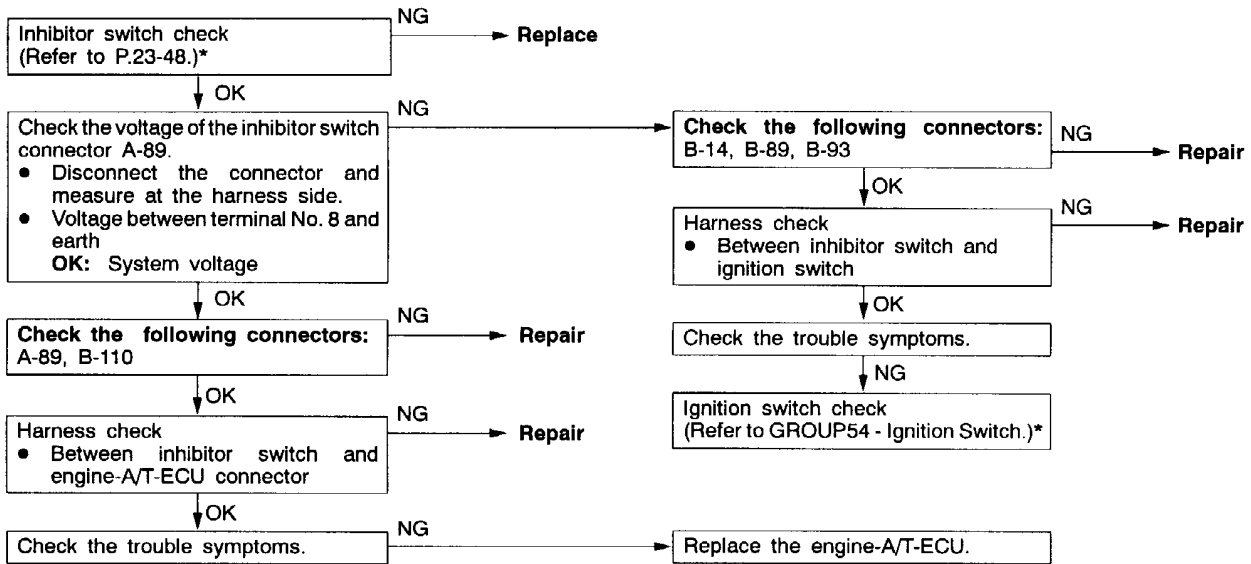

INSPECTION PROCEDURE 18

Dual pressure switch system	Probable cause
The cause is probably a defective dual pressure switch circuit or a defective engine-A/T-ECU.	<ul style="list-style-type: none"> • Malfunction of the dual pressure switch • Malfunction of connector • Malfunction of A/C system • Malfunction of the engine-A/T-ECU


*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

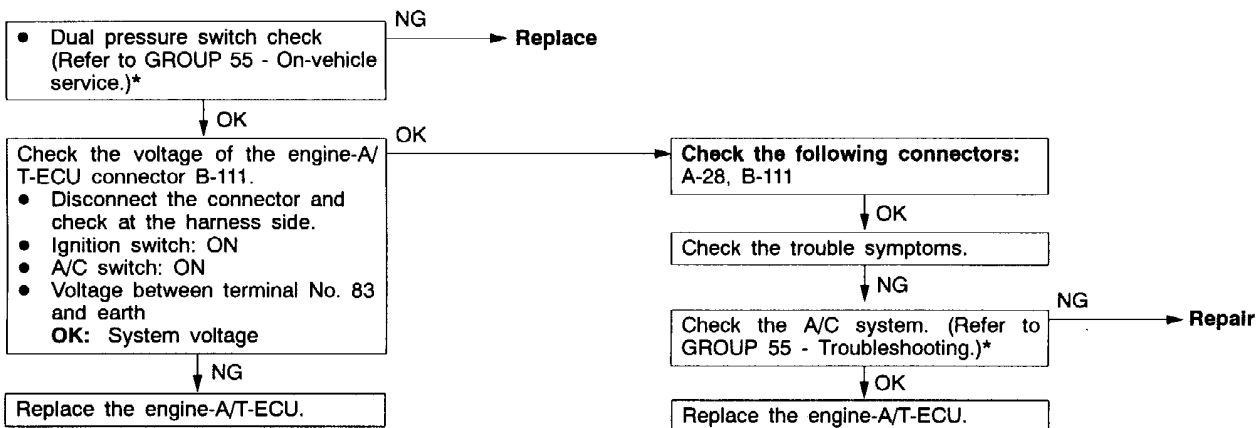

INSPECTION PROCEDURE 19

Vehicle speed output system	Probable cause
The vehicle speed output circuit or the engine-A/T-ECU may be defective.	<ul style="list-style-type: none"> • Malfunction of combination meter • Malfunction of connector or harness • Malfunction of the engine-A/T-ECU

*: Refer to '99 SPACE RUNNER, SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

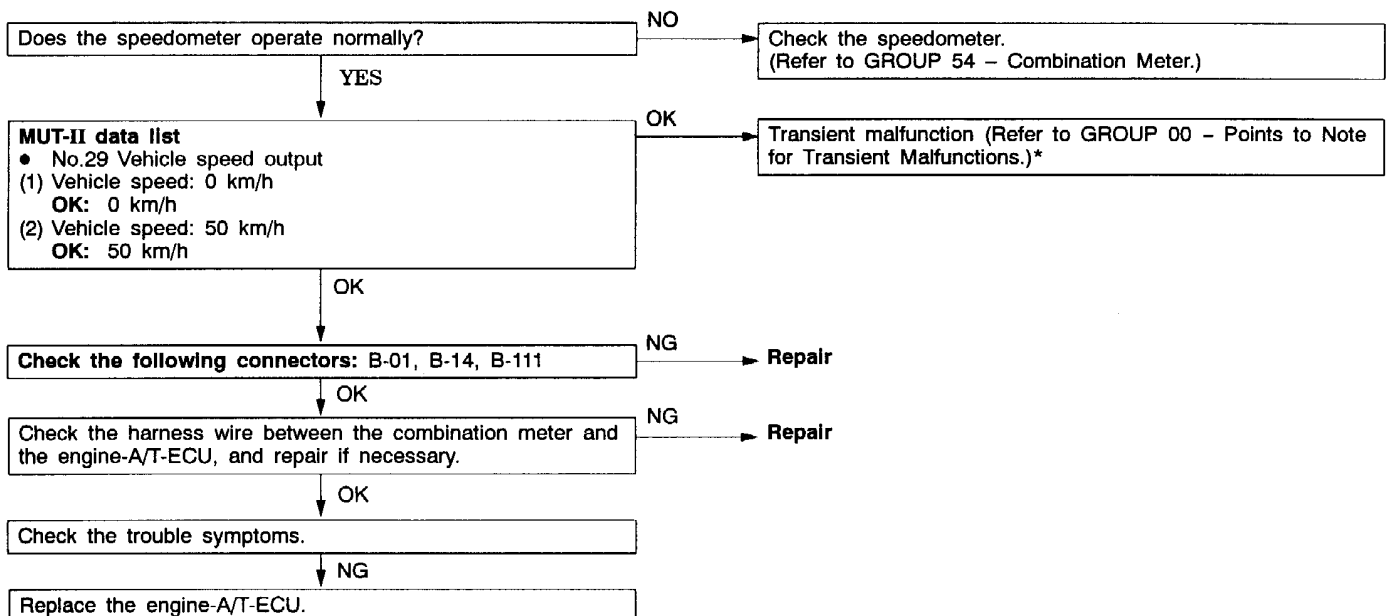

CHECK AT ENGINE-A/T-ECU TERMINALS

1	2	3	4		5	6	7	8	41	42	43		44	45	46	71	72	73	74		75	76	77	101	102	103	104		105	106	107																			
9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	47	48	49	50	51	52	53	54	55	56	57	78	79	80	81	82	83	84	85	86	87	88	89	108	109	110	111	112	113	114	115	116	117	118	119	120
24	25	26	27	28	29	30	31	32	33	34	35	58	59	60	61	62	63	64	65	66	90	91	92	93	94	95	96	97	98	121	122	123	124	125	126	127	128	129	130											

9FA0253

*: Refer to '99 SPACE WAGON Workshop Manual (Pub No. PWDE9809).

Terminal No.	Check item	Check requirement	Standard value
45	Crank angle sensor	Engine: Idling	2.0 – 2.4 V
50	A/T control relay	Ignition switch: OFF	0 V
		Ignition switch: ON	System voltage
76	Earth	Always	0 V
77	Solenoid valve power supply	Ignition switch: OFF	0 V
		Ignition switch: ON	System voltage
84	Diagnosis control	–	–
85	Diagnosis output	Normal (No diagnosis code output)	0 → 5 V flashing
88	Earth	Always	0 V
89	Solenoid valve power supply	Ignition switch: OFF	0 V
		Ignition switch: ON	System voltage
97	Earth	Always	0 V
101	Inhibitor switch P	Selector lever position: P	System voltage
		Selector lever position: Other than above	0 V
102	Inhibitor switch D	Selector lever position: D	System voltage
		Selector lever position: Other than above	0 V
103	Input shaft speed sensor	Measure between terminal No. 57 <MPI>, No. 81 <GDI> and No.103 by an oscilloscope. Engine: 2,000 r/min Selector lever position: 3 (3rd gear)	Refer to P.23-43*, Oscilloscope inspection procedure.
104	Output shaft speed sensor	Measure between terminal No. 57 <MPI>, No. 81 <GDI> and No.104 by an oscilloscope. Engine: 2,000 r/min Selector lever position:3 (3rd gear)	Refer to P.23-43*, Oscilloscope inspection procedure.
106	Second solenoid valve	Selector lever position: 2 (2nd gear)	System voltage
		Selector lever position: P	Approx. 7 – 9 V

Terminal No.	Check item	Check requirement	Standard value
107	Damper clutch control solenoid valve	Selector lever position: L (1st gear)	System voltage
		Selector lever position: 3 (50 km/h in 3rd gear)	Other than system voltage
108	Inhibitor switch R	Selector lever position: R	System voltage
		Selector lever position: Other than above	0 V
109	Inhibitor switch 3	Selector lever position: 3	System voltage
		Selector lever position: Other than above	0 V
110	Inhibitor switch L	Selector lever position: L	System voltage
		Selector lever position: Other than above	0 V
115	Wide open throttle valve	Accelerator pedal: Released	4 V or more
		Accelerator pedal: Depressed	Less than 0.4 V
120	Underdrive solenoid valve	Selector lever position: L (1st gear)	System voltage
		Selector lever position: P	Approx. 7 – 9 V
121	Inhibitor switch N	Selector lever position: N	System voltage
		Selector lever position: Other than above	0 V
122	Inhibitor switch 2	Selector lever position: 2	System voltage
		Selector lever position: Other than above	0 V
123	Stop lamp switch	Brake pedal: Depressed	System voltage
		Brake pedal: Released	0 V
124	A/T fluid temperature sensor	A/T fluid temperature: 20°C (68°F)	3.8 – 4.0 V
		A/T fluid temperature: 40°C (104°F)	3.2 – 3.4 V
		A/T fluid temperature: 80°C (176°F)	1.7 – 1.9 V
129	Low-reverse solenoid valve	Selector lever position: P	System voltage
		Selector lever position: 2 (2nd gear)	Approx. 7 – 9 V
130	Overdrive solenoid valve	Selector lever position: 3 (3rd gear)	System voltage
		Selector lever position: P	Approx. 7 – 9 V