
# 2. Relay and Fuse

## A: LOCATION

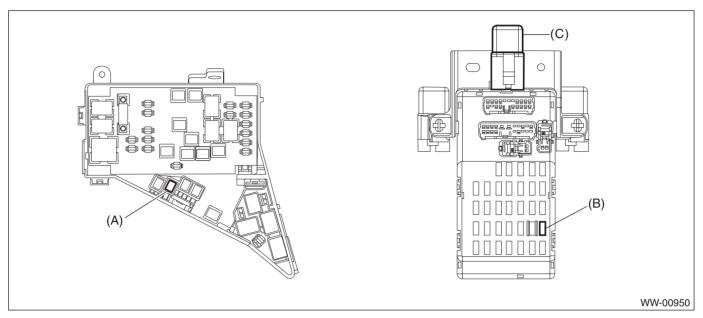

Main fuse box	Fuse 30 A (wiper)	(A)
Relay & fuse box	Fuse 7.5 A (wiper)	(B)
Relay holder	Wiper relay	(C)

## NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

## **B: INSPECTION**

### 1. CHECK FUSE

- 1) Remove the fuse and inspect visually.
- 2) If the fuse is blown out, replace the fuse.

### 2. CHECK RELAY

1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 M $\Omega$ or more	
1-2	Apply battery voltage between terminals 4 and 3.	Less than 1 Ω	1 2 0 0 1 2 3 4 SR-00180

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 M $\Omega$ or more	
1 — 4	Always	Less than 1 $\Omega$	
1-2	Apply battery voltage between terminals 3 and 5.	Less than 1 $\Omega$	1 2 1 2 5 SL-01085

2) Replace the relay if the inspection result is not within the standard.