

## 3. ABS Sequence Control

### A: OPERATION

1) While the ABS sequence control is being performed, the operation of the hydraulic unit can be checked using the brake tester or pressure gauge after the hydraulic unit solenoid valve operation.

2) ABS sequence control can be started by the Subaru Select Monitor.

#### 1. ABS SEQUENCE CONTROL WITH SUBARU SELECT MONITOR

##### NOTE:

In the event of any trouble, the ABS sequence control will not operate.

1) Connect the Subaru Select Monitor to data link connector under the driver's side instrument panel lower cover.

2) Turn the ignition switch to ON.

3) Run the Subaru Select Monitor.

4) Set the Subaru Select Monitor to "Brake Control" mode.

5) When the "Function check sequence" is selected, the "ABS sequence control" will start.

6) Execute the following operations when the message "Press the brake pedal so that the brake pedal force is between 100 and 150 kgf" is displayed.


(1) [When the brake tester is used, press brake pedal pad with a force of 1,000 N (102 kgf, 225 lb). ]

(2) When using a pressure gauge, press the brake pedal so that the pressure gauge indicates 3,500 kPa (36 kg/cm<sup>2</sup>, 511 psi).

7) "OK" will be displayed. Select the [OK].

8) The brake system being operated is displayed on the Subaru Select Monitor.

## 2. CONDITIONS FOR ABS SEQUENCE CONTROL

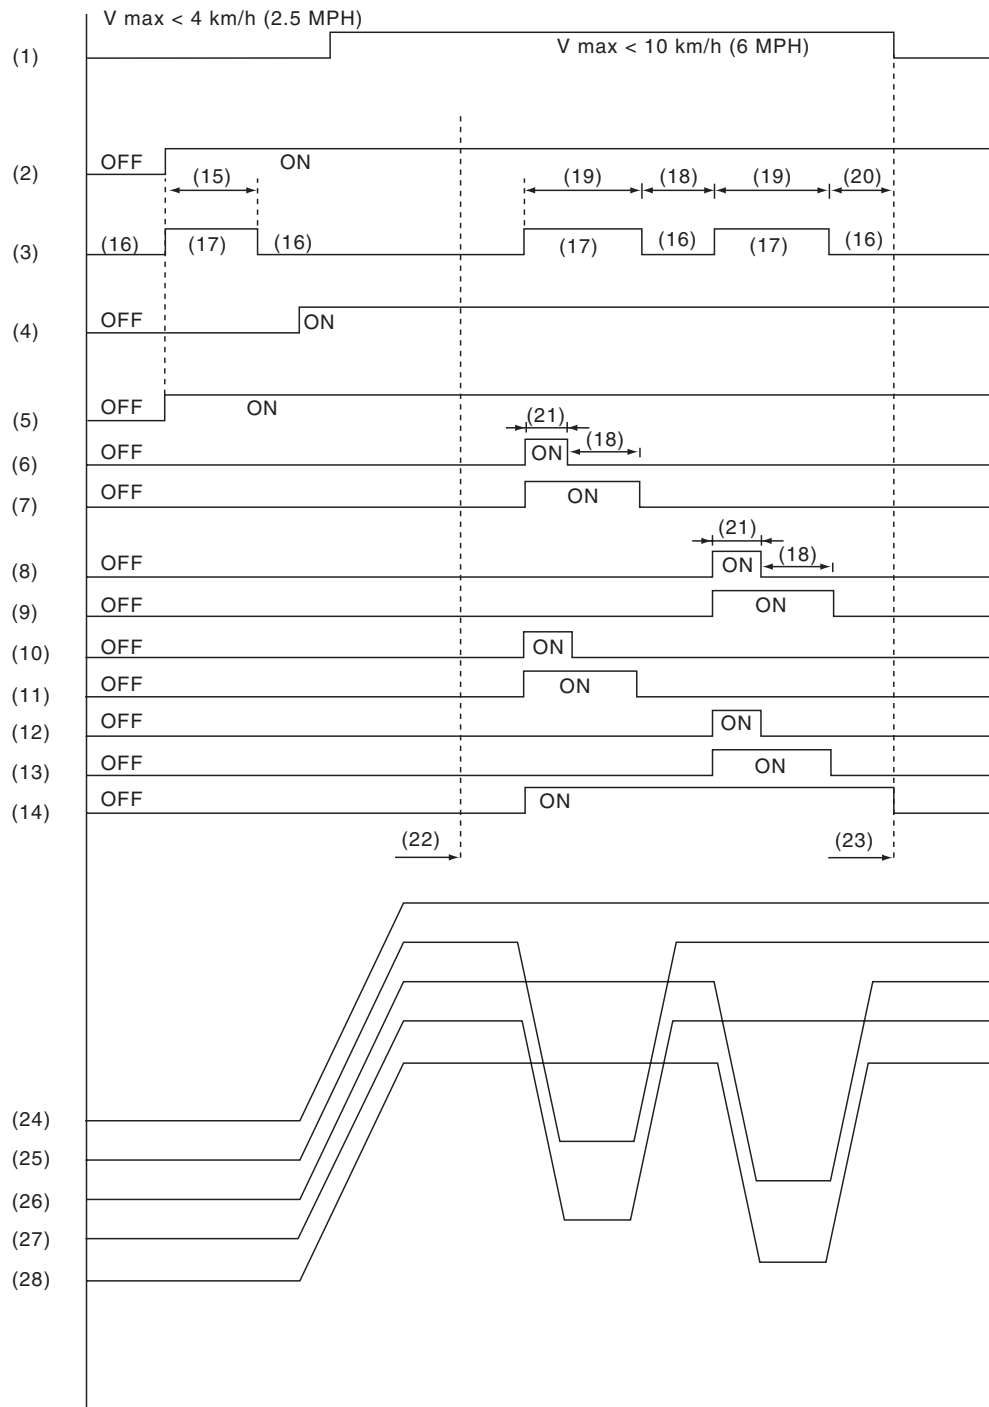

ABS00943

# ABS Sequence Control

## ABS

---

- |                             |                             |                                 |
|-----------------------------|-----------------------------|---------------------------------|
| (1) All wheel speed         | (11) RR compression valve   | (20) 0.6 sec.                   |
| (2) Ignition key            | (12) RL decompression valve | (21) 0.4 sec.                   |
| (3) ABS warning light       | (13) RL compression valve   | (22) Point A                    |
| (4) Stop light switch       | (14) Pump motor             | (23) Reset                      |
| (5) Valve relay             | (15) 1.5 sec.               | (24) Master cylinder pressure   |
| (6) FL decompression valve  | (16) Light OFF              | (25) FL wheel cylinder pressure |
| (7) FL compression valve    | (17) Light ON               | (26) FR wheel cylinder pressure |
| (8) FR decompression valve  | (18) 1.0 sec.               | (27) RR wheel cylinder pressure |
| (9) FR compression valve    | (19) 1.4 sec.               | (28) RL wheel cylinder pressure |
| (10) RR decompression valve |                             |                                 |

### NOTE:

The control operation starts from point A.

## B: SPECIFICATION

### 1. CONDITIONS FOR COMPLETION OF ABS SEQUENCE CONTROL

When the following conditions develop, the ABS sequence control stops and ABS operation is returned to the normal control mode.

- 1) When the speed of at least one wheel reaches 10 km/h (6 MPH).
- 2) When the brake pedal is released during ABS sequence control and the stop light switch becomes OFF.
- 3) After completion of ABS sequence control.
- 4) When a malfunction is detected.