

# General Description

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

---

## 3. General Description

### A: CAUTION

#### 1. SUPPLEMENTAL RESTRAINT SYSTEM “AIRBAG”

Airbag system wiring harness is routed near the ABS wheel speed sensor and VDCCM&H/U.

#### CAUTION:

- Do not use electrical test devices on airbag system wiring harnesses or connector circuits.
- Be careful not to damage the airbag system wiring harness when servicing the ABS wheel speed sensor and VDCCM&H/U.

### B: INSPECTION

Before performing diagnosis, check the following items which might affect VDC problems.

#### 1. BATTERY

Measure the battery voltage and check electrolyte.

#### *Standard voltage:*

*12 V or more*

#### *Specific gravity:*

*1.260 or more*

#### 2. GROUND

Check the tightening torque of the ground bolt for VDC.

#### 3. BRAKE FLUID

- 1) Check the brake fluid level.
- 2) Check the brake fluid for leaks.

#### 4. HYDRAULIC UNIT

Check the hydraulic unit.

- With brake tester <Ref. to VDC-17, CHECKING THE HYDRAULIC UNIT ABS OPERATION WITH THE BRAKE TESTER, INSPECTION, VDC Control Module and Hydraulic Control Unit (VDC-CM&H/U).>
- Without brake tester <Ref. to VDC-16, CHECKING THE HYDRAULIC UNIT ABS OPERATION BY PRESSURE GAUGE, INSPECTION, VDC Control Module and Hydraulic Control Unit (VDC-CM&H/U).>

#### 5. BRAKE DRAG

Check for brake drag.

#### 6. BRAKE PAD AND ROTOR

Check the brake pad and rotor.

- Front <Ref. to BR-16, INSPECTION, Front Brake Pad.> <Ref. to BR-18, INSPECTION, Front Disc Rotor.>
- Rear <Ref. to BR-29, INSPECTION, Rear Brake Pad.> <Ref. to BR-32, INSPECTION, Rear Disc Rotor.>

#### 7. TIRE

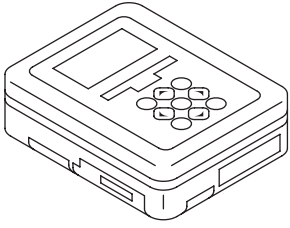
Check the tire specifications, tire wear and air pressure. <Ref. to WT-2, SPECIFICATION, General Description.>

# General Description

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

## C: PREPARATION TOOL

### 1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

### 2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.
Oscilloscope	Used for measuring the sensor.