

# VDC OFF Switch

VEHICLE DYNAMICS CONTROL (VDC)


## 13.VDC OFF Switch

### A: REMOVAL

NOTE:

The trunk opener switch is integrated with the VDC OFF switch. (Sedan model)

- 1) Remove the instrument panel lower cover. <Ref. to EI-63, REMOVAL, Instrument Panel Lower Cover.>
- 2) Release the claws and remove the VDC OFF switch.

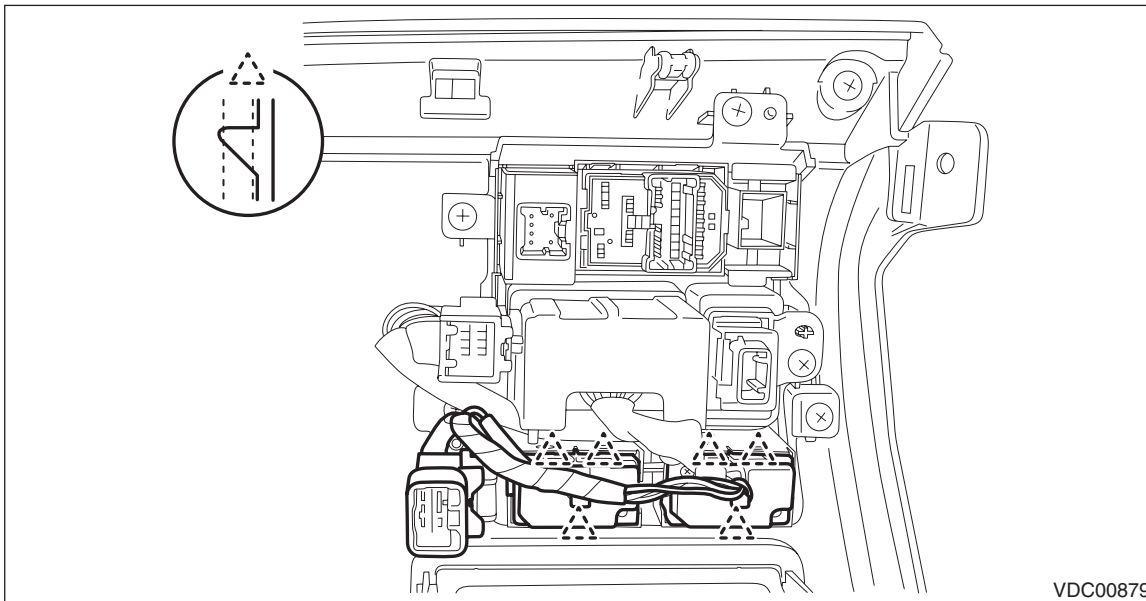


### B: INSTALLATION

Install each part in the reverse order of removal.

## C: INSPECTION

- 1) Disconnect the VDC OFF switch connector.
- 2) Check the resistance between the VDC OFF switch terminals.

**Preparation tool: Circuit tester**

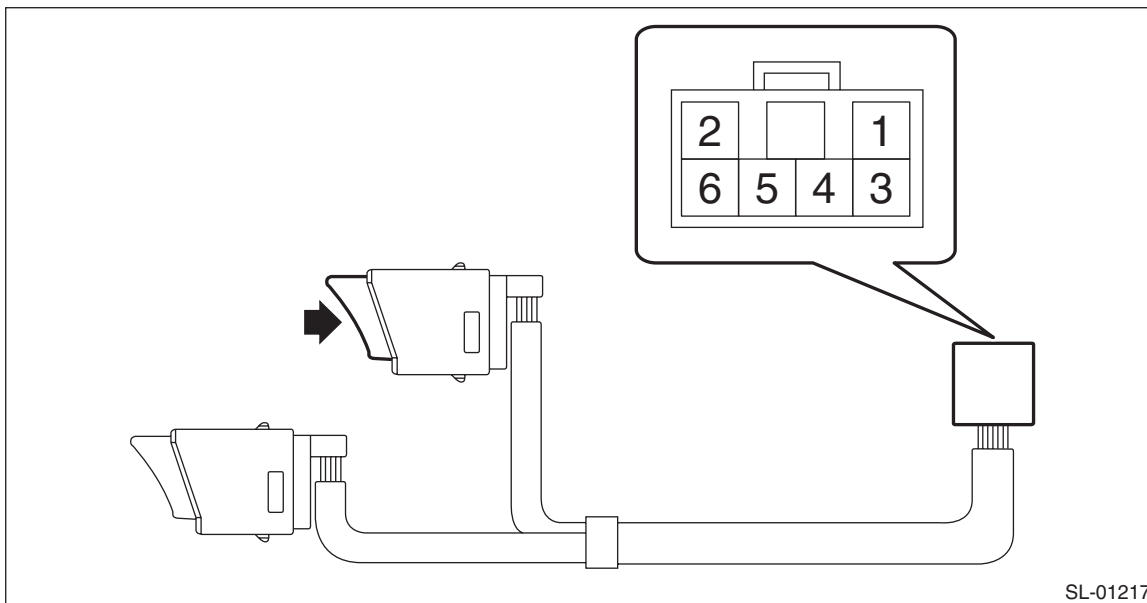

Terminal No.	Inspection conditions	Standard
1 — 3	Switch OFF	1 MΩ or more
	Switch ON	Less than 1 Ω

- 3) Replace the VDC OFF switch if the inspection result is not within the standard value.

# VDC OFF Switch

VEHICLE DYNAMICS CONTROL (VDC)

---

# VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

## *VDC(diag)*

---

	<b>Page</b>
1. Basic Diagnostic Procedure .....	2
2. Check List for Interview .....	4
3. General Description .....	8
4. Electrical Component Location .....	10
5. Control Module I/O Signal .....	12
6. Subaru Select Monitor .....	16
7. Read Diagnostic Trouble Code (DTC) .....	23
8. Inspection Mode .....	24
9. Clear Memory Mode .....	25
10. Warning Light Illumination Pattern .....	26
11. List of Diagnostic Trouble Code (DTC) .....	35
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC) .....	39
13. General Diagnostic Table .....	88