


REAR WIPER AND WASHER

FROM POWER SOURCE SYSTEM (SEE PAGE 40)

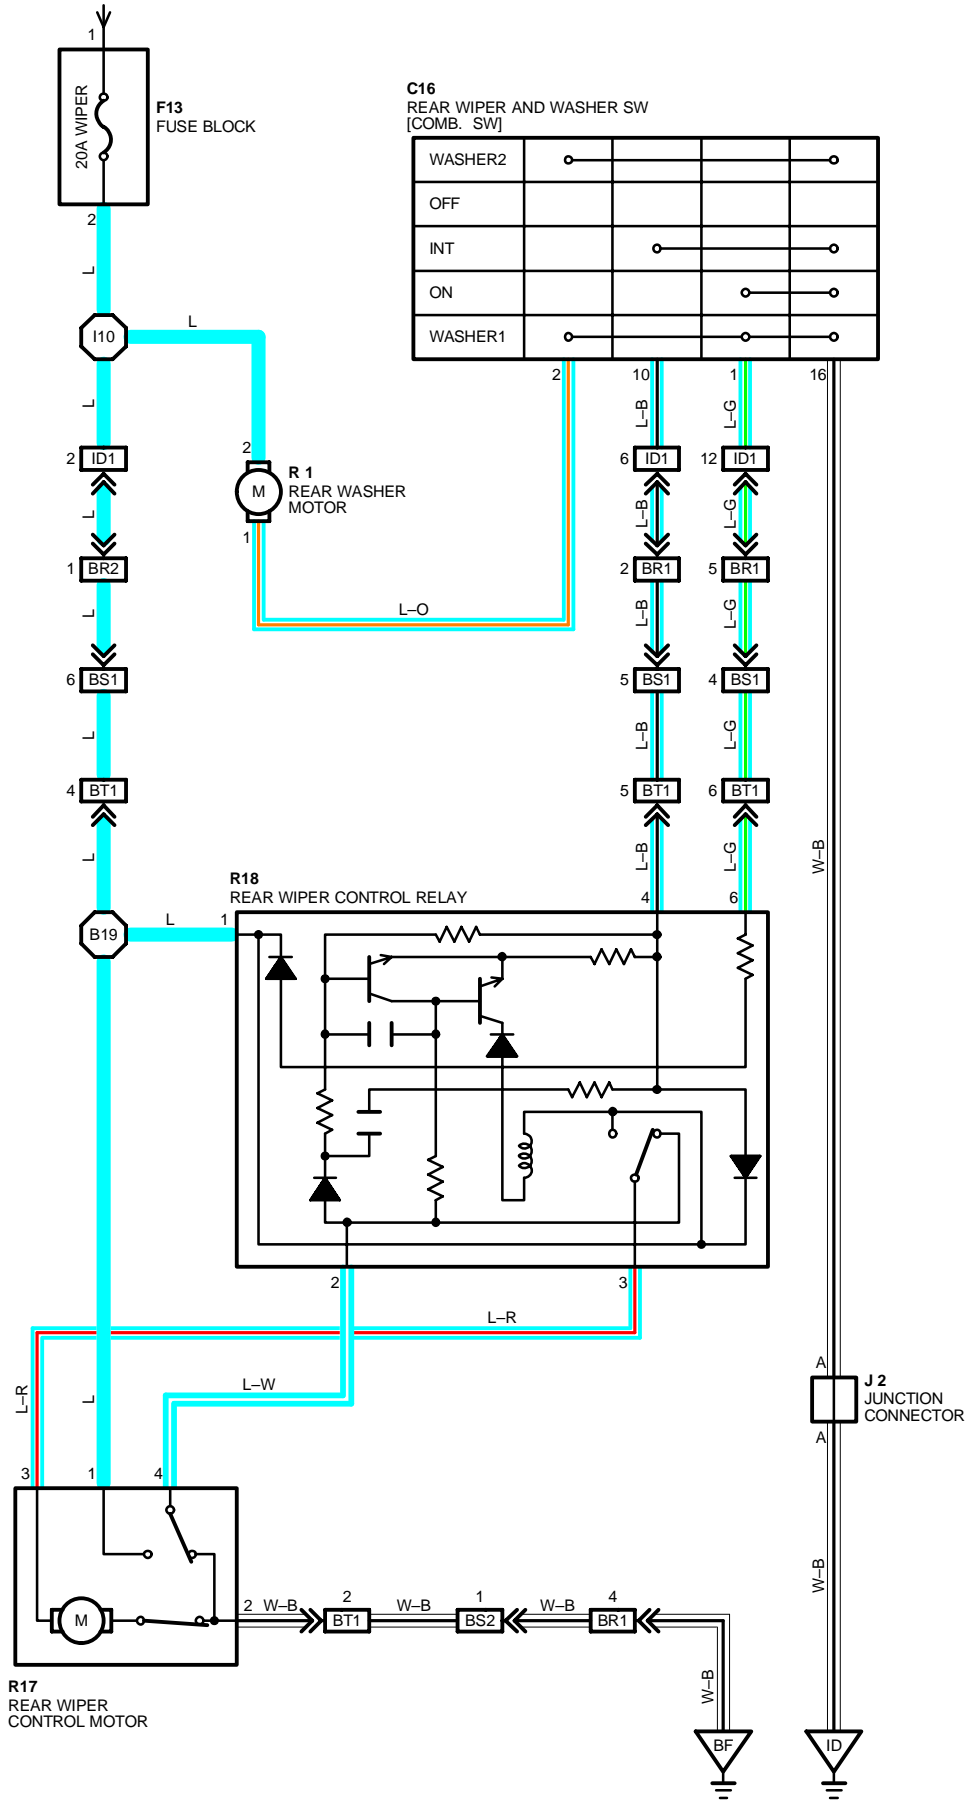

SYSTEM OUTLINE

WITH THE IGNITION SW TURNED ON, THE CURRENT FLOWS TO **TERMINAL 2** OF REAR WASHER MOTOR, **TERMINAL 1** OF REAR WIPER RELAY AND **TERMINAL 1** OF REAR WIPER MOTOR THROUGH THE WIPER FUSE.

1. REAR WIPER NORMAL OPERATION

WITH THE IGNITION SW TURNED ON AND REAR WIPER AND WASHER SW TURNED ON, THE CURRENT FLOWING TO **TERMINAL 1** OF REAR WIPER RELAY FLOWS TO **TERMINAL 6** OF RELAY → **TERMINAL 1** OF REAR WIPER AND WASHER SW → **TERMINAL 16** → TO **GROUND**. THUS, THE RELAY COIL IS ACTIVATED AND THE CURRENT TO **TERMINAL 1** OF RELAY FLOWS TO **TERMINAL 3** → **TERMINAL 3** OF REAR WIPER MOTOR → MOTOR → **TERMINAL 2** → TO **GROUND** AND CAUSES THE MOTOR TO OPERATE THE WIPER.

2. REAR WIPER INTERMITTENT OPERATION

WITH THE IGNITION SW TURNED ON AND REAR WIPER AND WASHER SW TURNED TO **INT** POSITION, THE CURRENT FLOWING TO **TERMINAL 1** OF REAR WIPER RELAY FLOWS TO **TERMINAL 4** OF RELAY → **TERMINAL 10** OF WIPER SW → **TERMINAL 16** → TO **GROUND**, AS A RESULT, THE RELAY OPERATES FOR APPROX. 4 SEC. AND CURRENT FLOWS FROM **TERMINAL 1** OF RELAY → **TERMINAL 3** → **TERMINAL 3** OF REAR WIPER MOTOR → MOTOR → TO **GROUND**, CAUSING THE MOTOR TO ROTATE TO OPERATE THE WIPER. AT THIS TIME THE CONTACT IN THE WIPER MOTOR CLOSES AND THE CURRENT FLOWS FROM **TERMINAL 1** OF REAR WIPER MOTOR → **TERMINAL 4** → **TERMINAL 2** OF REAR WIPER RELAY → **TERMINAL 4** → **TERMINAL 10** OF REAR WIPER AND WASHER SW → **TERMINAL 16** → TO **GROUND**.

THUS, THE INTERMITTENT-STOP CIRCUIT OPERATES, THE CONDENSER IN THE CIRCUIT CHARGES AND THE WIPER CONTINUES TO OPERATE UNTIL REACHING THE **STOP** POSITION. AFTER THE WIPER STOPS, CURRENT DOES NOT FLOW TO THE INTERMITTENT-STOP CIRCUIT FROM **TERMINAL 2** OF RELAY, BUT THE CONDENSER DISCHARGES CURRENT INTO THE INTERMITTENT CIRCUIT AND THE CIRCUIT OPERATES UNTIL THE CONDENSER DISCHARGE ENDS. AS A RESULT, THIS DISCHARGE INTERVAL BECOMES THE INTERMITTENT TIME.

WHEN THE CURRENT IS DISCHARGED COMPLETELY, THE CURRENT FLOWING TO **TERMINAL 1** OF RELAY FLOWS TO **TERMINAL 4** → **TERMINAL 10** OF REAR WIPER AND WASHER SW → **TERMINAL 16** → TO **GROUND**

THEN, THE CURRENT IN **TERMINAL 1** OF RELAY FLOWS FROM **TERMINAL 3** → **TERMINAL 3** OF MOTOR → MOTOR → TO **GROUND** AND ROTATES THE MOTOR. THROUGH REPETITION OF THIS PROCESS, INTERMITTENT OPERATION OF THE REAR WIPER OCCURS.

3. WASHER OPERATION

WITH THE IGNITION SW TURNED ON AND THE REAR WIPER AND WASHER SW TURNED TO ON OR **INT** POSITION, WHEN THE WIPER SW IS PUSHED STRONGLY TOWARD THE ON OR INT SIDE THE CURRENT FLOWING TO **TERMINAL 2** OF REAR WASHER MOTOR FLOWS TO **TERMINAL 1** OF MOTOR → **TERMINAL 2** OF REAR WIPER AND WASHER SW → **TERMINAL 16** → TO **GROUND** SO THAT THE WASHER MOTOR ROTATES AND THE WINDOW WASHER EJECTS THE SPRAY, ONLY WHILE THE WIPER SW IS PRESSED. AT THE SAME TIME, THE WASHER CHANGE VALUE OPERATES.

SERVICE HINTS

R 1 REAR WASHER MOTOR

- 2-GROUND: APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION
- 1-GROUND: CONTINUITY WITH WASHER SW TURNED ON

R18 REAR WIPER CONTROL RELAY

- 1-GROUND: APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION
- 4-GROUND: CONTINUITY WITH REAR WIPER SW AT **INT** POSITION
- 6-GROUND: CONTINUITY WITH REAR WIPER SW AT **ON** POSITION



: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C16	20	J 2	20	R17	21
F13	20	R 1	19	R18	21



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID1	24	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
BR1	28	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR2		
BS1	28	BACK DOOR NO.1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BS2		
BT1	28	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BT2		



: GROUND POINTS


CODE	SEE PAGE	GROUND POINTS LOCATION
ID	24	LEFT KICK PANEL
BF	26	UNDER THE CENTER CONSOLE BOX

REAR WIPER AND WASHER

 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I10	24	COWL WIRE	B19	28	BACK DOOR NO. 2 WIRE

C16 BLACK



F13

(SEE PAGE 18)

J 2



(HINT:SEE PAGE 7)

R 1 GRAY



R17



R16

