

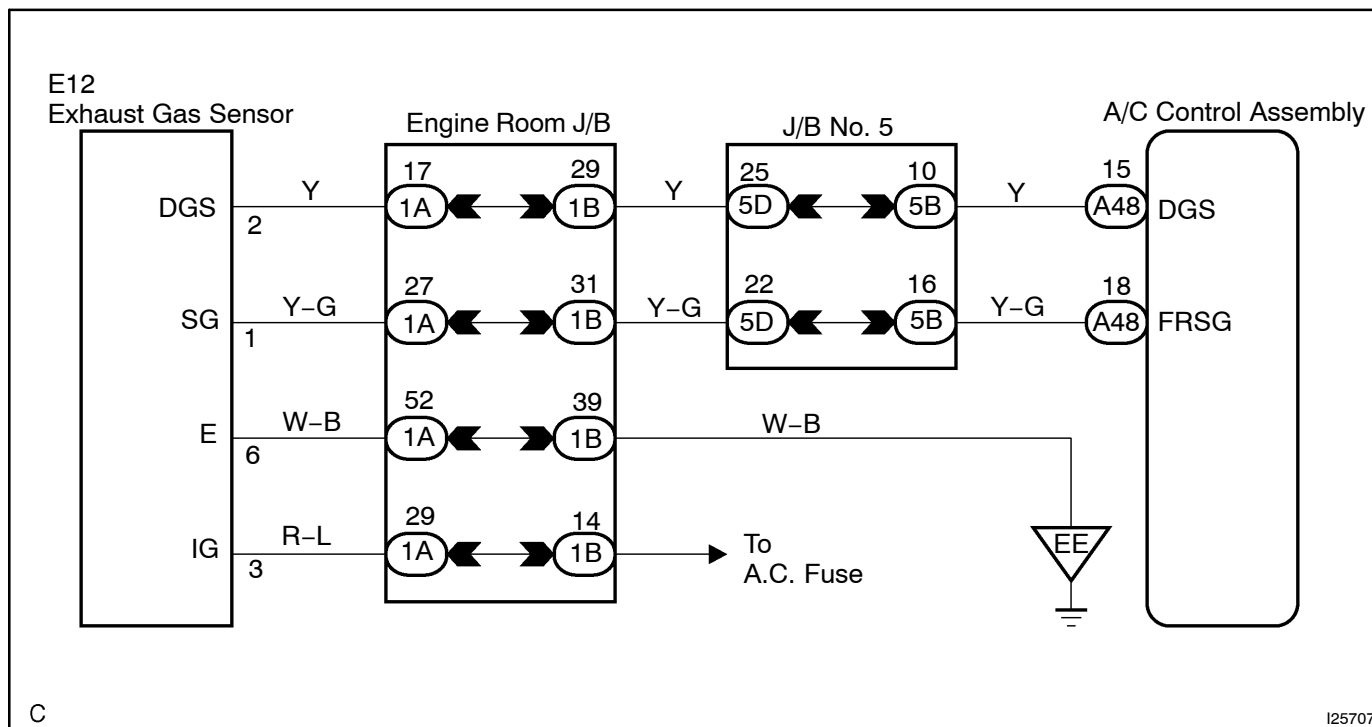
DTC	18	Exhaust gas sensor circuit (HC, CO)
------------	-----------	--

CIRCUIT DESCRIPTION

This sensor detects the exhaust gas (HC, CO) outside the vehicle and sends signal to the A/C amplifier.

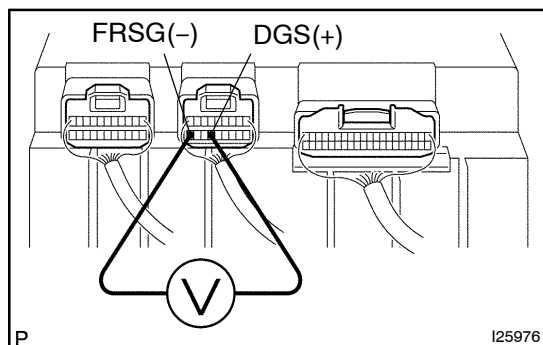
DTC No.	Detection Item	Trouble Area
18	Open or short in exhaust gas sensor circuit (HC, CO)	- Exhaust gas sensor - Harness or connector between exhaust gas sensor and A/C amplifier - A/C amplifier

WIRING DIAGRAM



INSPECTION PROCEDURE

1	Check voltage between terminals DGS and FRSG of A/C amplifier.
----------	---

**PREPARATION:**

Remove A/C amplifier with connectors still connected.

CHECK:

- (a) Turn ignition switch to ON.
- (b) Check voltage between terminals DGS and FRSG of A/C amplifier connector at the temperature.

OK:**Voltage:**

1.0 – 4.5 V at 10 – 35 °C (50 – 95 °F)

HINT:

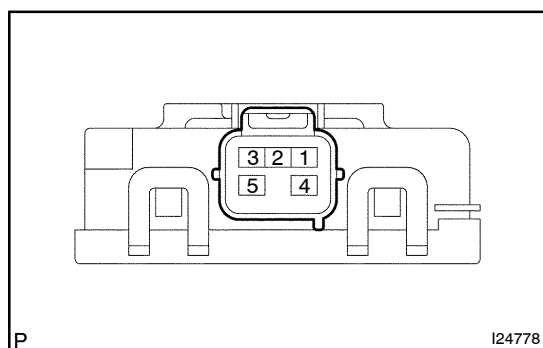
When the sensor is exposed to the exhaust gas, the voltage goes down.

NG	Go to step 2.
-----------	----------------------

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-1529](#)). However, if DTC 18 is displayed, check and replace A/C amplifier.

2	Check exhaust gas sensor resistance.
----------	---

**PREPARATION:**

Remove the exhaust gas sensor (See page [AC-91](#)).

CHECK:

- (a) Connect positive (+) lead from the battery to the terminal 2 and negative (–) lead to terminal 1.
- (b) After keeping to apply battery positive voltage between terminals 1 and 2 for more than 30 seconds, measure resistance between terminals 3 and 5.

OK:**Resistance:**

5 – 100 kΩ at 10 – 35 °C (50 – 95 °F)

HINT:

When the sensor is exposed to the exhaust gas, the resistance goes down.

NG	Replace exhaust gas sensor.
-----------	------------------------------------

OK

3	Check harness and connector between exhaust gas sensor and A/C amplifier.
----------	--

NG**Repair or replace harness or connector.****OK****Check and replace A/C amplifier.**