


DTC	P0420	Catalyst System Efficiency Below Threshold (Bank 1)
------------	--------------	--

DTC	P0430	Catalyst System Efficiency Below Threshold (Bank 2)
------------	--------------	--


MONITOR DESCRIPTION

The vehicle is equipped with two heated oxygen sensors. One is mounted upstream from the TWC (Three-Way Catalytic) converter (Front Oxygen Sensor, "sensor 1"), the second is mounted downstream (Rear Oxygen Sensor "sensor 2"). The catalyst efficiency monitor compares the sensor 1 and sensor 2 signals in order to calculate TWC ability to store the oxygen.

During normal operation, the TWC stores and releases oxygen as needed. This results in low oxygen variations in the post TWC exhaust stream as shown below.

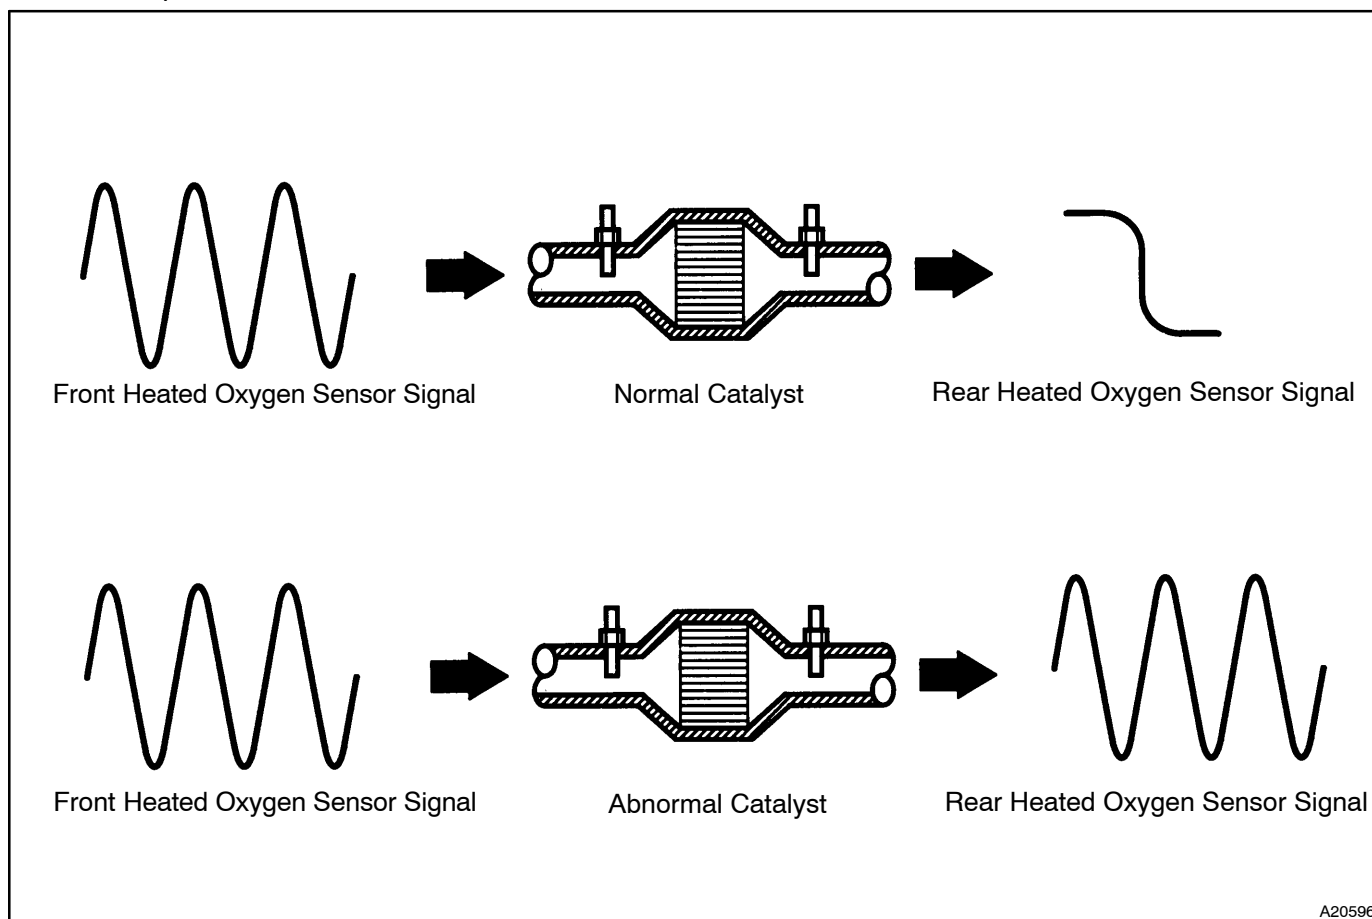

A20596

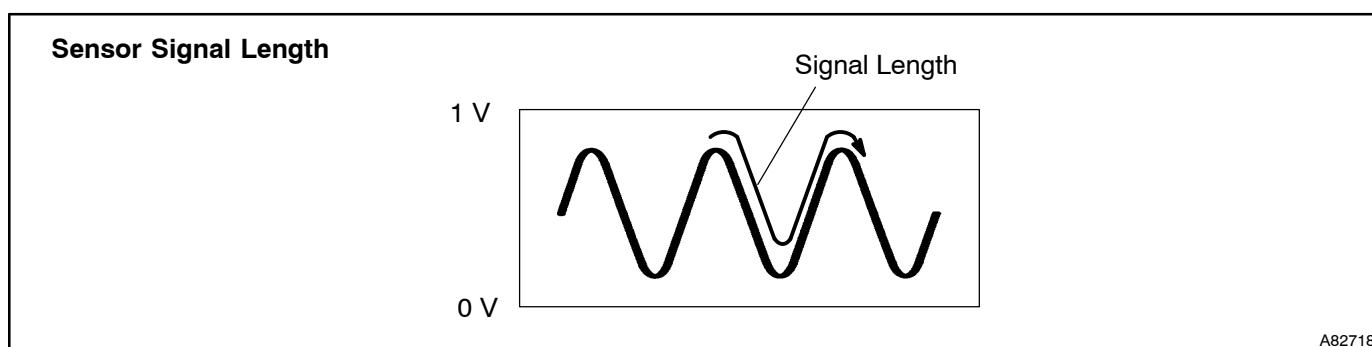

A82718

DIAGNOSTICS – ENGINE

DTC	Detecting Condition	Trouble Area
P0420	Catalyst deterioration level (bank 1) based on front and rear heated oxygen sensor signals exceeds malfunction threshold while driving vehicle under specified conditions (2 trip detection logic).	• Front exhaust pipe LH (front and rear catalysts) • Gas leakage on exhaust system • Heated oxygen sensor (bank 1 sensor 1) • Heated oxygen sensor (bank 1 sensor 2)
P0430	Catalyst deterioration level (bank 2) based on front and rear heated oxygen sensor signals exceeds malfunction threshold while driving vehicle under specified conditions (2 trip detection logic).	• Front exhaust pipe RH (front and rear catalysts) • Gas leakage on exhaust system • Heated oxygen sensor (bank 2 sensor 1) • Heated oxygen sensor (bank 2 sensor 2)

MONITOR STRATEGY

Required sensors/components (main)	Front and rear catalysts
Required sensors/components (related)	Front and rear heated oxygen sensors
Frequency of operation	Once per driving cycle
Duration	160 sec (minimum)
MIL operation	2 driving cycles
Sequence of operation	None

TYPICAL ENABLING CONDITIONS

Item	Minimum	Maximum
The following DTCs are not present	See page DI-3	
Battery voltage	11 V	–
Intake air temperature	–10°C (14°F)	–
Idle	OFF	
Intake air amount	8 g/sec	50 g/sec
Engine speed	–	4000 rpm
Engine coolant temperature	75°C (167°F)	
Upstream catalyst temperature	450°C (842°F)	830°C (1526°F)
Downstream catalyst temperature	450°C (842°F)	830°C (1526°F)
Fuel system status	Closed loop	

TYPICAL MALFUNCTION THRESHOLDS

Catalyst deterioration level	0.5 or more
Number of times detection	8 times

MONITOR RESULT (MODE 6)

Refer to page [DI-3](#) for detailed information.

Check the monitor result and test values after performing the drive pattern on next page.

TID \$01: Catalyst


TLT	CID	Unit Conversion	Description of Test Value	Description of Test Limit
0	\$01	Multiply by 0.0078 [no dimension]	Catalyst deterioration level bank 1	Malfunction criteria for catalyst deterioration
0	\$02	Multiply by 0.0078 [no dimension]	Catalyst deterioration level bank 2	Malfunction criteria for catalyst deterioration

CONFIRMATION DRIVING PATTERN

- (a) Connect the hand-held tester to the DLC3.
- (b) Clear DTCs.
- (c) Warm-up the engine until the engine coolant temperature reaches 75°C (167°F).
- (d) Drive the vehicle at 40 to 55 mph (64 to 88 km/h) for 3 minutes.
- (e) Drive the vehicle at 35 to 45 mph (56 to 72 km/h) for 7 minutes.

NOTICE:

Drive with smooth throttle operation and avoid sudden closure of the throttle.

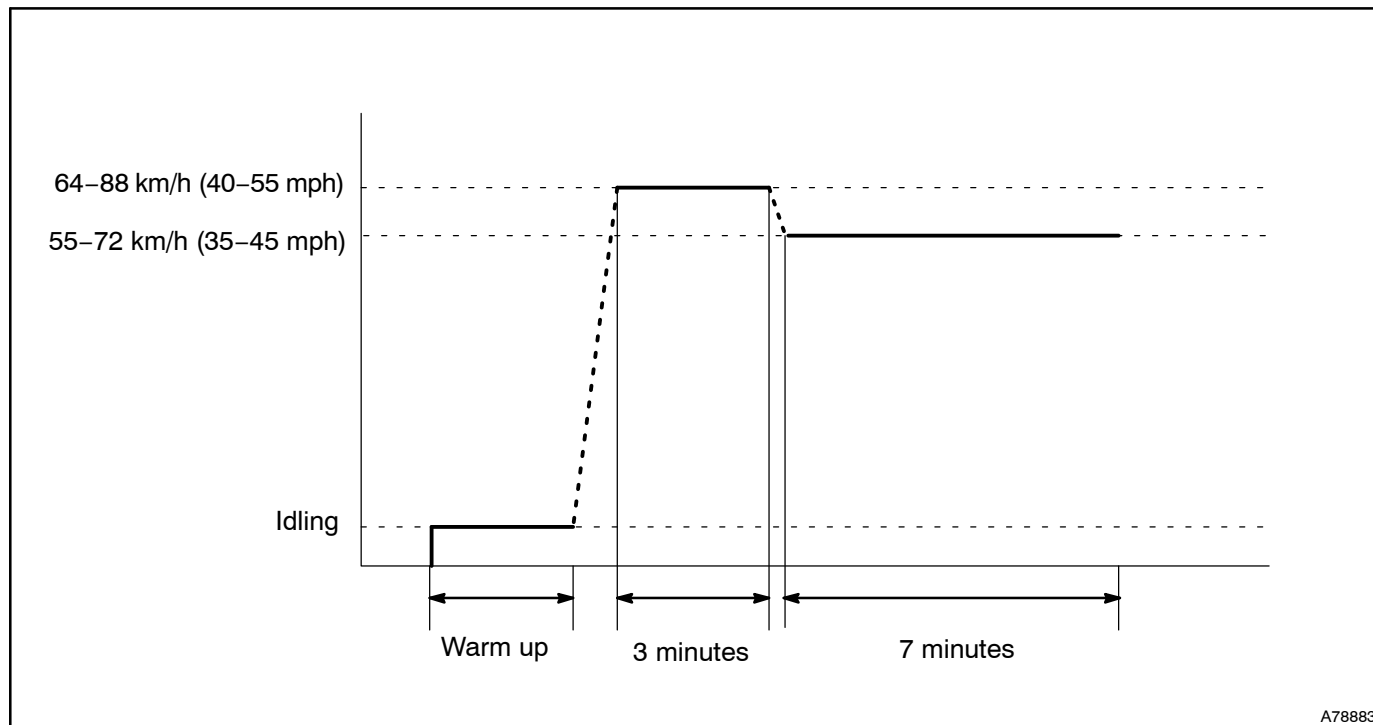

INSPECTION PROCEDURE

1	Check DTC other than P0420 and P0430.
----------	--

If DTC other than P0420 or P0430 is present, troubleshoot the DTC first.

DTC	Proceed to
P0420 or P0430	A
P0420 or P0430 and others	B

B**Go to relevant DTC chart (See page [DI-43](#)).****A**

2	Check gas leakage on exhaust system.
----------	---

NG**Repair or replace exhaust gas leakage point.****OK**

3 Perform A/F CONTROL active test.

This active test enables you to identify a malfunction in the heated oxygen sensors.

- Connect the hand-held tester to the DLC3.
- Run the engine at 2500 rpm for 90 seconds to warm-up the oxygen sensors.
- Allow the engine to idle.
- Select from the tester menus: DIAGNOSIS / ENHANCED OBD II / ACTIVE TEST / A/F CONTROL.
- Switch the injection volume between +25% and -12.5%, then read the oxygen sensor voltages.

	A	B	C
Injection volume	+25 % -12.5%	+25 % -12.5%	+25 % -12.5%
O2S B1S1 O2S B2S1	0.5 V 0.4 V	Almost no reaction	0.5 V 0.4 V
O2S B1S2 O2S B2S2	0.5 V 0.4 V	0.5 V 0.4 V	Almost no reaction
Trouble area	Oxygen sensors are OK.	Front Oxygen sensor (bank 1 sensor 1) (bank 2 sensor 1)	Rear Oxygen sensor (bank 1 sensor 2) (bank 2 sensor 2)

NOTICE:

The rear oxygen sensor output has 20 seconds of delay at maximum.

B

Replace heated oxygen sensor (sensor 1)
(See page [SF-56](#)).

C

Replace heated oxygen sensor (sensor 2)
(See page [SF-56](#)).

A

Replace front and rear catalysts (See page [EM-114](#)).

If DTC P0420 is present, replace the front exhaust pipe LH.

If DTC P0430 is present, replace the front exhaust pipe RH.

-MEMO-

-MEMO-