

General Description

MECHANICAL

1. General Description

A: SPECIFICATION

Engine	Cylinder arrangement	Horizontally opposed, liquid cooled, 6-cylinder, 4-stroke gasoline engine		
	Valve system mechanism	Chain driven, double overhead camshaft, 4-valve/cylinder		
	Bore × Stroke	mm (in)	89.2 × 80 (3.512 × 3.150)	
	Displacement	cm ³ (cu in)	3,000 (183)	
	Compression ratio	10.7		
	Compression pressure (350 rpm and fully open throttle):	kPa (kgf/cm ² , psi)	1,275 — 1,471 (13.0 — 15.0, 185 — 213)	
	Number of piston rings	Pressure ring: 2, Oil ring: 1		
	Intake valve timing	Min. advance	Open	BTDC 47°
			Close	ABDC 23°
		Max. retard	Open	ATDC 3°
			Close	ABDC 73°
	Exhaust valve timing		Open	BBDC 60°
			Close	ATDC 6°
	Valve clearance	mm (in)	Intake	0.20 ^{+0.04} _{-0.06} (0.0079 ^{+0.0016} _{-0.0024})
			Exhaust	0.35 ^{±0.05} (0.0138 ^{±0.020})
	Idle rpm [“P” or “N” range]	rpm	No load	650 ^{±50}
			A/C ON	770 ^{±50}
	Ignition order	1 → 6 → 3 → 2 → 5 → 4		
	Ignition timing	BTDC/rpm		
		15° ^{±8°} /650		

NOTE:

OS: Oversize US: Undersize

General Description

MECHANICAL

Camshaft	Side clearance	mm (in)	Intake		Standard	0.075 — 0.135 (0.0030 — 0.0053)			
			Exhaust		Standard	0.030 — 0.090 (0.0012 — 0.0035)			
	Cam lobe height	mm (in)	Intake	HIGH	Standard	42.09 — 42.19 (1.6571 — 1.6610)			
				LOW1	Standard	38.14 — 38.24 (1.5016 — 1.5055)			
			LOW2		Standard	34.94 — 35.04 (1.3756 — 1.3795)			
			Exhaust		Standard	41.65 — 41.75 (1.6398 — 1.6437)			
	Cam base circle diameter	mm (in)	Intake	HIGH	Standard	32.00 (1.2598)			
				LOW1	Standard	31.84 (1.2535)			
			LOW2		Standard	31.84 (1.2535)			
	Exhaust				Standard	32.00 (1.2598)			
	Journal O.D.	mm (in)	Front		Standard	37.946 — 37.963 (1.4939 — 1.4946)			
			Except for front		Standard	25.946 — 25.963 (1.0215 — 1.0222)			
Oil clearance			mm (in)		Standard	0.037 — 0.072 (0.0015 — 0.0028)			
Cylinder head	Warping limit (Mating with cylinder block)			mm (in)	Standard	0.02 (0.0008)			
	Inner diameter of valve lifter hole				mm (in)	32.994 — 33.016 (1.2990 — 1.2998)			
	Standard height				mm (in)	124±0.05 (4.88±0.0020)			
Valve seat	Seating angle					90°			
	Contacting width	mm (in)	Intake		Standard	1.0 (0.039)			
			Exhaust		Standard	1.5 (0.059)			
Valve guide	Inside diameter				mm (in)	5.500 — 5.512 (0.2165 — 0.2170)			
	Protrusion above head				mm (in)	11.4 — 11.8 (0.449 — 0.465)			
Valve	Head edge thickness	mm (in)	Intake		Standard	1.0 (0.039)			
			Exhaust		Standard	1.2 (0.047)			
	Stem outer diameter	mm (in)	Intake			5.455 — 5.470 (0.2148 — 0.2154)			
			Exhaust			5.445 — 5.460 (0.2144 — 0.2150)			
	Stem oil clearance	mm (in)	Intake		Standard	0.030 — 0.057 (0.0012 — 0.0022)			
			Exhaust		Standard	0.040 — 0.067 (0.0016 — 0.0026)			
	Overall length		mm (in)	Intake		99.7 (3.925)			
				Exhaust		105.2 (4.142)			
Outer diameter of valve lifter				mm (in)		32.959 — 32.975 (1.2976 — 1.2982)			
Valve spring	Free length	mm (in)	Intake	Inner		39.55 (1.5571)			
				Outer		41.18 (1.6213)			
			Exhaust			46.32 (1.8236)			
	Squareness		Intake	Inner		2.5°, 1.7 mm (0.067 in) or less			
				Outer		2.5°, 1.8 mm (0.071 in) or less			
	Exhaust					2.5°, 2.0 mm (0.079 in) or less			
Cylinder block	Standard height				mm (in)	202 (7.95)			
	Warping limit (Mating with cylinder head)				mm (in)	0.02 (0.0008)			
	Cylinder inner diameter		Standard	A		89.205 — 89.215 (3.5120 — 3.5124)			
				B		89.195 — 89.205 (3.5116 — 3.5120)			
	Cylindricality				mm (in)	0.030 (0.0012)			
	Out-of-roundness				mm (in)	0.010 (0.0004)			
	Piston clearance				mm (in)	Standard			
						-0.010 — 0.010 (-0.0004 — 0.0004)			
Piston	Cylinder inner diameter boring limit (diameter)				mm (in)	To 89.715 (3.5321)			
	Outer diameter	mm (in)	Standard	A		89.205 — 89.215 (3.5120 — 3.5124)			
				B		89.195 — 89.205 (3.5116 — 3.5120)			
			0.25 (0.0098) OS			89.445 — 89.465 (3.5215 — 3.5222)			
			0.50 (0.0197) OS			89.695 — 89.715 (3.5313 — 3.5321)			
Inner diameter of piston pin hole				mm (in)	Standard	22.000 — 22.006 (0.8661 — 0.8664)			

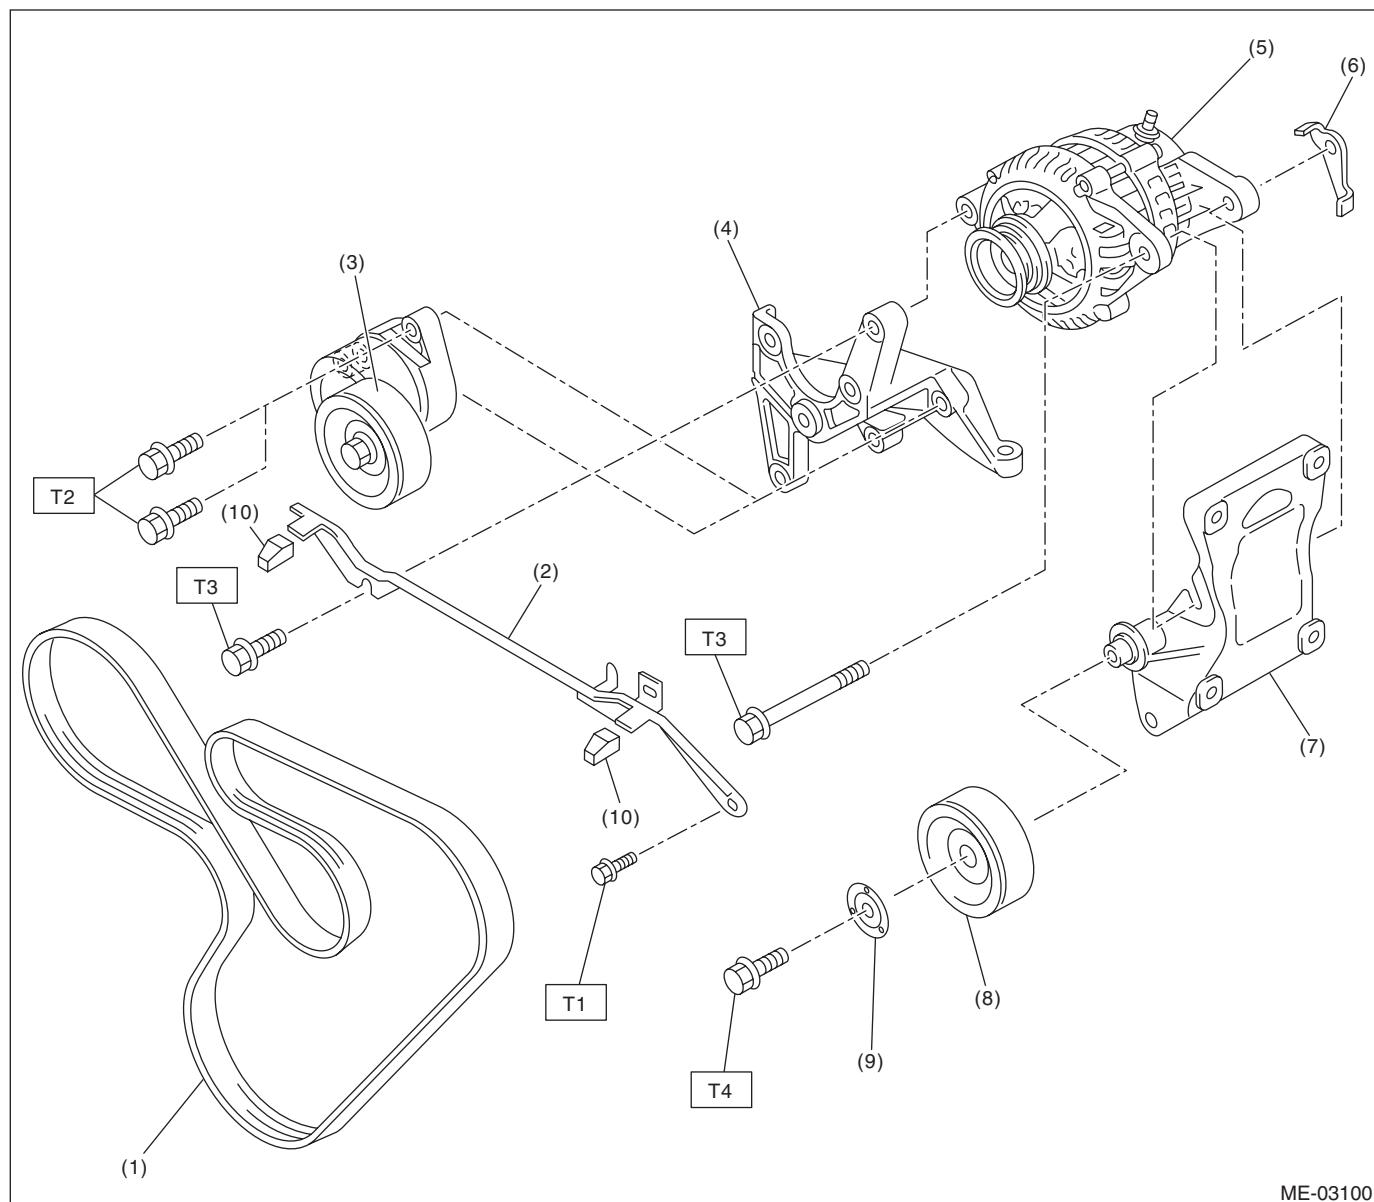
General Description

MECHANICAL

Piston pin	Outer diameter	mm (in)	Standard	21.994 — 22.000 (0.8659 — 0.8661)
	Standard clearance between piston and piston pin	mm (in)	Standard	0.004 — 0.008 (0.0002 — 0.0003)
Piston ring	Ring closed gap	mm (in)	Top ring	Standard 0.20 — 0.35 (0.0079 — 0.0138)
			Second ring	Standard 0.35 — 0.50 (0.0138 — 0.0197)
			Oil ring	Standard 0.20 — 0.60 (0.0079 — 0.0236)
	Ring groove gap	mm (in)	Top ring	Standard 0.040 — 0.080 (0.0016 — 0.0031)
			Second ring	Standard 0.030 — 0.070 (0.0012 — 0.0028)
			Oil ring	Standard 0.045 — 0.125 (0.0018 — 0.0049)
Connecting rod	Thrust clearance	mm (in)	Standard	0.070 — 0.330 (0.0028 — 0.0130)
Bearing of large end	Oil clearance	mm (in)	Standard	0.016 — 0.043 (0.0006 — 0.0017)
	Bearing size (Thickness at center)	mm (in)	Standard	1.490 — 1.506 (0.0587 — 0.0593)
			0.03 (0.0012) US	1.509 — 1.513 (0.0594 — 0.0596)
			0.05 (0.0020) US	1.519 — 1.523 (0.0598 — 0.0600)
			0.25 (0.0098) US	1.619 — 1.623 (0.0637 — 0.0639)
Bushing of small end	Clearance between piston pin and bushing	mm (in)	Standard	0 — 0.022 (0 — 0.0009)
Crankshaft	Crank pin and crank journal	Out-of-roundness	mm (in)	0.005 (0.0002)
		Cylindricality	mm (in)	0.006 (0.0002)
	Crank pin outer diameter	mm (in)	Standard	51.984 — 52.000 (2.0466 — 2.0472)
			0.03 (0.0012) US	51.954 — 51.970 (2.0454 — 2.0461)
			0.05 (0.0020) US	51.934 — 51.950 (2.0446 — 2.0453)
			0.25 (0.0098) US	51.734 — 51.750 (2.0368 — 2.0374)
	Crank journal outer diameter	mm (in)	#1, #3, #5, #7	Standard 63.992 — 64.008 (2.5194 — 2.5200)
			#1, #3, #5, #7	0.03 (0.0012) US 63.962 — 63.978 (2.5182 — 2.5188)
			#1, #3, #5, #7	0.05 (0.0020) US 63.942 — 63.958 (2.5174 — 2.5180)
			#1, #3, #5, #7	0.25 (0.0098) US 63.742 — 63.758 (2.5095 — 2.5102)
	Thrust clearance	mm (in)	Standard	0.030 — 0.115 (0.0012 — 0.0045)
	Oil clearance	mm (in)	Standard	0.010 — 0.030 (0.0004 — 0.0012)
Main bearing	Bearing size (Thickness at center)	mm (in)	#1, #3, #5, #7	Standard 1.992 — 2.005 (0.0784 — 0.0789)
			#1, #3, #5, #7	0.03 (0.0012) US 2.011 — 2.014 (0.0792 — 0.0793)
			#1, #3, #5, #7	0.05 (0.0020) US 2.021 — 2.024 (0.0796 — 0.0797)
			#1, #3, #5, #7	0.25 (0.0098) US 2.121 — 2.124 (0.0835 — 0.0836)
	#2, #4, #6	mm (in)	#2, #4, #6	Standard 1.996 — 2.009 (0.0786 — 0.0791)
			#2, #4, #6	0.03 (0.0012) US 2.015 — 2.018 (0.0793 — 0.0794)
			#2, #4, #6	0.05 (0.0020) US 2.025 — 2.028 (0.0797 — 0.0798)
			#2, #4, #6	0.25 (0.0098) US 2.125 — 2.128 (0.0837 — 0.0838)

B: COMPONENT

1. V-BELT



(1) V-belt	(6) Generator plate
(2) Collector cover bracket	(7) A/C compressor stay
(3) Belt tension adjuster ASSY	(8) Idler pulley
(4) Power steering pump bracket	(9) Idler pulley cover
(5) Generator	(10) Cushion

Tightening torque: N·m (kgf·m, ft·lb)

T1: 6.4 (0.65, 4.7)

T2: 20 (2.0, 14)

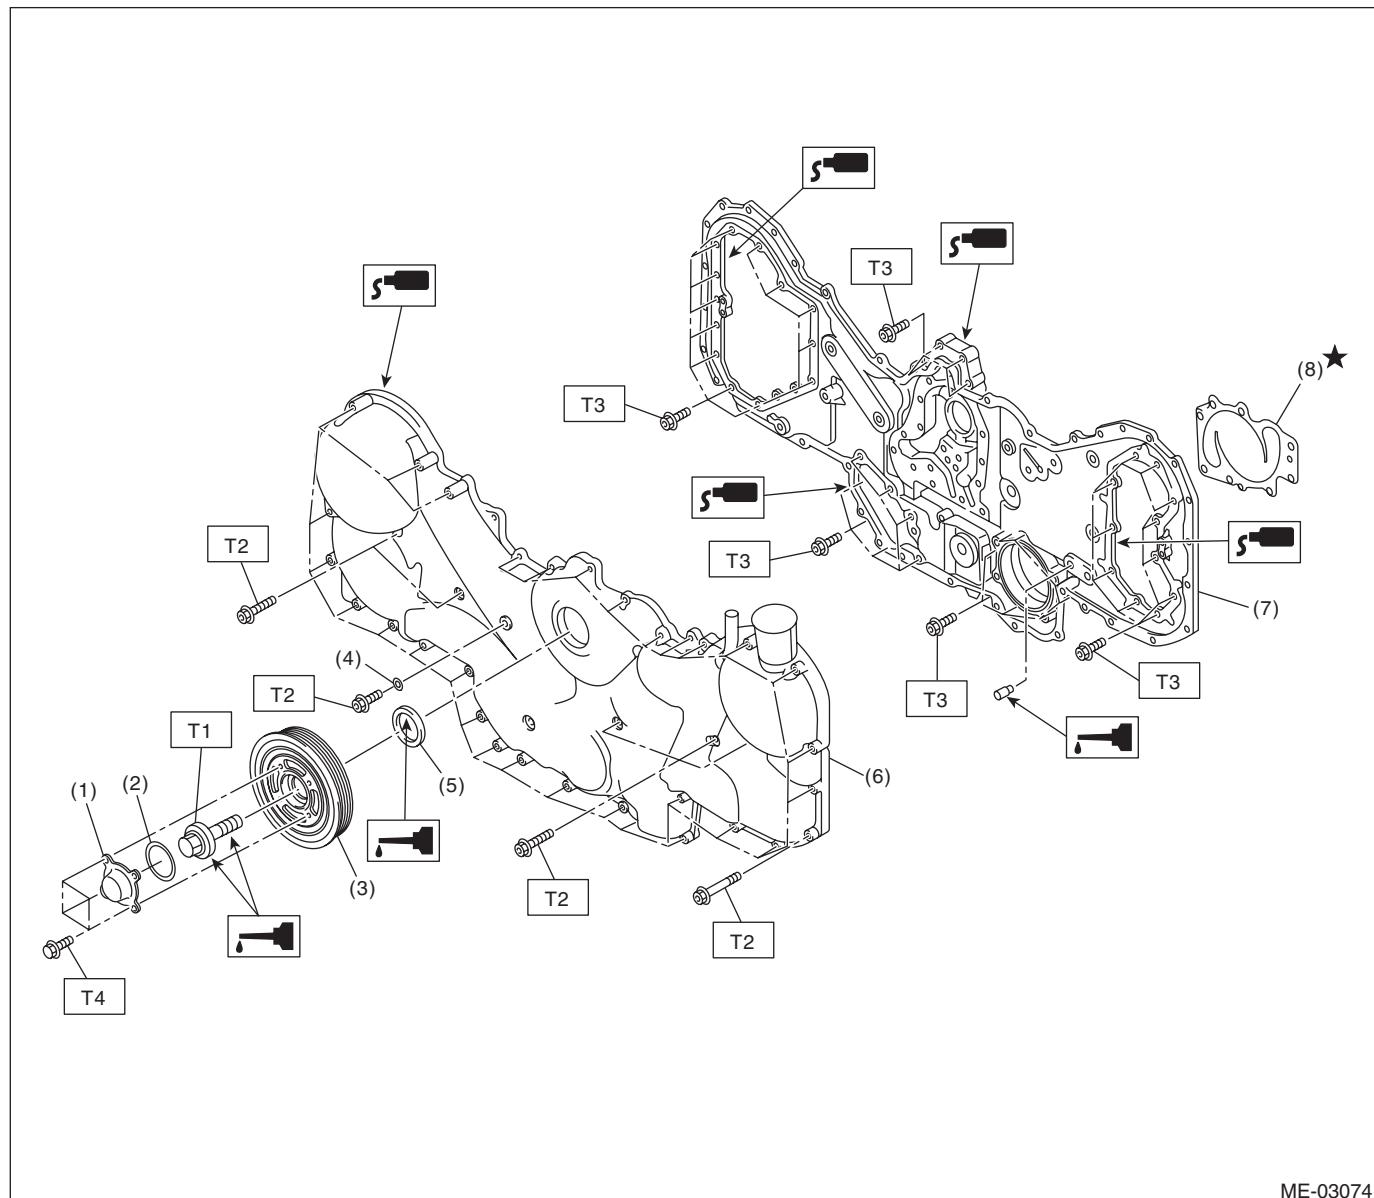
T3: 25 (2.5, 18.4)

T4: 33 (3.4, 25)

General Description

MECHANICAL

2. TIMING CHAIN COVER



ME-03074

- (1) Crank pulley cover
- (2) O-ring
- (3) Crank pulley
- (4) Sealing washer
- (5) Oil seal
- (6) Front chain cover
- (7) Rear chain cover

- (8) Water pump gasket

Tightening torque:N·m (kgf·m, ft·lb)

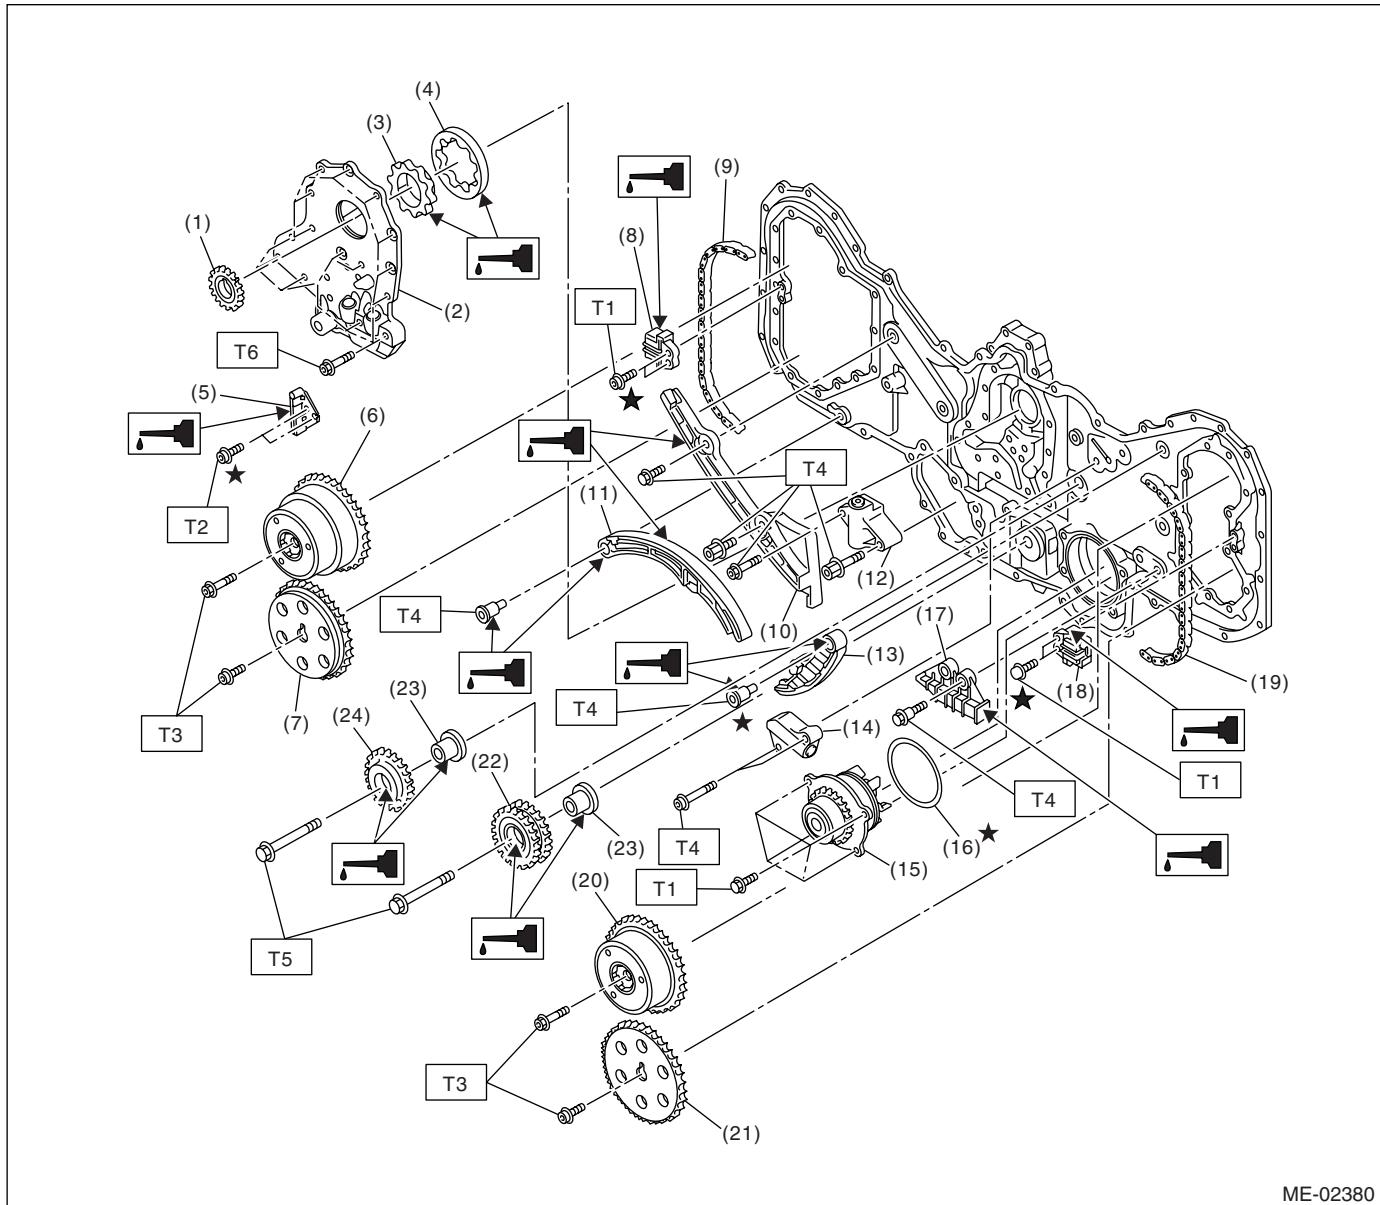
T1: <Ref. to ME(H6DO)-39, Crank Pulley.>

T2: <Ref. to ME(H6DO)-40, Front Chain Cover.>

T3: <Ref. to ME(H6DO)-49, Rear Chain Cover.>

T4: 6.4 (0.65, 4.7)

3. TIMING CHAIN



ME-02380

(1) Crank sprocket	(13) Chain tensioner lever (LH)	(24) Idler sprocket (upper)
(2) Oil relief case	(14) Chain tensioner (LH)	
(3) Inner rotor	(15) Water pump	
(4) Outer rotor	(16) O-ring	
(5) Chain guide (center)	(17) Chain guide (LH)	
(6) Intake cam sprocket (RH)	(18) Chain guide (LH: between cams)	
(7) Exhaust cam sprocket (RH)	(19) Timing chain (LH)	
(8) Chain guide (RH: between cams)	(20) Intake cam sprocket (LH)	
(9) Timing chain (RH)	(21) Exhaust cam sprocket (LH)	
(10) Chain guide (RH)	(22) Idler sprocket (lower)	
(11) Chain tensioner lever (RH)	(23) Idler sprocket collar	
(12) Chain tensioner (RH)		

Tightening torque:N·m (kgf·m, ft·lb)

T1: 6.4 (0.65, 4.7)

T2: 7.8 (0.8, 5.8)

T3: <Ref. to ME(H6DO)-47, Cam Sprocket. >

T4: 16 (1.6, 12)

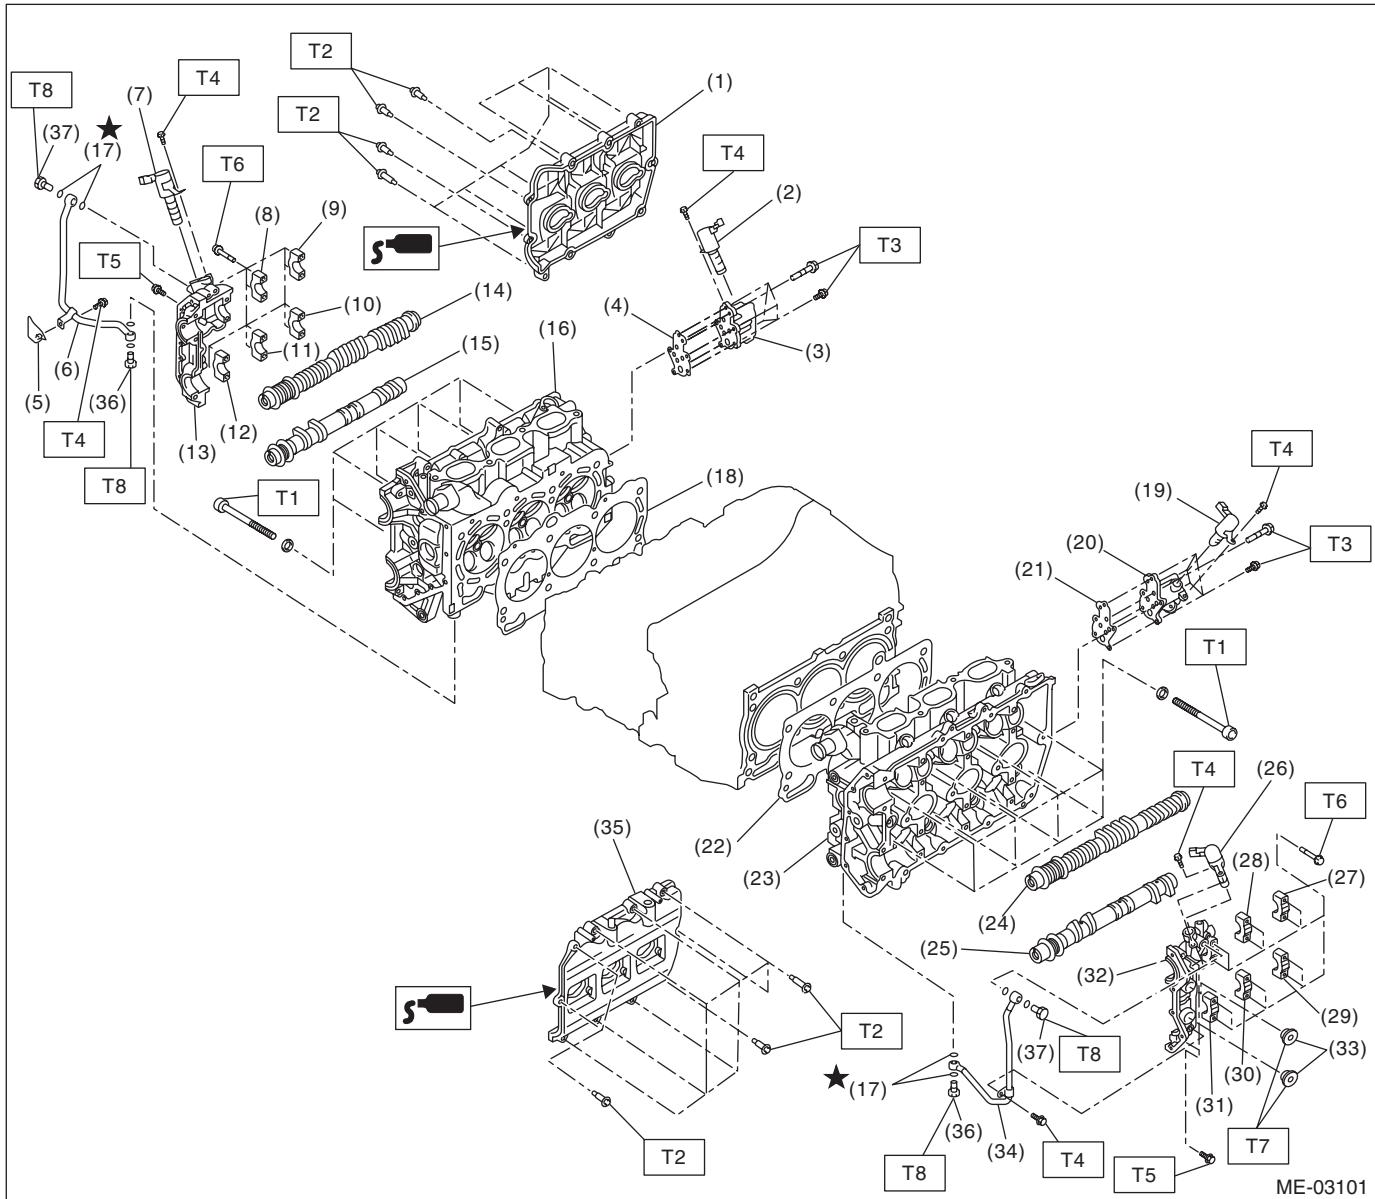
T5: 69 (7.0, 50.6)

T6: <Ref. to LU(H6DO)-8, Oil Pump. >

General Description

MECHANICAL

4. CYLINDER HEAD AND CAMSHAFT



General Description


MECHANICAL

(1) Rocker cover (RH)	(17) Gasket	(33) Plug
(2) Oil switching solenoid valve (RH)	(18) Cylinder head gasket (RH)	(34) Oil pipe (LH)
(3) Oil switching solenoid valve holder (RH)	(19) Oil switching solenoid valve (LH)	(35) Rocker cover (LH)
(4) Oil switching solenoid valve gas- ket (RH)	(20) Oil switching solenoid valve holder (LH)	(36) Union screw with filter (with pro- trusion)
(5) Front chain cover	(21) Oil switching solenoid valve gas- ket (LH)	(37) Union screw without filter (without protrusion)
(6) Oil pipe (RH)	(22) Cylinder head gasket (LH)	
(7) Oil flow control solenoid valve (RH)	(23) Cylinder head (LH)	Tightening torque:N·m (kgf·m, ft-lb)
(8) Intake camshaft cap (Center RH)	(24) Intake camshaft (LH)	T1: <Ref. to ME(H6DO)-55, Cylinder Head.>
(9) Intake camshaft cap (Rear RH)	(25) Exhaust camshaft (LH)	T2: <Ref. to ME(H6DO)-51, Cam- shaft.>
(10) Exhaust camshaft cap (Rear RH)	(26) Oil flow control solenoid valve (LH)	T3: <Ref. to ME(H6DO)-75, Oil Switching Solenoid Valve.>
(11) Exhaust camshaft cap (Center RH)	(27) Intake camshaft cap (Rear LH)	T4: 6.4 (0.65, 4.7)
(12) Exhaust camshaft cap (Front RH)	(28) Intake camshaft cap (Center LH)	T5: 9.75 (1.0, 7.2)
(13) Front camshaft cap (RH)	(29) Exhaust camshaft cap (Rear LH)	T6: 16 (1.6, 12)
(14) Intake camshaft (RH)	(30) Exhaust camshaft cap (Center LH)	T7: 60 (6.1, 44)
(15) Exhaust camshaft (RH)	(31) Exhaust camshaft cap (Front LH)	T8: 29 (3.0, 21.4)
(16) Cylinder head (RH)	(32) Front camshaft cap (LH)	

General Description

MECHANICAL

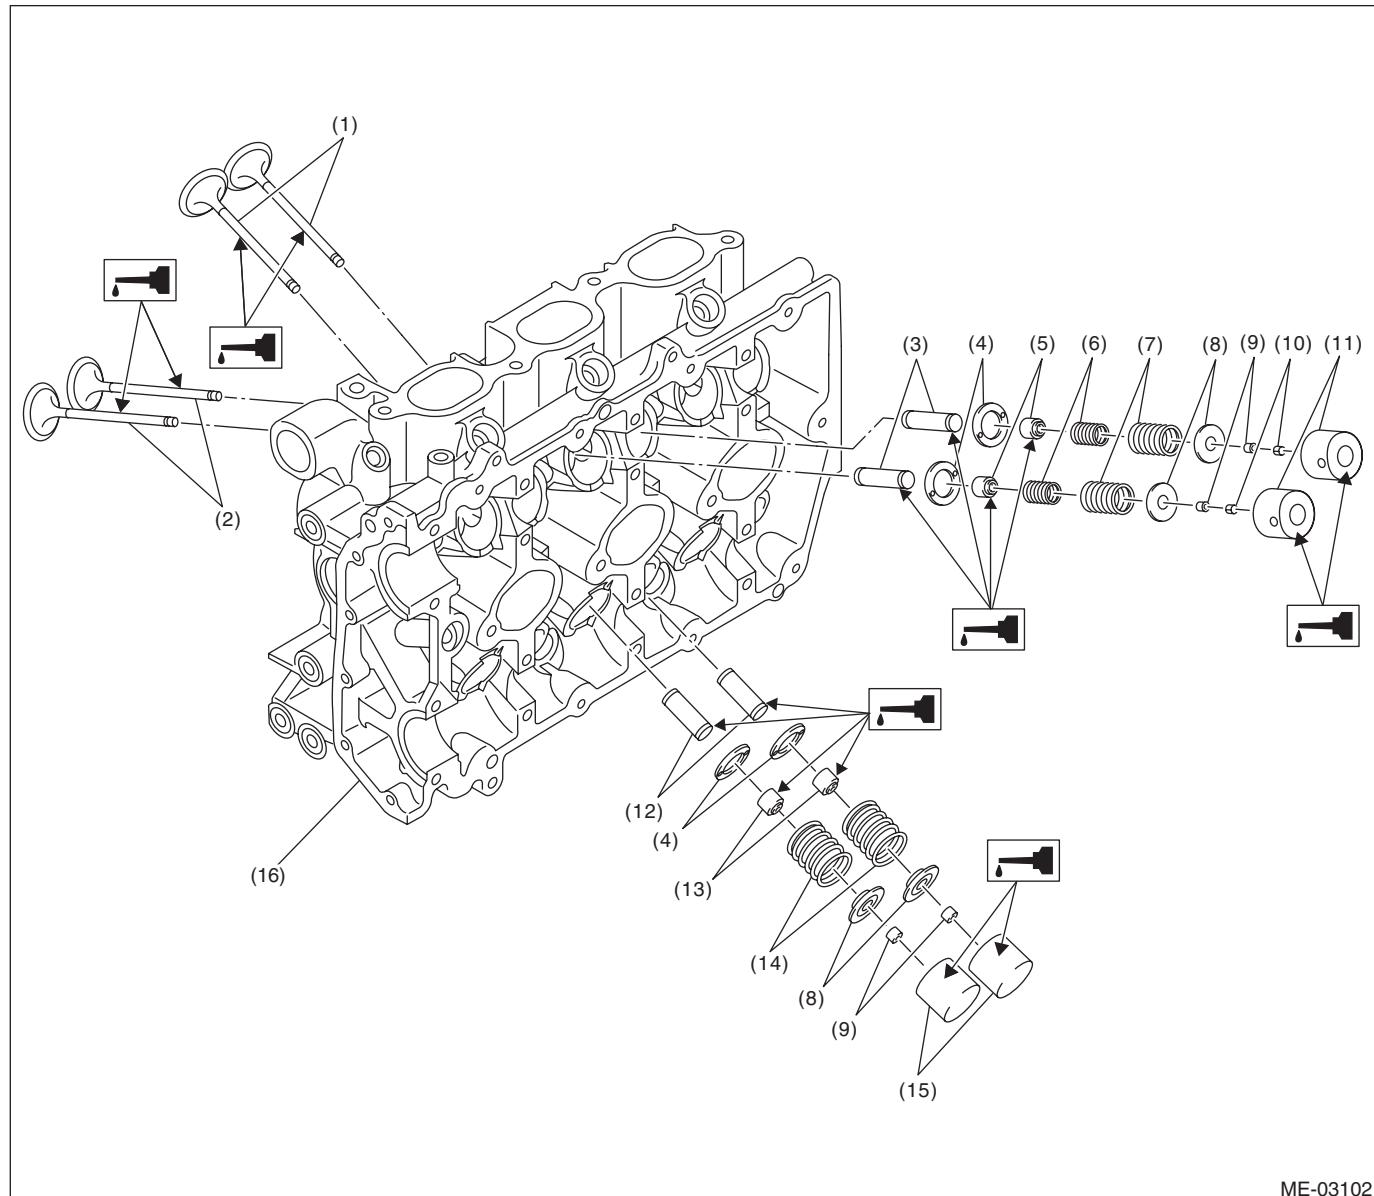5. CLINDER HEAD AND VALVE ASSEMBLY




ME-03102

(1) Exhaust valve	(7) Valve spring (Outer)	(12) Exhaust valve guide
(2) Intake valve	(8) Retainer	(13) Exhaust valve stem seal
(3) Intake valve guide	(9) Retainer key	(14) Valve spring
(4) Valve spring seat	(10) Shim	(15) Valve lifter (Exhaust)
(5) Intake valve stem seal	(11) Valve lifter (Intake)	(16) Cylinder head
(6) Valve spring (Inner)		

General Description

MECHANICAL

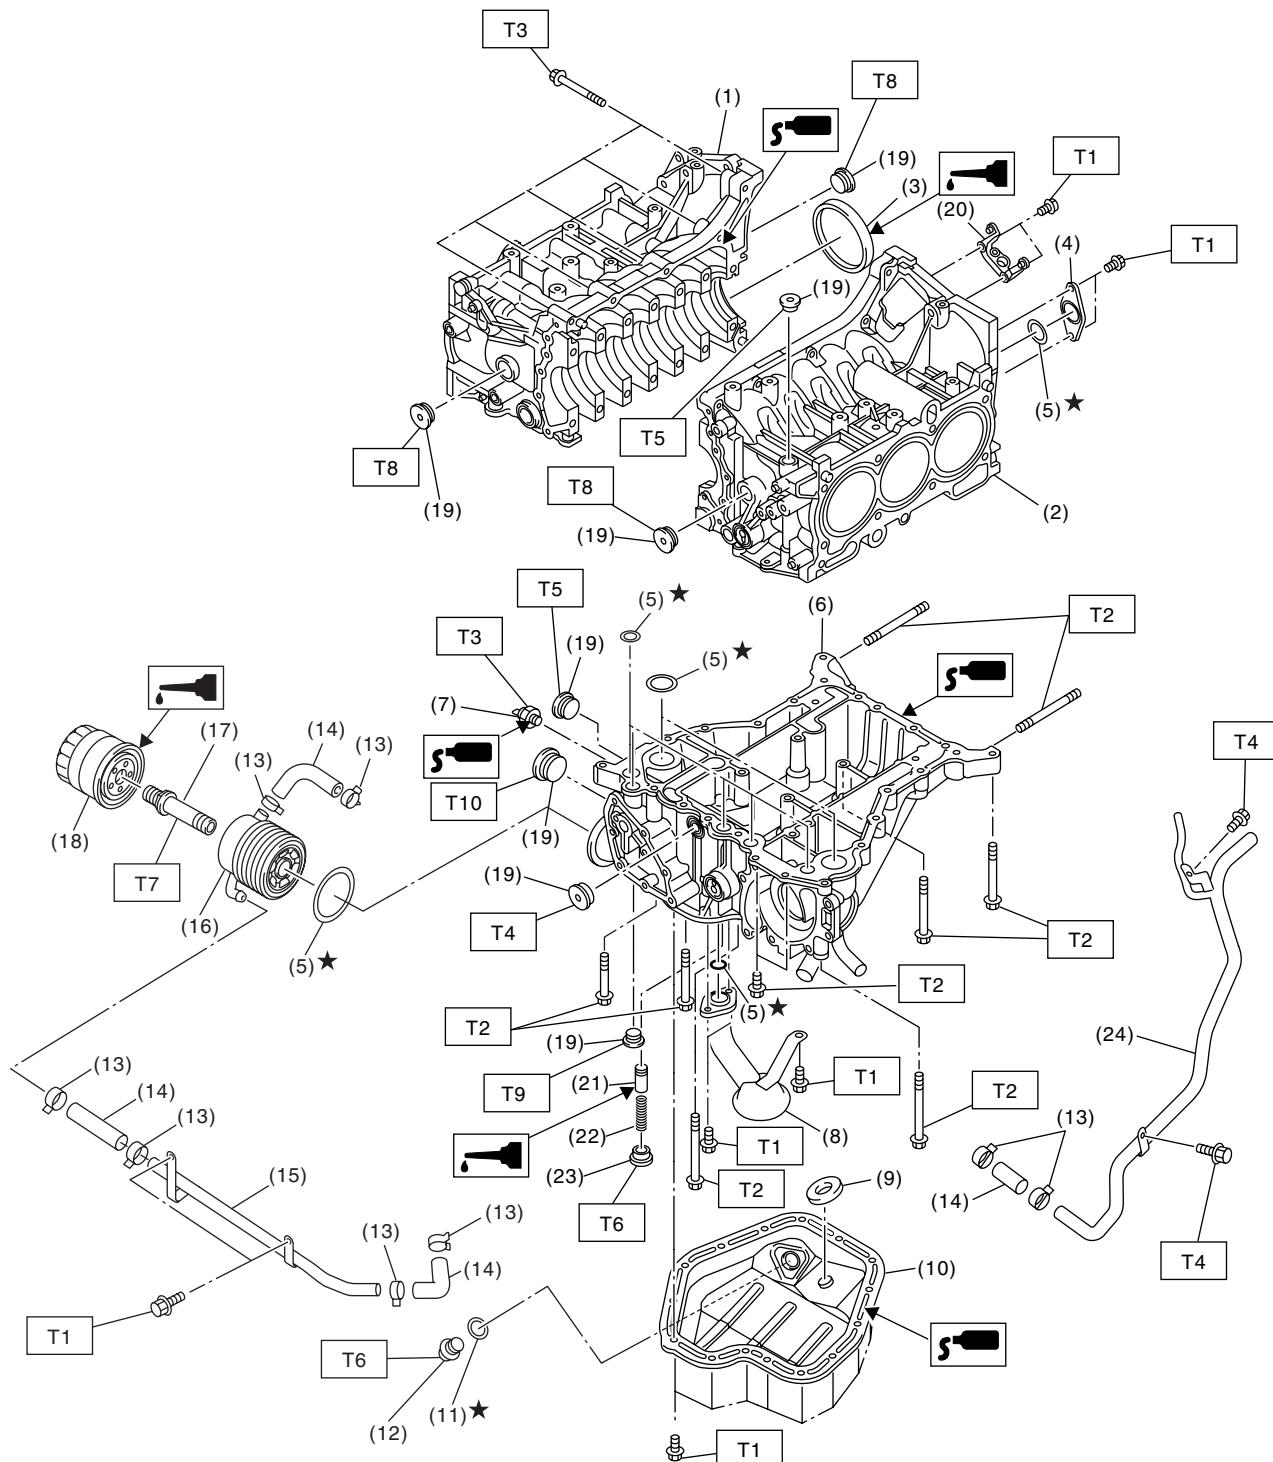6. CYLINDER BLOCK



ME-02782

General Description

MECHANICAL

(1) Cylinder block (RH)	(13) Clamp
(2) Cylinder block (LH)	(14) Hose
(3) Rear oil seal	(15) Oil cooler pipe
(4) Service hole cover	(16) Oil cooler
(5) O-ring	(17) Connector
(6) Oil pan upper	(18) Oil filter
(7) Oil pressure switch	(19) Plug
(8) Oil strainer	(20) Crankshaft position sensor holder
(9) Magnet	(21) Relief valve
(10) Oil pan lower	(22) Relief valve spring
(11) Metal gasket	(23) Plug
(12) Drain plug	(24) Water pipe

Tightening torque:N·m (kgf·m, ft-lb)

T1: 6.4 (0.65, 4.7)

T2: 18 (1.8, 13.3)

T3: 25 (2.5, 18.4)

T4: 16 (1.6, 12)

T5: 37 (3.8, 27)

T6: 44 (4.5, 33)

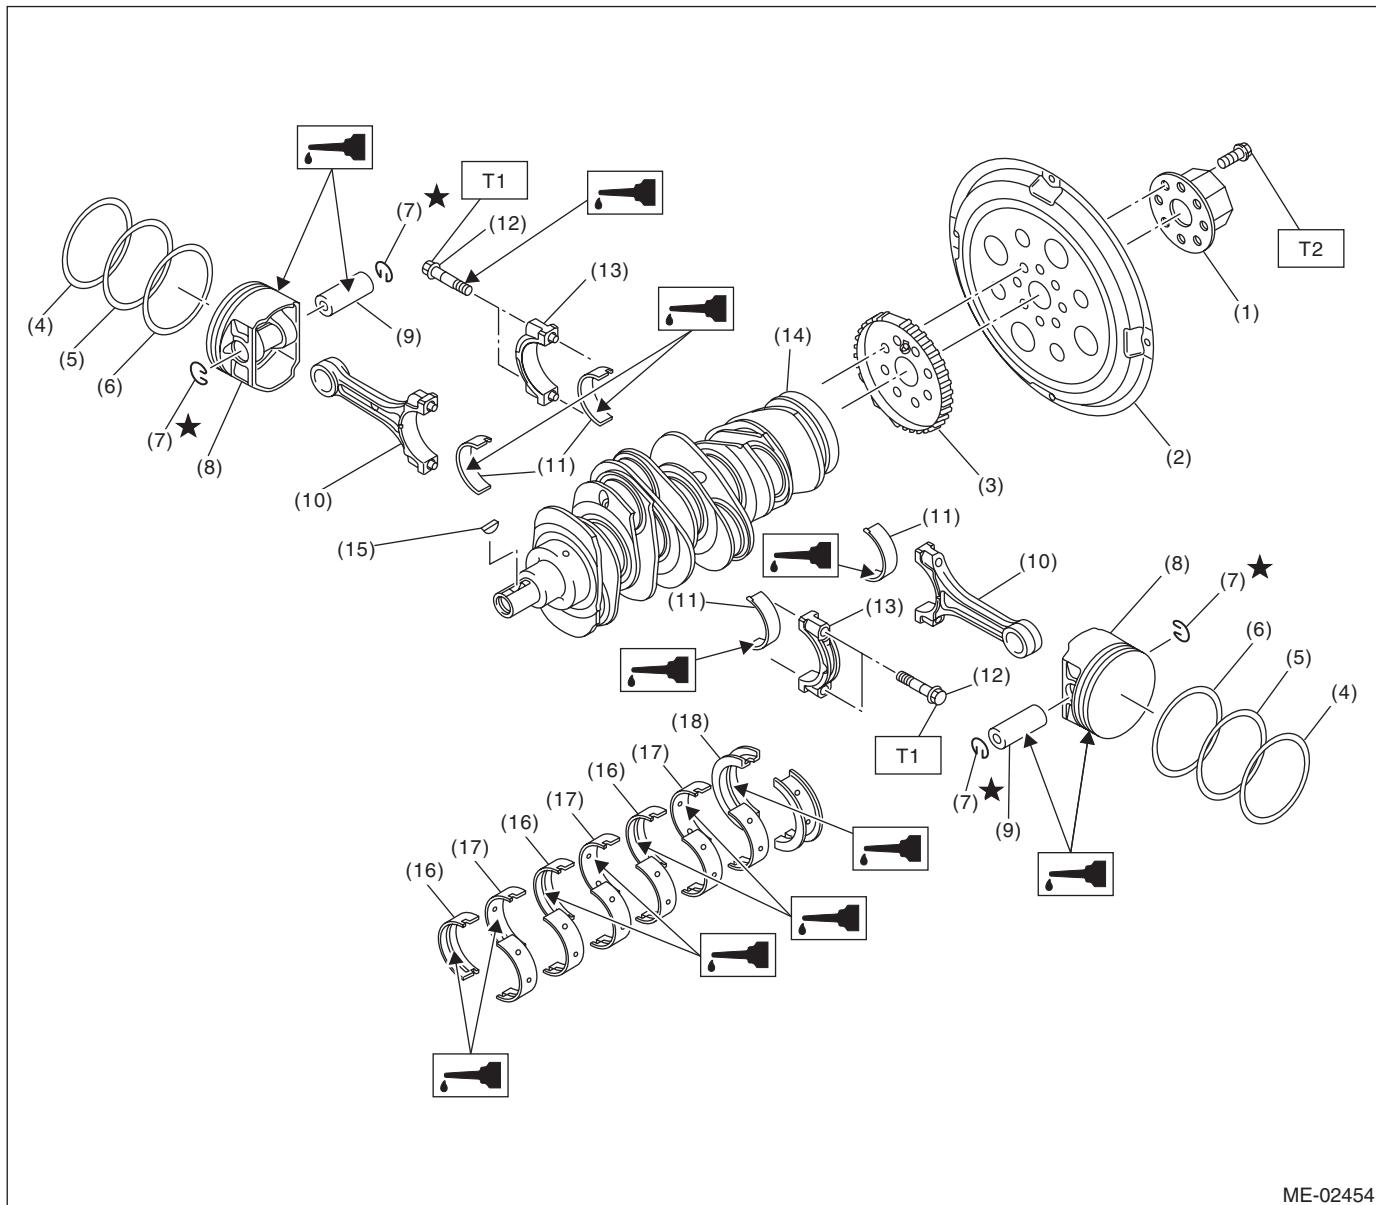
T7: 54 (5.5, 40)

T8: 70 (7.1, 52)

T9: 23 (2.3, 17)

T10: 90 (9.2, 67)

7. CRANKSHAFT AND PISTON



ME-02454

(1) Reinforcement	(9) Piston pin	(16) Crankshaft bearing #1, #3, #5
(2) Drive plate	(10) Connecting rod	(17) Crankshaft bearing #2, #4, #6
(3) Crankshaft sensor plate	(11) Connecting rod bearing	(18) Crankshaft bearing #7
(4) Top ring	(12) Connecting rod bolt	
(5) Second ring	(13) Connecting rod cap	
(6) Oil ring	(14) Crankshaft	
(7) Snap ring	(15) Woodruff key	
(8) Piston		

Tightening torque: N·m (kgf·m, ft·lb)

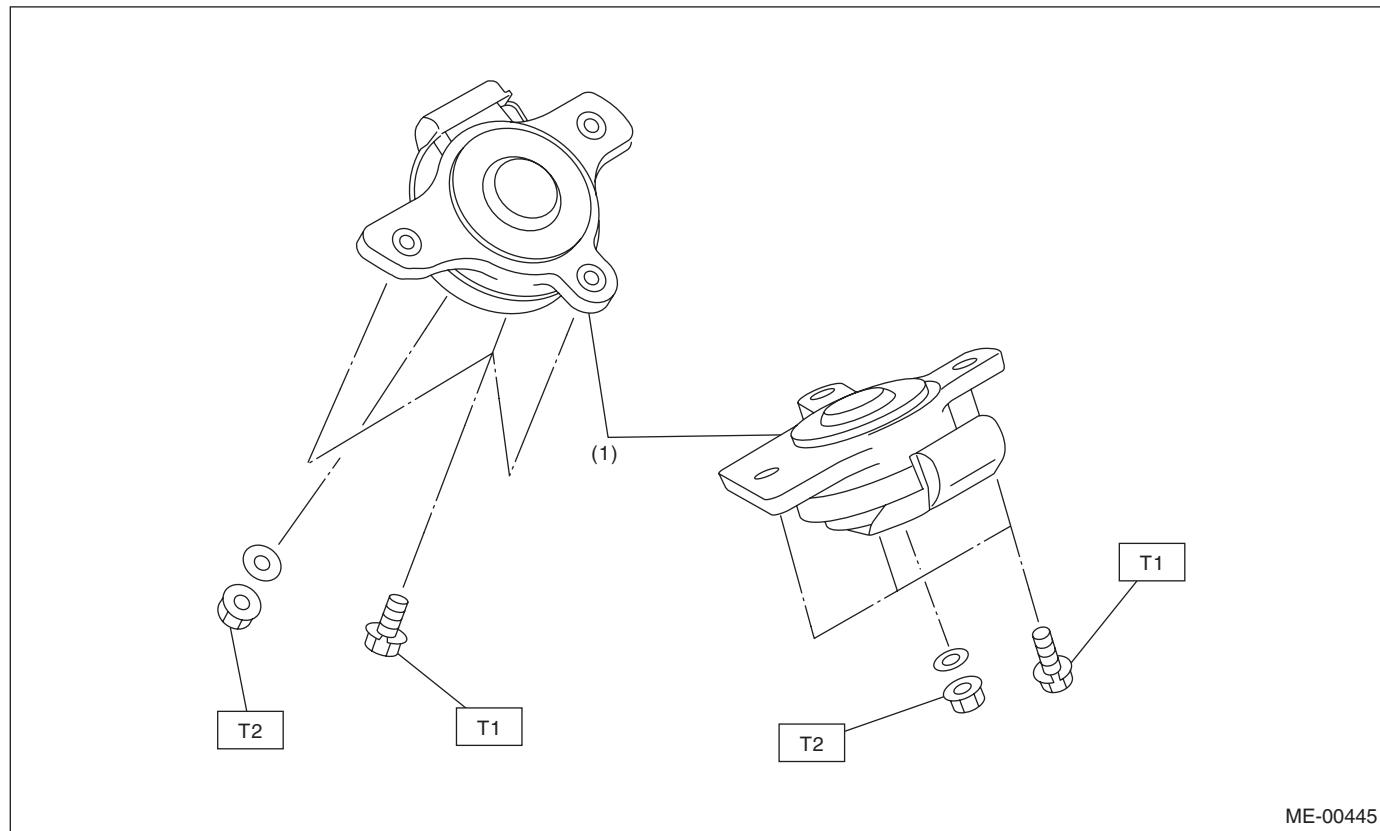
T1: 53 (5.4, 39)

T2: 81 (8.3, 60)

General Description

MECHANICAL

8. ENGINE MOUNTING



(1) Front cushion rubber

Tightening torque:N·m (kgf·m, ft-lb)

T1: 35 (3.6, 25.8)

T2: 85 (8.7, 63)





C: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.
- All parts should be thoroughly cleaned, paying special attention to engine oil passages, pistons and bearings.

- Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil prior to assembly.
- All removed parts, if to be reused, should be re-installed in the original positions and directions.
- Bolts, nuts and washers should be replaced with new parts as required.
- Even if necessary inspections have been made in advance, proceed with assembly work while making rechecks.
- Remove or install the engine in an area where chain hoists, lifting devices, etc. are available for ready use.
- Be sure not to damage coated surfaces of body panels with tools, or not to stain seats and windows with coolant or oil. Place a cover over fender, as required, for protection.
- Prior to starting work, prepare the following: Service tools, clean cloth, containers to catch coolant and oil, wire ropes, chain hoist, transmission jacks, etc.
- Lift-up or lower the vehicle when necessary. Make sure to support the correct positions.






D: PREPARATION TOOL

1. SPECIAL TOOL

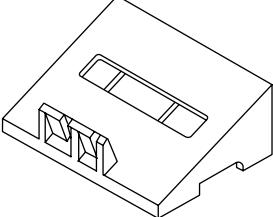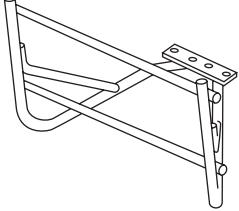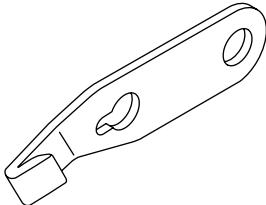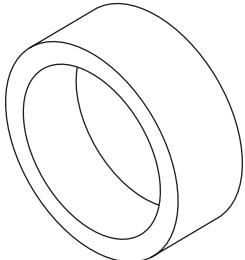ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18250AA010	18250AA010	CYLINDER HEAD TABLE	<ul style="list-style-type: none">Used for replacing valve guides.Used for removing and installing valve spring.
 ST18232AA000	18232AA000	ENGINE STAND	Used for disassembling and assembling engine.
 ST-498497100	498497100	CRANKSHAFT STOPPER	Used for removing and installing the flywheel and the drive plate.
 ST18254AA000	18254AA000	PISTON GUIDE	Used for installing piston in cylinder.






General Description

MECHANICAL

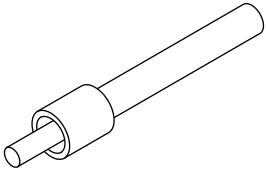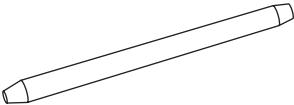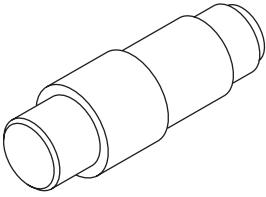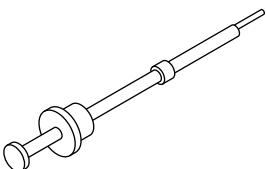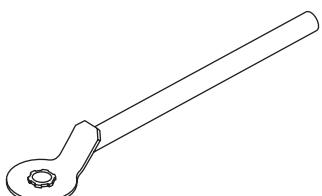ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499585500	499585500	VALVE OIL SEAL GUIDE	Used for press-fitting of intake and exhaust valve guide oil seals.
 ST18253AA000	18253AA000	PISTON PIN GUIDE	Used for installing piston pin, piston and connecting rod.
 ST18350AA000	18350AA000	CONNECTING ROD BUSHING REMOVER AND INSTALLER	Used for removing and installing connecting rod bushing.
 ST-499097700	499097700	PISTON PIN REMOVER ASSY	Used for removing piston pin.
 ST-499977500	499977500	CAM SPROCKET WRENCH	Used for removing and installing intake cam sprocket.






General Description

MECHANICAL

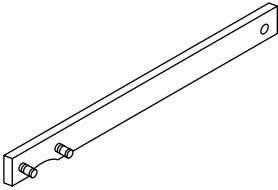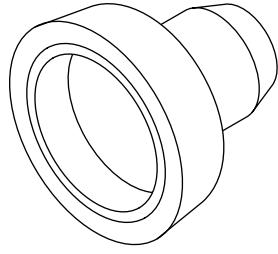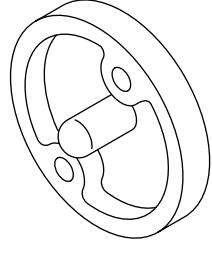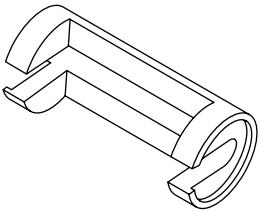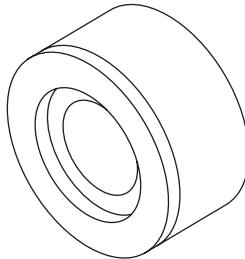ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18231AA020	18231AA020	CAM SPROCKET WRENCH	Used for removing and installing exhaust cam sprocket.
 ST-499587200	499587200	CRANKSHAFT OIL SEAL INSTALLER	<ul style="list-style-type: none"> Used for installing crankshaft oil seal. Used together with the CRANKSHAFT OIL SEAL GUIDE (499597100).
 ST-499597100	499597100	CRANKSHAFT OIL SEAL GUIDE	<ul style="list-style-type: none"> Used for installing crankshaft oil seal. Used together with the CRANKSHAFT OIL SEAL INSTALLER (499587200).
 ST-499718000	499718000	VALVE SPRING REMOVER	Used for removing and installing valve spring.
 ST18251AA040	18251AA040	VALVE GUIDE ADJUSTER	Used for installing valve guides.





General Description

MECHANICAL

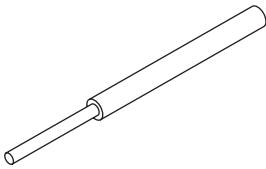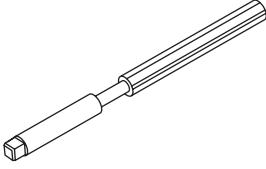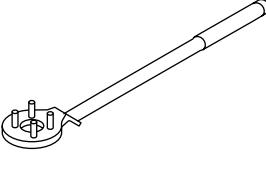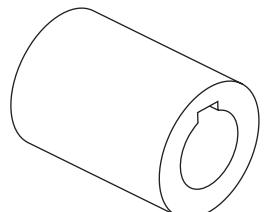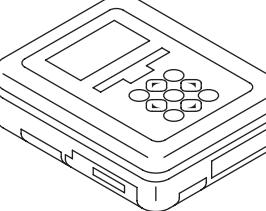ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499765700	499765700	VALVE GUIDE REMOVER	Used for removing valve guides.
 ST-499765900	499765900	VALVE GUIDE REAMER	Used for reaming valve guides.
 ST-499977100	499977100	CRANK PULLEY WRENCH	Used for stopping rotation of crank pulley when loosening/tightening crank pulley bolt.
 ST18252AA000	18252AA000	CRANKSHAFT SOCKET	Used for rotating crankshaft.
 ST1B020XU0	1B020XU0	SUBARU SELECT MONITOR KIT	Used for troubleshooting the electrical system.

General Description

MECHANICAL

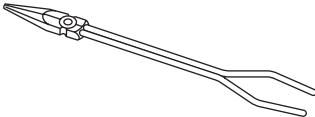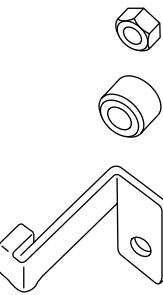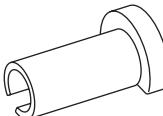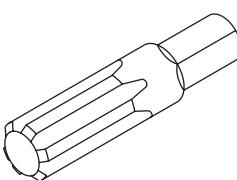ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST18233AA000	18233AA000	PISTON PIN SNAP RING PLIERS	Used for removing and installing snap ring of piston pin.
 ST-498277200	498277200	STOPPER SET	Used for installing automatic transmission assembly to engine.
 ST42099AE000	42099AE000	CONNECTOR REMOVER	Used for disconnecting quick connector of the engine compartment.
 ST-499057000	499057000	TORX PLUS®	Used for removing and installing the flywheel (dual mass flywheel type) and the drive plate.

2. GENERAL TOOL

TOOL NAME	REMARKS
Compression gauge	Used for measuring compression.
Vacuum gauge	Used for measuring intake manifold vacuum.
Oil pressure gauge	Used for measuring engine oil pressure.
Fuel pressure gauge	Used for measuring fuel pressure.
Timing light	Used for measuring ignition timing.

General Description

MECHANICAL

E: PROCEDURE

It is possible to conduct the following service procedures with engine on vehicle, however, the procedures described in this section are based on the condition that the engine is removed from vehicle.

- V-belt
- Timing chain
- Camshaft
- Cylinder head