


2. Compression

A: INSPECTION

CAUTION:

After warming-up, engine becomes very hot. Be careful not to burn yourself during measurement.


- 1) After warming-up the engine, turn the ignition switch to OFF.
- 2) Make sure that the battery is fully charged.
- 3) Remove the fuse of fuel pump from main fuse box.

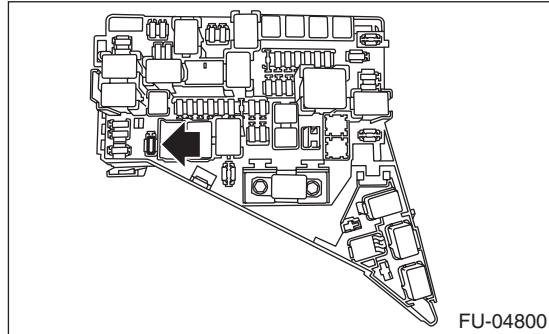

- 4) Start the engine and run it until it stalls.
- 5) After the engine stalls, crank it for five more seconds.
- 6) Turn the ignition switch to OFF.
- 7) Remove all spark plugs. <Ref. to IG(H4SO)-3, REMOVAL, Spark Plug.>
- 8) Fully open the throttle valve.
- 9) Check the starter motor for satisfactory performance and operation.
- 10) Install the compression gauge to the spark plug hole.

NOTE:

When using a screw-in type compression gauge, the screw should be less than 18 mm (0.71 in) long.

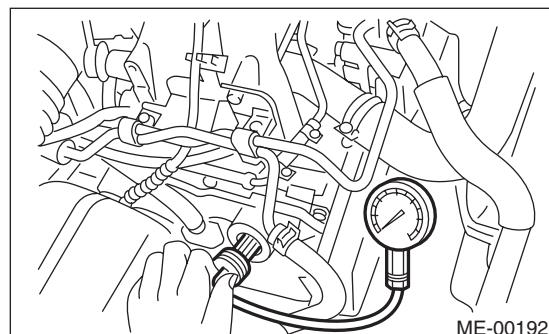

- 11) Crank the engine by starter motor and read the value when the needle of the compression gauge becomes stable.

NOTE:

- Perform at least two measurements per cylinder, and make sure that the values are correct.
- If the compression pressure is out of standard, check or adjust the pistons, valves and cylinders.

Compression (fully open throttle):**Standard**

$1,020 - 1,275 \text{ kPa}$ ($10.4 - 13.0 \text{ kgf/cm}^2$,
 $148 - 185 \text{ psi}$)

Difference between cylinders

49 kPa (0.5 kgf/cm^2 , 7 psi) or less

- 12) After inspection, install the related parts in the reverse order of removal.