

General Description

MECHANICAL

1. General Description

A: SPECIFICATION

Engine	Model			2.5 L	
	Cylinder arrangement			Horizontally opposed, liquid cooled, 4-cylinder, 4-stroke gasoline engine	
	Valve system mechanism			Belt driven, double overhead camshaft, 4-valve/cylinder	
	Bore x Stroke		mm (in)	99.5 x 79.0 (3.92 x 3.11)	
	Displacement		cm ³ (cu in)	2,457 (149.94)	
	Compression ratio			9.5	
	Compression pressure (at 200 — 300 rpm)	kPa (kg/cm ² , psi)	Standard	981 — 1,177 (10 — 12, 142 — 171)	
	Number of piston rings			Pressure ring: 2, Oil ring: 1	
	Intake valve timing		Open	Max. retard ATDC 5°	
				Min. advance BTDC 35°	
			Close	Max. retard ABDC 65°	
				Min. advance ABDC 25°	
	Exhaust valve timing		Open	Max. retard BBDC 24°	
				Min. advance BBDC 64°	
			Close	Max. retard ATDC 26°	
				Min. advance BTDC 14°	
	Valve clearance mm (in)	Inspection value	Intake		
			Exhaust		
		Adjust- ment value	Intake		
			Exhaust		
	Idle speed (Gear shift lever in neutral position)		No load	Standard 700±100	
			A/C ON	Standard 700 — 850	
	Ignition order			1 → 3 → 2 → 4	
	Ignition timing		BTDC/rpm	Standard 15°±10°/700	

General Description

MECHANICAL

NOTE:

OS: Oversize US: Undersize

Belt tension adjuster	Adjuster rod protrusion amount			mm (in)	5.2 — 6.2 (0.205 — 0.244)	
Camshaft	Bending limit			mm (in)	0.020 (0.00079)	
	Cam lobe height	mm (in)	Intake	Standard	46.55 — 46.65 (1.833 — 1.837)	
			Exhaust	Standard	45.85 — 45.95 (1.805 — 1.809)	
	Cam base circle diameter		mm (in)	Standard	37.0 (1.457)	
	Journal O.D.	mm (in)	Front	Standard	37.946 — 37.963 (1.4939 — 1.4946)	
			Center, rear	Standard	29.946 — 29.963 (1.1790 — 1.1796)	
	Oil clearance		mm (in)	Standard	0.037 — 0.072 (0.0015 — 0.0028)	
Cylinder head	Thrust clearance		mm (in)	Standard	0.068 — 0.116 (0.0027 — 0.0047)	
	Warping limit (mating surface with cylinder block)			mm (in)	0.035 (0.0014)	
	Grinding limit			mm (in)	0.3 (0.012)	
Valve seat	Standard height			mm (in)	127.5 (5.02)	
	Seating angle between valve and valve seat				90°	
	Contacting width between valve and valve seat	mm (in)	Intake	Standard	0.6 — 1.4 (0.024 — 0.055)	
			Exhaust	Standard	1.2 — 1.8 (0.047 — 0.071)	
Valve guide	Clearance between the valve guide and valve stem	mm (in)	Intake	Standard	0.030 — 0.057 (0.0012 — 0.0022)	
			Exhaust	Standard	0.040 — 0.067 (0.0016 — 0.0026)	
	Inside diameter			mm (in)	6.000 — 6.012 (0.2362 — 0.2367)	
	Valve stem outer diameters	mm (in)	Intake		5.955 — 5.970 (0.2344 — 0.2350)	
			Exhaust		5.945 — 5.960 (0.2341 — 0.2346)	
Valve	Valve guide protrusion amount			mm (in)	15.8 — 16.2 (0.622 — 0.638)	
	Head edge thickness	mm (in)	Intake	Standard	1.0 — 1.4 (0.039 — 0.055)	
			Exhaust	Standard	1.3 — 1.7 (0.051 — 0.067)	
	Overall length	mm (in)	Intake		104.4 (4.110)	
			Exhaust		104.65 (4.1201)	
Valve spring	Free length			mm (in)	47.32 (1.863)	
	Tension/spring height	N (kgf, lb)/mm (in)	Set		205 — 235 (20.90 — 23.96, 46.09 — 52.84)/ 36.0 (1.417)	
			Lift		426 — 490 (43.44 — 49.96, 95.78 — 110.17)/ 26.5 (1.043)	
	Squareness				2.5°, 2.1 mm (0.083 in) or less	
Valve lifter	Outer diameter			mm (in)	34.959 — 34.975 (1.3763 — 1.3770)	
	Valve lifter mating surface inner diameter			mm (in)	34.994 — 35.016 (1.3777 — 1.3786)	
	Valve lifter and valve lifter mating surface clearance			mm (in)	0.019 — 0.057 (0.0007 — 0.0022)	
Cylinder block	Warping limit (mating surface with cylinder head)			mm (in)	0.025 (0.0098)	
	Grinding limit			mm (in)	0.1 (0.004)	
	Standard height			mm (in)	201.0 (7.91)	
	Cylindricality			mm (in)	0.015 (0.0006)	
	Out-of-roundness			mm (in)	0.010 (0.0004)	
	Clearance between cylinder and piston at 20°C (68°F)			mm (in)	-0.010 — 0.010 (-0.00039 — 0.00039)	
	Cylinder inner diameter boring limit (diameter)			mm (in)	To 100.005 (3.9372)	

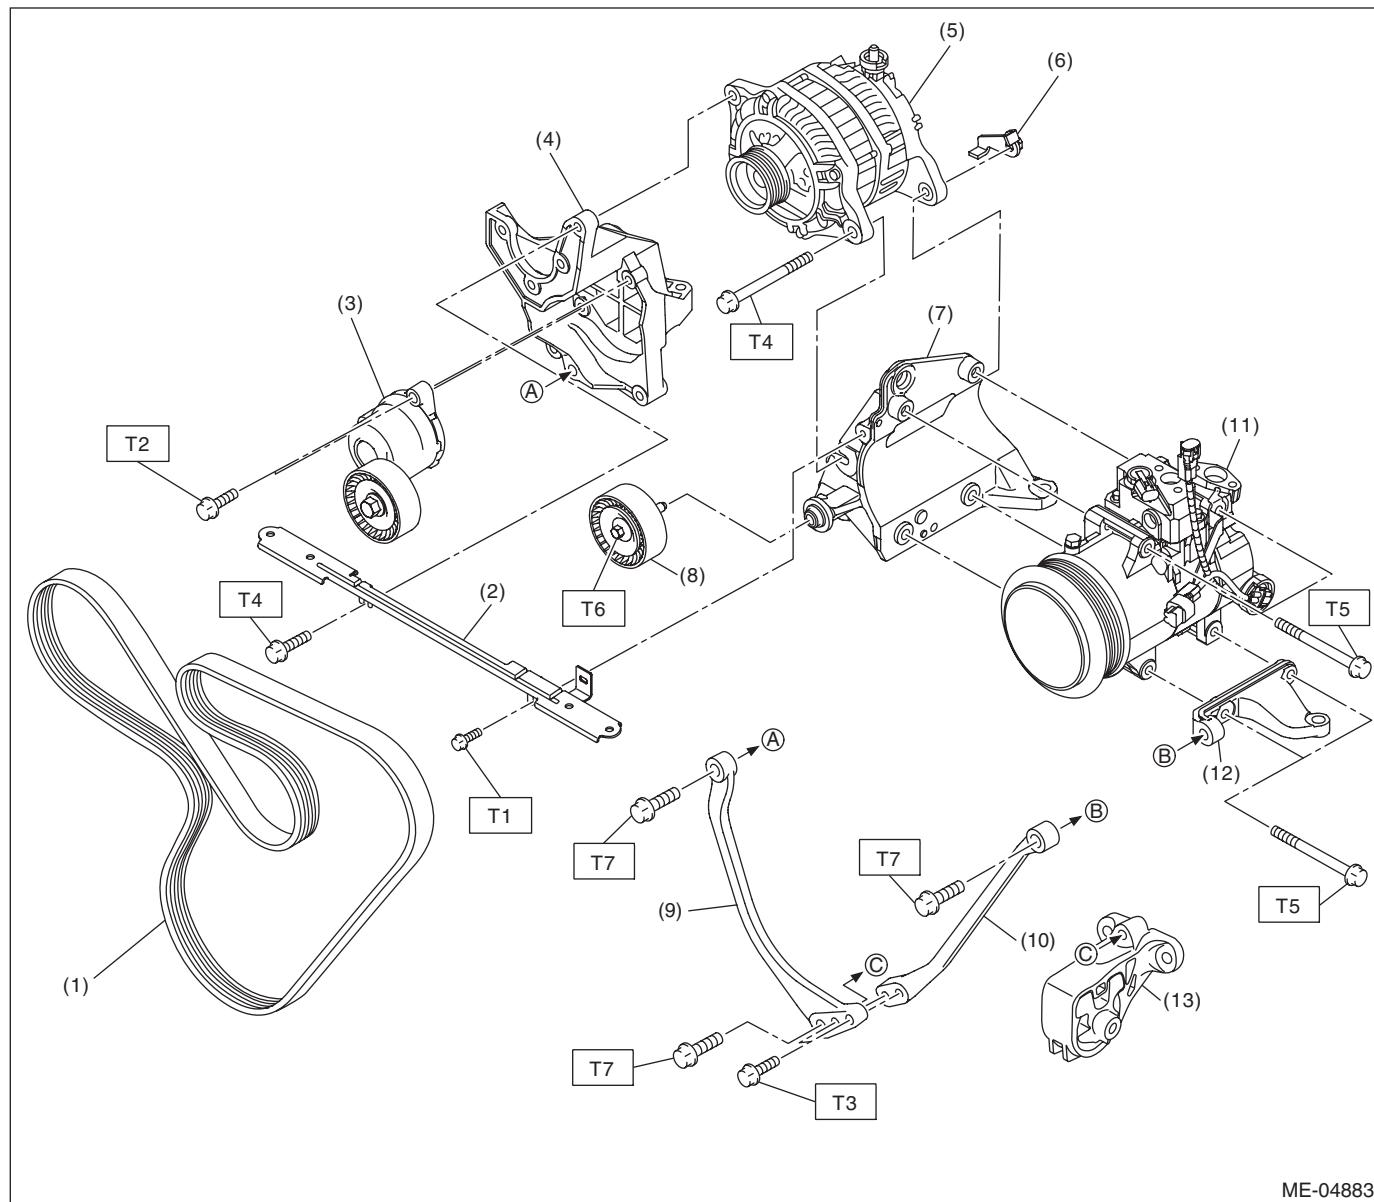
General Description

MECHANICAL

Piston	Piston grade point				mm (in)	38.2 (1.50)	
	Outer diameter	mm (in)	Standard	A	99.505 — 99.515 (3.9175 — 3.9179)		
			B		99.495 — 99.505 (3.9171 — 3.9175)		
		0.25 (0.0098) OS			99.745 — 99.765 (3.9270 — 3.9278)		
		0.50 (0.0197) OS			99.995 — 100.015 (3.9368 — 3.9376)		
Piston pin	Degree of fit				Piston pin must be fitted into position with thumb at 20°C (68°F).		
	Clearance between piston pin hole and piston pin			mm (in)	Standard	0.004 — 0.008 (0.0002 — 0.0003)	
Piston ring	Piston ring gap	mm (in)	Top ring	Standard	0.20 — 0.25 (0.0079 — 0.0098)		
			Second ring	Standard	0.37 — 0.52 (0.015 — 0.0203)		
			Oil ring	Standard	0.20 — 0.50 (0.0079 — 0.0197)		
	Clearance between piston ring and piston ring groove	mm (in)	Top ring	Standard	0.040 — 0.080 (0.0016 — 0.0031)		
			Second ring	Standard	0.030 — 0.070 (0.0012 — 0.0028)		
Connecting rod and connecting rod bearing	Bend or twist per 100 mm (3.94 in) in length			mm (in)	Limit	0.1 (0.0039)	
	Thrust clearance			mm (in)	Standard	0.070 — 0.330 (0.0028 — 0.0130)	
	Oil clearance			mm (in)	Standard	0.017 — 0.045 (0.0007 — 0.0018)	
	Bearing size (Thickness at center)	mm (in)	Standard		1.490 — 1.506 (0.0587 — 0.0593)		
			0.03 (0.0012) US		1.504 — 1.512 (0.0592 — 0.0595)		
			0.05 (0.0020) US		1.514 — 1.522 (0.0596 — 0.0599)		
			0.25 (0.0098) US		1.614 — 1.622 (0.0635 — 0.0639)		
Bushing of small end	Clearance between piston pin and bushing			mm (in)	Standard	0 — 0.022 (0 — 0.0009)	
Crankshaft and crank-shaft bearing	Bending limit				mm (in)	0.035 (0.0014)	
	Crank pin	Out-of-roundness	mm (in)	Standard	0.003 (0.0001)		
			mm (in)	Standard	0.004 (0.0002)		
		Grinding limit (dia.)		mm (in)	To 51.750 (2.0374)		
	Crank journal	Out-of-roundness	mm (in)	Standard	0.005 (0.0002)		
			mm (in)	Standard	0.006 (0.0002)		
		Grinding limit (dia.)		mm (in)	To 59.758 (2.3527)		
	Crank pin outer diameter	mm (in)	Standard		51.976 — 52.000 (2.0463 — 2.0472)		
			0.03 (0.0012) US		51.954 — 51.970 (2.0454 — 2.0461)		
			0.05 (0.0020) US		51.934 — 51.950 (2.0447 — 2.0453)		
			0.25 (0.0098) US		51.734 — 51.750 (2.0368 — 2.0374)		
	Crank journal outer diameter	mm (in)	Standard		59.984 — 60.008 (2.3616 — 2.3625)		
			0.03 (0.0012) US		59.962 — 59.978 (2.3607 — 2.3613)		
			0.05 (0.0020) US		59.942 — 59.958 (2.3599 — 2.3605)		
			0.25 (0.0098) US		59.742 — 59.758 (2.3520 — 2.3527)		
	Bearing size (Thickness at center)	#1, #3	Standard		1.998 — 2.015 (0.0787 — 0.0793)		
			0.03 (0.0012) US		2.017 — 2.020 (0.0794 — 0.0795)		
			0.05 (0.0020) US		2.027 — 2.030 (0.0798 — 0.0799)		
			0.25 (0.0098) US		2.127 — 2.130 (0.0837 — 0.0839)		
		#2, #4, #5	Standard		2.000 — 2.017 (0.0787 — 0.0794)		
			0.03 (0.0012) US		2.019 — 2.022 (0.0795 — 0.0796)		
			0.05 (0.0020) US		2.029 — 2.032 (0.0799 — 0.0800)		
			0.25 (0.0098) US		2.129 — 2.132 (0.0838 — 0.0839)		
	Thrust clearance			mm (in)	Standard	0.030 — 0.115 (0.0012 — 0.0045)	
	Oil clearance			mm (in)	Standard	0.010 — 0.030 (0.00039 — 0.0012)	

B: COMPONENT

1. V-BELT



ME-04883

(1) V-belt	(8) Idler pulley ASSY
(2) Collector cover bracket	(9) Stopper rod RH
(3) V-belt tensioner ASSY	(10) Stopper rod LH
(4) Power steering pump bracket	(11) A/C compressor
(5) Generator	(12) A/C compressor bracket B
(6) Generator plate	(13) Front cushion rubber
(7) A/C compressor bracket A	

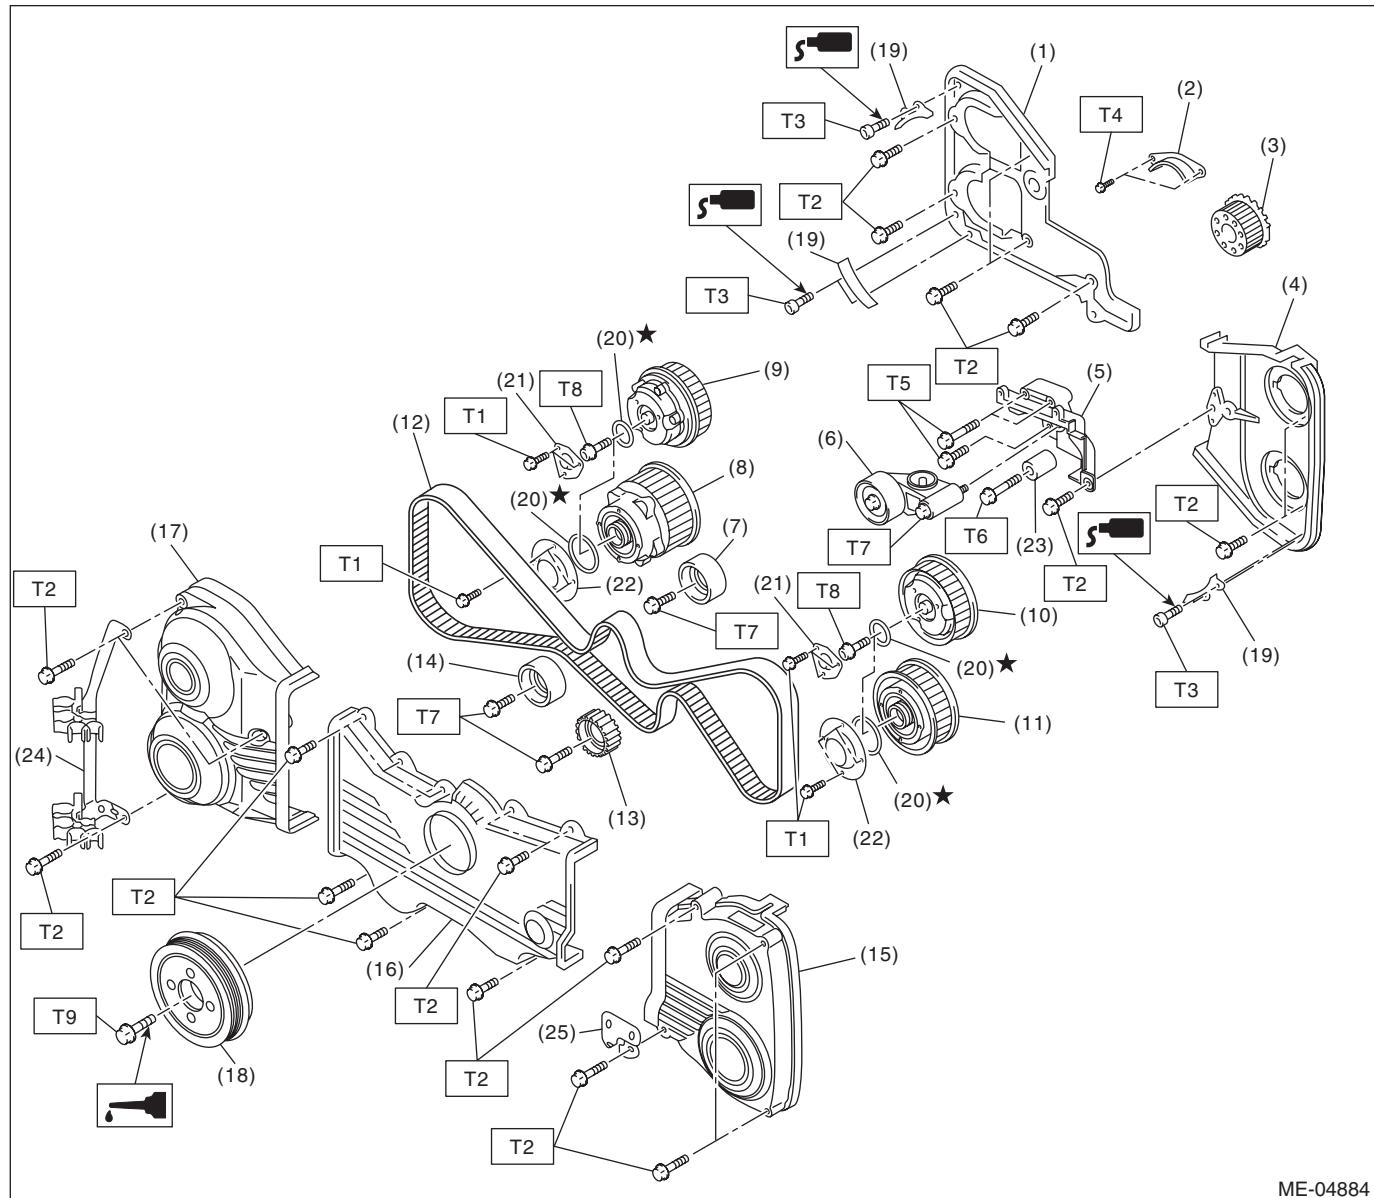
Tightening torque: N·m (kgf·m, ft·lb)

T1: 6.4 (0.7, 4.7)
T2: 20 (2.0, 14.8)
T3: 22 (2.2, 16.2)
T4: 25 (2.5, 18.4)
T5: 26.5 (2.7, 19.5)
T6: 33 (3.4, 24.3)
T7: 36 (3.7, 26.6)

General Description

MECHANICAL

2. TIMING BELT



ME-04884

(1) Timing belt cover No. 2 RH	(13) Belt idler No. 2	(25) Oxygen sensor bracket
(2) Timing belt guide	(14) Belt idler	
(3) Crank sprocket	(15) Timing belt cover LH	Tightening torque:N·m (kgf·m, ft·lb)
(4) Timing belt cover No. 2 LH	(16) Front belt cover	T1: 3.4 (0.3, 2.5)
(5) Tensioner bracket	(17) Timing belt cover RH	T2: 5 (0.5, 3.7)
(6) Automatic belt tension adjuster ASSY	(18) Crank pulley	T3: 6.4 (0.7, 4.7)
(7) Belt idler	(19) Timing belt guide	T4: 9.75 (1.0, 7.2)
(8) Exhaust cam sprocket RH	(20) O-ring	T5: 24.5 (2.5, 18.1)
(9) Intake cam sprocket RH	(21) Intake actuator cover	T6: 25 (2.5, 18.4)
(10) Intake cam sprocket LH	(22) Exhaust actuator cover	T7: 39 (4.0, 28.8)
(11) Exhaust cam sprocket LH	(23) Belt idler	T8: <Ref. to ME(H4DOTC)-59, INSTALLATION, Cam Sprocket. >
(12) Timing belt	(24) Hose clip stay ASSY	T9: <Ref. to ME(H4DOTC)-43, INSTALLATION, Crank Pulley. >

Tightening torque:N·m (kgf·m, ft·lb)

T1: 3.4 (0.3, 2.5)

T2: 5 (0.5, 3.7)

T3: 6.4 (0.7, 4.7)

T4: 9.75 (1.0, 7.2)

T5: 24.5 (2.5, 18.1)

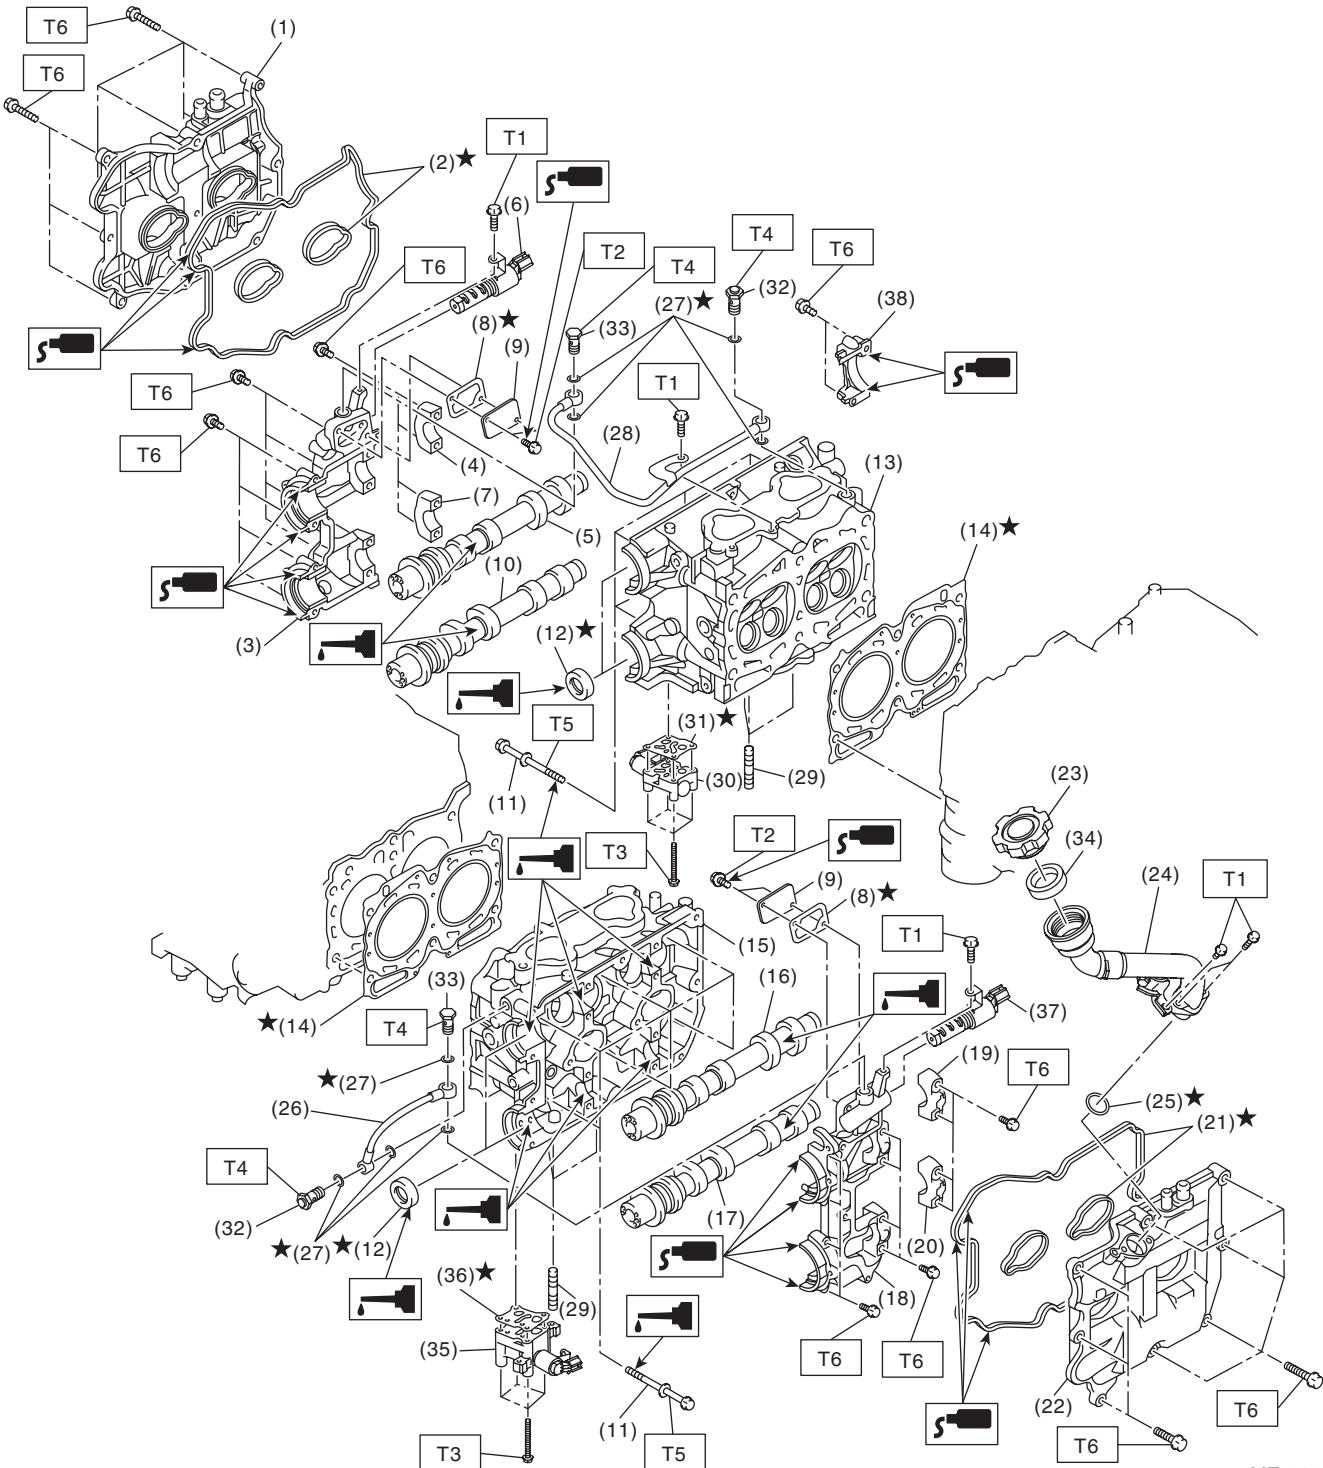
T6: 25 (2.5, 18.4)

T7: 39 (4.0, 28.8)

T8: <Ref. to ME(H4DOTC)-59, INSTALLATION, Cam Sprocket. >

T9: <Ref. to ME(H4DOTC)-43, INSTALLATION, Crank Pulley. >

3. CYLINDER HEAD AND CAMSHAFT




ME-04914

General Description

MECHANICAL

(1) Rocker cover RH	(17) Exhaust camshaft LH	(33) Union bolt without filter (without protrusion)
(2) Rocker cover gasket RH	(18) Front camshaft cap LH	(34) Gasket
(3) Front camshaft cap RH	(19) Intake camshaft cap LH	(35) Exhaust oil flow control solenoid valve LH
(4) Intake camshaft cap RH	(20) Exhaust camshaft cap LH	(36) Gasket LH
(5) Intake camshaft RH	(21) Rocker cover gasket LH	(37) Intake oil flow control solenoid valve LH
(6) Intake oil flow control solenoid valve RH	(22) Rocker cover LH	(38) Rear camshaft cap
(7) Exhaust camshaft cap RH	(23) Oil filler cap	Tightening torque:N·m (kgf·m, ft-lb)
(8) Gasket	(24) Oil filler duct	T1: 6.4 (0.7, 4.7)
(9) Oil return cover	(25) O-ring	T2: 9 (0.9, 6.6)
(10) Exhaust camshaft RH	(26) Oil pipe LH	T3: 10 (1.0, 7.4)
(11) Cylinder head bolt	(27) Gasket	T4: 29 (3.0, 21.4)
(12) Oil seal	(28) Oil pipe RH	T5: <Ref. to ME(H4DOTC)-71, INSTALLATION, Cylinder Head.>
(13) Cylinder head RH	(29) Stud bolt	T6: <Ref. to ME(H4DOTC)-64, INSTALLATION, Camshaft.>
(14) Cylinder head gasket	(30) Exhaust oil flow control solenoid valve RH	
(15) Cylinder head LH	(31) Gasket RH	
(16) Intake camshaft LH	(32) Union bolt with filter (with protrusion)	

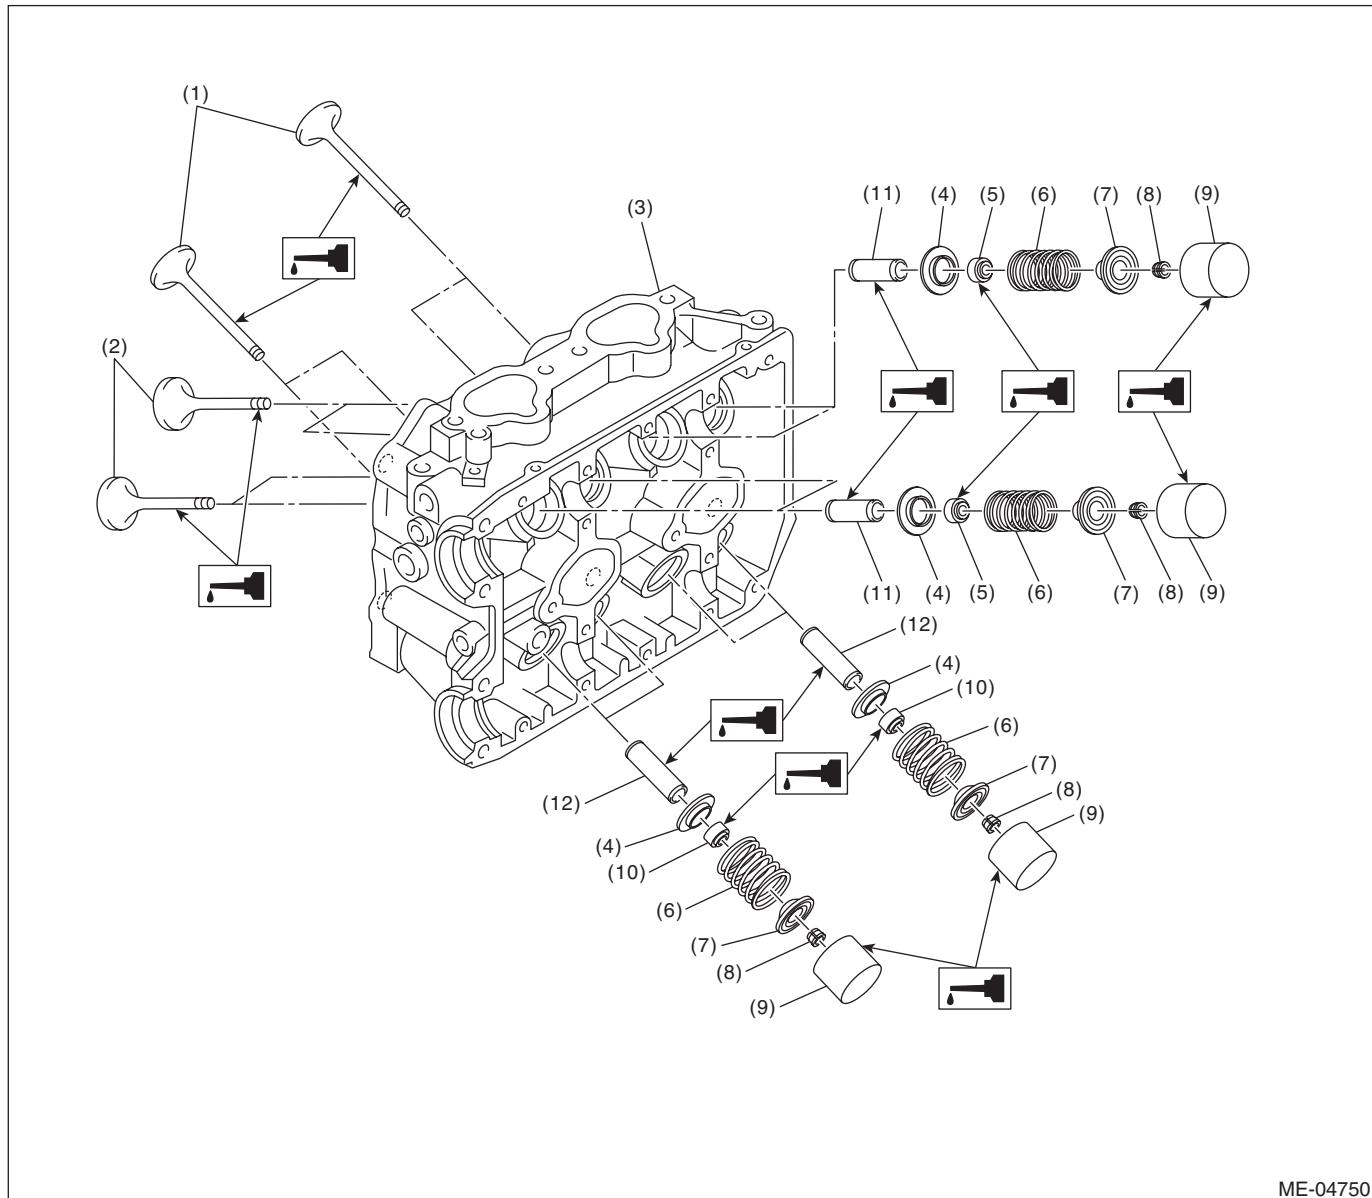4. CYLINDER HEAD AND VALVE ASSEMBLY




ME-04750

(1) Exhaust valve	(5) Intake valve oil seal	(9) Valve lifter
(2) Intake valve	(6) Valve spring	(10) Exhaust valve oil seal
(3) Cylinder head	(7) Retainer	(11) Intake valve guide
(4) Valve spring seat	(8) Retainer key	(12) Exhaust valve guide

General Description

MECHANICAL

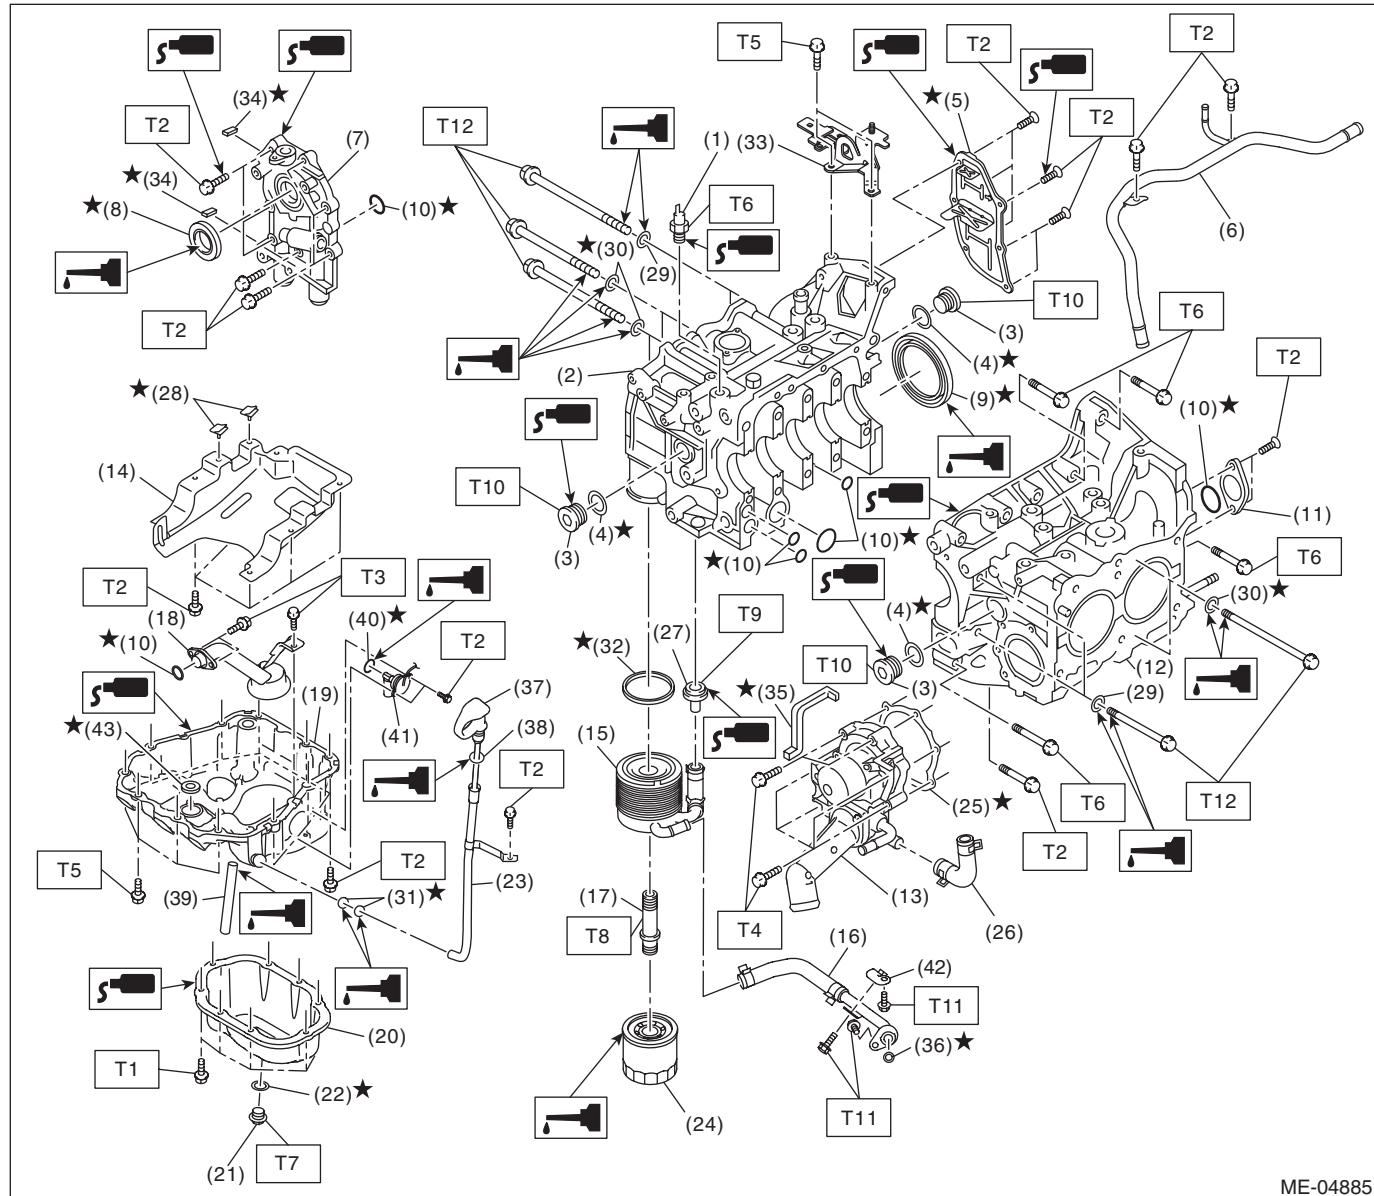5. CYLINDER BLOCK



General Description

MECHANICAL

(1) Oil pressure switch	(21) Drain plug	(41) Oil level switch
(2) Cylinder block RH	(22) Drain plug gasket	(42) Oil cooler pipe stay
(3) Service hole plug	(23) Oil level gauge guide	(43) O-ring
(4) Gasket	(24) Oil filter	
(5) Oil separator cover	(25) Gasket	
(6) Water by-pass pipe	(26) Water pump hose	
(7) Oil pump	(27) Nipple	
(8) Front oil seal	(28) Seal	
(9) Rear oil seal	(29) Washer	
(10) O-ring	(30) Seal washer	
(11) Service hole cover	(31) O-ring	
(12) Cylinder block LH	(32) Gasket	
(13) Water pump	(33) Engine rear hanger	
(14) Baffle plate	(34) Oil pump seal	
(15) Oil cooler	(35) Water pump sealing	
(16) Oil cooler pipe	(36) O-ring	
(17) Connector	(37) Oil level gauge	
(18) Oil strainer	(38) O-ring	
(19) Cylinder block lower	(39) Oil drain pipe	
(20) Oil pan	(40) O-ring	

Tightening torque:N·m (kgf·m, ft-lb)

T1: 5 (0.5, 3.7)

T2: 6.4 (0.7, 4.7)

T3: 10 (1.0, 7.4)

**T4: First 12 (1.2, 8.9)
Second 12 (1.2, 8.9)**

T5: 16 (1.6, 11.8)

T6: 25 (2.5, 18.4)

T7: 41.7 (4.3, 30.8)

T8: 54 (5.5, 39.8)

T9: 69 (7.0, 50.9)

T10: 70 (7.1, 51.6)

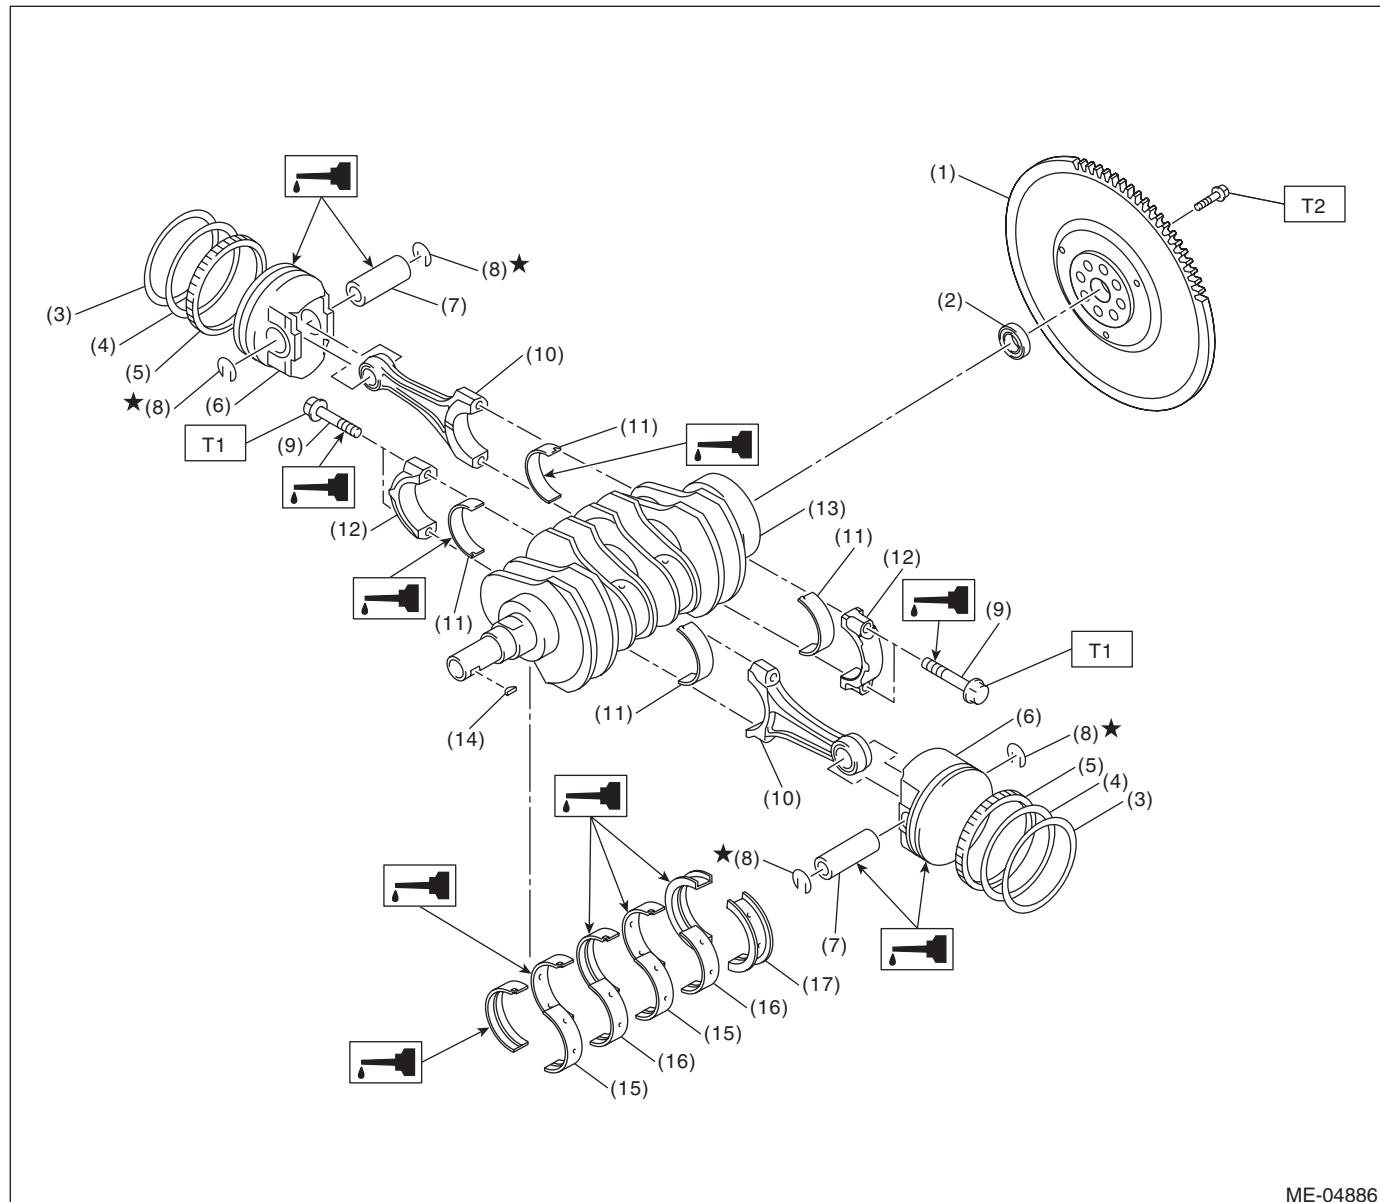
T11: <Ref. to LU(H4SO)-25, INSTALLATION, Engine Oil Cooler.>

T12: <Ref. to ME(H4DOTC)-84, INSTALLATION, Cylinder Block.>

General Description

MECHANICAL

6. CRANKSHAFT AND PISTON



ME-04886


(1) Flywheel	(8) Snap ring	(15) Crankshaft bearing #1, #3
(2) Ball bearing	(9) Connecting rod bolt	(16) Crankshaft bearing #2, #4
(3) Top ring	(10) Connecting rod	(17) Crankshaft bearing #5
(4) Second ring	(11) Connecting rod bearing	
(5) Oil ring	(12) Connecting rod cap	
(6) Piston	(13) Crankshaft	
(7) Piston pin	(14) Woodruff key	

Tightening torque:N·m (kgf·m, ft·lb)

T1: 52 (5.3, 38.4)

T2: <Ref. to CL-14, INSTALLATION, Flywheel.>

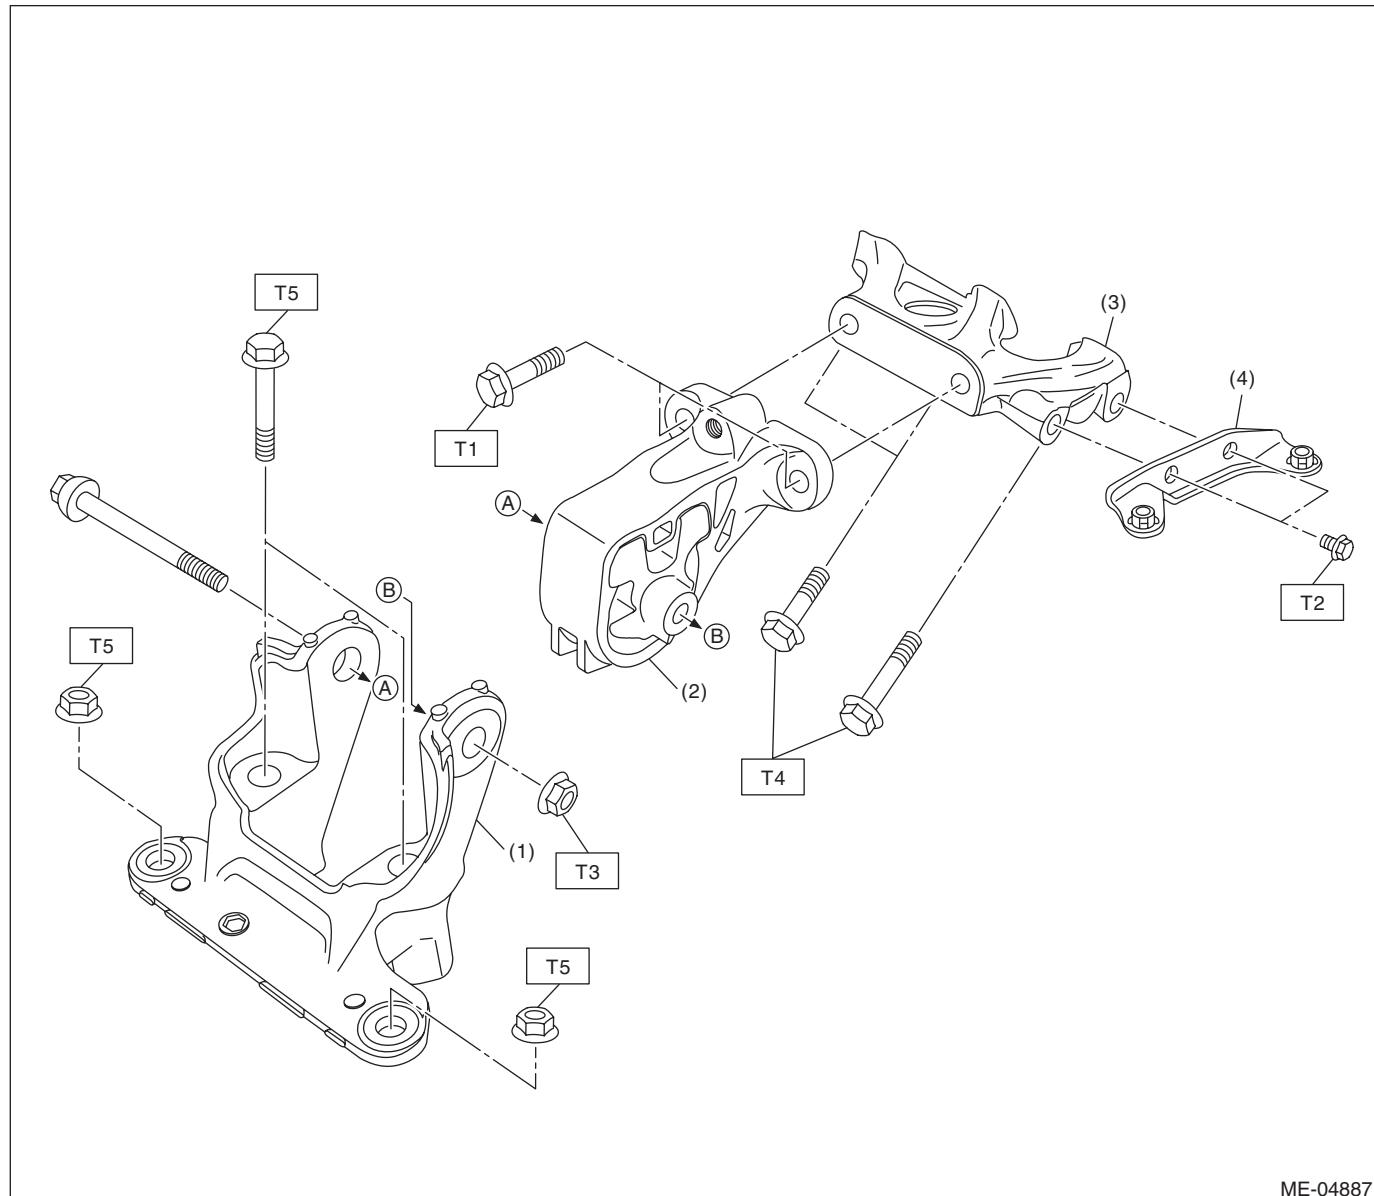7. ENGINE MOUNTING



ME-04887

(1) Front mounting bracket
(2) Front cushion rubber

(3) Engine mounting bracket
(4) Turbocharger upper stay

Tightening torque:N·m (kgf·m, ft·lb)

T1: 25 (2.5, 18.4)

T2: 33 (3.4, 24.3)

T3: 45 (4.6, 33.2)

T4: 58 (5.9, 42.8)

T5: 60 (6.1, 44.3)

General Description



MECHANICAL

C: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.
- All parts should be thoroughly cleaned, paying special attention to engine oil passages, pistons and bearings.
- Rotating parts and sliding parts such as piston, bearing and gear should be coated with oil prior to assembly.
- Be careful not to let oil, grease or engine coolant contact the timing belt, clutch disc and flywheel.
- All removed parts, if to be reused, should be reinstalled in the original positions and directions.
- Bolts, nuts and washers should be replaced with new parts as required.
- Even if necessary inspections have been made in advance, proceed with assembly work while making rechecks.
- Remove or install the engine in an area where chain hoists, lifting devices, etc. are available for ready use.
- Be sure not to damage coated surfaces of body panels with tools, or not to stain seats and windows with coolant or oil. Place a cover over fender, as required, for protection.
- Prior to starting work, prepare the following:
Service tools, clean cloth, containers to catch coolant and oil, wire ropes, chain hoist, transmission jacks, etc.
- Lift up or lower the vehicle when necessary. Make sure to support the correct positions.






D: PREPARATION TOOL

1. SPECIAL TOOL

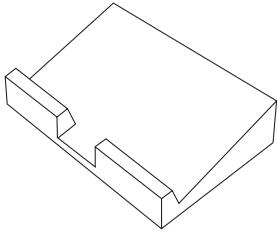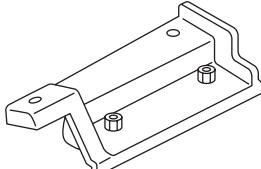ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-498267600	498267600	CYLINDER HEAD TABLE	<ul style="list-style-type: none">• Used for replacing valve guides.• Used for removing and installing valve spring.
 ST-498457000	498457000	ENGINE STAND ADAPTER RH	Used together with ENGINE STAND (499817100).






General Description

MECHANICAL

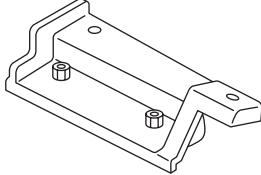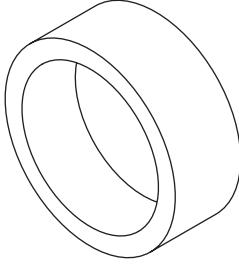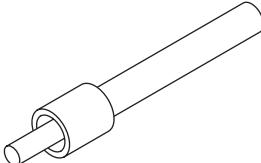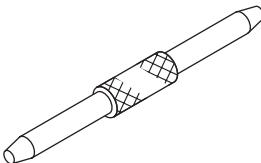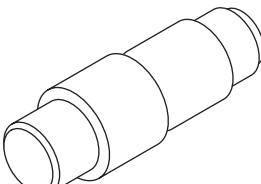ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-498457100	498457100	ENGINE STAND ADAPTER LH	Used together with ENGINE STAND (499817100).
 ST-498747300	498747300	PISTON GUIDE	Used for installing the piston into the cylinder.
 ST-498857100	498857100	VALVE OIL SEAL GUIDE	Used for press-fitting of intake and exhaust valve guide oil seals.
 ST-499017100	499017100	PISTON PIN GUIDE	Used for installing piston pin, piston and connecting rod.
 ST-499037100	499037100	CONNECTING ROD BUSHING REMOVER AND INSTALLER	Used for removing and installing connecting rod bushing.






General Description

MECHANICAL

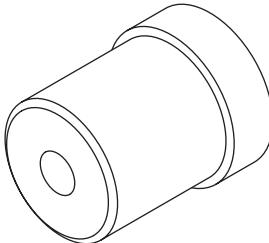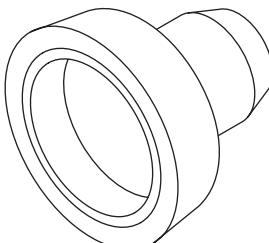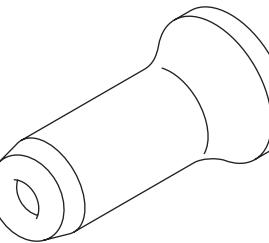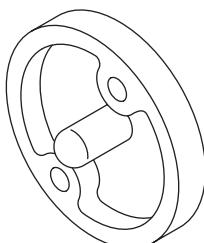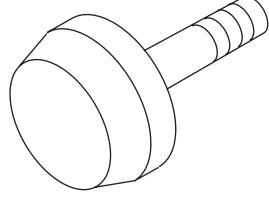ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499587100	499587100	OIL SEAL INSTALLER	Used for installing oil pump oil seal.
 ST-499587200	499587200	CRANKSHAFT OIL SEAL INSTALLER	<ul style="list-style-type: none">Used for installing crankshaft oil seal.Used together with CRANKSHAFT OIL SEAL GUIDE (499597100).
 ST-499587600	499587600	OIL SEAL INSTALLER	Used for installing the camshaft oil seal.
 ST-499597100	499597100	CRANKSHAFT OIL SEAL GUIDE	<ul style="list-style-type: none">Used for installing crankshaft oil seal.Used together with CRANKSHAFT OIL SEAL INSTALLER (499587200).
 ST-499597200	499597200	OIL SEAL GUIDE	<ul style="list-style-type: none">Used for installing the camshaft oil seal.Used together with OIL SEAL INSTALLER (499587600).






General Description

MECHANICAL

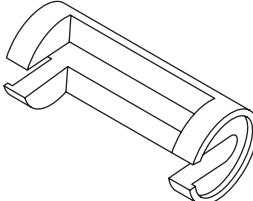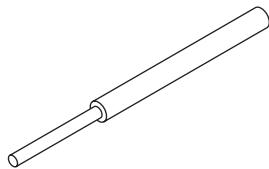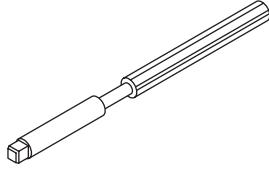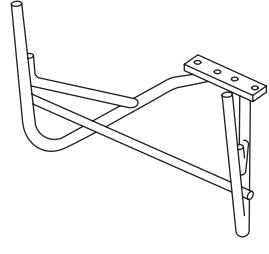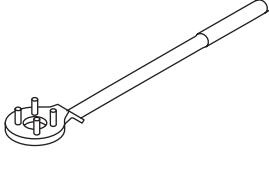ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499718000	499718000	VALVE SPRING REMOVER	Used for removing and installing valve spring.
 ST-499767200	499767200	VALVE GUIDE REMOVER	Used for removing valve guides.
 ST-499767400	499767400	VALVE GUIDE REAMER	Used for reaming valve guides.
 ST-499817100	499817100	ENGINE STAND	<ul style="list-style-type: none"> Used for disassembling and assembling engine. Used together with ENGINE STAND ADAPTER RH (498457000) & LH (498457100).
 ST-499977100	499977100	CRANK PULLEY WRENCH	Used for removing and installing the crank pulley.





General Description

MECHANICAL

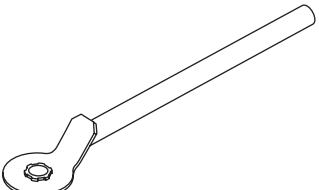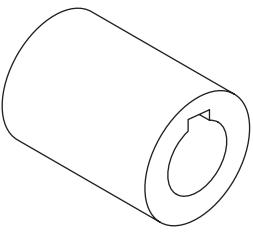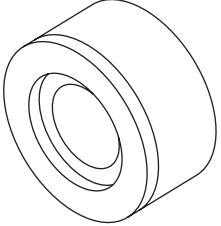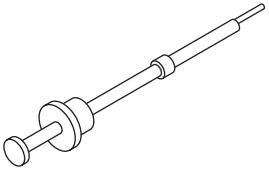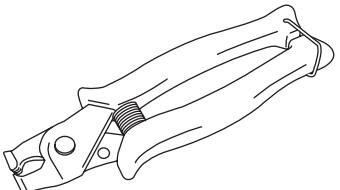ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-499977500	499977500	CAM SPROCKET WRENCH	Used for removing and installing intake cam sprocket and exhaust cam sprocket.
 ST-499987500	499987500	CRANKSHAFT SOCKET	Used for rotating crankshaft.
 ST18251AA020	18251AA020	VALVE GUIDE ADJUSTER	Used for installing intake and exhaust valve guides.
 ST-499097700	499097700	PISTON PIN REMOVER ASSY	Used for removing piston pin.
 ST18353AA000	18353AA000	CLAMP PLIERS	<ul style="list-style-type: none"> Used for removing and installing the PCV hose. This tool is made by the French company CAILLAU. (code) 54.0.000.205 <p>To make it easier to obtain, it has been provided with a tool number.</p>

General Description

MECHANICAL

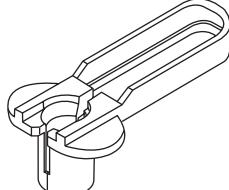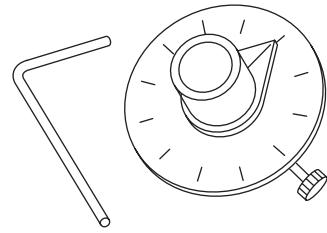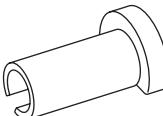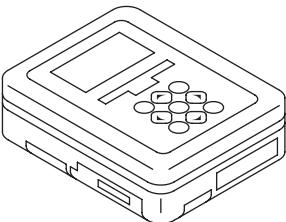ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	18371AA000	CONNECTOR REMOVER	Used for disconnecting the quick connector on the fuel return hose side of the engine compartment (intake manifold).
	18854AA000	ANGLE GAUGE	Used for installing the crank pulley.
	42099AE000	QUICK CONNECTOR RELEASE	Used for disconnecting quick connector of the engine compartment.
	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for various inspections.

2. GENERAL TOOL

TOOL NAME	REMARKS
Compression gauge	Used for measuring compression.
Timing light	Used for measuring ignition timing.
Vacuum gauge	Used for measuring intake manifold vacuum.
Oil pressure gauge	Used for measuring engine oil pressure.
Fuel pressure gauge	Used for measuring fuel pressure.