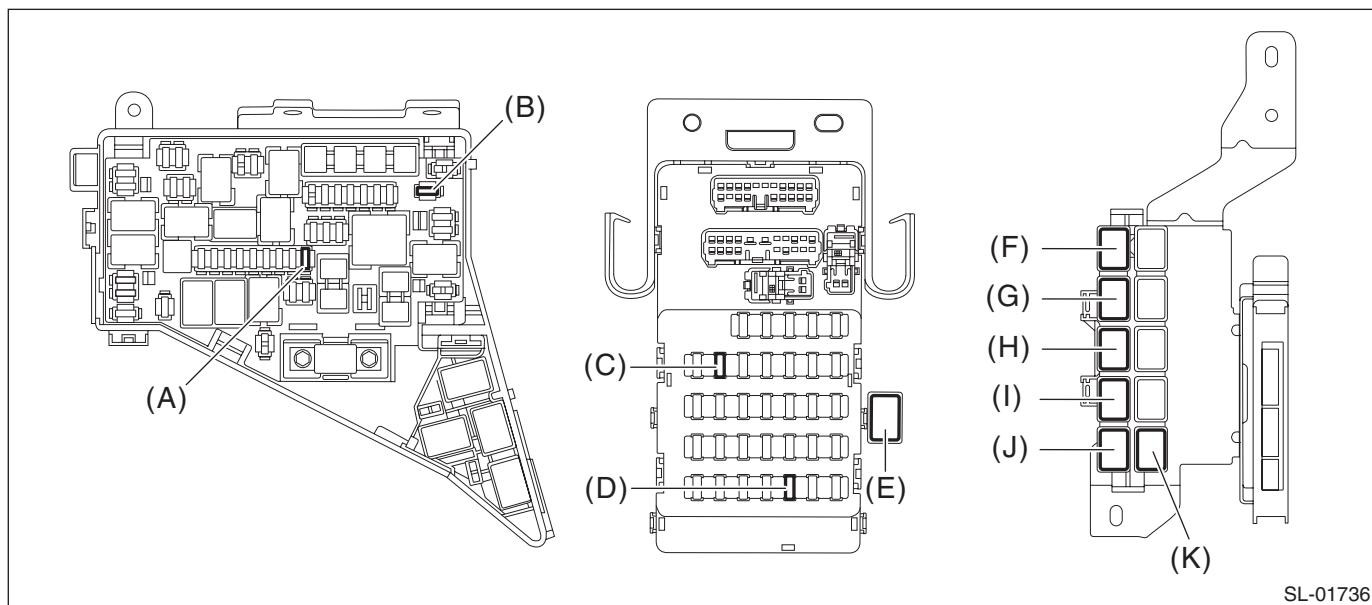


## 2. Relay and Fuse

### A: LOCATION



SL-01736

Main fuse box	Fuse 20A (K/L)	(A)
	Fuse 20A (K/L, K/A)	(B)
Relay & fuse box	Fuse 7.5A (K/L, K/A)	(C)
	Fuse 7.5 A (K/A)	(D)
	Starter relay (K/L)	(E)
Smart module bracket	Accessory relay (push button start) (K/A)	(F)
	IG relay 2 (push button start) (K/A)	(G)
	IG relay 1 (push button start) (K/A)	(H)
	Starter relay (push button start) (K/A)	(I)
	Starter relay (K/A)	(J)
	Starter cut relay (K/A)	(K)

#### NOTE:

For other related fuses, refer to the wiring diagram. <Ref. to WI-15, Power Supply Circuit.>

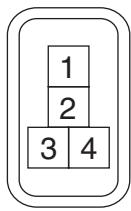
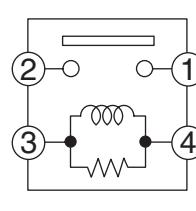
## B: INSPECTION

### 1. CHECK FUSE

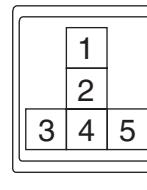
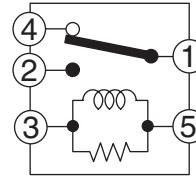
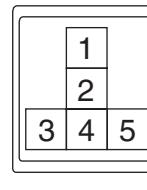
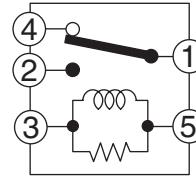
- 1) Remove the fuse and check visually.
- 2) If the fuse is blown out, replace the fuse.

### 2. CHECK RELAY

- 1) Check the resistance between relay terminals.

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 MΩ or more	 
1 — 2	Apply battery voltage between terminals 4 — 3.	Less than 1 Ω	

SR-00180

Terminal No.	Inspection conditions	Standard	Circuit
1 — 2	Always	1 MΩ or more	 
1 — 4	Always	Less than 1 Ω	
1 — 2	Apply battery voltage between terminals 3 — 5.	Less than 1 Ω	 
3 — 5			

SL-01085

- 2) Replace the relay if the inspection result is not within the standard value.