


INSPECTION

1. INSPECT CLUTCH DISC FOR WEAR OR DAMAGE

Using vernier calipers, measure the rivet head depth.

Minimum rivet depth: 0.3 mm (0.012 in.)

If necessary, replace the clutch disc.

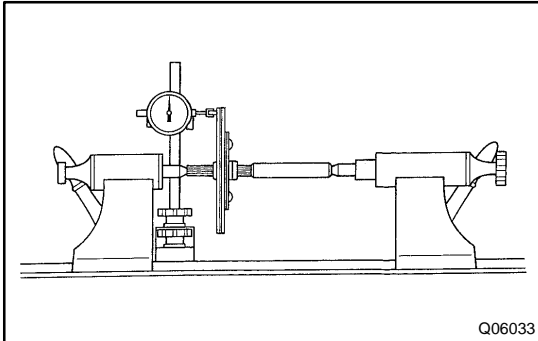


2. INSPECT CLUTCH DISC RUNOUT

Using a dial indicator, check the disc runout.

Maximum runout: 0.8 mm (0.031 in.)

If necessary, replace the clutch disc runout.

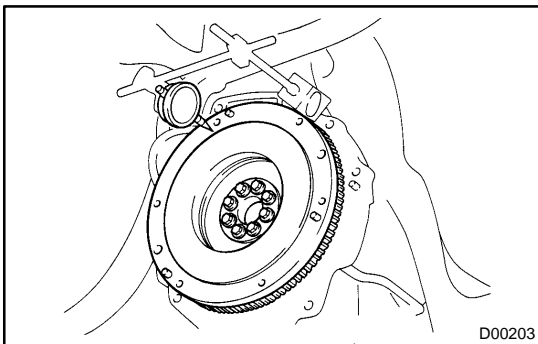

3. INSPECT FLYWHEEL RUNOUT

Using a dial indicator, check the flywheel runout.


Maximum runout: 0.1 mm (0.004 in.)

If necessary, replace the flywheel.

Torque:

1st: 49 N·m (500 kgf·cm, 36 ft·lbf)

2nd: Turn 90°

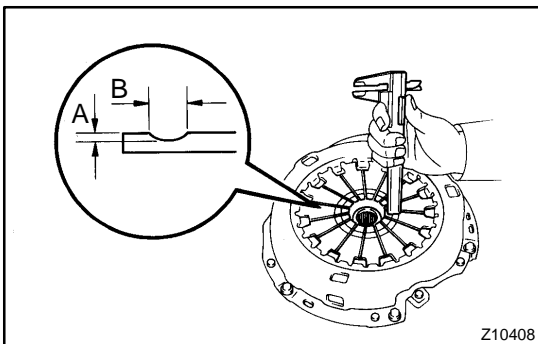

4. INSPECT DIAPHRAGM SPRING FOR WEAR


Using vernier calipers, measure the diaphragm spring for depth and width of wear.

Maximum:

A (Depth): 0.5 mm (0.020 in.)

B (Width): 6.0 mm (0.236 in.)

If necessary, replace the clutch cover.

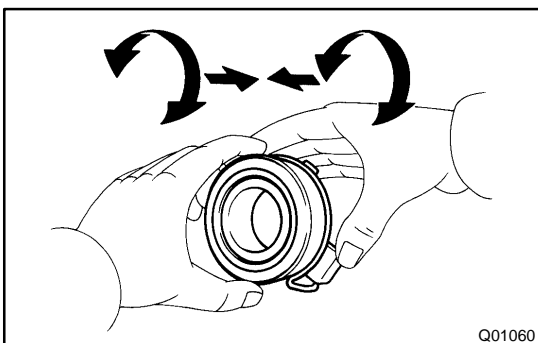

5. INSPECT RELEASE BEARING

Turn the bearing by hand while applying force in the axial direction.

HINT:

The bearing is permanently lubricated and requires no cleaning or lubrication.

If necessary, replace the release bearing.