


DTC	RrDEF, FOOT	Front Evaporator Temperature Sensor circuit
-----	-------------	---

CIRCUIT DESCRIPTION

This sensor detects the temperature inside the cooling unit and sends the appropriate signals to the A/C amplifier.


Blinking light	Detection Item	Trouble Area
RrDEF FOOT	Open or short in front evaporator temperature sensor circuit.	• Front evaporator temperature sensor. • Harness or connector between front evaporator temperature sensor and A/C amplifier. • A/C amplifier.

WIRING DIAGRAM

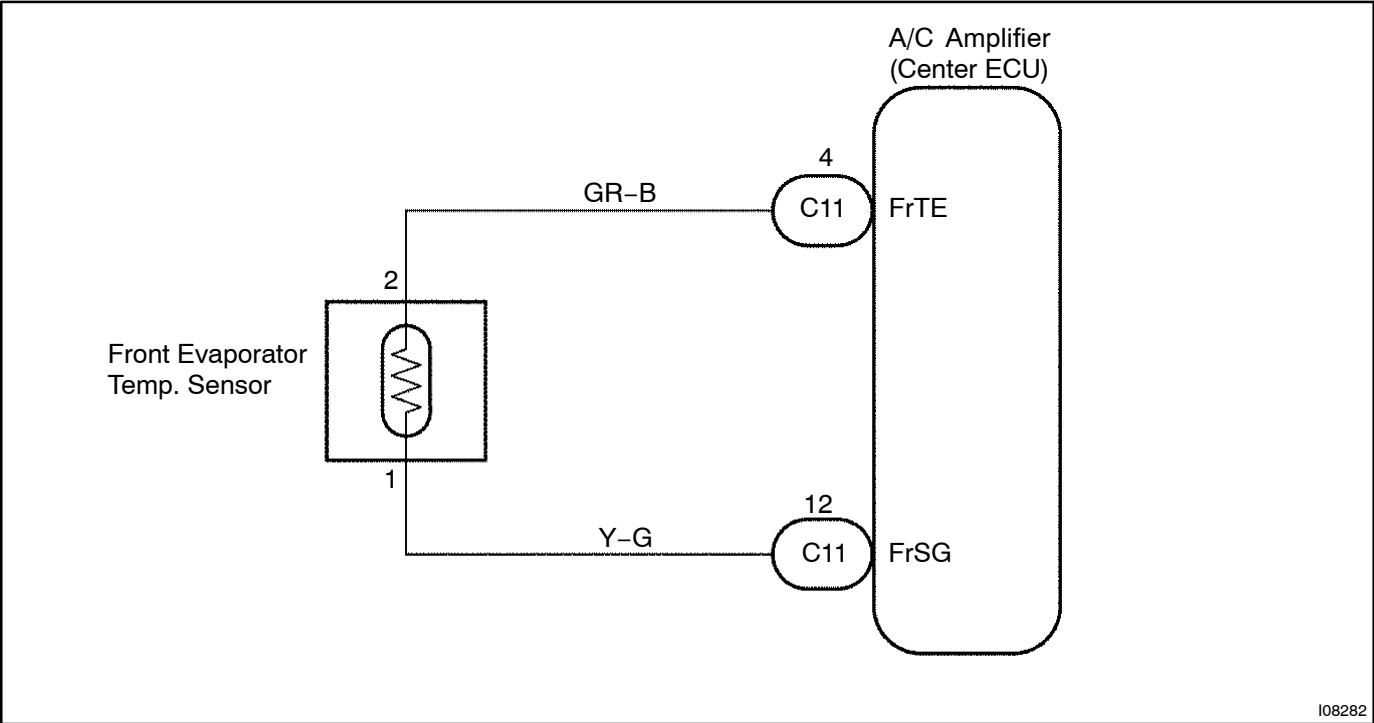

INSPECTION PROCEDURE

1	Check voltage between terminals FrTE and FrSG of A/C amplifier connector.
---	---

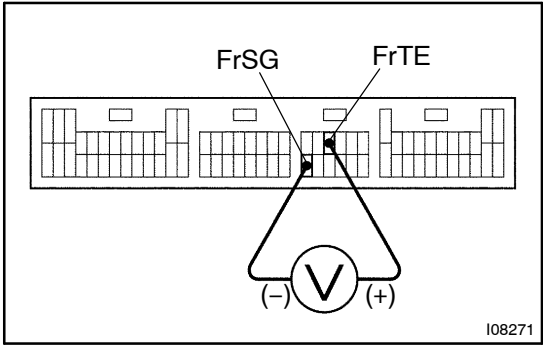

PREPARATION:

Remove A/C amplifier with connectors still connected.

CHECK:

- (a) Turn ignition switch ON.
- (b) Measure voltage between terminals FrTE and FrSG of A/C amplifier connector at each temperature.

OK:

Voltage :

at 0°C (32°F) : 2.0 – 2.4 V

at 15°C (59°F) : 1.4 – 1.8 V


HINT:

As the temperature increases, the voltage decreases.

NG	Go to step 2.
----	---------------

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-859](#)). However, if RrDEF and FOOT is light up, check and replace A/C amplifier.

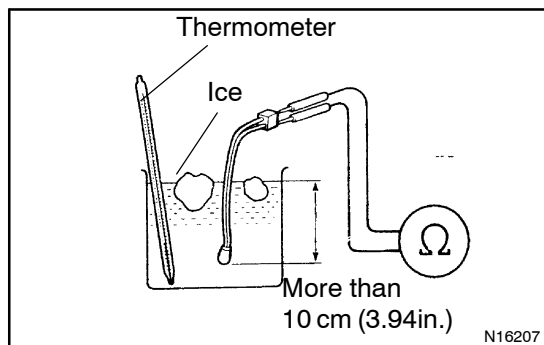2 Check front evaporator temperature sensor.**PREPARATION:**

Remove front evaporator temperature sensor
([See page AC-37](#)).

CHECK:

Measure resistance between terminals 1 and 2 of evaporator temperature sensor connector at each temperature.

OK:**Resistance :**

at 0°C (32°F) : 4.5 – 5.2 kΩ

at 15°C (59°F) : 2.0 – 2.7 kΩ

HINT:

As the temperature increases, the resistance decreases.

NG**Replace front evaporator temperature sensor.****OK****3 Check harness and connector between A/C amplifier and front evaporator temperature sensor ([See page IN-35](#)).****NG****Repair or replace harness or connector.****OK****Check and replace A/C amplifier.**