

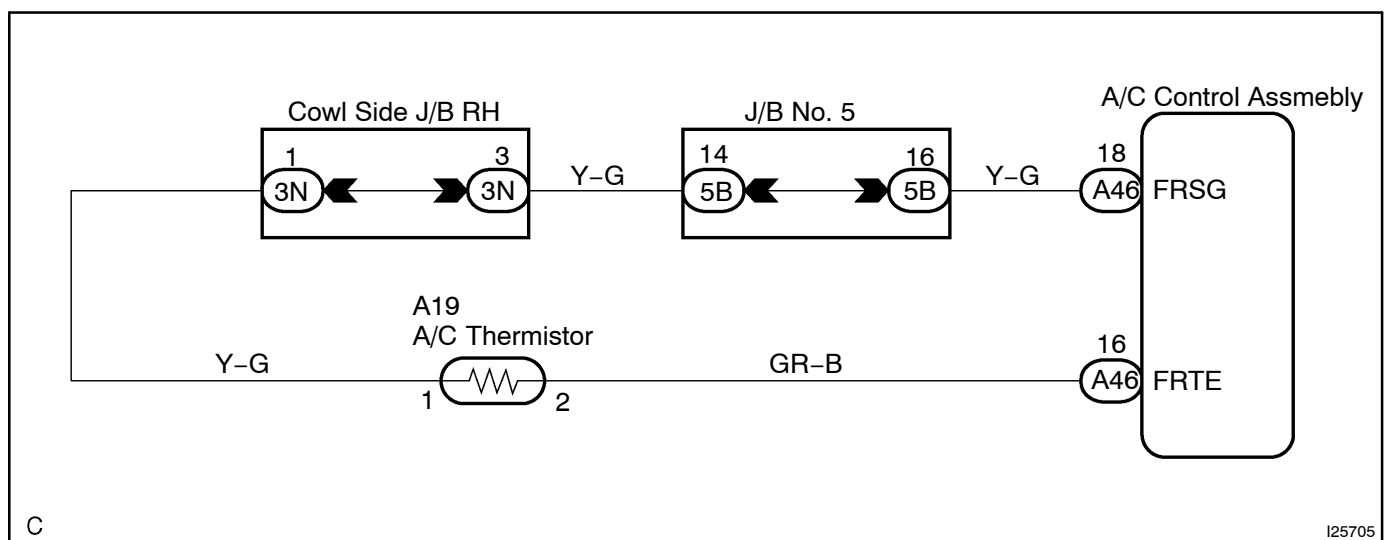
DTC	13	Front Evaporator Temperature Sensor circuit
------------	-----------	--

CIRCUIT DESCRIPTION

This sensor detects the temperature inside the cooling unit and sends the appropriate signals to the A/C amplifier.

DTC No.	Detection Item	Trouble Area
13	Open or short in front evaporator temperature sensor circuit	• Front evaporator temp. sensor • Harness or connector between front evaporator temp. sensor and A/C amplifier • A/C amplifier

WIRING DIAGRAM

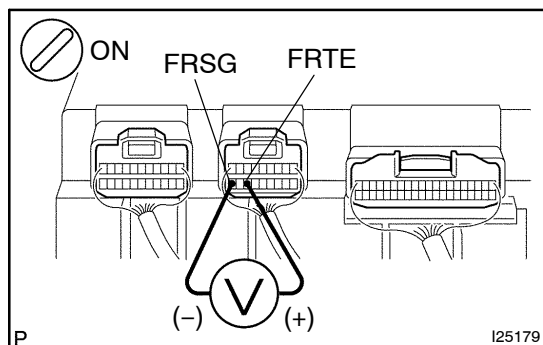


C

I25705

INSPECTION PROCEDURE

1	Check voltage between terminals FRTE and FRSG of A/C amplifier.
---	--

**PREPARATION:**

Remove A/C amplifier with connectors still connected.

CHECK:

- (a) Turn ignition switch to ON.
- (b) Measure voltage between terminals FRTE and FRSG of A/C amplifier connector at each temperature.

OK:**Voltage :**

at 0°C (32°F) : 2.0 – 2.4 V

at 15°C (59°F) : 1.4 – 1.8 V

HINT:

As the temperature increases, the voltage decreases.

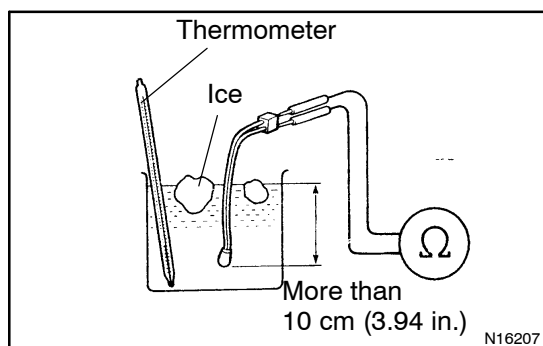
NG

Go to step 2.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1313](#)). However, if DTC 13 is displayed, check and replace A/C amplifier.

2	Check front evaporator temperature sensor.
---	---

**PREPARATION:**

Remove front evaporator temperature sensor.

CHECK:

Measure resistance between terminals 1 and 2 of evaporator temperature sensor connector at each temperature.

OK:**Resistance :**

at 0°C (32°F) : 4.5 – 5.2 kΩ

at 15°C (59°F) : 2.0 – 2.7 kΩ

HINT:



As the temperature increases, the resistance decreases.

NG

Replace front evaporator temperature sensor.

OK

3	Check harness and connector between front evaporator temperature sensor and A/C amplifier (See page IN-36).
---	--

NGRepair or replace harness or connector.OKCheck and replace A/C amplifier.