



FRONT/REAR DIFFERENTIAL LOCK

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

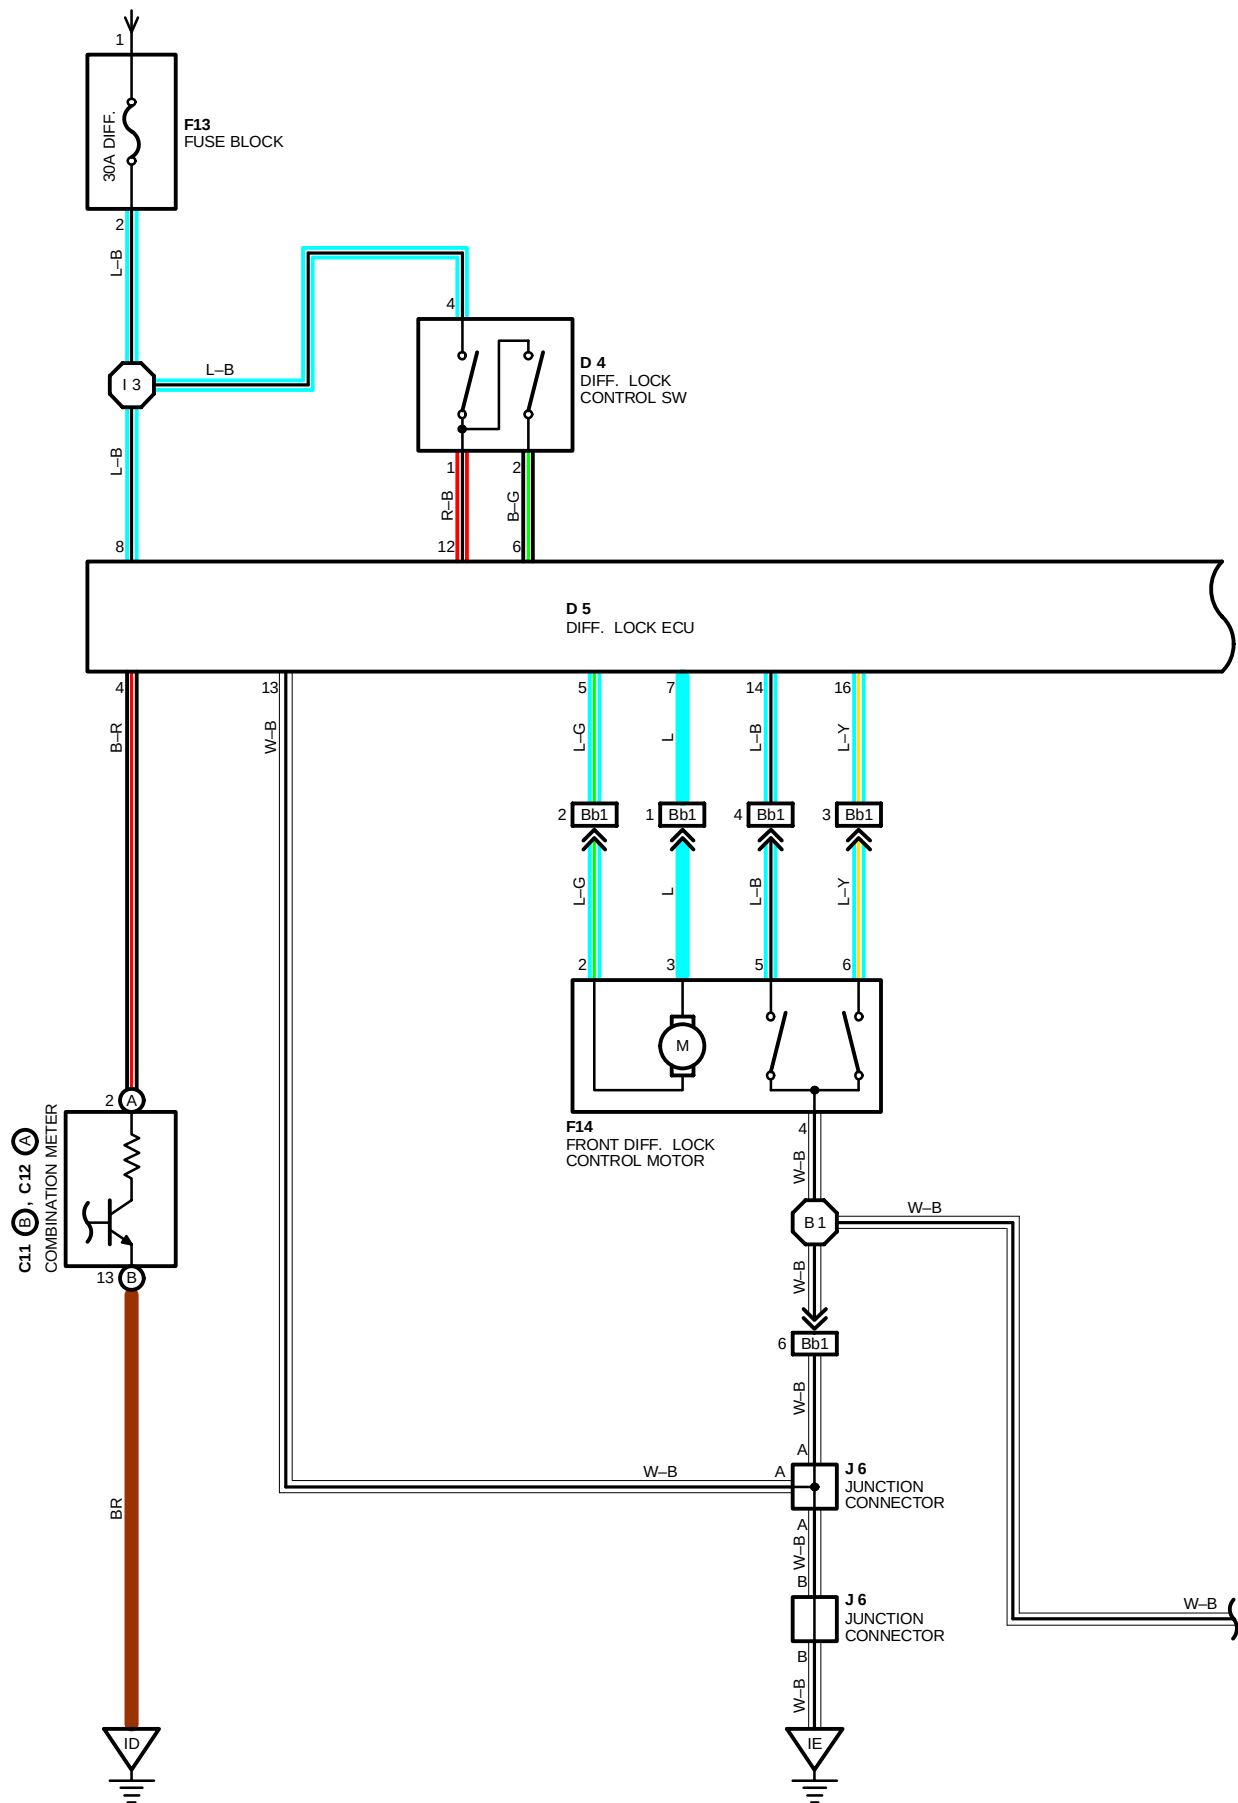

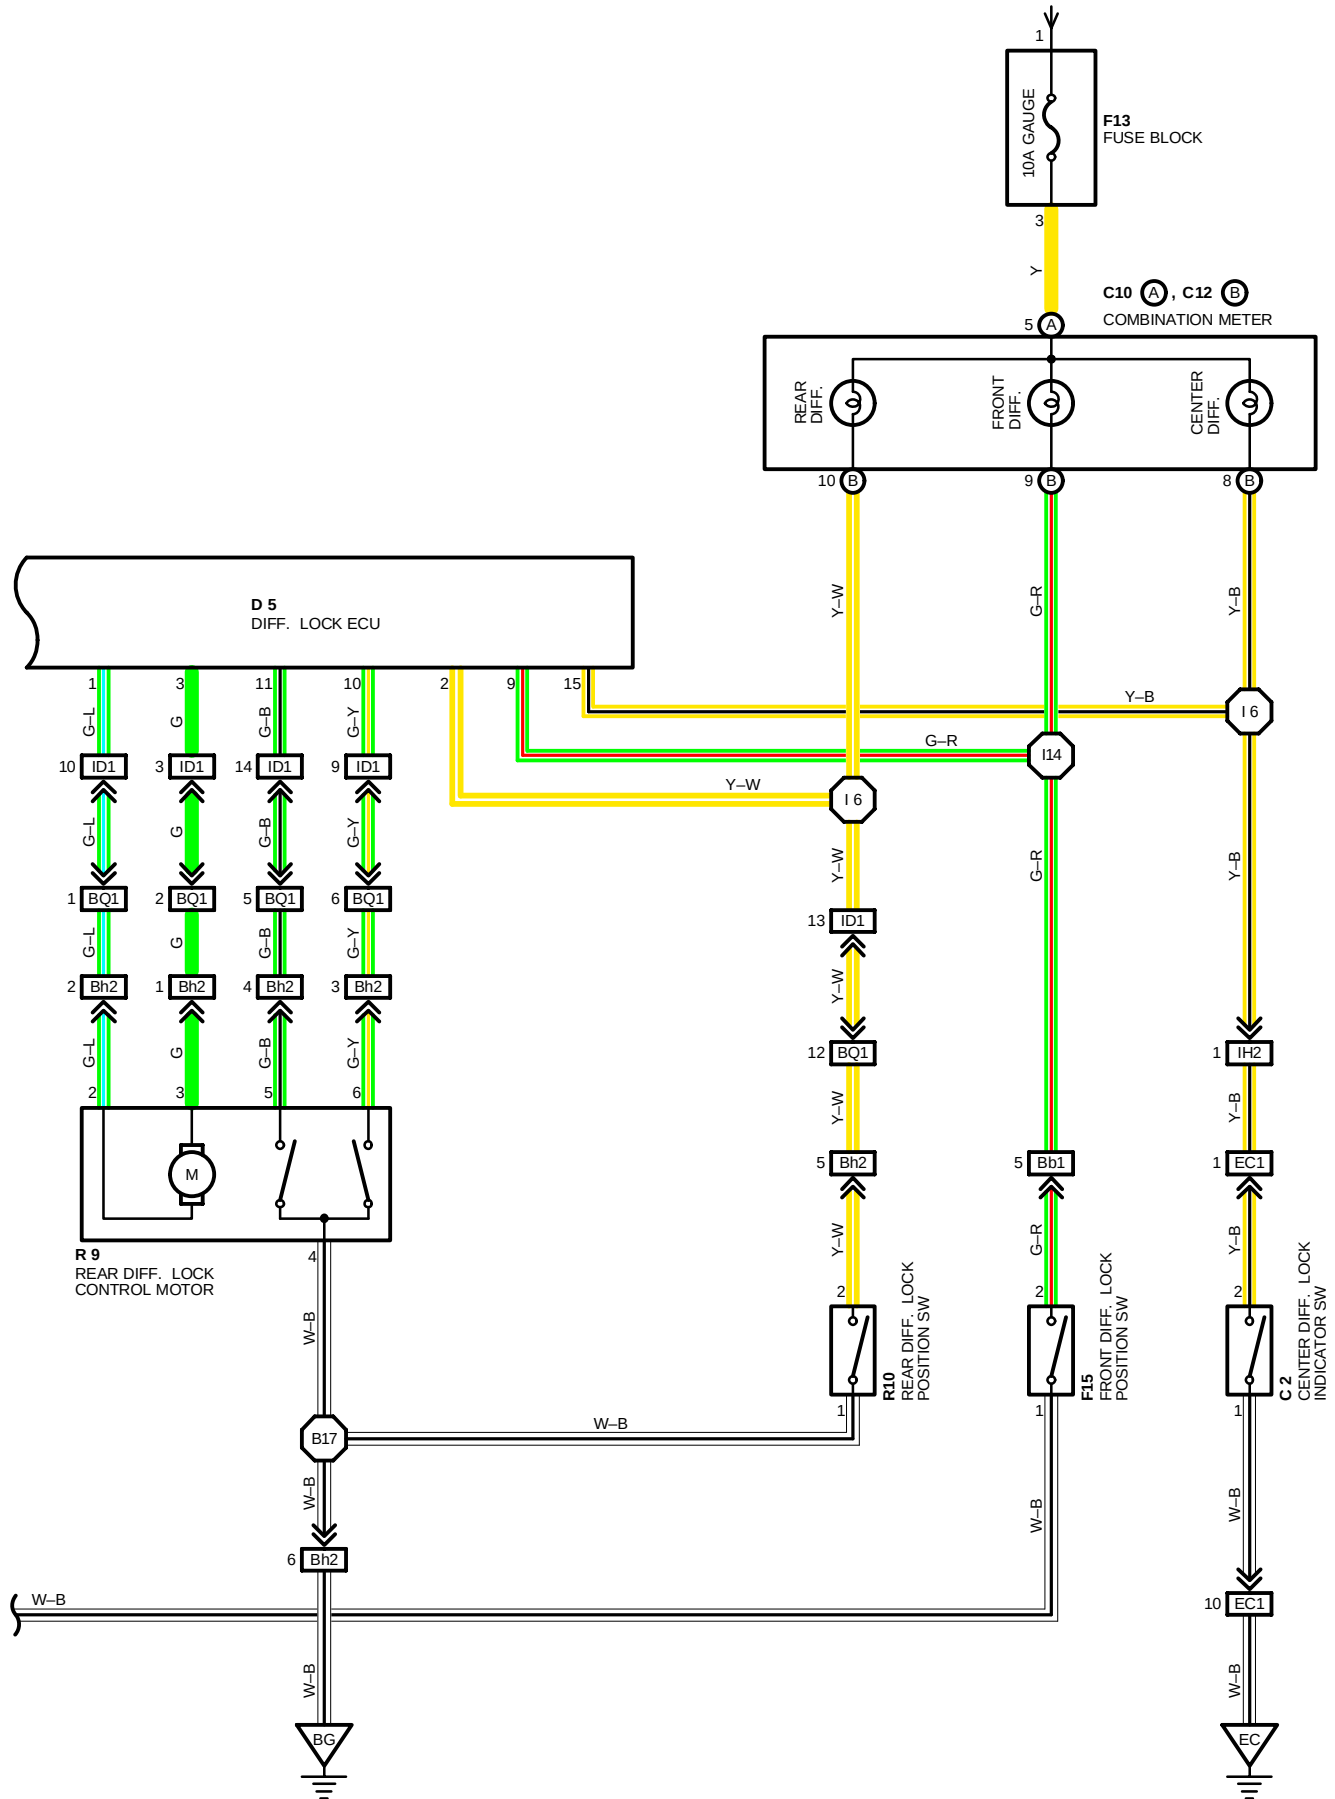

FRONT/REAR DIFFERENTIAL LOCK

SYSTEM OUTLINE

THIS SYSTEM FREES OR LOCKS THE FRONT AND REAR DIFFERENTIALS ACCORDING TO THE POSITION OF THE DIFF. LOCK CONTROL SW. THE DIFFERENTIAL WILL LOCK ONLY WHEN THE CENTER DIFF. LOCK INDICATOR SW IS ON AND THE VEHICLE SPEED IS AT 8 KM/H (5 MPH) OR LESS.

WHEN THE CENTER DIFF. LOCK INDICATOR SW IS OFF, DIFFERENTIAL LOCK DOES NOT OCCUR EVEN IF THE DIFF. LOCK CONTROL SW IS IN **RR** POSITION OR **FR•RR** POSITION.

WHEN THE DIFF. LOCK CONTROL SW IS SWITCHED FROM **OFF** POSITION TO **RR** POSITION, THE CURRENT FLOWS TO **TERMINAL 12** OF THE DIFF. LOCK ECU. IF THE LIMIT SW ON THE LOCK SIDE INSIDE THE REAR DIFF. LOCK CONTROL MOTOR IS ON AT THIS TIME, UNTIL THE LIMIT SW IS TURNED OFF CURRENT FLOWS FROM THE **DIFF FUSE** → **TERMINAL 8** OF THE DIFF. LOCK ECU → **TERMINAL 3** → **TERMINAL 3** OF REAR DIFF. LOCK CONTROL MOTOR → **TERMINAL 2** → **TERMINAL 1** OF DIFF. LOCK ECU → **TERMINAL 13** → **GROUND**. THIS DRIVES THE REAR DIFF. LOCK CONTROL MOTOR AND LOCKS THE REAR DIFFERENTIAL. WHEN THE REAR DIFFERENTIAL LOCKS, THE REAR DIFF. **LOCK** POSITION SW TURNS ON AND LIGHTS UP THE REAR DIFF. LOCK INDICATOR LIGHT IN THE COMBINATION METER.

WHEN THE DIFF. LOCK CONTROL SW IS SWITCHED FROM **RR** POSITION TO **FR•RR** POSITION, CURRENT FLOWS TO **TERMINAL 6** OF THE DIFF. LOCK ECU. IF THE LIMIT SW ON THE LOCK SIDE INSIDE THE FRONT DIFF. LOCK CONTROL MOTOR IS ON AT THIS TIME, UNTIL THE LIMIT SW IS TURNED OFF CURRENT FLOWS FROM THE **DIFF FUSE** → **TERMINAL 8** OF THE DIFF. LOCK ECU → **TERMINAL 7** → **TERMINAL 3** OF FRONT DIFF. LOCK CONTROL MOTOR → **TERMINAL 2** → **TERMINAL 5** OF DIFF. LOCK ECU → **TERMINAL 13** → **GROUND**. THIS DRIVES THE FRONT DIFF. LOCK CONTROL MOTOR AND LOCKS THE FRONT DIFFERENTIAL. WHEN THE FRONT DIFFERENTIAL LOCKS, THE FRONT DIFF. **LOCK** POSITION SW TURNS ON AND LIGHTS UP THE FRONT DIFF. LOCK INDICATOR LIGHT IN THE COMBINATION METER.

WHEN THE DIFF. LOCK CONTROL SW IS SWITCHED FROM **FR•RR** POSITION TO **RR** POSITION, CURRENT FLOWS TO **TERMINAL 6** OF DIFF. LOCK ECU IS CUT OFF. IF THE LIMIT SW ON THE FREE SIDE INSIDE THE FRONT DIFF. LOCK CONTROL MOTOR IS ON AT THIS TIME, UNTIL THE LIMIT SW IS TURNED OFF CURRENT FLOWS FROM THE **DIFF FUSE** → **TERMINAL 8** OF DIFF. LOCK ECU → **TERMINAL 5** → **TERMINAL 2** OF FRONT DIFF. LOCK CONTROL MOTOR → **TERMINAL 3** → **TERMINAL 7** OF DIFF. LOCK ECU → **TERMINAL 13** → **GROUND**. THIS DRIVES THE FRONT DIFF. LOCK CONTROL MOTOR AND FREE THE FRONT DIFFERENTIAL. THIS TURNS OFF THE FRONT DIFF. **LOCK** POSITION SW AND THE FRONT DIFF. LOCK INDICATOR LIGHT INSIDE THE COMBINATION METER TO TURN OFF.

WHEN THE DIFF. LOCK CONTROL SW IS SWITCHED FROM **RR** POSITION TO **OFF** POSITION, THE CURRENT FLOW TO **TERMINAL 12** OF THE DIFF. LOCK ECU IS CUT OFF. IF THE LIMIT SW ON THE FREE SIDE INSIDE THE REAR DIFF. LOCK CONTROL MOTOR IS ON, UNTIL THE LIMIT SW IS TURNED OFF CURRENT FLOWS FROM THE **DIFF FUSE** → **TERMINAL 8** OF DIFF. LOCK ECU → **TERMINAL 1** → **TERMINAL 2** OF REAR DIFF. LOCK CONTROL MOTOR → **TERMINAL 3** → **TERMINAL 3** OF DIFF. LOCK ECU → **TERMINAL 13** → **GROUND**. THIS DRIVES THE REAR DIFF. LOCK CONTROL MOTOR AND FREES THE REAR DIFFERENTIAL. WHEN THE REAR DIFFERENTIAL IS FREE, THE REAR DIFF. **LOCK** POSITION SW TURNS OFF AND THE REAR DIFF. LOCK INDICATOR LIGHT IN THE COMBINATION METER TURNS OFF.

THE DIFF. LOCK INDICATOR LIGHT FLASHES WHEN:

- * THE DIFF. LOCK CONTROL SW IS SWITCHED TO **RR** POSITION OR **FR•RR** POSITION DURING DIFFERENTIAL LOCK PROHIBITION CONDITIONS (VEHICLE SPEED ABOVE 8 KM/H (5 MPH) OR CENTER DIFF. LOCK INDICATOR SW OFF).
- * THE DIFF. **LOCK** POSITION SW IS TURNED OFF DURING OPERATION OF THE DIFF. LOCK CONTROL MOTOR.

SERVICE HINTS

D 4 DIFF. LOCK CONTROL SW

- 4-1 : CLOSED WITH DIFF. LOCK CONTROL SW AT "**RR**" POSITION OR "**FR•RR**" POSITION
- 4-2 : CLOSED WITH DIFF. LOCK CONTROL SW AT "**FR•RR**" POSITION

D 5 DIFF. LOCK ECU

(DISCONNECTED WIRING CONNECTOR FROM ECU)

- 13-GROUND : CONTINUITY
- 4-GROUND : PULSE GENERATION WITH VEHICLE MOVING
- 8-GROUND : **9-14** VOLTS WITH IGNITION SW ON
- 2-GROUND : ABOUT **0** VOLTS WITH REAR DIFF. LOCK INDICATOR LIGHT ON
: **9-14** VOLTS WITH REAR DIFF. LOCK INDICATOR LIGHT OFF
- 9-GROUND : ABOUT **0** VOLTS WITH FRONT DIFF. LOCK INDICATOR LIGHT ON
: **9-14** VOLTS WITH FRONT DIFF. LOCK INDICATOR LIGHT OFF
- 15-GROUND : ABOUT **0** VOLTS WITH CENTER DIFF. LOCK INDICATOR LIGHT ON
: **9-14** VOLTS WITH CENTER DIFF. LOCK INDICATOR LIGHT OFF

F14, R 9 FRONT, REAR DIFF. LOCK CONTROL MOTOR

- 2-3 : **0.3-100** Ω

O

☐ECEC13

A schematic diagram of a two-chambered heart. It features a central vertical septum dividing the lower portion into two chambers, labeled '1' on the left and '2' on the right. Above this septum is a single, larger chamber. The entire structure is enclosed within a rounded, capsule-like outer boundary.

The calculator display shows the sequence of operations: 10 + 5 = 15.



The diagram shows a 16-bit bus structure divided into four 4-bit segments. The segments are labeled 1-4, 5-8, 9-12, and 13-16. Each segment contains a 2x2 grid of bits. The bits are numbered 1 through 16 in sequence from left to right, top to bottom. Segment 1-4 contains bits 1, 2, 3, 4. Segment 5-8 contains bits 5, 6, 7, 8. Segment 9-12 contains bits 9, 10, 11, 12. Segment 13-16 contains bits 13, 14, 15, 16.

(SEE PAGE 20)

A diagram of a 2x3 grid of resistors. The top row contains resistors labeled X, 2, and 3. The bottom row contains resistors labeled 4, 5, and 6. Each resistor is represented by a rectangle with a vertical line through its center, connected to horizontal lines at the top and bottom.

A	A	A	A	B	B	B
A	A	A	A	B	B	B

(HINT:SEE PAGE 7)